



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-3350UB. You'll find the answers to all your questions on the PIONEER DEH-3350UB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-3350UB
User guide PIONEER DEH-3350UB
Operating instructions PIONEER DEH-3350UB
Instructions for use PIONEER DEH-3350UB
Instruction manual PIONEER DEH-3350UB

CD RDS RECEIVER
REPRODUCTOR DE CD CON RECEPTOR RDS
RECEPTOR DE CD RDS
CD RDS 接收機
RDS وی‌دار عم CD تان‌اوسرا لغ‌شم
دستگاه گیرنده CD RDS

DEH-4350UB
DEH-3350UB

Pioneer

English

Español

Português (B)

中文

العربية

فارسی

Owner's Manual
Manual de instrucciones
Manual do proprietário
用戶手冊
کتاب المالك
راهنما



[You're reading an excerpt. Click here to read official PIONEER DEH-3350UB user guide](http://yourpdfguides.com/dref/3623560)
<http://yourpdfguides.com/dref/3623560>

Manual abstract:

@@@ electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Function setting operations are completed even if the menu is cancelled before the operations are confirmed. Press and hold to recall the initial setting menu when the sources are off. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. The demo automatically starts when the ignition switch is set to ACC or ON while the unit is turned off. Turning off the unit does not cancel demo mode. To cancel the demo mode, operate the function in the initial setting menu. Operating the demo while the ignition switch is set to ACC may drain battery power.

Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward and pull it toward you.

@@@Keep the battery out of the reach of children. @@@Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. !

If the battery leaks, wipe the remote control completely clean and install a new battery. ! When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area. For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. It flashes when a song/album related to the song currently playing is selected from iPod. Track or folder repeat is on. 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. Use and care of the remote control Using the remote control 1 Point the remote control in the direction of the front panel to operate. When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press S (SRC/OFF) to turn the unit on.

You can also recall stored radio stations by pressing a or b during the frequency display. Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up. ejecting a CD/CD-R/CD-RW 1 Press h. @@@@Note Depending on the area, you cannot switch the display. @@@@Tracks in a selected repeat range are played in random order.

While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. @@@@Note Disconnect USB storage devices from the unit when not in use. @@Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Text information items that can be changed depend on the media.

@@To turn random play on or off. Playing songs related to the currently playing song You can play songs from the following lists. Song list of the currently playing album - ALBUM Plays a song from the album currently being played. ! GENRE Plays an album from the genre currently being played. The selected song/album will be played after the currently playing song. The selected song/album may be canceled if you operate functions other than link search (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off. Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when CTRL APP is selected. This function is not compatible with the following iPod models. iPod 5th generation APP mode is compatible with the following iPod models.

CTRL iPod This unit's iPod function can be operated from the connected iPod. ! CTRL APP Play back the sound from your iPod applications. ! CTRL AUDIO This unit's iPod function can be operated from this unit. @@ALBUMS Play back songs from a randomly selected album in order. For details about the settings, refer to Playing songs related to the currently playing song on this page. FASTER Playback at a speed faster than normal ! nORMAL Playback at normal speed ! SLOWER Playback at a speed slower than normal 3 Press M. Playing a song in the selected category 1 When a category is selected, press and hold M. Selecting a repeat play range to cycle between the following: 1 Press 6/ ! oNE Repeat the current song ! ALL Repeat all songs in the selected list Playing all songs in random order (shuffle all) 1 Press 5/ to turn shuffle all on. ! When the control mode is set to CTRL iPod/CTRL APP, shuffle play is on. The iPod cannot be turned on or off when the control mode is set to CTRL AUDIO.

! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod will turn off about two minutes after the ignition switch is set to OFF. @@@@ ! Settings are based on the FM volume level, which remains unchanged. ! The AM volume level can also be adjusted with this function. ! When selecting FM as the source, you cannot switch to SLA.

@@@@@@To turn the plug and play function on or off. @@@@@@@@ ! @@@@@@@@-- The browse function cannot be operated from this unit. 1 Press S (SRC/OFF) and hold until the unit turns off. @@@@Tune in the stations with manual tuning or use seek tuning again.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3623560)

[DEH-3350UB user guide](http://yourpdfguides.com/dref/3623560)

<http://yourpdfguides.com/dref/3623560>

! The tuning step remains at 50 kHz during manual tuning.

*@@@@@@@@ cut-off frequency (Cut-off frequency display flashes.)--Output level (Output level display flashes. To turn the ever scroll on or off.
@@@@@@@@-- Cover any disconnected cable connectors with insulating tape. -- Do not shorten any cables. @@@@ 300 mA 12 V DC).
@@@@An unstable installation may cause skipping or other malfunctions. Select the repeat The repeat play Depending on play range again. Range changes
the repeat play unexpectedly. @@ a subfolder is not played back.*

Subfolders cannot be played when FOLDER (folder repeat) is selected. Select another repeat play range. A0 to a different source, then back to the CD player.

Format Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. 2 Insert the supplied extraction keys into both sides of the unit until they click into place. 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. Move electrical devices that may be causing the interference away from the unit. The display is illuminated when the unit is turned off. Does not contain any playable files.

All the files on the inserted disc are embedded with DRM. Tighten two screws on each side. You can remove the front panel to protect your unit from theft. Press the detach button and push the front panel upward and pull it toward you. For details, refer to Removing the front panel to protect your unit from theft and Re-attaching the front panel on page 4.

You are using a device, such as a cellular phone, that transmits electric waves near the unit. Message NO DEVICE Cause When plug and play is off, no USB storage device or iPod is connected. Sometimes there is a delay between the start of playback and when you start to hear any sound. action ! Turn the plug and play on. Wait until the message disappears and you hear sound.

When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message. Play an audio file not embedded with Windows Media DRM 9/10. Action Check that the USB connector or USB cable is not caught in something or damaged. disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. @@Store discs in their cases when not in use. @@@ condensation may temporarily impair the player's performance. Leave it to adjust to the warmer temperature for about one hour. Also, wipe any damp discs with a softtections between the songs from the original recording, compressed audio discs play with a short pause between songs. @@2 Put those files into a folder.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. WMA Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Note Specifications and the design are subject to modifications without notice.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3623560)

[DEH-3350UB user guide](http://yourpdfguides.com/dref/3623560)

<http://yourpdfguides.com/dref/3623560>