



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-6350SD. You'll find the answers to all your questions on the PIONEER DEH-6350SD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-6350SD
User guide PIONEER DEH-6350SD
Operating instructions PIONEER DEH-6350SD
Instructions for use PIONEER DEH-6350SD
Instruction manual PIONEER DEH-6350SD

CD RDS RECEIVER
REPRODUCTOR DE CD CON RECEPTOR RDS
CD PLAYER COM RDS
CD RDS 接收機
RDS وي دار عم CD تان او طسرا لغشم
دستگاه گيرنده CD RDS

DEH-6350SD

Pioneer

English

Español

Português (B)

中文

العربية

فارسی

Owner's Manual
Manual de instrucciones
Manual do proprietário
用戶手冊
کتاب المالك
دفترچه راهنما



[You're reading an excerpt. Click here to read official PIONEER DEH-6350SD user guide](http://yourpdfguides.com/dref/3693839)
<http://yourpdfguides.com/dref/3693839>

Manual abstract:

electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. Note Function setting operations are completed even if the menu is cancelled before the operations are confirmed. Important Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. The demo automatically starts when the ignition switch is set to ACC or ON while the unit is turned off. Turning off the unit does not cancel demo mode.

Operating the demo while the ignition switch is set to ACC may drain battery power. Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. In the following instructions, USB memories, USB portable audio players, and SD memory cards are collectively referred to as "external storage devices (USB, SD)." If only USB memories and USB portable audio players are indicated, they are collectively referred to as "USB storage devices. 5 mm stereo jack) /DISP OFF BAND/ESC SRC/OFF /DISP/SCRL Removing the front panel, you can see the SD memory card slot.

Press to perform manual seek tuning, fast forward, reverse and track search controls. Press and hold to recall the initial setting menu when the sources are off. @@Important Handle gently when removing or attaching the front panel. avoid subjecting the front panel to excessive shock. Keep the front panel out of direct sunlight and high temperatures.

@@@2 Push the front panel upward and pull it toward you. @Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. Use and care of the remote control 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off.

Using the remote control 1 Point the remote control in the direction of the front panel to operate. When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. Keep the battery out of the reach of children. Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like. Left or right, and then release. While pushing and holding M. c. Left or right, you can skip stations. Seek tuning starts as soon as you release M.

Remove the battery if the remote control is not used for a month or longer. Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. ! If the battery leaks, wipe the remote control completely clean and install a new battery. ! When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area.

Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. Note Depending on the area, you cannot switch the display. @@BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. LOCAL (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF--LEVEL1--LEVEL2--LEVEL3-- LEVEL4 AM: OFF--LEVEL1--LEVEL2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations.

1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing. Important If you are using this unit in North, Central or South America, reset the AM tuning step (refer to AM STEP (AM tuning step) on page 9). Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up. ejecting a CD/CD-R/CD-RW 1 Press h (eject). Playing songs on a USB storage device 1 Open the USB connector cover and plug in the USB storage device using a USB cable. @@Playing songs on an SD memory card 1 Remove the front panel. 2 Insert an SD memory card into the SD card slot. @@@@2 Press on the SD memory card until it clicks. the SD memory card is ejected. 3 Pull out the SD memory card.

@@@For details, refer to Selecting a repeat play range on this page. To turn random play on or off. @@@ ! Disconnect USB storage devices from the unit when not in use. @@@@ ! Text information items that can be changed depend on the media. Selecting and playing files/ tracks from the name list Playing 1 When a file or track is selected, press M. The iPod cannot be turned on or off when the control mode is set to AUDIO. ! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod will turn off about two minutes after the ignition switch is set to OFF. You can play playlists created with the PC application (MusicSphere). Playlists that you created with the PC application (MusicSphere) are displayed in abbreviated form.

Selecting a repeat play range to cycle between the following: 1 Press 6/ ! oNE Repeat the current song ! ALL Repeat all songs in the selected list Playing all songs in random order (shuffle all) to turn shuffle all on. 1 Press 5/ ! When the control mode is set to iPod/APP, shuffle play is on. Playing songs related to the currently playing song You can play songs from the following lists. Song list of the currently playing album · ALBUM Plays a song from the album currently being played. ! GENRE Plays an album from the genre currently being played.

The selected song/album will be played after the currently playing song. The selected song/album may be canceled if you operate functions other than link play (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off. Playing a song in the selected category 1 When a category is selected, press and hold M. Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when APP is selected.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3693839)

[DEH-6350SD user guide](http://yourpdfguides.com/dref/3693839)

<http://yourpdfguides.com/dref/3693839>

This function is not compatible with the following iPod models. iPod 5th generation APP mode is compatible with the following iPod models. iPod This unit's iPod function can be operated from the connected iPod. ! APP Play back the sound from your iPod applications. ! AUDIO This unit's iPod function can be operated from this unit. @@For details about the settings, refer to Selecting a repeat play range on the previous page. ALBUMS Play back songs from a randomly selected album in order. For details about the settings, refer to Playing songs played to the currently playing song on the previous page. FASTER Playback at a speed faster than normal ! nORMAL Playback at normal speed ! SLOWER Playback at a speed slower than normal 3 Press M. After selecting, perform the following procedures to set the audio function.

When the rear output setting is SW, you cannot adjust front/rear speaker balance. @@@@Up to turn the iPod click wheel to the left -- Push M. c. @@@@ ! A CUSTOM2 curve that is common for all sources can be created. @@To switch to level and then turn M. @@-- The browse function cannot be operated from this unit. @@@@To switch to output level and then turn M. @@@@ ! When selecting FM as the source, you cannot switch to SLA. ! Settings are based on the FM volume level, which remains unchanged. ! The AM volume level can also be adjusted with this function.

@@Tune in the stations with manual tuning or use seek tuning again. ! The tuning step remains at 50 kHz during manual tuning. AM STing a subwoofer without the optional amplifier. @@Do not connect anything to the green and green/ black leads. @@Do not use unauthorized parts as this may cause malfunctions.

! @@ ! @@-- it may interfere with operation of the vehicle. -- it may cause injury to a passenger as a result of a sudden stop. @@@@Perform these connections when using the optional amplifier. @@ ! @@@@Use commercially available parts when installing. @@@@Pull the unit out of the dashboard.

Tighten two screws on each side. You can remove the front panel to protect your unit from theft. @@@@An unstable installation may cause skipping or other malfunctions. Releasing the front panel allows easier access to the trim ring. ! @@@@The repeat play range changes unexpectedly. Cause You did not perform any operation within about 30 seconds. @@ Action Move electrical devices that may be causing the interference away from the unit. Cause The inserted disc does not contain any playable files. the inserted disc contains DRM protected files. All the files on the inserted disc are embedded with DRM.

Cause The connected USB storage device contains files embedded with Windows Mediaä DRM 9/ 10 All the files in the USB storage device are embedded with Windows Media DRM 9/10 The connected USB storage device is not supported by this unit. Action Play an audio file not embedded with Windows Memay become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit. Incompatible text saved on the iPod will not be displayed by the unit. Do not leave the discs/external storage device (USB, SD) or iPod in places with high temperatures. This unit supports only the following types of SD memory cards. SDHC Keep the SD memory card out of the reach of children. Should the SD memory card be swallowed, consult a doctor immediately.

Do not touch the connectors of the SD memory card directly with your fingers or with any metal device. Do not insert anything other than an SD memory card into the SD card slot. If a metal object (such as a coin) is inserted into the slot, the internal circuits may break and cause malfunctions. When inserting a miniSD or microSD, use an adapter. Do not use an adapter which has metal parts other than the connectors exposed.

Do not insert a damaged SD memory card (e. g. Warped, label peeled off) as it may not be ejected from the slot. Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. @@@@ Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. Pioneer accepts no responsibility for data lost on USB memory/USB portable audio players/SD memory cards/SDHC memory cards, even if that data is lost while this unit is used. This unit supports only the following iPod models. supported iPod software versions are shown below. Older versions may not be supported. 3) Depending on the generation or version of the iPod, some functions may not be available.

Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 2 Put those files into a folder. 3 Save the folder that contains the files to the external storage device (USB , SD). However, depending on the system environment, you may not be able to specify the playback sequence. @@@@ Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. Folder selection sequence or other operation may differ depending on the encoding or writing software. Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/ or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

Compatibility with all SD memory cards is not guaranteed. This unit is not compatible with SD-Audio. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3693839)

[DEH-6350SD user guide](http://yourpdfguides.com/dref/3693839)

<http://yourpdfguides.com/dref/3693839>