



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-7350BT. You'll find the answers to all your questions on the PIONEER DEH-7350BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-7350BT
User guide PIONEER DEH-7350BT
Operating instructions PIONEER DEH-7350BT
Instructions for use PIONEER DEH-7350BT
Instruction manual PIONEER DEH-7350BT

CD RDS RECEIVER
REPRODUCTOR DE CD CON RECEPTOR RDS
RECEPTOR DE CD RDS
CD RDS 接收機
RDS وی دار عم CD تان او طسا لغ شم
دستگاه گیرنده CD RDS

DEH-7350BT

Pioneer

English

Español

Português (B)

中文

العربية

فارسی

Owner's Manual
Manual de instrucciones
Manual do proprietário
用戶手冊
کتاب المالك
راهنما



[You're reading an excerpt. Click here to read official PIONEER DEH-7350BT user guide](http://yourpdfguides.com/dref/3693845)
<http://yourpdfguides.com/dref/3693845>

Manual abstract:

@@@ Do not allow this unit to come into contact with liquids. electrical shock could result. @@ ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. Function setting operations are completed even if the menu is cancelled before the operations are confirmed. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power. @@ Turning off the unit does not cancel demo mode. @@@@ But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles). CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module.

To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment. Track or folder repeat is on. Press and hold to recall the initial setting menu when the sources are off. This flashes when a song/ album related to the song currently playing is selected from the iPod. Use an optional Pioneer USB cable (CDU50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it.

Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward and pull it toward you. Turning the display off and on /DISP OFF and hold until the display 1 Press turns off and on. Use and care of the remote control Using the remote control 1 Point the remote control in the direction of the front panel to operate. When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area. Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. 3 Always keep the detached front panel in a protection device such as a protection case. Re-attaching the front panel 1 Slide the front panel to the left.

Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. Using Bluetooth telephone important ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power. Advanced operations that require attention such as dialing numbers on the monitor, using the phone book, etc. , are prohibited while driving. Park your vehicle in a safe place when using these advanced operations. Keep the battery out of the reach of children. Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like. 2 Press the right side of the front panel until it is firmly seated.

If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press S (SRC/OFF) to turn the unit on. Turning the unit off 1 Press S (SRC/OFF) and hold until the unit turns off. Remove the battery if the remote control is not used for a month or longer.

Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. ! If the battery leaks, wipe the remote control completely clean and install a new battery. Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. The estimated call time appears in the display (this may differ slightly from the actual call time).

1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing. 2 Press one of the preset tuning buttons (1 to 6) to select the desired station. # You can also recall stored radio stations by pressing a or b during the frequency display. LOCAL (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF--LEVEL 1--LEVEL 2--LEVEL 3-- LEVEL 4 AM: OFF--LEVEL 1--LEVEL 2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. Making a phone call 1 Refer to Phone menu operation on page 8. Answering an incoming call 1 When a call is received, press M. 1 Press Rejecting an incoming call 1 When a call is received, press . Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up. ejecting a CD/CD-R/CD-RW 1 Press h.

Playing songs on a USB storage device 1 Open the USB connector cover and plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Answering a call waiting 1 When a call is received, press M. 1 Press Adjusting the other party's listening volume 1 Press a or b while talking on the phone. Note Depending on the area, you cannot switch the display. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. @@@@ ! @ ! @@@@ FOLDER Repeat the current folder Playing tracks in random order to turn random play on or off.

1 Press 5/ Tracks in a selected repeat range are played in random order. Note Disconnect USB storage devices from the unit when not in use. Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Text information items that can be changed depend on the media. Selecting and playing files/ tracks from the name list Playing a song in the selected category 1 When a category is selected, press and hold M.



[You're reading an excerpt. Click here to read official PIONEER DEH-7350BT user guide](http://yourpdfguides.com/dref/3693845)
<http://yourpdfguides.com/dref/3693845>

Playing 1 When a file or track is selected, press M. Selecting a repeat play range 1 Press 6/ to cycle between the following: ! ONE Repeat the current song ! ALL Repeat all songs in the selected list Playing all songs in random order (shuffle all) to turn shuffle all on. 1 Press 5/! When the control mode is set to CTRL iPod/ CTRL APP, shuffle play is on. pausing playback 1 Press 2/PAUSE to pause or resume. Playing songs related to the currently playing song You can play songs from the following lists.

Song list of the currently playing album · ALBUM Plays a song from the album currently being played. ! GENRE Plays an album from the genre currently being played. The selected song/album will be played after the currently playing song. The selected song/album may be canceled if you operate functions other than link search (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off. Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when CTRL APP is selected. This function is not compatible with the following iPod models. iPod 5th generation APP mode is compatible with the following iPod models. CTRL iPod This unit's iPod function can be operated from the connected iPod. ! CTRL APP Play back the sound from your iPod applications.

! CTRL AUDIO This unit's iPod function can be operated from this unit. @@For details, refer to Selecting a repeat play range on this page. ALBUMS Play back songs from a randomly selected album in order. For details about the settings, refer to Playing songs related to the currently playing song on this page.

FASTER Playback at a speed faster than normal ! NORMAL Playback at normal speed ! SLOWER Playback at a speed slower than normal 3 Press M. @@The following functions are still accessible from the unit even if the control mode is set to CTRL iPod/CTRL APP. -- -- -- -- -- -- Pausing Fast forward/reverse Track up/down Repeat play (ONE/ALL/OFF) Random play (shuffle) (list) to use iPod menu a to turn the iPod click wheel to the left b to turn the iPod click wheel to the right When the control mode is set to CTRL iPod, operations are limited as follows: -- The function settings are not available. -- The browse function cannot be operated from this unit. Important Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. # You cannot operate this step during a call.

@@To delete a cellular phone information from the device list. ! While this function is in use, do not turn off the engine. @@You can change this code. @@To display this unit's device name, BD address and pincode. 4 Use a cellular phone to connect to this unit. ! @@You can change this code. @@To turn the visibility of this unit on or off. , Bluetooth visibility of this unit is turned on temporarily. @@ ! @@To turn the ever scroll on or off. @@Phone book entries on the Bluetooth telephone ! Preset numbers on the Bluetooth telephone ! registration assignment of the Bluetooth telephone ! Call history of the Bluetooth telephone ! Clearing memory is now on standby.

If you do not want to reset phone memory, press . While this function is in use, do not turn off the engine. @@Never turn the unit off while the software is being updated. Follow the on-screen instructions to finish updating the software. @@For more details, refer to AUX (auxiliary input) on this page. @@Do not use 1 W to 3 W speakers for this unit. @@Cover any disconnected cable connectors with insulating tape. -- Do not shorten any cables. @@Power cord input Microphone input Microphone Rear output or subwoofer output Front output Antenna input Fuse (10 A) Wired remote input Hard-wired remote controleat play range changes unexpectedly. Cause You did not perform any operation within about 30 seconds.

@@Depending on Select the repeat the repeat play play range again. @@When the unit is turned off. Back ON, or switch to a different source, then back to the CD player. @@Wait until the message disappears and you hear sound. Cause The inserted disc does not contain any playable files. the inserted disc contains DRM protected files. All the files on the inserted disc are embedded with DRM. @@ Action Play an audio file not embedded with Windows Media DRM 9/10. @@ disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices.

Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect. Transfer audio files not embedded with Windows Media DRM 9/10 to the USB storage device and connect. Disconnect your device and replace it with a compatible USB storage device. N/A USB USB storage device/iPod Message NO DEVICE Cause When plug and play is off, no USB storage device or iPod is connected.

Sometimes there is a delay between the start of playback and when you start to hear any sound. Turn the plug and play on. Wait until the message disappears and you hear sound. Then, return to the USB source. USB storage device should be formatted with FAT12, FAT16 or FAT32.

USB storage device was not formatted with FAT12, FAT16 or FAT32 Use only discs that feature either of the following two logos. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. Do not connect anything other than a USB storage device. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. Files may not be played back properly. ! The device may generate noise in the radio. When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. You cannot set Repeat to off on the iPod when using this unit.

Repeat is automatically changed to All when the iPod is connected to this unit. Incompatible text saved on the iPod will not be displayed by the unit. Since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit. frequent loading and ejecting of a DualDisc may result in scratches on the disc. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. @@ action Turn the ignition switch OFF and then to ACC or ON. @@Do not insert anything other than a CD into the CD loading slot.



[You're reading an excerpt. Click here to read official PIONEER DEH-7350BT user guide](http://yourpdfguides.com/dref/3693845)
<http://yourpdfguides.com/dref/3693845>

@@ Unfinalized CD-R/CD-RW discs cannot be played back. do not touch the recorded surface of the discs. Store discs in their cases when not in use. @@ To clean a CD, wipe the disc with a soft cloth outward from the center. condensation may temporarily impair the player's performance.

Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Do not leave the iPod in places with high temperatures. To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. firmly secure the iPod when driving.

Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. This unit supports only the following iPod models. supported iPod software versions are shown below. Older versions may not be supported. @@@@ Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. Playable folders: up to 500 Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned USB storage device: Only the first partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. Folder selection sequence or other operation may differ depending on the encoding or writing software. 2 Put those files into a folder.

3 Save the folder containing files on the USB storage device. However, depending on the system environment, you may not be able to specify the playback sequence. Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. This unit may not operate correctly depending on the application used to encode WMA files. There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. Do not leave discs or a USB storage device in any place that is subject to high temperatures. For USB portable audio players, the sequence is different and depends on the player. Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/ or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles.

This unit is compatible with the following profiles. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Other trademarks and trade names are those of their respective owners. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance .

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. Note Specifications and the design are subject to modifications without notice. .



[You're reading an excerpt. Click here to read official PIONEER DEH-7350BT user guide](http://yourpdfguides.com/dref/3693845)
<http://yourpdfguides.com/dref/3693845>