



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-80PRS. You'll find the answers to all your questions on the PIONEER DEH-80PRS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-80PRS
User guide PIONEER DEH-80PRS
Operating instructions PIONEER DEH-80PRS
Instructions for use PIONEER DEH-80PRS
Instruction manual PIONEER DEH-80PRS

CD RDS RECEIVER
AUTORADIO CD RDS
SINTOLETTORE CD RDS
REPRODUCER DE CD CON RECEPTOR RDS
CD RDS-EMPFÄNGER
CD RDS-ONTVANGER
CD RDS ПРИЕМНИК

DEH-80PRS

Pioneer

Installation Manual
Manuel d'installation
Manuale d'installazione
Manual de instalación
Installationsanleitung
Installatiehandleiding
Руководство по установке

English
Français
Italiano
Español
Deutsch
Nederlands
Русский



[You're reading an excerpt. Click here to read official PIONEER DEH-80PRS user guide](http://yourpdfguides.com/dref/5599832)
<http://yourpdfguides.com/dref/5599832>

Manual abstract:

Use of this unit in conditions other than the following could result in fire or malfunction. To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below. □ Disconnect the negative terminal of the battery before installation. □ Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring. @@@@ □ Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment. □ Cover any disconnected cable connectors with insulating tape. □ Do not shorten any cables. □

Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited. When this unit is on, control signals are sent through the blue/white cable. @@ 300 mA 12 V DC). @@ ! @@Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately.

If they are not, an accidental detachment may result in a fire or malfunction. @@@@ 5 m ! @@@@In this case, be sure to connect 4 to 5 and 6 to 3. 7 Connect leads of the same color to each other. 8 Orange/white Connect to lighting switch terminal. @@ connect a and b when Pin 5 is an antenna control type.

In another type of vehicle, never connect a and b. @@In this case, be sure to connect to both connectors. @@ ! If using this system, we recommend that this unit's internal amp is turned off. For details, refer to the operation manual. ! The speaker leads are not used when this connection is in use. @@ ! The following signals are output from the speaker leads when this connection is in use. White: Middle range left + White/black: Middle range left * Gray: Middle range right + Gray/black: Middle range right * Green: High range left + Green/black: High range left * Violet: High range right + Violet/black: High range right * 1 5 □ □ ! If using this system, we recommend that this unit's internal amp is turned off. For details, refer to the operation manual. ! The speaker leads are not used when this connection is in use. @@ ! The following signals are output from the speaker leads when this connection is in use.

White: Front left + White/black: Front left * Gray: Front right + Gray/black: Front right * Green: Rear left + Green/black: Rear left * Violet: Rear right + Violet/black: Rear right * 1 5 □ □ 3 2 □ □ 4 5 3 6 7 3 2 □ □ 3 2 □ □ 4 5 3 6 7 3 1 9 2 □ □ □ □ 8 9 2 □ □ 3 2 □ □ 4 5 1 9 2 □ □ □ □ 8 9 3 2 □ □ 4 5 1 System remote control Connect to Blue/white cable. @@@@You can switch between modes as desired. Initially, the DSP setting is set to the standard mode (STD). !

After switching, reset the microprocessor. @@@@This may cause damage to the speakers. @@@@Do not use unauthorized parts as this may cause malfunctions. ! @@ ! @@ □ it may cause injury to a passenger as a result of a sudden stop. Use commercially available parts when installing. DIN Front-mount 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve.

@@@@@For details, refer to the operation manual. @@ ! @@@@Change settings as necessary based on whether the connected device has RCA output or not. For more details on change settings, refer to the operation manual or Switching between RCA input modes on this page. Switching between RCA input modes % Use a thin, flathead screwdriver to change the RCA input mode switch on the bottom of this unit. ! When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.

1 Dashboard 2 Mounting sleeve 3 Install the unit as illustrated. @@ 1 (Low) - If inputting from the RCA output of a connected device ! @@@@An unstable installation may cause skipping or other malfunctions. @@3 Pull the unit out of the dashboard. @@@@Note Install the microphone in a position and orientation that will enable it to pick up the voice of the person operating the system. 1 English DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match.

2 2 Tighten two screws on each side. Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. Press the detach button and push the front panel upward and pull it toward you. for details , refer to operation manual. @@@@1 2 Removing the unit 1 Remove the trim ring. @@With the sun visor up, install the microphone clip. (Lowering the sun visor reduces the voice recognition rate. @@# Microphone can be installed without using microphone clip. In this case, detach the microphone base from the microphone clip. @@ 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring.

! When reattaching the trim ring, point the side with the notched tab down. En 5 Section 03 Installing the microphone 2 Install the microphone clip on the steering column. 1 2 3 1 Double-sided tape 2 Install the microphone clip on the rear side of the steering column. 3 Clamp Adjusting the microphone angle The microphone angle can be adjusted. .



[You're reading an excerpt. Click here to read official PIONEER DEH-80PRS user guide](http://yourpdfguides.com/dref/5599832)
<http://yourpdfguides.com/dref/5599832>