



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-8350SD. You'll find the answers to all your questions on the PIONEER DEH-8350SD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-8350SD  
User guide PIONEER DEH-8350SD  
Operating instructions PIONEER DEH-8350SD  
Instructions for use PIONEER DEH-8350SD  
Instruction manual PIONEER DEH-8350SD

CD RDS RECEIVER  
REPRODUCTOR DE CD CON RECEPTOR RDS  
CD PLAYER COM RDS  
CD RDS 接收機  
CD RDS دستگاه گیرنده  
RDS وي دار عم CD تان او طسرا لغ شم

## DEH-8350SD

**Pioneer**

English

Español

Português (B)

中文

فارسی

العربية

Owner's Manual  
Manual de instrucciones  
Manual do proprietário  
用戶手冊  
دفترچه راهنما  
کتاب المالك



[You're reading an excerpt. Click here to read official PIONEER DEH-8350SD user guide](http://yourpdfguides.com/dref/3817303)  
<http://yourpdfguides.com/dref/3817303>

**Manual abstract:**

electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! @@@@Turning off the unit does not cancel demo mode. @@@@To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. If you do not perform an operation within about 30 seconds, screen indications start to reverse, and then continue reversing every 10 seconds. Pressing button BAND/ESC when power to this unit is turned off while the ignition switch is set to ACC or ON cancels the reverse mode.

Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. In the following instructions, USB memories, USB portable audio players, and SD memory cards are collectively referred to as "external storage devices (USB, SD)." If only USB memories and USB portable audio players are indicated, they are collectively referred to as "USB storage devices. Press to perform manual seek tuning, fast forward, reverse and track search controls. SRC/OFF SD memory card slot Remove the front panel to access the SD memory card slot.

Press and hold to recall the initial setting menu when the sources are off. Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward and pull it toward you. Keep the battery out of the reach of children. Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

3 Always keep the detached front panel in a protection device such as a protection case. Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. Remove the battery if the remote control is not used for a month or longer. Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. ! If the battery leaks, wipe the remote control completely clean and install a new battery. ! When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area. Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. For safety reasons, park your vehicle when removing the front panel.

Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Use and care of the remote control 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Using the remote control 1 Point the remote control in the direction of the front panel to operate.

When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. If this unit can pick up the program service name information, program service name will be displayed. While pushing and holding M. c.

Left or right, you can skip stations. Seek tuning starts as soon as you release M. FM: Level 1--Level 2--Level 3--Level 4 AM: Level 1--Level 2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. @ @ BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. Local (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

1 Bit rate/sampling frequency indicator Shows the bit rate or sampling frequency of the current track (file) when the compressed audio is playing. ! When playing back VBR (variable bit rate)-recorded AAC files, the average bit rate value is displayed. However, depending on the software used to decode AAC files, VBR may be displayed. 2 Folder number indicator Shows the folder number currently playing when the compressed audio is playing. Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up. 4 Preset number indicator 5 Signal level indicator 6 Frequency indicator Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Playing songs on an SD memory card 1 Remove the front panel. 2 Insert an SD memory card into the SD card slot. Insert it with the contact surface facing down, and press on the card until it clicks and completely locks into place. @ @ 2 Press on the SD memory card until it clicks.

the SD memory card is ejected. 3 Pull out the SD memory card. Playing tracks in random order 1 Press to turn random play on or off. Tracks in a selected repeat range are played in random order. @ @ @ @ @ ! Text information items that can be changed depend on the media. @ @ @ @ @ Track repeat Repeat the current track ! To turn random play on or off. @ @ @ @ @ ! Disconnect USB storage devices from the unit when not in use. @ @ ! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod will turn off about two minutes after the ignition switch is set to OFF. Playing a song in the selected category 1 When a category is selected, press and hold M.

Playing all songs in random order (shuffle all) 1 Press to turn shuffle all on. Playing songs related to the currently playing song You can play songs from the following lists. Song list of the currently playing album · Album Plays a song from the album currently being played. ! Genre Plays an album from the genre currently being played. The selected song/album will be played after the currently playing song.

! The selected song/album may be canceled if you operate functions other than link play (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off.



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-8350SD user guide](#)

<http://yourpdfguides.com/dref/3817303>

You can play playlists created with the PC application (MusicSphere). Playlists that you created with the PC application (MusicSphere) are displayed in abbreviated form. Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when APP is selected.

This function is not compatible with the following iPod models. iPod 5th generation APP mode is compatible with the following iPod models. iPod This unit's iPod function can be operated from the connected iPod. ! APP Play back the sound from your iPod applications. ! AUDIO This unit's iPod function can be operated from this unit. @@Repeat One Repeat the current song ! Shuffle Albums Play back songs from a randomly selected album in order. For details about the settings, refer to Playing songs related to the currently playing song on the previous page. Faster Playback at a speed faster than normal ! normal Playback at normal speed ! Slower Playback at a speed slower than normal Up or down to adjust the output level of the subwoofer. Is pushed up or down, subwoofer level increases or decreases. The front/rear speaker balance cannot be adjusted when the rear output setting is Rear SP :S/W.

A separate Custom1 curve can be created for each source. If you make adjustments when a curve other than Custom2 is selected, the equalizer curve settings will be stored in Custom1. ! A Custom2 curve that is common for all sources can be created. If you make adjustments when the Custom2 curve is selected, the Custom2 curve will be updated. The following functions are still accessible from the unit even if the control mode is set to iPod/APP. @@Up to turn the iPod click wheel to the left -- Push M. c. @@-- The browse function cannot be operated from this unit. @@@@Up or down to adjust the output level of the subwoofer. Is pushed up or down, subwoofer level increases or decreases.

@@@@ ! When selecting FM as the source, you cannot switch to SLA. ! Settings are based on the FM volume level, which remains unchanged. ! The AM volume level can also be adjusted with this function. @Language select t screws. @@@@@@-- Cover any disconnected cable connectors with insulating tape.

-- Do not shorten any cables. @@@@@@Use this unit with a 12-volt battery and negative grounding only. @@@@ 300 mA 12 V DC). @@ !

@@@@Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction.

@@@@Do not connect anything to the green and green/black leads. @Do not use unauthorized parts as this may cause malfunctions. @@@@-- it may cause injury to a passenger as a result of a sudden stop. @@@@@@Tighten two screws on each side. Perform these connections when using the optional amplifier. @@ ! Optimum performance is obtained when the unit is installed at an angle of touch the recorded surface of the discs. Store discs in their cases when not in use. Do not attach labels, write on or apply chemicals to the surface of the discs. To clean a CD, wipe the disc with a soft cloth outward from the center. condensation may temporarily impair the player's performance.

Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. Do not connect anything other than a USB storage device. firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. ! The device may generate noise in the radio. Do not try to force an SD memory card into the SD card slot as the card or this unit may be damaged. When ejecting an SD memory card, press it and hold it until it clicks. It is dangerous for you to release your finger immediately after you press on the card as the card may shoot out of the slot and hit you in the face, etc. If the card shoots out of the slot, it may become lost. To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. firmly secure the iPod when driving.

Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. You cannot set Repeat to off on the iPod when using this unit.

Repeat is automatically changed to All when the iPod is connected to this unit. Incompatible text saved on the iPod will not be displayed by the unit.

This unit supports only the following types of SD memory cards. SDHC Keep the SD memory card out of the reach of children. Should the SD memory card be swallowed, consult a doctor immediately. Do not touch the connectors of the SD memory card directly with your fingers or with any metal device. Do not insert anything other than an SD memory card into the SD card slot. If a metal object (such as a coin) is inserted into the slot, the internal circuits may break and cause malfunctions. When inserting a miniSD or microSD, use an adapter. Do not use an adapter which has metal parts other than the connectors exposed. Do not insert a damaged SD memory card (e. g.

Warped, label peeled off) as it may not be ejected from the slot. Use only discs that feature either of the following two logos. @@@@@@Files may not be played back properly. @@Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. @@@@This unit supports only the following iPod models. supported iPod software versions are shown below.

Older versions may not be supported. @@@@Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. ) Playable folders: up to 1 500 Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned external storage device (USB, SD): Only the first playable partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name.

This unit may not operate correctly depending on the application used to encode WMA files. There may be a slight delay when starting playback of audio files embedded with image data. Compatibility with all SD memory cards is not guaranteed. This unit is not compatible with SD-Audio.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3817303)

[DEH-8350SD user guide](http://yourpdfguides.com/dref/3817303)

<http://yourpdfguides.com/dref/3817303>

*Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used.*

*2 Put those files into a folder. 3 Save the folder that contains the files to the external storage device (USB , SD). However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. The user cannot assign folder numbers and specify playback sequences with this unit. Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications.*

*Folder selection sequence or other operation may differ depending on the encoding or writing software. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. Note Specifications and the design are subject to modifications without notice.*

*22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . .*



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-8350SD user guide](#)

<http://yourpdfguides.com/dref/3817303>