



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-9350SD. You'll find the answers to all your questions on the PIONEER DEH-9350SD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-9350SD
User guide PIONEER DEH-9350SD
Operating instructions PIONEER DEH-9350SD
Instructions for use PIONEER DEH-9350SD
Instruction manual PIONEER DEH-9350SD

CD RECEIVER
RADIO CD
CD PLAYER
CD接收機
گیرنده سی دی
جهاز استقبال مع مشغل اسطوانات CD

DEH-9350SD

Pioneer

English

Español

Português (B)

中文

فارسی

العربية

Owner's Manual
Manual de instrucciones
Manual do proprietário
用戶手冊
دفترچه راهنما
کتاب المالك



[You're reading an excerpt. Click here to read official PIONEER DEH-9350SD user guide](http://yourpdfguides.com/dref/3817307)
<http://yourpdfguides.com/dref/3817307>

Manual abstract:

electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! @@@@Turning off the unit does not cancel demo mode. @@@@To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. If you do not perform an operation within about 30 seconds, screen indications start to reverse, and then continue reversing every 10 seconds. Pressing button BAND/ESC when power to this unit is turned off while the ignition switch is set to ACC or ON cancels the reverse mode.

Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. In the following instructions, USB memories, USB portable audio players, and SD memory cards are collectively referred to as "external storage devices (USB, SD)." If only USB memories and USB portable audio players are indicated, they are collectively referred to as "USB storage devices. Press to perform manual seek tuning, fast forward, reverse and track search controls. BAND/ESC Disc loading slot h (eject) SD memory card slot Remove the front panel to access the SD memory card slot.

Press and hold to recall the initial setting menu when the sources are off. Removing the front panel to protect your unit from theft 1 Press the open button to open the front panel. 2 Grip the left side of the front panel and pull it gently outward. 3 Always keep the detached front panel in a protection device such as a protection case. Re-attaching the front panel 1 Reattach the front panel by holding it upright to the unit and clipping it securely into the mounting hooks. Use and care of the remote control Using the remote control 1 Point the remote control in the direction of the front panel to operate. When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area. Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off.

Keep the battery out of the reach of children. Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like. Remove the battery if the remote control is not used for a month or longer. Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. ! If the battery leaks, wipe the remote control completely clean and install a new battery. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. # All stations stored for FM bands can be recalled from each independent FM band. BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. Local (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

Shows the folder number currently playing when the compressed audio is playing. 4 Preset number indicator 5 Signal level indicator 6 Frequency indicator While pushing and holding M. c. Left or right, you can skip stations. Seek tuning starts as soon as you release M.

Playing a CD/CD-R/CD-RW 1 Press the open button to open the front panel. 2 Insert the disc into the disc loading slot with the label side up. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Playing songs on an SD memory card 1 Press the open button to open the front panel. 2 Remove the front panel.

3 Insert an SD memory card into the SD card slot. Insert it with the contact surface facing down, and press on the card until it clicks and completely locks into place. FM: Level 1--Level 2--Level 3--Level 4 AM: Level 1--Level 2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. @ @ 1 Bit rate/sampling frequency indicator Shows the bit rate or sampling frequency of the current track (file) when the compressed audio is playing. ! When playing back VBR (variable bit rate)-recorded AAC files, the average bit rate value is displayed. However, depending on the software used to decode AAC files, VBR may be displayed. Stopping playback of files on an SD memory card 1 Press the open button to open the front panel. 2 Remove the front panel. 3 Press on the SD memory card until it clicks. the SD memory card is ejected.

4 Pull out the SD memory card. When using the external storage devices, you can select the desired song search method. One is Selecting and playing files/tracks from the name list and the other is Browsing for a song. When using a CD, you can only use Selecting and playing files/tracks from the name list. Playing a song in the selected category 1 When a category is selected, press and hold M. Playing tracks in random order 1 Press /iPod to turn random play on or off. Tracks in a selected repeat range are played in random order. Selecting a repeat play range /LOC to cycle between the following: 1 Press CD/CD-R/CD-RW ! disc repeat Repeat all tracks ! Track repeat Repeat the current track ! Folder repeat Repeat the current folder Enhancing compressed audio and restoring rich sound (sound retriever) 1 Press S. Selecting and playing files/tracks from the name list Playing 1 When a file or track is selected, press M. @ @ @ @ ! Disconnect USB storage devices from the unit when not in use.

@ @ @ @ @ @ @ @ ! @ @ ! Keys may not have any effect during the creation of an index or list. ! Lists are recreated each time the unit is turned on. @ @ For details, refer to Selecting a repeat play range on this page. @ @ ! Text information items that can be changed depend on the media. To turn random play on or off.

@ @ @ @ Playing a song in the selected category 1 When a category is selected, press and hold M. The iPod cannot be turned on or off when the control mode is set to AUDIO.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3817307)

[DEH-9350SD user guide](http://yourpdfguides.com/dref/3817307)

<http://yourpdfguides.com/dref/3817307>

! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod will turn off about two minutes after the ignition switch is set to OFF. Selecting a repeat play range /LOC to cycle between the following: 1 Press ! Repeat One Repeat the current song ! Repeat All Repeat all songs in the selected list Playing all songs in random order (shuffle all) /iPod to turn shuffle all on.

Playing songs related to the currently playing song You can play songs from the following lists. Song list of the currently playing album · Album Plays a song from the album currently being played. ! Genre Plays an album from the genre currently being played. The selected song/album will be played after the currently playing song. ! The selected song/album may be canceled if you operate functions other than link search (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off. Operating this unit's iPod function from your iPod This function is not compatible with the following iPod models. iPod This unit's iPod function can be operated from the connected iPod. ! AUDIO This unit's iPod function can be operated from this unit. Repeat indicator Shuffle indicator Song number indicator iPod name PLAY/PAUSE indicator S.

Faster Playback at a speed faster than normal ! normal Playback at normal speed ! Slower Playback at a speed slower than normal Sound Retriever (sound retriever) 1 Press M. After selecting, perform the following procedures to set the audio function. @@For details about the settings, refer to Selecting a repeat play range on the previous page. Shuffle Albums Play back songs from a randomly selected album in order. For details about the settings, refer to Playing songs related to the currently playing song on the previous page. For details about the settings, refer to Operating this unit's iPod function from your iPod on the previous page. @@Up or down to adjust the output level of the subwoofer. Is pushed up or down, subwoofer level increases or decreases. @@@@-- The browse function cannot be operated from this unit. A separate Custom1 curve can be created for each source.

@@ ! A Custom2 curve that is common for all sources can be created. @@@@Up or down to adjust the output level of the subwoofer. Is pushed up or down, subwoofer level increases or decreases. @@@@To turn the ever scroll on or off. @@For more details, refer to AUX (auxiliary input) on this page.

@@@@@Do not use 1 W to 3 W speakers for this unit. @@@@@@-- Cover any disconnected cable connectors with insulating tape. -- Do not shorten any cables. @@@@@@Use this unit with a 12-volt battery and negative grounding only. @@@@ 300 mA 12 V DC).

@@ ! @@Also, never connect it to the power terminal of the autoconnected. @@Turn the plug and play on. Wait until the message disappears and you hear sound. A subfolder is Subfolders can- Select another renot played not be played peat play range. back. When Folder repeat (folder repeat) is selected. When the unit is turned off. Back ON, or switch to a different source, then back to the CD player. @@Wait until the message disappears and you hear sound. Non-compatible Disconnect your iPod device and replace it with a compatible iPod.

Non-compatible Remove your deSD storage de- vice and replace it vice with a compatible SD storage device. CHECKING 8TAGS The unit is creating an index or list for the music browse function. Please wait until this operation has been completed. Action Check that the USB connector or USB cable is not caught in something or damaged. disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect. Then, return to the USB or SD source. USB storage device should be formatted with FAT12, FAT16 or FAT32.

Do not insert anything other than a CD into the CD loading slot. Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player. Unfinalized CD-R/CD-RW discs cannot be played back. do not touch the recorded surface of the discs. Store discs in their cases when not in use.

Do not attach labels, write on or apply chemicals to the surface of the discs. To clean a CD, wipe the disc with a soft cloth outward from the center. condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth.

Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. Use only discs that feature either of the following two logos. Address any questions you have about your external storage device (USB, SD) to the manufacturer of the device. Do not leave the external storage device (USB, SD) in places with high temperatures. Depending on the external storage device (USB, SD), the following problems may occur. Files may not be played back properly. USB storage device was not formatted with FAT12, FAT16 or FAT32. Do not connect anything other than a USB storage device. firmly secure the USB storage device when driving.

Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. ! The device may generate noise in the radio. Do not try to force an SD memory card into the SD card slot as the card or this unit may be damaged. When ejecting an SD memory card, press it and hold it until it clicks. It is dangerous for you to release your finger immediately after you press on the card as the card may shoot out of the slot and hit you in the face, etc. If the card shoots out of the slot, it may become lost. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit.

Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! @@You cannot set Repeat to off on the iPod when using this unit.

@@@@@This unit supports only the following types of SD memory cards. SDHC Keep the SD memory card out of the reach of children. Should the SD memory card be swallowed, consult a doctor immediately. Do not touch the connectors of the SD memory card directly with your fingers or with any metal device.



[You're reading an excerpt. Click here to read official PIONEER DEH-9350SD user guide](http://yourpdfguides.com/dref/3817307)
<http://yourpdfguides.com/dref/3817307>

Do not insert anything other than an SD memory card into the SD card slot.

If a metal object (such as a coin) is inserted into the slot, the internal circuits may break and cause malfunctions. When inserting a miniSD or microSD, use an adapter. Do not use an adapter which has metal parts other than the connectors exposed. Do not insert a damaged SD memory card (e. g. Warped, label peeled off) as it may not be ejected from the slot. Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name.

@@@ Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. Pioneer accepts no responsibility for data lost on USB memory/USB portable audio players/SD memory cards/SDHC memory cards, even if that data is lost while this unit is used. This unit supports only the following iPod models.

supported iPod software versions are shown below. Older versions may not be supported. 3) Depending on the generation or version of the iPod, some functions may not be available. Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 2 Put those files into a folder. 3 Save the folder that contains the files to the external storage device (USB, SD). However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. The user cannot assign folder numbers and specify playback sequences with this unit. @@) Playable folders: up to 1 500 Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned external storage device (USB, SD): Only the first playable partition can be played.

There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. Folder selection sequence or other operation may differ depending on the encoding or writing software.

Compatibility with all SD memory cards is not guaranteed. This unit is not compatible with SD-Audio. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Note Specifications and the design are subject to modifications without notice. To turn random play on or off iPod/ . .



[You're reading an excerpt. Click here to read official PIONEER DEH-9350SD user guide](http://yourpdfguides.com/dref/3817307)
<http://yourpdfguides.com/dref/3817307>