



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-X6600DAB. You'll find the answers to all your questions on the PIONEER DEH-X6600DAB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-X6600DAB
User guide PIONEER DEH-X6600DAB
Operating instructions PIONEER DEH-X6600DAB
Instructions for use PIONEER DEH-X6600DAB
Instruction manual PIONEER DEH-X6600DAB

CD RDS RECEIVER
AUTORADIO CD RDS
SINTOLETTORE CD RDS
REPRODUCOR DE CD CON RECEPTOR RDS
CD RDS-EMPFÄNGER
CD RDS-ONTVANGER
CD RDS ПРИЕМНИК

DEH-X6600DAB

Pioneer



Owner's Manual
Mode d'emploi
Manuale d'istruzioni
Manual de instrucciones
Bedienungsanleitung
Handleiding
Руководство пользователя

English
Franca
Italiano
Español
Dutch
Nederlands
Русский



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)
<http://yourpdfguides.com/dref/5599821>

Manual abstract:

The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. WARNING ! Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards. ! Do not attempt to operate the unit while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. @@@@ For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. CAUTION ! Do not allow this unit to come into contact with liquids. electrical shock could result.

Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. 2 En <QRD3198-B>2 Black plate (3,1) Section Using this unit Using this unit 02 Head unit 123 4 5 6 Display indication 1 2 2 Turn M. # If you do not use the unit for 30 seconds, the set up menu will not be displayed.

If you prefer not to set up at this time, turn M. DAB ANT PW (DAB antenna power supply setting) Use DAB ANT PW to select whether to output power to a connected DAB antenna. ON – Use this option to enable the supply of power to a DAB antenna. Select when using the optional DAB antenna (ANDAB1, sold separately) with the unit. ! OFF – Use this option to disable the supply of power.

Select when using a passive antenna with no booster. CD player, USB storage device and iPod: elapsed playback time and text information Appears when a lower tier of folder or menu exists. (list) Sub information section LOC (local seek tuning) TP (traffic program identification) TA (traffic announcements) (sound retriever) (random/shuffle) (repeat) (iPod control) This unit's iPod function is operated from your iPod. 4 Follow these steps to set the menu. To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English, Russian or Turkish. ! @@ ! Some characters may not be displayed properly.) (list) Disc loading slot USB port DAB BAND/ (iPod control) 2 3 4 5 6 7 8 9 a b 1 5 To finish your settings, turn M. # If you prefer to change your setting again, turn M. You can set up the menu options from the system menu and initial menu.

For details about the settings, refer to System menu on page 10 and Initial menu on page 12. FM STEP (FM tuning step) Use FM STEP to set FM tuning step options (seek step settings). The manual tuning step is fixed at 50 kHz. ! When AF and TA are turned off, the seek step is fixed at 50 kHz even if set to 100. basic operations Important ! Handle the front panel with care when removing or attaching it. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. En CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. Set up menu 1 After installation of this unit, turn the ignition switch to ON. SET UP appears.

3 <QRD3198-B>3 Black plate (4,1) Section 02 Using this unit Using this unit Removing the front panel 1 Press the detach button to release the front panel. 2 Push the front panel upward (M) and then pull it toward (N) you. selecting a source 1 Press SRC/OFF to cycle between: DIGITAL RADIO (digital audio broadcasting) —RADIO—CD—USB/iPod—APP (application) —AUX ! If a source other than DIGITAL RADIO is selected, you can switch to DIGITAL RADIO by pressing DAB. DAB stands for Digital Audio Broadcasting and has the following features: ! High sound quality (nearly as high as for CDs, although it may be reduced in some cases in order to allow more services to be broadcast) ! This unit stores recent broadcasts to memory automatically. The memory capacity of this unit will vary depending on the bit rate of the Service Component used.

The approximate memory capacity is five minutes for 192 kbps. ! If the duration that a selection is paused exceeds the length of the memory capacity, playback will resume from the beginning of the selection in memory. 3 Always store the detached front panel in a protective case or bag. Re-attaching the front panel 1 Slide the front panel to the left. This function is disabled while time shift is on.

For more details about time shift, refer to Listening to a recent broadcast (time shift) on page 5. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. Storing and recalling stations for each band Using preset tuning buttons 1 To store: Press and hold down one of the preset tuning buttons (1/ to 6/) until the number stops flashing. 2 To recall: Press one of the preset tuning buttons (1/ to 6/). 2 Press the right side of the front panel until it is firmly seated. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Frequently used menu operations Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER.

Returning to the ordinary display Canceling the main menu 1 Press BAND/ . Returning to the ordinary display from the list 1 Press BAND/ . The main Service Component is called the Primary Service Component, and any auxiliary Service Components are called Secondary Service Components. seeking 1 Press and hold c or d , and then release. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! CLOCK (source name and clock) Digital Radio (Digital Audio Broadcasting) To receive DAB signals, connect a DAB antenna (AN-DAB1) sold separately to the unit. Pausing You can use the pause function to temporarily stop listening to a DAB. notes ! If the service label cannot be acquired in SERVICE LABEL, the channel is displayed instead. If the service label is detected, the service label will be displayed. ! For more details about PTY list, refer to PTY list on page 6. 4 En <QRD3198-B>4 Black plate (5,1) Section Using this unit Using this unit 02 ! This function is disabled while pausing.



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)
<http://yourpdfguides.com/dref/5599821>

For more details about pausing, refer to Pausing on page 4. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area. SERVICE (service label) You can select a Service Component from the list of all components. Using alphabet search (list). PROGRAM TYPE (PTY label) You can select a Service Component from PTY information. ENSEMBLE (ensemble label) You can select a Service Component from the relevant ensemble. Once selected, the function below can be adjusted. s. FOLLOW (alternative Service Component search) If the tuner cannot get good reception, the unit will automatically search for another ensemble that supports the same Service Component.

If no alternative Service Component can be found or reception remains poor, this function will automatically switch to an identical FM broadcast. To turn alternative Service Component search on or off. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. English Listening to a recent broadcast (time shift) You can navigate through recent broadcasts from the selected Service Component. 1 Press /DIMMER to switch to time shift mode. Press again to resume the live broadcast. This unit stores recent broadcasts to memory automatically. The memory capacity of this unit will vary depending on the bit rate of the Service Component used. The approximate memory capacity is five minutes for 192 kbps.

Stored selections that are older than what can be stored in the memory will not be available. notes ! For details about SEEK, refer to SEEK (left/ right key setting) on page 6. ! This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on page 6). Radio Basic operations Selecting a band 1 Press BAND/ until the desired band (FM1, FM2, FM3 for FM or MW/LW) is displayed. Storing and recalling stations for each band Using preset tuning buttons 1 To store: Press and hold down one of the preset tuning buttons (1/ to 6/) until the number stops flashing. 2 To recall: Press one of the preset tuning buttons (1/ to 6/). Selecting a Service Component You can select a Service Component from the following service list. 1 Press mode. (list) to switch to the service list Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! Once selected, the following Service Component functions can be adjusted.

Updating service list information You can receive updates to the service list. To cancel, press En 5 <QRD3198-B>5 Black plate (6,1) Section 02 Using this unit Using this unit Notes ! If the program service name cannot be acquired in FREQUENCY, the broadcast frequency is displayed instead. If the program service name is detected, the program service name will be displayed. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area.

Once selected, the following functions can be adjusted. # If MW/LW band is selected, only BSM, LOCAL and SEEK are available. FM SETTING (FM sound quality settings) The sound quality level can be set to match the broadcast signal conditions of the FM band signal. HI-FI – This is the setting to use to prioritize the high quality of stereo sound. ! STABLE – This is the setting to use to prioritize the low noise of monaural sound.

BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. REGION (regional) When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. LOCAL (local seek tuning) Local seek tuning allows you to tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF—LV1—LV2—LV3—LV4 MW/LW: OFF—LV1—LV2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. SEEK (left/right key setting) You can assign a function to the left and right keys of the unit. Select MAN (manual tuning) to tune up or down manually or select PCH (preset channel) to switch between preset channels. This function is not compatible with MIXTRAX. ! This function is not compatible with WAV. NTROL iPod, the repeat play range will be same as what is set for the connected iPod. Selecting a random play range (shuffle) to cycle between the following: 1 Press 5/ ! SNG – Play back songs in the selected list in random order.

! ALB – Play back songs from a randomly selected album in order. Playing all songs in random order (shuffle all) to turn shuffle all on. For details, refer to Selecting a random play range (shuffle) on page 8. GENRE – Plays an album from the genre currently being played. The selected song/album will be played after the currently plafollowing audio functions can be adjusted. ! FADER is not available when SUB. W CTRL are not available when REAR/REAR is selected in SP-P/O MODE. W CTRL is not available when SUB. SLA is not available when FM is selected as the source. FADER (fader adjustment) Switching the display Information for compatibility of connected devices The following is the detailed information regarding the terminals required to use the application for iPhone on this unit.

Selecting the desired text information 1 Press DISP to cycle between the following: ! This function is compatible with iPhone and iPod touch. Please check our website for a list of supported iPhone applications for this unit. ! Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content. ! The content and functionality of the supported applications are the responsibility of the App providers. Once selected, the following functions can be adjusted.

BALANCE (balance adjustment) 9 <QRD3198-B>9 Black plate (10,1) Section 02 Using this unit Using this unit SUB. W CTRL (subwoofer adjustment) Only frequencies lower than those in the selected range are outputted from the subwoofer. To cycle between the following: Cut-off frequency—Output level—Slope level Rates that can be adjusted will flash. @@@@ @@@@ ! Settings are based on the FM volume level, which remains unchanged. ! The MW/LW volume level can also be adjusted with this function.

! USB, iPod and APP are all set to the same setting automatically. @@ ! @@ ! Some characters may not be displayed properly. @@@@ @@@@ @@@@ ! @@To turn the power save on or off. @@@@To select the segment of the clock display you wish to set. @@@@ @@@@Once selected, the following system menu functions can be adjusted. @@Once selected, the following audio functions can be adjusted. @@@@ @@@@ @@@@ # You can also perform the same operation on other colors. @@You can select areas for flashing colors. @@@@ notes ! Depending on the file/song, sound effects may not be available. ! @@ refer to Operations using the MIXTRAX button on page 7.



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)
<http://yourpdfguides.com/dref/5599821>

Note When CUSTOM is selected, the customized color saved is selected. @@Once selected, the following MIXTRAX functions can be adjusted. The function is enabled when MIXTRAX is on. @@@@LOW PASS 1 to LOW PASS 6 – The flash pattern changes according to the bass level. RANDOM 1 – The flash pattern changes randomly according to the sound level mode and low pass mode. ! RANDOM 2 – The flash pattern changes randomly according to the sound level mode. ! RANDOM 3 – The flash pattern changes randomly according to the low pass mode. And hold until the customizing illumination color setting appears in the display. Adjustment range: 0 to 60 The MIXTRAX special effects display can be turned on or off. ON (MIXTRAX special effects display)—OFF (normal display) CUT IN FX (manual cut-in effect) You can turn on or off the MIXTRAX sound effects while manually changing tracks.

ON (on)—OFF (off) En 11 <QRD3198-B>11 Black plate (12,1) Section 02 Using this unit Using this unit Initial menu 1 Press and hold SRC/OFF until the unit turns off. 2 Press and hold SRC/OFF until the main menu appears in the display. Once selected, the following initial menu functions can be adjusted. 100 (100 kHz)—50 (50 kHz) SP-P/O MODE (rear output and preout setting) The rear speaker leads output and the RCA output of this unit can be used to connect a full-range speaker or subwoofer. W – Select when there is a fullrange speaker connected to the rear speaker leads output and there is a subwoofer connected to the RCA output.

W – Select when there is a subwoofer connected directly to the rear speaker leads output without any auxiliary amp and there is a subwoofer connected to the RCA output. ! REAR/REAR – Select when there is a fullrange speaker connected to the rear speaker leads output and the RCA output. If there is a full-range speaker connected to the rear speaker leads output and the RCA output is not used, you may select either REAR/SUB. ON – Use this option to enable the supply of power to a DAB antenna. Select when using the optional DAB antenna (ANDAB1, sold separately) with the unit.

! OFF – Use this option to disable the supply of power. Select when using a passive antenna with no booster. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! source name ! Source name and clock If an unwanted display appears Turn off the unwanted display using the procedures listed below. System menu 1 Press and hold SRC/OFF until the unit turns off. 2 Press and hold SRC/OFF until the main menu appears in the display. Using an AUX source 1 Insert the stereo mini plug into the AUX input jack. 2 Press SRC/OFF to select AUX as the source. Note AUX cannot be selected unless the auxiliary setting is turned on. When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain. Use of this unit in conditions other than the following could result in fire or malfunction.

To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below. @@□ Secure the wiring with cable clamps or adhesive tape. @@@@□ Cover any disconnected cable connectors with insulating tape. □ Do not shorten any cables. @@The current capacity of the cable is limited. @@@@ 300 mA 12 V DC). @@ ! @@Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. @@If they are not, an accidental detachment may result in a fire or malfunction. 5 Antenna input 6 Fuse (10 A) 7 Wired remote input Hard-wired remote control adapter can be connected (sold separately).

Power cord 3 4 2 5 6 1 3 7 5 8 4 6 a 9 e b c d This unit 1 2 3 4 5 6 7 1 DAB antenna input To receive DAB signals, connect a DAB antenna (AN-DAB1) sold separately to the unit. For improved DAB reception, make sure a DAB antenna with phantom power input (active type) is used. 2 Power cord input 3 Rear output or subwoofer output 4 Front output 1 To power cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different. In this case, be sure to connect 4 to 5 and 6 to 3. 7 Connect leads of the same color to each other.

8 Black (chassis ground) 9 Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b. C Yellow/black If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

D Speaker leads White: Front left + White/black: Front left * Gray: Front right + Gray/black: Front right * Green: Rear left + or subwoofer + Green/black: Rear left * or subwoofer * Violet: Rear right + or subwoofer + Violet/black: Rear right * or subwoofer * e ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. notes ! Change the initial menu of this unit. refer to SP-P/O MODE (rear output and preout setting) on page 12. The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/ black leads. English OF STAR T En 13 <QRD3198-B>13 Black plate (14,1) Section 03 Installation Installation Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 1 7 □ □ □ □ ! Optimum performance is obtained when the unit is installed at an angle of less than 60°. 60° 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place.

1 Removing the unit 1 Remove the trim ring. 3 2 □ □ 4 5 3 6 7 2 □ □ ! When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents. 2 1 Dashboard 2 Mounting sleeve # Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. ! When reattaching the trim ring, point the side with the notched tab down. 1 System remote control Connect to Blue/white cable. 2 Power amp (sold separately) 3 Connect with RCA cables (sold separately) 4 To Front output 5 Front speaker 6 To Rear output or subwoofer output 7 Rear speaker or subwoofer Leave ample 5 cm space 5 cm 5cm cm DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. 2 Insert the supplied extraction keys into both sides of the unit until they click into place. 3 Pull the unit out of the dashboard.

Do not use unauthorized parts as this may cause malfunctions.



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)

<http://yourpdfguides.com/dref/5599821>

Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: — it may interfere with operation of the vehicle. □ it may cause injury to a passenger as a result of a sudden stop. DIN front/rear mount This unit can be properly installed using either front-mount or rear-mount installation.

Use commercially available parts when installing. 2 Tighten two screws on each side. DIN Front-mount 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve. If there is enough space, use the mounting sleeve that came with the vehicle.

1 3 Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. For details, refer to Removing the front panel and Re-attaching the front panel on page 4. Install this unit away from hot places such as near the heater outlet. Common AMP ERROR This unit fails to operate or the speaker connection is incorrect; the protective circuit is activated. check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance. FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. nO AUDIO The connected USB storage device has security enabled. Follow the USB storage device instructions to disable the security.

skIPPED The connected USB storage device contains DRM protected files. The protected files are skipped. PROTECT All the files on the connected USB storage device are embedded with DRM. replace the USB storage device. N/A USB The connected USB device is not supported by this unit. Disconnect your device and replace it with a compatible USB storage device. cHECK USB The USB connector or USB cable has shortcircuited. Check that the USB connector or USB cable is not caught in something or damaged. cHECK USB The connected USB storage device consumes more than maximum allowable current.

Disconnect the USB storage device and do not use it.

Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. english The display automatically returns to the ordinary display. You did not perform any operation within about 30 seconds. perform operation again. The repeat play range changes unexpectedly. Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. Select the repeat play range again. a subfolder is not played back. Subfolders cannot be played when FLD (folder repeat) is selected. Select another repeat play range.

NO XXXX appears when a display is changed (NO TITLE, for example). there is no embedded text information. Switch the display or play another track/file. You are using a device, such as a cellular phone, that may cause audible interference. Move electrical devices that may be causing the interference away from the unit. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance.

The inserted disc does not contain any playable files. The protected files are skipped. PROTECT All the files on the inserted disc are embedded with DRM. ERROR-07, 10, 11, 12, 15, 17, 30, A0 USB storage device/iPod FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound.

Wait until the message disappears and you hear sound. nO AUDIO There are no songs. Transfer the audio files to the USB storage device and connect. Turn the ignition switch OFF and back ON, or switch to a different source, then back to the CD player. en 15 <QRD3198-B>15 Black plate (16 ,1) Appendix Additional information Additional information CHECK USB The iPod operates correctly but does not charge. Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect. □ Turn the ignition switch OFF and back ON. Then, return to the USB source. iPod failure.

Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. ERROR-23 USB storage device was not formatted with FAT12, FAT16 or FAT32. USB storage device should be formatted with FAT12, FAT16 or FAT32. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. STOP There are no songs in the current list. Apps START UP APP The application has not started running yet. Follow the instructions that appear on the screen. To clean a CD, wipe the disc with a soft cloth outward from the center. Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment. Do not attach commercially available labels or other materials to the discs. ! The discs may warp making the disc unplayable.

! The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment. Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. The storage device may not be recognized. ! Files may not be played back properly. ! The device may cause audible interference when you are listening to the radio. Handling guidelines Discs and player Use only discs that feature either of the following two logos. iPod Do not leave the iPod in places with high temperatures. Firmly secure the iPod when driving.

Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting. ! You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit.

Incompatible text saved on the iPod will not be displayed by the unit. The following types of discs cannot be used with this unit: ! dualDiscs ! 8-cm discs: Attempts to use such discs with an adaptor may cause the unit to malfunction. Do not connect anything other than a USB storage device.



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)

<http://yourpdfguides.com/dref/5599821>

CD-R/RW discs that have not been finalized Do not touch the recorded surface of the discs. Store discs in their cases when not in use.

Do not attach labels, write on or apply chemicals to the surface of the discs. 025 kHz to 48 kHz Transmission rate: 16 kbps to 320 kbps, VBR Apple Lossless:

Not compatible AAC file bought from the iTunes Store (. M4p file extension): Not compatible Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. @@@@ unicode (UTF-8, UTF-16) ! @@There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned USB storage device: Only the first partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. iPod touch (3rd generation) iPod touch (2nd generation) iPod touch (1st generation) iPod classic iPod with video iPod nano (7th generation) iPod nano (6th generation) iPod nano (5th generation) iPod nano (4th generation) iPod nano (3rd generation) iPod nano (2nd generation) iPod nano (1st generation) iPhone 5 iPhone 4S iPhone 4 iPhone 3GS iPhone 3G iPhone English Depending on the generation or version of the iPod, some functions may not be available. Operations may vary depending on the software version of iPod. @@Users of iPod with the Dock Connector should use CD-IU51. For details, consult your dealer.

About the file/format compatibility, refer to the iPod manuals. audiobook, Podcast: Compatible CAUTION ! @@ ! @@@@) Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible iPod compatibility This unit supports only the following iPod models. supported iPod software versions are shown below. Older versions may not be supported. iPod touch (4th generation) CAUTION Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. ! You cannot use this function with USB MTP. En 17 <QRD3198-B>17 Black plate (18,1) Appendix Additional information Additional information Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. Example of a hierarchy 01 02 Russian character chart D: C :A : E, È :J D: C :B :Ж :M :C :Ц :B D: C :B :3 :H :T :Ч :Э D: C :Г : И, Ы :O :Y : III, III :Ю D: C :Д :K :П :Ф :Б :Я This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. □Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance. 03 04 05 Level 1 Level 2 Level 3 Level 4 : Folder : Compressed audio file 01 to 05: Folder number 1 to 6: Playback sequence :P :X :bl D: Display C: Character Disc Folder selection sequence or other operation may differ depending on the encoding or writing software. USB storage device Playback sequence is the same as recorded sequence in the USB storage device. To specify the playback sequence, the following method is recommended. 1 Create a file name that includes numbers that specify the playback sequence (e.

2 Put those files into a folder. 3 Save the folder containing files on the USB storage device. However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. androidä Android is a trademark of Google Inc.

MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.wma.com>. WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. Linear PCM & MS ADPCM (Non-compressed) Note Specifications and the design are subject to modifications without notice. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . D: Anzeige C: Zeichen De 103 <QRD3198-B>103 Black plate (104,1) Anhang Zusätzliche Informationen Zusätzliche Informationen Die Kennzeichnungen „Made for iPod” und „Made for iPhone” bedeuten, dass ein elektronisches Zubehörteil spezifisch zum Anschluss an iPod oder iPhone konstruiert wurde und entsprechend vom Entwickler als die Leistungsstandards von Apple erfüllend zertifiziert wurde. De geselecteerde song of het geselecteerde album wordt na de huidige song afgespeeld.

□Made for iPod” u “Made for iPhone” o3 .



[You're reading an excerpt. Click here to read official PIONEER DEH-X6600DAB user guide](http://yourpdfguides.com/dref/5599821)
<http://yourpdfguides.com/dref/5599821>