



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DV-2242. You'll find the answers to all your questions on the PIONEER DV-2242 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DV-2242
User guide PIONEER DV-2242
Operating instructions PIONEER DV-2242
Instructions for use PIONEER DV-2242
Instruction manual PIONEER DV-2242

Pioneer

Operating Instructions | Mode d'emploi | Bedienungsanleitung
Istruzioni per l'uso | Handleiding | Manual de instrucciones



DVD PLAYER | LECTEUR DVD | DVD-SPIELER
LETTORE PER DVD | DVD-SPELER | REPRODUCOR DVD

DV-2242
DV-2240



[You're reading an excerpt. Click here to read official PIONEER DV-2242 user guide](http://yourpdfguides.com/dref/5599074)
<http://yourpdfguides.com/dref/5599074>

Manual abstract:

Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation). D3-4-2-2-2a*_A1_En Information for users on collection and disposal of old equipment and used batteries These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. These symbols are only valid in the European Union. For countries outside the European Union: If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal. What's in the box •••Remote Control AAA batteries (R03) x 2 Warranty card Operating instructions (This document) WARNING To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

D3-4-2-1-7a*_A1_En POWER-CORD CAUTION VENTILATION CAUTION Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc. , on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords.

The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement. S002*_A1_En When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side).

WARNING Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed. D3-4-2-1-7b*_A1_En Operating Environment Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked) Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light) D3-4-2-1-7c*_A1_En WARNING This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture. D3-4-2-1-3*_A1_En Pb Symbol for equipment Symbol examples for batteries K058a*_A1_En CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. CLASS 1 LASER PRODUCT D58-5-2-2a*_A1_En 2 Before you start Loading the batteries in the remote control Connections Player's rear panel VIDEO OUT Part names and functions Remote Control 4 Use these to select items, change settings and move the cursor. /// ENTER L Introduction White 1 14 5 Use this to implement the selected item or enter a setting that you have changed. Insert 2 batteries (AAA/R03 size battery) with correct polarity (□ / □) as indicated. close the battery compartment. Play Mode Disc Navigator TV or AV receiver ••WARNING Be sure to turn off the power and unplug the power cord from the power outlet whenever making or changing connections.

Connect the power cord after all the connections between devices have been completed. 4 5 6 8 10 12 7 9 11 11 13 Initial Settings 18 19 20 21 22 23 •••Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries. Connecting using commercially available cables •The player can be connected to an AV amplifier, etc. , using commercially available digital audio cables and component video cables. □ •••••When inserting the batteries, make sure not to damage the springs on the battery's (□) terminals. Do not use any batteries other than the ones specified. Also, do not use a new battery together with an old one. When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks (□ and □).

Do not heat batteries, disassemble them, or throw them into flames or water. Batteries may have different voltages, even if they are the same size and shape. Do not use different types of batteries together. To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries.

If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water. When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/ area. NOTE DV-2242 •The illustrations used in this operating instructions are DV-2242. NOTE Audio Settings (page 7) Video Adjust (page 7) Play Mode •A-B Repeat The specified section within a single title or track is played repeatedly. □ Search Mode Plays the specified number or time within the title, chapter, track or file.

The Play Mode function may not work for some discs or files. •Disc Navigator (see MENU on page 4) •Initial Settings (page 6) 1 2 □ STANDBY/ON 6 7 □ PLAY Press to turn the power on and off. Use these to specify and play the title, chapter, track or file. also use to select items on MENU screens , etc. Press to display the top menu of the DVD-Video. Press in the pause mode to move backward frame-by-frame. Press and hold in the pause mode to play back slowly (reverse).



[You're reading an excerpt. Click here to read official PIONEER DV-2242 user guide](http://yourpdfguides.com/dref/5599074)
<http://yourpdfguides.com/dref/5599074>

Number buttons (0 to 9) / ••• 3 TOP MENU 3 Part names and functions 8 9 PAUSE Press to stop playback temporarily. Press again to resume. Press to return to the beginning of the currently playing title, chapter, track or file.

Press twice to move back to the beginning of the previous title, chapter, track or file. Press to zoom on the image. For discs or files including multiple audio streams/channels, the audio stream/channel can be changed during playback. On DVD-Video or DivX discs containing subtitles in multiple languages, the subtitle can be changed during playback. 20 / ••• PREV Press during playback to fast-forward. Press in the pause mode to move forward frame-by-frame. Press and hold in the pause mode to play back slowly (forward). / Front Panel 6 19 21 22 NEXT ANGLE ••• 10 11 ZOOM Press during playback to skip ahead to the beginning of the next title, chapter, track or file. On DVD-Video discs containing multiple angles, the angle can be changed during playback. Press and hold during the audio CD playback to repeat the disc/track.

Each time you press and hold, the repeat mode changes between the disc repeat and track repeat mode. 2 DV-2240 3 5 1 Press to open and close the disc tray and load the disc. <Only for the front panel> 1 2 3 4 5 Disc tray OPEN/CLOSE PLAY indicator Will turn on during normal playback. Will flash when reading disc, for example. Resume play from where stopped (resume play) • 15 DVD/USB (DV-2242) (page 6) ENTER (DV-2240) Press to switch between DVD and USB modes.

Use this to implement the selected item or enter a setting that you have changed. Select the title, chapter, track or file from the Disc Navigator to play back. • 16 17 CLEAR MENU USB port (type A) (DV-2242) ON indicator Will turn on when power is on. When STOP is pressed while playing, the location where it stopped will be memorized. If you press PLAY playback starts from the point you last stopped.

To cancel resume play, press STOP again while playback is stopped. Some discs may not be able to resume play. • 18 19 RETURN STOP Press to return to the previous screen. To resume play, press STOP once during playback. If you press PLAY after that, playback starts from the point you last stopped. To cancel resume play, press STOP again while playback is stopped. 1 5 6 4 2 5 3 3 4 2 1 ••• This player does not support multisession discs or multiborder recording. Multisession/multiborder recording is a method in which data is recorded on a single disc in two or more sessions/borders. A "session" or "border" is one recording unit, consisting of a complete set of data from lead-in to lead-out. NOTE Playing discs created on computers or BD/DVD recorders • The player may not be able to play discs recorded using a computer.

Record discs in a format playable on this player. is a trademark of FUJIFILM Corporation. The player may not be able to play discs recorded using a computer or a BD/DVD recorder, if burn quality is not good due to characteristics of the disc, scratches, dirt on the disc, dirt on the recorder's lens, etc. Displaying external subtitle files • The font sets listed below are available for external subtitle files. You can see the proper font set onscreen by setting the Subtitle Language on page 10 to match the subtitle file. This player supports the following language groups: Afrikaans (af), Basque (eu), Catalan (ca), Danish (da), Dutch (nl), English (en), Faroese (fo), Finnish (fi), French (fr), German (de), Icelandic (is), Irish (ga), Italian (it), Norwegian (no), Portuguese (pt), Rhaeto-Romanic (rm), Scottish (gd), Spanish (es), Swedish (sv) Albanian (sq), Croatian (hr), Czech (cs), Hungarian (hu), Polish (pl), Romanian (ro), Slovak (sk), Slovenian (sl) Bulgarian (bg), Byelorussian (be), Macedonian (mk), Russian (ru), Serbian (sr), Ukrainian (uk) Hebrew (iw), Yiddish (ji) Turkish (tr) Discs that cannot be played ••••••••• Blu-ray discs HD DVDs AVCHD AVCRC DVD-Audio discs DVD-RAM discs SACDs CD-G Discs recorded with packet writing Programs that can be recorded only once and that are (already) recorded on a DVD-R/RW/R DL • Group 1 Playback Playable files ••• Only discs recorded in ISO9660 Level 1, Level 2 and Joliet can be played. files protected by DRM (Digital Rights Management) cannot be played. Files other than the ones below (WMV, MPEG4AAC, etc.) are not guaranteed to play. Group 2 Group 3 Group 4 Group 5 About region numbers All DVD-Video discs carry a region mark (number) on the case.

The mark (number) denotes the region(s) of the world in which the disc is compatible. Your DVD player also has a region mark (number), which you can find on the rear panel. If you try to play a disc of an incompatible region, "Incompatible disc region number Can't play disc" will be displayed outputting it, the settings you have programmed are cleared. Connect the USB device to the USB port on the front panel (page 4). the Disc Navigator appears automatically. Use /// to select the file, then press ENTER. Turn the power off before removing the USB device. To play the program, select Playback Start from the program screen, then press ENTER. To resume normal playback, select Playback Stop from the program screen, then press ENTER. The program remains in the memory.

@@@@ • Programs can be played repeatedly. @@@@ Press STOP to stop playback if the file is being played. select the file. Use /// to select, then press . start copying. Use / to select Yes, then press ENTER. The file copying process will appear on the screen. @@@@ Initial Settings cannot be selected during playback. @@@@ dVD Menu Lang. @@@ /available languages/Other Language).

@@@@ This is only valid for files with the extension ". The effect depends on the file. Try different settings, and choose the one providing the good effect. @@@@ • This setting only affects Dolby Digital sound. The effect depends on the volume of the connected units. @@@@ @@@@ @@@@ press STANDBY/ON while pressing . Use the buttons on the front panel. @@@@ @@@@ @@@@ MPEG Out • Select whether to output MPEG audio signals (MPEG) or to convert them into linear PCM signals (MPEG > PCM), according to the connected unit. Display settings OSD Language • Change the language of the operation messages (Play, Stop, etc.) displayed on the TV screen (English/available languages).

Angle Indicator • Select whether to display the angle mark on the TV screen (On) or not (Off). on Screen Display • Select whether to display operation messages (Play, Stop, etc.) on the TV screen (On) or not (Off). Contrast (-16 to +16) • Adjusts the ratio of the brightness of the brightest and darkest portions of the picture. Gamma (-3 to +3) • Adjusts the look of the dark portions of the picture.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5599074)

[DV-2242 user guide](http://yourpdfguides.com/dref/5599074)

<http://yourpdfguides.com/dref/5599074>

Hue (green 9 to red 9) • Adjusts the balance between green and red. Chroma Level (-9 to +9) • Adjusts the density of the colors. This setting is effective for sources with many colors, such as cartoons. Brightness, Contrast, Gamma, Hue and Chroma Level are set to 0 upon purchase. Video Output settings TV Screen • Change the picture's display format (4:3 (Letter Box)/4:3 (Pan & Scan)/16:9 (Wide)), according to the connected TV.

The player's factory default setting is set as 4:3 (Letter Box). options settings Parental Lock • Restrict DVD-Video viewing (Password/Level Change/Country Code). DivX VOD • Display the registration code required for playing DivX VOD files (Activate/Deactivate). Auto Power Off • Select whether to turn the power off automatically (On) or not (Off). When set to On, the power automatically turns off if no operation is performed for 30 minutes or more. 7

Troubleshooting ••• Incorrect operation is often mistaken for trouble or malfunction. If there is something wrong with this player, check the symptoms below. Sometimes the trouble lie in another component connected to this player. Inspect the component and electrical appliances being used. If the trouble cannot be rectified after checking the items below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.

The player may not operate properly due to static electricity or other external influences. In such cases, normal operation may be restored by unplugging the power cord then plugging it back in. When a USB device is connected Problem USB device is not recognized. ••••• File cannot be played. □ •••• Possible causes and solutions Turn the power off, then disconnect and reconnect the USB device. This player does not support USB hubs. connect the USB device directly. This player only supports USB mass storage class devices. This player supports portable flash memory and digital audio playback devices. Only the FAT16 and FAT32 file systems are supported.

If the USB device is equipped with an AC adapter, use the USB device with the AC adapter connected. Some USB devices may not be recognized properly. It may not be able to play some files. The maximum displayable number of characters for the folder and file names on the Disc Navigator is 14. The order of the folder and file names displayed on the Disc Navigator is dependant on the time and date when the folders or files were created on the USB device.

It may take longer to load data when a large capacity USB device is connected (this could take several minutes). problem Difference in volume between DVD and CD. Disc cannot be played or disc tray opens automatically. □ ••• Possible causes and solutions The volume may sound different due to differences in how the signals are recorded on the disc. If the disc is dirty, wipe the dirt off the disc (page 10).

Set the disc with the printed side facing up. Check the disc's region number, and if the number is compatible for playback on the player (page 5). Only the discs with the appropriate region number or "ALL" can be played. If Auto Power Off is set to On, the power turns off automatically if no operation has done for over 30 minutes (above). Refer to the TV's operating instructions and set the TV's aspect ratio properly. set TV Screen properly (page 7). When the player and the TV are connected via a video deck, "analog copy protect function" may cause the picture being played on the video deck not to display properly. If the picture is distorted, switch the TV system to the one used in your country or region (NTSC or PAL) (page 9). This player can recognize up to 299 folders on one disc and 648 files within one folder. Depending on the folder structure, however, the player may not be able to recognize certain folders or files.

Only 1-byte alphanumeric characters can be displayed. Folder and file names including characters other than 1-byte alphanumeric characters may be displayed for example as F_007 or FL_001, and the characters may be garbled. The player may take longer to display large files. Black bars may be displayed along the top and bottom or sides when JPEG files with different aspect ratios are played. The power turns off automatically. Picture is stretched, or aspect ratio cannot be changed. Picture is disturbed or dark during playback. Much time is required to recognized the USB device. •96 kHz/88. 2 kHz digital audio signals are not output from the COAXIAL DIGITAL AUDIO OUT terminals.

folder or file names are not recognized. Folder or file names are not displayed or properly displayed •••• Much time is required to play JPEG files. Black bars are displayed when playing JPEG files. □ •8 Additional information Setting the TV system ••• If the picture of the disc being played is distorted, switch the TV system to the one used in your country or region. When the TV system is switched, the types of discs that can be played are limited.

the factory default setting is AUTO. Cautions on use When moving the player When moving the player, check first that there is no disc loaded and that the disc tray is closed. Then press □ STANDBY/ON on the player (or □ STANDBY/ ON on the remote control), wait for the OFF indicator on the front panel display to turn off, then unplug the power cord. Moving the player with a disc inside it could result in damage. About condensation While the player is in the standby mode.

press □ STANDBY/ON while pressing □. Use the buttons on the front panel. The power turns on and the TV system switches as shown below. □ AUTO □ NTSC

• NTSC □ PAL • PAL □ AUTO Place of installation •• Choose a stable place near the TV or stereo system being used with the player. Do not place the player on top of a TV or color monitor. Also install it away from cassette decks and other devices easily affected by magnetic forces. If the player is moved suddenly from a cold place into a warm room (in winter, for example) or if the temperature in the room in which the player is installed rises suddenly due to a heater, etc. , water droplets (condensation) may form inside (on operating parts and the lens). When condensation is present, the player will not operate properly and playback is not possible. Let the player stand at room temperature for 1 or 2 hours with the power turned on (the time depends on the extent of condensation).

The water droplets will dissipate and playback will become possible. Condensation can also occur in the summer if the player is exposed to the direct wind from an air-conditioner. If this happens, move the player to a different place. Handling discs •• Storing Always place discs in their cases and store them vertically, avoiding places hot, humid, exposed to direct sunlight and extremely cold. Be sure to read the cautions included with the disc.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5599074)

[DV-2242 user guide](http://yourpdfguides.com/dref/5599074)

<http://yourpdfguides.com/dref/5599074>

@@) Do not place objects on the player. Do not place any objects on top of the player. Do not obstruct the ventilation holes. Do not use the player on shaggy rugs, beds, sofas, etc. , or wrapped in cloth , etc.

Doing so will prevent the heat from dispersing, leading to damage. @@Clean the player using a soft cloth. @@ alcohol , thinner , benzene , insecticides , etc. , could cause the print or paint to peel off. @@ when using chemical-impregnated wipes , etc.

, read the cautions included with the wipes carefully. Caution for when the unit is installed in a rack with a glass door Discs may not play if there are fingerprints or dust on them. In this case, use a cleaning cloth, etc. , to gently wipe the disc from the inside towards the outside. Do not use dirty cleaning cloths.

Do not use benzene, thinner or other volatile chemicals. Also do not use record spray or antistatic agents. For tough dirt, apply some water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe off the moisture with a dry cloth. do not use damaged (cracked or warped) discs. Do not let the signal surface of discs get scratched or dirty. Do not place two discs in the disc tray, one on top of the other. Do not attach pieces of paper or stickers to discs. Doing so could warp discs, making it impossible to play them. Also note that rental discs often have labels attached to them, and the label's glue may have oozed out. Check that there is no glue around the edges of such labels before using rented discs.

pAL NTSC PAL NTSC or PAL no disc Do not expose to heat. Do not place the player on top of an amplifier or other component that generates heat. When placing it in a rack, to avoid the heat given off by the amplifier or other audio component, place it on a shelf below the amplifier. Do not press □ OPEN/CLOSE on the remote control to open the disc tray while the glass door is closed. The door will hamper the movement of the disc tray, and the unit could be damaged. Appendix Cleaning the lens Turn off the player's power when not using it. The player's lens should not become dirty in normal use, but if for some reason it should malfunction due to dust or dirt, consult your nearest Pioneer authorized service center. Although lens cleaners for players are commercially available, we advise against using them since some may damage the lens. Depending on signal conditions, striped patterns may appear on a TV screen and noise may enter the sound of radio broadcasts when the player's power is on. If this happens, turn the player's power off.

About copyrights This item incorporates copy protection technology that is protected by U. s. Patents and other intellectual property rights of Rovi Corporation.) cannot be played on this player. Do not attempt to play such discs, as they could damage the player.

Language Code Table Japanese (ja), 1001 English (en), 0514 French (fr), 0618 German (de), 0405 Italian (it), 0920 Spanish (es), 0519 Chinese (zh), 2608 Dutch (nl), 1412 Portuguese (pt), 1620 Swedish (sv), 1922 Russian (ru), 1821 Korean (ko), 1115 Greek (el), 0512 Afar (aa), 0101 Abkhazian (ab), 0102 Afrikaans (af), 0106 Amharic (am), 0113 Arabic (ar), 0118 Assamese (as), 0119 Aymara (ay), 0125 Azerbaijani (az), 0126 Bashkir (ba), 0201 Byelorussian (be), 0205 Bulgarian (bg), 0207 Bihari (bh), 0208 Bislama (bi), 0209 Bengali (bn), 0214 Tibetan (bo), 0215 Breton (br), 0218 Catalan (ca), 0301 Corsican (co), 0315 Czech (cs), 0319 Welsh (cy), 0325 Danish (da), 0401 Language names (codes) an input codes About condensation on discs Water droplets (condensation) may form on the surface of discs if they are moved from a cold place (particularly in winter) into a warm room. Discs may not play normally if there is condensation on them. Carefully wipe the water droplets off the surface of the disc before loading it. About trademarks • Manufactured under license from Dolby Laboratories. □Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

271 mm (W) x 42 mm (H) x 208 mm (D) +5 °C to +35 °C 5 % to 85 % (no condensation) Video output Output level Output terminal 1 Vp-p (75 Ω) RCA terminal Audio output (stereo L/R) Audio output level Output terminal Frequency response 200 mVrms (1 kHz, -20 dB) RCA terminal 4 Hz to 44 kHz Digital audio output Coaxial digital output RCA terminal USB (DV-2242) USB port A type • • The specifications and design of this product are subject to change without notice. □ The screen differs according to the disc or file. On DVD-Video or DivX discs containing subtitles in multiple languages, the subtitle can be changed during playback. D3-4-2-1-7c*_A1_Es Pb Symbol for equipment Symbol examples for batteries K058a_A1_Es PRECAUCIÓN Este aparato es un producto de láser de clase 1 clasificado como tal en Seguridad de productos de láser, IEC 60825-1:2007. .



[You're reading an excerpt. Click here to read official PIONEER DV-2242 user guide](http://yourpdfguides.com/dref/5599074)
<http://yourpdfguides.com/dref/5599074>