



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER FH-X700BT. You'll find the answers to all your questions on the PIONEER FH-X700BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER FH-X700BT
User guide PIONEER FH-X700BT
Operating instructions PIONEER FH-X700BT
Instructions for use PIONEER FH-X700BT
Instruction manual PIONEER FH-X700BT

CD RDS RECEIVER
AUTORADIO CD RDS
SINTOLETTORE CD RDS
REPRODUCITOR DE CD CON RECEPTOR RDS
CD RDS-EMPFÄNGER
CD RDS-ONTVANGER
CD RDS ПРИЕМНИК

FH-X700BT

Pioneer

Installation Manual
Manuel d'installation
Manuale d'installazione
Manual de instalación
Installationsanleitung
Installatiehandleiding
Руководство по установке

English
Français
Italiano
Español
Deutsch
Nederlands
Русский



[You're reading an excerpt. Click here to read official PIONEER FH-X700BT user guide](http://yourpdfguides.com/dref/5480808)

<http://yourpdfguides.com/dref/5480808>

Manual abstract:

! Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. ! Do not install this unit where: — it may interfere with operation of the vehicle. □ it may cause injury to a passenger as a result of a sudden stop. How to install This unit can be installed properly using either of the methods in the below list. @@Before installing this unit 1 Remove the trim ring. @@ ! @@60° 1 Dashboard Installation with the holder 1 Install the holder into the dashboard. After inserting the holder into the dashboard, select and bend the tabs appropriate to the thickness of the dashboard material. (Install this unit as firmly as possible using the top and bottom tabs. To secure this unit, bend the tabs 90 degrees. When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.

1 1 Trim ring 1 2 Insert the supplied extraction keys into both sides of the unit until they click into place. Leave ample 5 cm space 5 cm 1 1 Trim ring 2 5cm cm Removing the holder The procedure is the same as that for Before installing this unit. For details, refer to Before installing this unit on this page. ! Use commercially available parts when installing. 1 Dashboard 2 Holder (factory-supplied part) 3 Pull the unit out of the holder.

remove the holder. 2 En Section Installation Connections 01 02 Installation using the screw holes on the side of the unit % Fastening the unit to the factory radiomounting bracket. Position the unit so that its screw holes are aligned with the screw holes of the bracket, and tighten the screws at 3 locations on each side. important ! When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain. Use of this unit in conditions other than the following could result in fire or malfunction.

@@@□ Secure the wiring with cable clamps or adhesive tape. @@@@□ Cover any disconnected cable connectors with insulating tape. □ Do not shorten any cables. @@The current capacity of the cable is limited. @@@@ 300 mA 12 V DC). @@ ! @@Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. @@@@OF STAR 3 4 1 2 3 4 If the pawl gets in the way, bend it down. @@@@In this case, be sure to connect 4 to 5 and 6 to 3. 7 Connect leads of the same color to each other.

@@ connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b. @@In this case, be sure to connect to both connectors. notes ! @@The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/black leads. Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 1 7 □ □ □ □ 3 2 □ □ 4 5 3 6 7 2 □ □ 1 System remote control Connect to Blue/white cable. 2 Power amp (sold separately) 3

Connect with RCA cables (sold separately) 4 To Front output 5 Front speaker 6 To Rear output or subwoofer output 7 Rear speaker or subwoofer 4 En Section Installing the microphone Installing the microphone 03 CAUTION It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the unit in such a way that it will not obstruct driving.

Note Install the microphone in a position and orientation that will enable it to pick up the voice of the person operating the system. 1 2 Install the microphone clip on the steering column. 1 English 2 2 When installing the microphone on the sun visor 1 Install the microphone on the microphone clip. 1 2 1 Microphone clip 2 Clamp Use separately sold clamps to secure the lead where necessary inside the vehicle. When installing the microphone on the steering column 1 Install the microphone on the microphone clip.

@@With the sun visor up, install the microphone clip. (Lowering the sun visor reduces the voice recognition rate. @@@@3 4 1 Microphone 2 Microphone base 3 Microphone clip 4 Fit the microphone lead into the groove. # Microphone can be installed without using microphone clip. In this case, detach the microphone base from the microphone clip.

To detach the microphone base from the microphone clip, slide the microphone base. Adjusting the microphone angle The microphone angle can be adjusted.



[You're reading an excerpt. Click here to read official PIONEER FH-X700BT user guide](http://yourpdfguides.com/dref/5480808)

<http://yourpdfguides.com/dref/5480808>