



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MCS-838. You'll find the answers to all your questions on the PIONEER MCS-838 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PIONEER MCS-838**  
**User guide PIONEER MCS-838**  
**Operating instructions PIONEER MCS-838**  
**Instructions for use PIONEER MCS-838**  
**Instruction manual PIONEER MCS-838**

**Pioneer**

MCS-838  
MCS-434  
MCS-737  
MCS-333  
MCS-FS232  
MCS-FS131

Blu-ray Disc Surround System  
Système Home-Cinéma Blu-ray Disc  
Blu-ray Disc Mehrkanal-System  
Sistema Surround con Lettore Blu-ray Disc  
Blu-ray Disc Multikanals System  
Sistema Surround de Blu-ray Disc

ENGLISH  
FRANCAIS  
DEUTSCH  
ITALIANO  
ESPANOL

Discover the benefits of registering your product online at <http://www.pioneer.eu>  
Découvrez les nombreux avantages offerts en enregistrant votre produit en ligne maintenant sur <http://www.pioneer.fr> ou <http://www.pioneer.de>  
Bitte nutzen Sie die Möglichkeit zur Registrierung Ihres Produktes unter <http://www.pioneer.de> oder <http://www.pioneer.de>  
Prestati il tuo prodotto su <http://www.pioneer.it> (o <http://www.pioneer.eu>) e scopri subito quali vantaggi puoi ottenere  
Ordele nu de vuestrele van online registreret Register use Pioneer product via <http://www.pioneer.nl> - <http://www.pioneer.be> (of <http://www.pioneer.de>)  
Registre su producto en <http://www.pioneer.es> or <http://www.pioneer.eu> Descubra los beneficios de registrarse online

Operating Instructions / Mode d'emploi / Bedienungsanleitung /  
Istruzioni per l'uso / Handleiding / Manual de instrucciones



[You're reading an excerpt. Click here to read official PIONEER MCS-838 user guide](http://yourpdfguides.com/dref/5480779)  
<http://yourpdfguides.com/dref/5480779>

**Manual abstract:**

refer all servicing to qualified personnel. Operating Environment D3-4-2-1-1\_B1\_En Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked) Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light) D3-4-2-1-7c\*\_A1\_En CLASS 1 LASER PRODUCT The following caution label appears on your unit. Location: inside of the unit CAUTION The STANDBY/ON switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation). d3-4-2-2-2a\*\_A1\_En This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period. k041\_A1\_En D58-5-2-2b\*\_B1\_En WARNING This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3\_A1\_En POWER-CORD CAUTION VENTILATION CAUTION When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side). WARNING Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc. , on the power cord, or pinch the cord.

Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

S002\*\_A1\_En Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed. D3-4-2-1-7b\*\_A1\_En WARNING To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. D3-4-2-1-7a\_A1\_En Information for users on collection and disposal of old equipment and used batteries Symbol for equipment These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. Symbol examples for batteries By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. These symbols are only valid in the European Union. For countries outside the European Union: If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal. Pb K058a\_A1\_En Cautions on 3D Viewing Extended viewing of 3D images without rest periods could cause fatigue or discomfort.

For Wireless product European Union Notice PIONEER hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/ EC, 2004/108/EC, 2006/95/EC and 2009/125/EC. RF Radiation Exposure Statement This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Notes on Copyrights Because AACCS (Advanced Access Content System) is approved as content protection system for Blu-ray Disc format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc. , of AACCS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/ or changed by AACCS after the production of this product.

Furthermore, BD-ROM Mark and BD+ are additionally used as content protection systems for Blu-ray Disc format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. to obtain additional information on AACCS , BD-ROM Mark , BD+ , or this product , please contact an authorized Customer Service Center. Many BD-ROM/DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR.

Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/or criminal liability. Important Notice for TV colour system The colour system of this player differs according to currently playing discs. For example, when the player plays the disc recorded in the NTSC colour system, the image is output as an NTSC signal. Only the multi system colour TV can receive all signals output from the player. If you have a PAL colour system TV, you will see just distorted images when using discs or video contents recorded in NTSC.

The multi system colour TV changes the colour system automatically according to input signals. In case that the colour system is not changed automatically, turn it off and then on to see normal images on screen. Even if the disc recorded in NTSC colour system are well displayed on your TV, these may not be recorded correctly on your recorder. Table of Contents 1 8 8 8 8 9 9 10 10 11 18 20 22 23 23 34 34 35 35 35 36 36 36 37 37 38 39 39 40 40 42 44 44 44 Before you start Introduction – Supplied accessories – Accessories of speaker box (MCS-838, MCS-737) – Accessories of speaker box (MCS-434, MCS-333) – Accessories of speaker box (MCS-FS232) – Accessories of speaker box (MCS-FS131) – Putting the batteries in the remote control – Software update – About operation of this player from a mobile device (iPod, iPhone, iPad etc.



[You're reading an excerpt. Click here to read official PIONEER](#)

[MCS-838 user guide](#)

<http://yourpdfguides.com/dref/5480779>

) – Types of discs/files that can be played – Trademarks and licenses Remote control Front panel Rear panel – MCS-838/MCS-434/MCS-737/MCS-333 – MCS-FS232/MCS-FS131 – Additional notes on speaker for MCSFS131 – Positioning the system for MCS-FS131 Connecting to Your TV – HDMI connection – ARC (Audio Return Channel) function Antenna connection Connections with external device – AUX connection – PORTABLE IN connection – OPTICAL IN connection – HDMI IN 1/2/3/4 connection Connecting to your Home Network – Wired network connection – Wireless network connection (MCS-838/MCS-434/MCS-FS232 only) – Wireless network setup (MCS-838/MCS-434/MCS-FS232 only) – WPS setup (Wi-Fi Protected Setup) (MCS-838/MCS-434/MCS-FS232 only) USB device connection – About USB devices – Connecting the USB device 2 24 24 25 26 26 27 27 28 28 29 31 32 32 33 33 Connecting Assemble the speakers – Speaker setup for MCS-838, MCS-737 – Wall mounting the speaker for MCS-838, MCS-737 – Additional notes on speaker for MCS-838, MCS-737 – Positioning the system for MCS-838, MCS737 – Speaker setup for MCS-434, MCS-333 – Wall mounting the speaker for MCS-434, MCS-333 – Additional notes on speaker for MCS-434, MCS-333 – Positioning the system for MCS-434, MCS333 – Speaker setup for MCS-FS232 – Wall mounting the speakers for MCSFS232 – Additional notes on speaker placement for MCS-FS232 – Positioning the system for MCS-FS232 – Speaker setup for MCS-FS131 – Wall mounting the speaker for MCS-FS131 3 45 46 47 Getting Started Making settings using the Setup Navigator menu Operating the TV with the player's remote control – TV preset code list 4 48 49 49 49 49 50 50 51 51 51 52 Playback Playing discs or files – Forward and reverse scanning – Playing specific chapters, tracks or files – Skipping content – Playing in slow motion – Step forward and step reverse – Playing a specific section within a title or track repeatedly (A-B Repeat) – Playing repeatedly (Repeat Play) – Playing in the desired order (Programmed Play) – Making bookmarks – Zoom – Playing photos as slideshows – Switching the camera angles – Switching the subtitles 52 52 52 52 53 54 55 55 56 56 56 – Switching the audio – Convert 2D image into 3D – Switching the CD/SACD playback area – Displaying the disc information – Enjoying BONUSVIEW or BD-LIVE – Playback functions Using the TOOLS menu – Playing from a specific time (Time Search) – Playing a specific title, chapter, track or file (Search) – Playing specified range of discs, titles or chapter (track/file) in random order Continuing playback from a specified position (Continued Viewing Playback) 7 66 67 67 68 69 69 69 69 69 69 70 70 72 Other Operating Recording Audio CD to a USB device iPod/iPhone/iPad playback (MCS-838/MCS434/MCS-FS232 only) – Connect an iPod/iPhone/iPad – Playing your iPod/iPhone/iPad Radio Operations – Listening to the radio – Presetting the radio stations – Deleting all the saved stations – Improving poor FM reception – Seeing information about a radio station – FM Recording Karaoke – Enjoying Karaoke Sound 1 2 3 5 57 57 59 59 59 59 60 60 60 61 61 61 62 62 62 63 63 63 64 64 Playback from Home Media Gallery About Home Media Gallery – About network playback Playback file on the network Disc/USB playback – Playing back image files – Switch Play Mode Playing in the desired order (Playlist) – Adding tracks/files – Playing the playlist – Deleting tracks/files from the playlist Copy files to a USB – Select and copy a single file/folder – Copy all files Use the unit's Wi-Fi Direct™ function (MCS-838/MCS-434/MCS-FS232 only) – Display the Wi-Fi Direct mode screen – Connect to mobile device – Connect using WPS (Wi-Fi Protected Setup) – Connect using mobile device's Wi-Fi Direct function – Playback photos, music and video files from a mobile device – Ending Wi-Fi Direct connection – Change SSID and password 4 8 73 73 80 81 82 Advanced settings Changing the settings – Operating the initial setup screen – Software updating – Restoring all the settings to the factory default settings – Langon Only the discs that have been finalized can be played.

Disc type BD-ROM BD-R BD-RE Logo Application format DVDCD-DA DVD VR Video DTS-CD DATADISC1 1 Before you start BDMV BDAV BD2 DVD-ROM DVD DVD-R2,3,4 6 7 3,7 6 7 DVD+R2,3 3 CD-DA (Audio CD)8 CD CD-R3 3 CD-ROM 1. Discs on which video, image or audio files are recorded. This player does not support multisection discs or multiborder recording. Finalize them before playing them on this player. 12 En Before you start "Blu-ray Disc", "Blu-ray" and "Blu-ray Disc" logo are trademarks of Blu-ray Disc Association. About audio formats The following audio formats are supported on this player: Dolby TrueHD Dolby Digital Plus Dolby Digital DTS-HD Master Audio DTS-HD High Resolution Audio DTS Digital Surround MPEG audio (AAC) Linear PCM Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio \ Essential is a trademark of DTS, Inc. Discs that cannot be played HD DVDs DVD-RAM discs It is possible that some discs other than the ones listed above may not be playable either. Note Some discs cannot be played, even if one of the logo marks on the previous page is indicated.

To play 8 cm discs, set the disc in the 8 cm disc depression in the center of the disc tray. About playback of unauthorized copies Cinavia Notice This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted. More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P. Playing BDs BDs (BDMV) compatible with the formats below can be played. – Blu-ray Disc Read-Only (ROM) Format Version 2 – Blu-ray Disc Recordable (R) Format Version 2 – Blu-ray Disc Rewritable (RE) Format Version 3 This player supports BD-ROM Profile 5. About copyright protection Copyright protection technology is used for some Blu-ray Discs™, DVDs and contents played over the Internet or other networks. Copyright protection technology restricts playback and analog output.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480779)

[MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

<http://yourpdfguides.com/dref/5480779>

Due to updates in copyright protection provisions, the restrictions may differ depending on the date this product was purchased. Furthermore, the restrictions may be updated when the software is updated after purchase.

The data secondary video (Picture-in-Picture) and secondary audio data) may be stored in the storage. For details on secondary video and secondary audio playback, refer to the disc's instructions. before you start 13 En Playing DVDs "BONUSVIEW" is trademark of Blu-ray Disc Association. BD-LIVE functions such as downloading movie trailers or additional audio and subtitle languages and playing on-line games can be enjoyed over the Internet. The data downloaded with the BD-LIVE function (trailers, etc.

) is stored in the storage. Refer to the disc's instructions for details about BD-LIVE functions. This label indicates playback compatibility with DVD-RW discs recorded in VR format (Video Recording format). However, for discs recorded with a record-only-once encrypted program, playback can only be achieved using a CPRM compatible device. The AVCHD is a high definition (HD) digital video camera recorder format recording highdefinition onto certain media by using highly efficient codec technologies.

1 Before you start "BD-LIVE" logo is trademark of Blu-ray Disc Association. BD-J (Java) applications to create highly interactive titles, for example including games. AVCHD and the AVCHD logo are trademarks of Panasonic Corporation and Sony Corporation. About region numbers Blu-ray Disc Player and BD-ROM or DVD-Video discs are assigned region numbers according to the region in which they are sold. This player's region numbers are: BD-ROM: - Europe, Australia and New Zealand models: B - Russia models: C - Others: A DVD-Video: - Europe models: 2 - Australia and New Zealand models: 4 - Russia models: 5 - Others: 3 Discs not including these numbers cannot be played. Discs playable on this player are as shown below. Models: 2 (including 2) and ALL - Australia and New Zealand models: 4 (including 4) and ALL - Russia models: 5 (including 5) and ALL - Others: 3 (including 3) and ALL Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners. BDs (BD-RE) compatible with the formats below can be played. Blu-ray Disc Recordable (R) Format Version 1 - Blu-ray Disc Rewritable (RE) Format Version 2 14 En Before you start Playing CDs Regarding copy protected CDs: This player is designed to conform to the specifications of the Audio CD format.

This player does not support the playback or function of discs that do not conform to these specifications. About video, audio, and image files and folders Audio and image files can be played on this player when the folders on the disc or USB device are created as described below. Mp3 1 Before you start DualDisc playback A DualDisc is a two-sided disc, one side of which contains DVD content - video, audio, etc. - while the other side contains non-DVD content such as digital audio material. The DVD side of a DualDisc can be played on this player. The non-DVD, audio side of the disc is not compatible with this player. It is possible that when loading or ejecting a DualDisc, the opposite side to that being played will be scratched. scratched discs may not be playable. For more detailed information on the DualDisc specification, please refer to the disc manufacturer or disc retailer. Mp3 \* The number of folders and files within a single folder (including the root directory) is limited to a maximum of 256.

also, keep the number of folder layers to a maximum of 5. Note The file and folder names displayed on this player may differ from those displayed on a computer. Playing discs created on computers or BD/DVD recorders It may not be possible to play discs recorded using a computer due to the application settings or computer's environment settings. Record discs in a format playable on this player. For details, contact the dealer. It may not be possible to play discs recorded using a computer or a BD/DVD recorder, if burn quality is not good due to characteristics of the disc, scratches, dirt on the disc, dirt on the recorder's lens, etc. Before you start 15 En Playable files Video, image and audio files recorded on DVDs, CDs or USB devices can be played. Note This DivX® Certified device must be registered in order to play DivX Video-on-Demand (VOD) content. First generate the DivX VOD registration code for your device and submit it during the registration process. important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices.

If you try to play DivX VOD content not authorized for your device, the message Authorization Error will be displayed and your content will not be played. □ This player's DivX VOD registration code can Initial Setup be checked at HOME MENU Playback DivX® VOD DRM Registration Code (page 75). □ The number of views is restricted for some this player, the remaining number of views is displayed. Files for which the remaining number of views has reached 0 cannot be played (This DivX® rental has expired is displayed). Files for which the number of views is not restricted can be played as many times as you like (the remaining number of views is not displayed). This is an official DivX Certified® device that plays DivX video. visit divx. Com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu.

Com for more information on how to complete your registration. 1 Before you start DivX®, DivX Certified®, DivX Plus™ HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. 16 En Before you start Table of Playable Files Playable media BD-R/RE/-R DL/ Playable files RE DL/-R LTH, (Extensions) DVD-R/RW/-R DL/ USB devices 1 +R/+RW/+R DL, CD-R/RW MP3 (. Mp3) \*2 1 Before you start File specifications Network Sampling frequencies: Up to 48 kHz Bit rate: Up to 320 kbps Audio type: MPEG-1 Audio Layer 3 Sampling frequencies: Up to 48 kHz Bit rate: Up to 192 kbps Sampling frequencies: Up to 96 kHz Bit rate: Up to 192 kbps Audio type: MPEG4-AAC Sampling frequencies: Up to 192 kHz Quantization bitrate: 16 bit, 24 bit Channel: 2ch Sampling frequencies: Up to 192 kHz Quantization bitrate: 16 bit, 24 bit Channel: Multi channel Sampling frequencies: Up to 192 kHz Quantization bitrate: 16 bit Channel: 2ch Maximum resolution: 4 000 x 3 000 pixels 3D photo image Maximum resolution: 2 048 x 1 024 pixel Animated PNG files are not supported. 264 Audio: MP3, AAC Note Depending on the file structure, server capacity and network environment, it may not be possible to play certain files, even for files indicated on the table of playable files above.



[You're reading an excerpt. Click here to read official PIONEER MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

Images and sound may be interrupted during playback. Files protected by DRM (Digital Rights Management) cannot be played (not including DivX VOD files). AVCHD contents cannot be played via LAN. 18 En Before you start Trademarks and licenses 1 Before you start (MCS-838/MCS-434/MCS-FS232 only) The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries. (MCS-838/MCS-434/MCS-FS232 only) Manufactured under license from Dolby Laboratories.

Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio \ Essential is a trademark of DTS, Inc. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. This item incorporates copyright protection technology that is protected by U. s.

Patents and other intellectual property rights of Rovi Corporation. reverse engineering and disassembly are prohibited. Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television. DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

(MCS-838/MCS-434/MCS-FS232 only) Before you start 19 En 1 Before you start USB works with iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPad (4th generation), iPad (3rd generation), iPad 2, iPad mini, iPad, iPod touch (1st through 5th generation) and iPod nano (2nd through 7th generation). □Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

(MCS-838/MCS-434/MCS-FS232 only) 20 En Before you start Remote control 1 1 1 Before you start (STANDBY/ON): Press to turn the power on and off. FUNCTION: Changes the input source or function. 2 When switching while viewing the display window on the player 1. The input source switches every time the FUNCTION is pressed. When switching while viewing the TV monitor 1. The input source switches every time the FUNCTION is pressed.

You can also use the cursor / to switch the input source. The FUNCTION button switches the input source for the [Source Menu]. RESOLUTION: Sets the output resolution for HDMI (See page 74). DIMMER: Dims the light on the unit. SLEEP: Sets a certain period of time after which the unit will switch to off. 4 TOP MENU: Press to display the top menu of the BD-ROM or DVD-Video. RETURN: Press to return to the previous screen. 5 REPLAY: Press to jump back 10 seconds when REPLAY is pressed during playback. SKIP SEARCH: Press to skip 30 seconds ahead SKIP SEARCH is pressed during when playback. 6 0-9 numerical buttons: Selects numbered options in a menu or inputs letters in the keypad menu.

7 CLEAR: Press to clear the numeric number, etc. 1 Before you start Color buttons: Use these to navigate BD-ROM menus. ZOOM (PTY): this button is pressed while the FM tuner is selected, the PTY value will switch. iINDEX: Slideshow playback (See page 51). 22 En Before you start Front panel 1 Before you start \* The illustration is for MCS-838/MCS-434/MCS-FS232 1 2 3 4 5 6 7 8 5 9 a 1 Disc tray 2 Operation buttons (OPEN/CLOSE) FUNCTION Changes the input source or function.

When switching while viewing the display window using the button on the front panel 1. The input source switches every time the FUNCTION is pressed. The FUNCTION button switches the input source for the [Source Menu]. select Home Media Gallery to playback disc. (page 48) 4 Remote control sensor Point the remote control to this, then operate it within approximately 7 m.

The player may have trouble capturing remote control signals if there is a fluorescent light nearby. If this happens, move the player away from the fluorescent light. Note If the power does not turn OFF, pressing the (STANDBY/ON) button for more than 5 seconds reboots the unit and the operation becomes possible.

(MCS-838/MCS-434/MCS-FS232) 333/MCS-FS131) Caution The USB port on the front of the unit cannot be used for recording. Please connect to the USB port on the rear of the unit. 3 Display Window 9 Volume control a Ring indicator Before you start 23 En Rear panel MCS-838/MCS-434/MCS-737/MCS-333 1 2 3 4 5 6 7 8 9 a 1 Before you start MCS-FS232/MCS-FS131 1 2 3 4 5 6 7 8 9 a 1 AC IN Plug into the power source. 2 SPEAKERS connectors 3 Cooling Fan 4 Antenna Connector 5 AUX IN (L/R) 6 USB Port Caution The USB port on the rear of the unit does not support iPod/iPhone/iPad. Please connect these devices to the USB port on the front of the unit. 1 Insert the lower cabinet to the base so that the cable hole is positioned at the backside. Chapter 2 Connecting Assemble the speakers 2 Connecting Speaker setup for MCS-838, MCS-737 Preparing the speakers 1.

Connect the wires to the player. Insert the cables connected to the player to the same colored connector on the speaker. 2 Fix the base to the lower cabinet from the underside, using the four screws (M4 x 16). caution These speaker terminals carry HAZARDOUS LIVE voltage. To prevent the risk of electric shock when connecting or disconnecting the speaker cables, disconnect the power cord before touching any uninsulated parts. Do not connect any speakers other than those supplied to this system. Do not connect the supplied speakers to any amplifier other than the one supplied with this system. Connection to any other amplifier may result in malfunction or fire. 3 Insert the upper cabinet to the lower cabinet. 2.

Attach the non-skid pads to the base of the center speaker. Non-skid pads Connecting 25 En 4 Fix the upper cabinet and the lower cabinet from the backside of the speaker using the two screws (M4 x 12). Wall mounting the speaker for MCS-838, MCS-737 The center speaker have a mounting hole which can be used to mount the speaker on the wall. Before mounting Remember that the speaker system is heavy and that its weight could cause the screws to work loose, or the wall material to fail to support it, resulting in the speaker falling. Make sure that the wall you intend to mount the speakers on is strong enough to support them.

Do not mount on plywood or soft surface walls. mounting screws are not supplied. Use screws suitable for the wall material and support the weight of the speaker. Caution If you are unsure of the qualities and strength of the wall, consult a professional for advice. Pioneer is not responsible for any accidents or damage that result from improper installation.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480779)

[MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

<http://yourpdfguides.com/dref/5480779>

2 Connecting Caution Be careful not to tighten screws excessively. If excessive force is used to tighten screws, the threads of screw and/or nut may be damaged. Use a middle-sized manual screwdriver during assembly. Do not use power screwdrivers or oversized screwdrivers that may exert excessive force on the screws and nuts. Confirm that no foreign matter is stuck to the base or the lower cabinet during assembly. If the unit is assembled with foreign matter stuck between the base and lower cabinet, the unit may not be assembled securely, resulting in tipping or falling. Do not stand on the speaker stand base of the tall speaker to push or swing the speaker. The speaker may fall and break, or someone may be injured. 5 mm Mounting screw (not supplied) 3 mm to 4 mm

26 En Connecting Additional notes on speaker for MCS-838, MCS-737 Install the main front left and right speakers at an equal distance from the TV.

Precautions: Surround left speaker (L)/ Surround right speaker (R): Place these speakers behind your listening position, facing slightly inwards.

D E F Subwoofer: The position of the subwoofer is not so critical, because low bass sounds are not highly directional. But it is better to place the subwoofer near the front speakers. Turn it slightly toward the center of the room to reduce the wall reflections. G 2 Connecting These speakers are not magnetically shielded and so should not be placed near a TV or monitor. Magnetic storage media (such as floppy discs and tape or video cassettes) should also not be kept close to these speakers. Do not attach the front/surround speakers and subwoofer to a wall or ceiling. They may fall off and cause injury. Unit Caution Be careful to make sure children do not put their hands or any objects into the \*subwoofer duct. \*subwoofer duct: A hole for plentiful bass sound on subwoofer cabinet (enclosure). Place the center speaker well out of the reach of children.

Otherwise it may result in the speaker falling down and causing personal injury and/or property damage. The speakers contain magnet parts, so color irregularity may occur on the TV screen (CRT) or computer monitor screen. Please use the speakers away from the TV screen (CRT) or computer monitor screen. Positioning the system for MCS-838, MCS-737 The following illustration shows an example of positioning the system. Note that the illustrations in these instructions differ from the actual unit for explanation purposes.

For the best possible surround sound, all the speakers other than the subwoofer should be placed at the same distance from the listening position ( A ). Front left speaker (L)/ Front right speaker (R): Place the front speakers to the sides of the monitor or screen and as flush with the screen surface as possible. A B C Center speaker: Place the center speaker below or in front of the monitor or screen. Connecting 27 En Speaker setup for MCS-434, MCS-333 Preparing the speakers 1. Connect the wires to the player.

Insert the cables connected to the player to the same colored connector on the speaker. Wall mounting the speaker for MCS-434, MCS-333 All speakers have a mounting hole which can be used to mount the speaker on the wall. Before mounting Remember that the speaker system is heavy and that its weight could cause the screws to work loose, or the wall material to fail to support it, resulting in the speaker falling. Make sure that the wall you intend to mount the speakers on is strong enough to support them. Do not mount on plywood or soft surface walls. mounting screws are not supplied. Use screws suitable for the wall material and support the weight of the speaker. Caution If you are unsure of the qualities and strength of the wall, consult a professional for advice.

Pioneer is not responsible for any accidents or damage that result from improper installation. To prevent the risk of electric shock when connecting or disconnecting the speaker cables, disconnect the power cord before touching any uninsulated parts.

Do not connect any speakers other than those supplied to this system. Do not connect the supplied speakers to any amplifier other than the one supplied with this system. Connection to any other amplifier may result in malfunction or fire. 2. Attach the non-skid pads to the base of each speaker. Non-skid pads This hole is used to fix the unit to the speaker stand. Caution: Do not use this hole to mount on walls or ceilings. The speaker may fall resulting in injury. 28 En Connecting Additional notes on speaker for MCS-434, MCS-333 Install the main front left and right speakers at an equal distance from the TV. Precautions:

These speakers are not magnetically shielded and so should not be placed near a TV or monitor.

Magnetic storage media (such as floppy discs and tape or video cassettes) should also not be kept close to these speakers. Do not attach the subwoofer to a wall or ceiling. They may fall off and cause injury. The unit's front speaker and surround speaker can be attached to speaker stand CP-31B. Be attached to the stand's bracket using the screws supplied with this unit.

(The screws (M5) supplied with the CP-31B cannot be used to attach the speakers from this unit). Screws supplied with this unit Stand bracket 2 Connecting Front left speaker (L)/ Front right speaker (R): Place the front speakers to the sides of the monitor or screen and as flush with the screen surface as possible.

A B C Center speaker: Place the center speaker below or in front of the monitor or screen. You must also pass the speaker cable through the bottom of the base from the hole in the upper part of the speaker stand pipe. Surround left speaker (L)/ Surround right speaker (R): Place these speakers behind your listening position, facing slightly inwards.

D E F Subwoofer: The position of the subwoofer is not so critical, because low bass sounds are not highly directional. But it is better to place the subwoofer near the front speakers. Turn it slightly toward the center of the room to reduce the wall reflections. G Speaker cable Speaker stand (CP-31B) Unit Caution

Be careful to make sure children do not put their hands or any objects into the \*subwoofer duct. \*subwoofer duct: A hole for plentiful bass sound on subwoofer cabinet (enclosure). Place the front, surround and center speakers well out of the reach of children. Otherwise it may result in the speaker falling down and causing personal injury and/or property damage. The speakers contain magnet parts, so color irregularity may occur on the TV screen (CRT) or computer monitor screen. Please use the speakers away from the TV screen (CRT) or computer monitor screen. Positioning the system for MCS-434,

MCS-333 The following illustration shows an example of positioning the system.

Note that the illustrations in these instructions differ from the actual unit for explanation purposes. For the best possible surround sound, all the speakers other than the subwoofer should be placed at the same distance from the listening position ( A ). Connecting 29 En Speaker setup for MCS-FS232 Preparing the speakers For front speakers: Assembling the speaker stands and securing your front speakers.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480779)

[MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

<http://yourpdfguides.com/dref/5480779>

for vertical installation 1. Use the supplied adhesive to attach 4 small pads to the speaker stand base. 4. Secure the speaker and the pole with 2 screws. Ensure that the speaker wire does not get pinched between the speaker and the pole. 2 Connecting Non-skid pads For horizontal installation 1. Use the supplied adhesive to attach 4 small pads to the speaker stand base.

2. Insert the large pole from the holes behind the base and secure with the 4 screws. non-skid pads 2. Insert the small pole from the holes behind the base and secure with the 4 screws. 3.

Pass the speaker wire through the hole on the pole. 30 En Connecting 3. Secure the speaker and the pole with 2 screws. Ensure that the speaker wire does not get pinched between the speaker and the pole. The height of the speaker stands can be adjusted in two levels; select the height you prefer, and fix in position.

Connect the wires to the player Insert the cables connected to the player to the same colored connector on the speaker. 2 Connecting For direct installation Use the supplied adhesive to attach 4 pads to the base of the front speakers. Caution Do not connect any speakers other than those supplied to this system. Do not connect the supplied speakers to any amplifier other than the one supplied with this system. Connection to any other amplifier may result in malfunction or fire. These speaker terminals carry HAZARDOUS LIVE voltage. To prevent the risk of electric shock when connecting or disconnecting the speaker cables, disconnect the power cord before touching any uninsulated parts. Connecting 31 En Wall mounting the speakers for MCS-FS232 Before mounting Remember that the speaker system is heavy and that its weight could cause the screws to work loose, or the wall material to fail to support it, resulting in the speaker falling. Make sure that the wall you intend to mount the speakers on is strong enough to support them. Do not mount on plywood or soft surface walls.

mounting screws are not supplied. Use screws suitable for the wall material and support the weight of the speaker. Caution If you are unsure of the qualities and strength of the wall, consult a professional for advice. Pioneer is not responsible for any accidents or damage that result from improper installation.

Attaching the speakers The front speaker can be hung vertically or horizontally on the wall. Use one hole to hang it vertically and two holes to hang it horizontally. The illustration below shows the front right speaker. Vertical set up Hole 110 Horizontal set up 2 Connecting Hole it up so that the speaker wire position on the back side of the speaker is on the outside on the end of the surface, farthest away from the other speaker. Speaker wire position Speaker wire position Front left Mounting screw (not supplied) Front right 5 mm to 7 mm 32 En Connecting Additional notes on speaker placement for MCS-FS232 Install the main front left and right speakers at an equal distance from the TV. Precautions: Positioning the system for MCS-FS232 The following illustration shows an example of positioning the system.

Note that the illustrations in these instructions differ from the actual unit for explanation purposes. For the best possible surround sound, all the speakers other than the subwoofer should be placed at the same distance from the listening position ( A ). 2 Connecting The front speakers and subwoofer is not magnetically shielded and so should not be placed near a TV or monitor. Magnetic storage media (such as floppy discs and tape or video cassettes) should also not be kept close to the front speakers and subwoofer. Do not attach the subwoofer to a wall or ceiling.

They may fall off and cause injury. B C A D A A Front left speaker (L)/ Front right speaker (R): Place the front speakers to the sides of the monitor or screen and as flush with the screen surface as possible. A B C Subwoofer: The position of the subwoofer is not so critical, because low bass sounds are not highly directional. But it is better to place the subwoofer near the front speakers. Turn it slightly toward the center of the room to reduce the wall reflections.

D Unit Caution Be careful to make sure children do not put their hands or any objects into the \*subwoofer duct. \*subwoofer duct: A hole for plentiful bass sound on subwoofer cabinet (enclosure). Place the front speaker at a safe distance from the child's reach. Otherwise it may result in the speaker falling down and causing personal injury and/or property damage. The speakers contain magnetic parts, so colour irregularity may occur on the TV screen (CRT) or computer monitor screen. Please use the speakers away from the TV screen (CRT) or computer monitor screen. Connecting 33 En Speaker setup for MCS-FS131 Preparing the speakers 1. Connect the wires to the player. Insert the cables connected to the player to the same colored connector on the speaker. Wall mounting the speaker for MCS-FS131 All speakers have a mounting hole which can be used to mount the speaker on the wall.

Before mounting Remember that the speaker system is heavy and that its weight could cause the screws to work loose, or the wall material to fail to support it, resulting in the speaker falling. Make sure that the wall you intend to mount the speakers on is strong enough to support them. Do not mount on plywood or soft surface walls. mounting screws are not supplied. Use screws suitable for the wall material and support the weight of the speaker. caution 2 Connecting Caution These speaker terminals carry HAZARDOUS LIVE voltage. To prevent the risk of electric shock when connecting or disconnecting the speaker cables, disconnect the power cord before touching any uninsulated parts. Do not connect any speakers other than those supplied to this system. Do not connect the supplied speakers to any amplifier other than the one supplied with this system. Connection to any other amplifier may result in malfunction or fire.

If you are unsure of the qualities and strength of the wall, consult a professional for advice. Pioneer is not responsible for any accidents or damage that result from improper installation. Attach the non-skid pads to the base of each speaker. Non-skid pads This hole is used to fix the unit to the speaker stand. Caution: Do not use this hole to mount on walls or ceilings.

The speaker may fall resulting in injury. 34 En Connecting Additional notes on speaker for MCS-FS131 Install the main front left and right speakers at an equal distance from the TV. Precautions: Positioning the system for MCS-FS131 The following illustration shows an example of positioning the system. Note that the illustrations in these instructions differ from the actual unit for explanation purposes. For the best possible surround sound, all the speakers other than the subwoofer should be placed at the same distance from the listening position ( A ).

2 Connecting These speakers are not magnetically shielded and so should not be placed near a TV or monitor. Magnetic storage media (such as floppy discs and tape or video cassettes) should also not be kept close to these speakers.



[You're reading an excerpt. Click here to read official PIONEER](#)

[MCS-838 user guide](#)

<http://yourpdfguides.com/dref/5480779>

*Do not attach the subwoofer to a wall or ceiling. They may fall off and cause injury. The unit's front speaker can be attached to speaker stand CP-31B. Be attached to the stand's bracket using the screws supplied with this unit. (The screws (M5) supplied with the CP-31B cannot be used to attach the speakers from this unit). Screws supplied with this unit Stand bracket You must also pass the speaker cable through the bottom of the hole in the upper part of the speaker stand pipe. Speaker cable Front left speaker (L)/ Front right speaker (R): Place the front speakers to the sides of the monitor or screen and as flush with the screen surface as possible. C Subwoofer: The position of the subwoofer is not so critical, because low bass sounds are not highly directional.*

*But it is better to place the subwoofer near the front speakers. Turn it slightly toward the center of the room to reduce the wall reflections. A B D Speaker stand (CP-31B) Unit Caution Be careful to make sure children do not put their hands or any objects into the \*subwoofer duct. \*subwoofer duct: A hole for plentiful bass sound on subwoofer cabinet (enclosure). Place the front speaker at a safe distance from the child's reach. Otherwise it may result in the speaker falling down and causing personal injury and/or property damage. The speakers contain magnet parts, so color irregularity may occur on the TV screen (CRT) or computer monitor screen. Please use the speakers away from the TV screen (CRT) or computer monitor screen. Connecting 35 En Connecting to Your TV Note Please refer to the manuals of your TV, stereo system or other devices as necessary to make the best connections. Make sure the player is connected directly to the TV.*

*Tune the TV to the correct video input channel. When connected to a DVI device It is not possible to connect DVI devices (computer displays, for example) that are not compatible with HDCP. HDCP is a specification to protect audiovisual content across the DVI/HDMI interface. This player is designed for connection with to a DVI device, it may not operate properly depending on the DVI device. 2 Connecting HDMI connection If you have a HDMI TV or monitor, you can connect it to this player using a HDMI cable (High Speed HDMI®/™ Cable).*

*Connect the HDMI terminal on the player to the HDMI terminal on a HDMI compatible TV or monitor. Rear of the unit ARC (Audio Return Channel) function The ARC function enables an HDMI capable TV to send the audio stream to HDMI OUT of this player. To use this function: - Your TV must support the ARC function. - The setting method of ARC may differ depending on the TV. For details about ARC function, refer to your TV manual.*

*HDMI cable - You must use the HDMI cable (High Speed HDMI®/™ Cable). TV - You must connect with the HDMI IN of TV that supports the ARC function using the HDMI OUT on this player. - You can connect only one Home Theater to TV compatible with ARC. - The ARC function does not warrant that the function works in all cases even if the above conditions are satisfied. (Consumer Electronics Control) may work. If you do not want to use CEC, you can stop it work by setting [Control: Off] on HDMI. In this case, it is needed to connect TV and this player by an optical cable to send the audio stream to this player. - Power on the unit when using CEC function. - CEC does not operate during Standby mode. set the TV's source to HDMI (refer to TV's Operating Instructions).*

*Caution Connecting the player and the TV using the HDMI cable alone does not enable you to hear the audio from the device. Please also connect by either the optical cable (page 37) or the analog audio cable (page 36). 36 En Connecting Antenna connection Connect the supplied antenna for listening to the radio. Connections with external device AUX connection You can enjoy the sound from an external component through the speakers of this system. Connect the analog audio output terminals of your component into the AUX L/R (INPUT) on this unit. And then select the [AUX] option by pressing FUNCTION and ENTER. Rear of the unit 2 Connecting Rear of the unit Note After connecting the FM wire antenna, keep it as horizontal as possible. Be sure to fully extend the FM wire antenna. Red To the audio output terminals of your component (TV, VCR, etc. ) Connecting 37 En PORTABLE IN connection You can enjoy the sound from your portable audio player through the speakers of this system.*

*Connect the headphones (or line out ) terminal of the portable audio player into the PORTABLE IN socket of this unit. And then select the [Portable In] option by pressing FUNCTION and ENTER. OPTICAL IN connection You can enjoy the sound from your component with a digital optical connection through the speakers of this system. Connect the optical output terminal of your component into the OPTICAL IN terminal on the unit. And then select the [Optical IN] option by pressing FUNCTION and ENTER.*

*Rear of the unit 2 Connecting To the digital optical output terminal of your component MP3 Player, etc. Caution the top of the unit with your hand to prevent it from moving. 38 En Connecting HDMI IN 1/2/3/4 connection You can enjoy the pictures and sound from your component through this connection. Connect the HDMI OUT terminal of your component into the HDMI IN 1, 2, 3 or 4 terminal on this unit. And then select the [HDMI IN 1/2/3/4] option by pressing FUNCTION and ENTER.*

*Rear of the unit 2 Connecting To the HDMI OUT terminal of your component (set-top box, digital satellite receiver, video game machine, etc. ) Note You cannot change the video resolution in the HDMI IN 1/2/3/4 mode. Change the video resolution of the connected component. If the video output signal is abnormal when your personal computer is connected to HDMI IN 1, 2, 3 or 4 terminal, change the resolution of your personal computer to 576p, 720p, 1080i or 1080p. You may not able to output 3D images depending on the type of the 3D output signal of the connected device. Connecting 39 En Connecting to your Home Network This player can be connected to a local area network (LAN) via the LAN port on the rear panel or the internal wireless module. By connecting the unit to a broadband home network, you have access to services such as BD-LIVE interactivity and Online content services. Broadband service 2*

*Connecting Router Wired network connection Using a wired network provides the best performance, because the attached devices connect directly to the network and are not subject to radio frequency interference. Please refer to the documentation for your network device for further instructions. Connect the player's LAN port to the corresponding port on your Modem or Router using a commercially available LAN or Ethernet cable.*

*Note Computer and/or DLNA certified server do not pull on the LAN cable but unplug while pressing down on the lock. Do not connect a modular phone cable to the LAN port. Since there are various connection configurations, please follow the specifications of your telecommunication carrier or internet service provider.*



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480779)

[MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

<http://yourpdfguides.com/dref/5480779>



If you want to access content from computers or DLNA servers, this player must be connected to the same local area network with them via a router. Rear of the unit 40 En Connecting Wireless network connection (MCS-838/MCS-434/MCS-FS232 only) Another connection option is to use an Access Point or a wireless router. The network configuration and connection method may vary depending on the equipment in use and the network environment. Wireless network setup (MCS-838/MCS-434/MCS-FS232 only) For the wireless network connection, the player needs to be set up for network communication. This adjustment can be done from the [Setup] menu. adjust the [NETWORK] setting as follow. Setting up the access point or the wireless router is required before connecting the player to the network.

2 Connecting This player is equipped with an IEEE 802. 11n (Single band , 2. 4 GHz band) wireless module, which also supports the 802. Preparation Before setting the wireless network, you need to: - connect the broadband internet to the wireless home network. - set the access point or wireless router. - note the SSID and security code of the network. The new connection settings reset the current network settings. Then select [Next] using the / and press ENTER. 5. The player scans the all available access points or wireless routers within range and display them as a list.

Use / to select an access point or wireless router on the list, and then press ENTER. If you have security on your access point matches the router's information exactly. You need to input the security code as necessary. Access Point or Broadband service Refer to the setup instructions supplied with your access point or wireless router for detailed connection steps and network settings. For best performance, a direct wired connection from this player to your home network's router or cable/DSL modem is always the best option. If you do chose to use the wireless option, note that performance can sometimes be affected by other electronic devices in the home. connecting 6. How to enter the security code. 1 Select the security code section using /// and press ENTER to start the software keyboard. @\$ using /// to switch to lower case characters, upper case characters, or symbols.

4 Finish entering the security code by selecting [Enter] using /// and pressing ENTER. If it connects success, it will display connection success and IP is obtained. If your access point or wireless code of the key "No. 1" to connect on your home network. An Access Point is a device that allows you to connect to your home network wirelessly. 41 En 2 Connecting [Scan] – The player scans the all available access points or wireless routers within range and display them as a list. [Manual] – Your access point may not be broadcasting its access point name (SSID). Check your router settings through your computer and either set your router to broadcast SSID, or manually enter the access point name (SSID) in [Manual]. [Auto] – If your access point or wireless router that supports the Push Button Configuration method, select this option and press the Push Button on your access point or wireless router within 120 counts. You do not need to know the access point name (SSID) and security code of your access point or wireless router.

Note If there is no DHCP server on the network and you want to set the IP address manually, Please refer to "Setting the IP address". Use / to select Yes, then press ENTER. Use / to select Auto, then press ENTER. Use / to switch between [ PBC ] or [ PIN ] screens. PBC (Push Button Configuration) Connection settings are made automatically the simplest way of making the settings, and PIN Input Connection settings are made by inputting the 8-digit PIN code shown on the main display to the access point to which you selected.

Follow the instructions shown in Connecting using PIN code configuration on the right. 7. When connecting using PBC (Push Button), on the [ PBC ] screen use / to select NEXT, then press ENTER. When connecting using PIN confirm the PIN Code on the [ PIN ] screen. Use cursor / to select NEXT, then press ENTER.

9. Enter into the access point the PIN Code that you confirmed in step 8 above. The PIN Code input method differs depending on the LAN device used. For details, consult the operating instructions accompanying your LAN device. Connecting 43 En Notes on Network Connection: Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the player to the home network, quickly power off and/ or disconnect the power cord of the home network router or cable modem. Then power on and/or connect the power cord again. Depending on the internet service provider (ISP), the number of devices that can receive internet service may be limited by the applicable terms of service. For details, contact your ISP . Our company is not responsible for any malfunction of the player and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection, or other connected equipment.

The features of BD-ROM discs made available through the Internet Connection feature are not created or provided by our company, and our company is not responsible for their functionality or continued availability. Some disc related material available by the Internet Connection may not be compatible with this player. If you have questions about such content, please contact the producer of the disc. Some internet contents may require a higher bandwidth connection.

Even if the player is properly connected and configured, some internet contents may not operate properly because of internet congestion, the quality or bandwidth of your internet service, or problems at the provider of the content. Some internet connection operations may not be possible due to certain restrictions set by the Internet service provider (ISP) supplying your broadband Internet connection. Any fees charged by an ISP including, without limitation, connection charges are your responsibility. A 10 Base-T or 100 Base-TX LAN port is required for wired connection to this player. If your internet service does not allow for such a connection, you will not be able to connect the player. You must use a Router to use xDSL service.

XDSL modem is required to use xDSL service and a cable modem is required to use cable modem service. Depending on the access method of and subscriber agreement with your ISP you may not be able to use the , internet connection feature contained in this player or you may be limited to the number of devices you can connect at the same time. (If your ISP limits subscription to one device, this player may not be allowed to connect when a computer is already connected. ) The use of a "Router" may not be allowed or its usage may be limited depending on the policies and restrictions of your ISP For . 4 GHz radio frequencies that are also used by other household devices such as cordless telephone, microwave oven, and can be affected by interference from them.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480779)

[MCS-838 user guide](http://yourpdfguides.com/dref/5480779)

<http://yourpdfguides.com/dref/5480779>

Turn off all unused network equipment in your local home network. Some devices may generate network traffic. For the purpose of the better transmission, placing the player from the access point as close as possible. In some instances, placing the access point or wireless router at least 0.45 m above the floor may improve the reception.

Move closer to the access point if possible or re-orient the player so there is nothing between it and the access point. The reception quality over wireless depends on many factors such as type of the access point, distance between the player and access point, and the location of the player.

2 Connecting 44 En Connecting USB device connection A USB device connected to the unit can perform the following operations. File Playback Playback files recorded on the front USB device or rear USB device, such as video, music or photos. Connecting the USB device Caution Be sure to turn the player's power off before connecting or disconnecting USB devices. When using an external hard disk as the external storage device, be sure to turn on the hard disk's power before turning on the player's power. If the USB device is write-protected, be sure to disable the write-protection. When connecting the USB cable, hold onto the plug, set the plug in the proper direction for the port and insert it horizontally. Placing excessive loads on the plug may result in poor contact, making it impossible to write data on the USB device. When a USB device is connected and the player's power is turned on, do not unplug the power cord.

2 Connecting Copy Files Files can be copied from the front USB device to the rear USB device. Record CD or FM The rear USB device can be used to record CD or FM. note See page 67 for details on connecting a iPod/iPhone/iPad (MCS-838/MCS-434/MCS-FS232 only). About USB devices The USB devices that can be connected to the player are as shown below. uSB 2.0-compatible memory devices FAT16, FAT32 or NTFS file system, minimum 1 GB capacity (2 GB or more recommended) Note Devices formatted with a file system other than the above cannot be used. USB devices may not be recognized if they contain multiple partitions. Some USB devices may not operate with this player. operation of USB devices is not guaranteed. This player can play movie, music and photo files contained in the USB device.

1. Insert a USB device to the USB port until it fits into place. Front of the unit USB device Hard disk, etc. uSB cable (commercially available) Rear of the unit USB device Hard disk, etc. USB cable (commercially available) Caution When inserting the USB terminal, support the top of the unit with your hand to prevent it from moving.

Note This unit does not support a USB hub. Use a USB cable with a length of 2 meters or less. Getting Started 45 En Chapter 3 Getting Started Making settings using the Setup Navigator menu Be sure to perform these settings when using the player in the following situations. after Initial Setup format. After updating the player's software.

Caution Before turning on the power, check that the connections between the player and other devices are correct. Also, turn on the power of the devices connected to the player before turning on the player's power. Projector compatible with the Control function, set Control to On on the connected device before turning on the player's power. If the Setup Navigator menu is not displayed HOME MENU to display the Press Setup Home Menu, select Initial Setup Navigator Start, then press ENTER. Use / to select, then press ENTER. Is compatible with Control function is connected to this player's HDMI OUT terminal, language settings are imported from the Pioneer Flat Screen TV's language settings before Setup Navigator begins. 5. Select the appropriate output resolution for the connected TV. Use / to select, then press ENTER. 6.

Select the appropriate aspect for the connected TV. Use / to select, then press ENTER. RETURN to go back to the Press previous screen. 3 Getting Started 1. Turn on the TV's power and switch the input. See the TV's operating instructions for the details of operating the TV. 2. Turn on the player's power. 46 En Getting Started Operating the TV with the player's remote control of TV is set on the player's remote control, the TV can be operated using the player's remote control. Caution For some models it may not be possible to operate the TV with the player's remote control, even for TVs of brands listed on the manufacturer code list.

The setting may be restored to the default after the batteries are replaced. Press the number buttons (0 to 9) to input the code while pressing TV CONTROL. note The factory default setting is 00 (PIONEER). If you make a mistake when inputting the code, release TV CONTROL then start over from the beginning.

Manufacturer, try inputting them in the indicated order until the TV can be operated.

2. Check that the TV can be operated. Operate the TV using TV CONTROL. □ Press to turn the TV's power on and off. Getting Started 47 En TV preset code list Manufacturer Code(s) PIONEER 00, 31, 32, 07, 36, 42, 51, 22, 91, 92 ACURA 44 ADMIRAL 31 AIWA 60, 58 AKAI 32, 35, 42 AKURA 41 ALBA 07, 39, 41, 44 AMSTRAD 42, 44, 47 ANITECH 44 ASA 45 ASUKA 41 AUDIOGONIC 07, 36 BASIC LINE 41, 44 BAUR 31, 07, 42 BEKO 38, 83, 84, 89 BEON 07 BLAUPUNKT 31 BLUE SKY 41 BLUE STAR 18 BPL 18 BRANDT 36 BTC 41 BUSH 07, 41, 42, 44, 47, 56 CASCADE 44 CATHAY 07 CENTURION 07 CGB 42 CIMLINE 44 CLARIVOX 07 CLATRONIC 38 CONDR 38 CONTEC 44 CROSLEY 32 CROWN 38, 44 CRYSTAL 42 CYBERTRON 41 DAEWOO 07, 44, 56 DAINICHI 41 DANSAI 07 DAYTON 44 DECCA 07, 48 DIXI 07, 44 DUMONT 53 ELIN 07 ELITE 41 ELTA 44 EMERSON 42 ERRES 07 FERGUSON 07, 36, 51 FINLANDIA 35, 43, 54 FINLUX 32, 07, 45, 48, 53, 54 FIRSTLINE 40, 44 FISHER 32, 35, 38, 45 FORMENTI 32, 07, 42 FRONTECH 31, 42, 46 FRONTECH/PROTECH 32 FUJITSU 48, 74, 77 FUNAI 40, 46, 58, 56 GBC 32, 42 GE 00, 01, 08, 07, 10, 11, 17, 02, 28, 18 GEC 07, 34, 48 GELOSO 32, 44 GENERAL 29 GENEXXA 31, 41 GOLDSTAR 10, 23, 21, 02, 07, 50 GOODMAN'S 07, 39, 47, 48, 56 GORENJE 38 GPM 41 GRAETZ 31, 42 GRANADA 07, 35, 42, 43, 48 GRADIENTE 30, 57 GRANDIN 18 GRUNDIG 31, 53 HANSEATIC 07, 42 HCM 18, 44 HINARI 07, 41, 44 HISAWA 18 HITACHI 31, 33, 34, 36, 42, 43, 54, 06, 10, 24, 25, 18 HUANYU 56 HYPSON 07, 18, 46 ICE 46, 47 IMPERIAL 38, 42 INDIANA 07 INGELLEN 31 INTERFUNK 31, 32, 07, 42 INTERVISION 46, 49 ISUKAI 41 ITC 42 ITT 31, 32, 42 JEC 05 JVC 13, 23 KAISUI 18, 41, 44 KAPSCH 31 KENDO 42 KENNEDY 32, 42 KORPEL 07 KOYODA 44 LEYCO 07, 40, 46, 48 LIESENK&TTER 07 LOEWE 07 LUXOR 32, 42, 43 M-ELECTRONIC 31, 44, 45, 54, 56, 07, 36, 51 MAGNADYNE 32, 49 MAGNAFON 49 MAGNAVOX 07, 10, 03, 12, 29, 81 MANESTH 39, 46 MARANTZ 07 MARK 07 MATSUI 07, 39, 40, 42, 44, 47, 48 MCMICHAEL 34 MEDIATOR 07 MEMOREX 44 METZ 31, 69 MINERVA 31, 53 MITSUBISHI 09, 10, 02, 21, 31, 73 MULTITECH 44, 49 NEC 59, 57 NECKERMAN 31, 07 NEI 07, 42 NIKKAI 05, 07, 41, 46, 48 NOBLIKO 49 NOKIA 32, 42, 52 NORDMENDE 32, 36, 51, 52 OCEANIC 31, 32, 42 ORION 32, 07, 39, 40 OSAKI 41, 46, 48 OSO 41 OSUME 48 OTTO VERSAND 31, 32, 07, 42 PALLADIUM 38 PANAMA 46 PANASONIC 31, 07, 08, 42, 22, 70 PATHO CINEMA 42 PAUSA 44 PHILCO 32, 42 PHILIPS 31, 07, 34, 56, 68, 55, 63, 82 PHOENIX 32 PHONOLA 07 PROFEX 42, 44 PROTECH 07, 42, 44, 46, 49 QUELLE 31, 32, 07, 42, 45, 53 R-LINE 07 RADIOLA 07 RADIOSHACK 10, 23, 21, 02 RBM 53 RCA 01, 10, 15, 16, 17, 18, 61, 62, 09, 59, 60 REDIFFUSION 32, 42 REX 31, 46 ROADSTAR 41, 44, 46 SABA 31, 36, 42, 51 SAISHO 39, 44, 46 SALORA 31, 32, 42, 43 SAMBERS 49 SAMSUNG 07, 38, 44, 46, 69, 70, 64, 65, 78, 79, 80 SANYO 35, 45, 48, 21, 14, 91, 67, 76 SBR 07, 34 SCHAUB LORENZ 42 SCHNEIDER 07, 41, 47 SEG 42, 46 SEI 32, 40, 49 SELECO 31, 42 SHARP 02, 19, 27, 67, 90, 62, 66 SIAREM 32, 49 SIEMENS 31 SINUDYNE 32, 39, 40, 49 SKANTIC 43 SOLAVOX 31 SONOKO 07, 44 SONOLOR 31, 35 SONTEC 07 SONY 04, 72 SOUNDWAVE 07 STANDARD 41, 44 STERN 31 SUSUMU 41 SYSLINE 07 TANDY 31, 41, 48 TASHIKO 34 TATUNG 07, 48 TEC 42 TELEAVIA 36 TELEFUNKEN 36, 37, 52 TELETECH 44 TENSAI 40, 41 THOMSON 36, 51, 52, 63, 61 THORN 31, 07, 42, 45, 48 TOMASHI 18 TOSHIBA 05, 02, 26, 21, 53 TOWADA 42 ULTRAVOX 32, 42, 49 UNIDEN 92, 68 UNIVERSUM 31, 07, 38, 42, 45, 46, 54 VESTEL 07 VICTOR 13 VOXSON 31 WALTHAM 43 WATSON 07 WATT RADIO 32, 42, 49 WHITE WESTINGHOUSE 07 YOKO 07, 42, 46 ZENITH 03, 20 3 Getting Started 48 En Playback Chapter 4 If the disc menu is displayed For some discs, the disc menu is displayed automatically when playback starts.



[You're reading an excerpt. Click here to read official PIONEER  
MCS-838 user guide](http://yourpdfguides.com/dref/5480779)  
<http://yourpdfguides.com/dref/5480779>