



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MVH-160UI. You'll find the answers to all your questions on the PIONEER MVH-160UI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER MVH-160UI
User guide PIONEER MVH-160UI
Operating instructions PIONEER MVH-160UI
Instructions for use PIONEER MVH-160UI
Instruction manual PIONEER MVH-160UI

DIGITAL MEDIA RECEIVER
RECEPTEUR NUMERIQUE MULTIMEDIA
RICEVITORE MULTIMEDIALE DIGITALE
RECEPTOR DE MEDIOS DIGITALES
DIGITALER MEDIENEMPFÄNGER
DIGITALE MEDIA-RECEIVER
ЦИФРОВОЙ МЕДИАРЕСИВЕР

MVH-X360BT
MVH-160UI

Pioneer

Bluetooth

Made for
 iPod iPhone

Owner's Manual
Mode d'emploi
Manuale d'istruzioni
Manual de instrucciones
Bedienungsanleitung
Handleiding
Руководство пользователя

English
Franca
Italiano
Español
Dutch
Mandarin
Русский



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)
<http://yourpdfguides.com/dref/5599724>

Manual abstract:

The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. **WARNING!** Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards. ! Do not attempt to operate the unit while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. If you want to dispose this product, do not mix it with general household waste. @@@@ cAUTION! Do not allow this unit to come into contact with liquids. electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! The Pioneer CarStereo-Pass is for use only in Germany.

! Always keep the volume low enough to hear outside sounds. If you experience problems Should this unit fail to work properly, please contact your dealer or nearest authorized PIONEER Service Station. 2 En <QRD3211-B>2 Black plate (3,1) Section Using this unit Using this unit 02 Head unit 1 234 5 Display indication 2 1 3 4 5 7 9 6 8 a Set up menu 1 After installation of this unit, turn the ignition switch to ON.) (list) DISP USB port (phone) MVH-X360BT 6 iPod MVH-160UI BAND/ (iPod control) 3 4 5 6 7 8 9 a bc 1 2 (list) d c # If you do not use the unit for 30 seconds, the set up menu will not be displayed. # If you prefer not to set up at this time, turn M.

Use FM STEP to set FM tuning step options (seek step settings). The manual tuning step is fixed at 50 kHz. ! When AF and TA are turned off, the seek step is fixed at 50 kHz even if set to 100. (iPod control) This unit's iPod function is operated from your iPod. Sub information section TA (traffic announcements) TP (traffic program identification) (sound retriever) LOC (local seek tuning) (repeat) (random/shuffle) (auto answer) Only for MVH-X360BT Shows when the automatic answering function is on.

USB storage device and iPod: elapsed playback time and text information (Bluetooth indicator) Only for MVH-X360BT Appears when a lower tier of folder or menu exists. 4 Follow these steps to set the menu. To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language)

This unit can display the text information from a compressed audio file even for information embedded in English, Russian or Turkish. ! @@ ! Some characters may not be displayed properly. 5 To finish your settings, turn M. # If you prefer to change your setting again, turn M. You can set up the menu options from the system menu and initial menu. For details about the settings, refer to System menu on page 12 and Initial menu on page 13. Handle the front panel with care when removing or attaching it.

Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. aUX input jack (3. 5 mm stereo jack) Detach button b CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. c d En 3 <QRD3211-B>3 Black plate (4,1) Section 02 Using this unit Removing the front panel 1 Press the detach button to release the front panel. 2

Push the front panel upward (M) and then pull it toward (N) you. Only for MVH-160UI When there is an iPod connected and a source other than iPod is selected, you can switch to iPod by pressing iPod. ! BT AUDIO is not available for MVH-160UI. Radio Basic operations Selecting a band 1 Press BAND/ until the desired band (FM1, FM2,FM3 for FM or MW/LW) is displayed. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. @@CLOCK (source name and clock) 3 Always store the detached front panel in a protective case or bag. Re-

attaching the front panel 1 Slide the front panel to the left. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off.

notes ! If the program service name cannot be acquired in FREQUENCY, the broadcast frequency is displayed instead. If the program service name is detected, the program service name will be displayed. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area. Using PTY functions You can tune in to a station using PTY (program type) information.

The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed. The program of some stations may differ from that indicated by the transmitted PTY. ! If no station is broadcasting the type of program you searched for, NOT FOUND is displayed for about two seconds and then the tuner returns to the original station. 2 Press the right side of the front panel until it is firmly seated. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Frequently used menu operations Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER. Returning to the ordinary display Canceling the main menu 1 Press BAND/.

Returning to the ordinary display from the list 1 Press BAND/ . notes ! For details about SEEK, refer to SEEK (left/ right key setting) on page 5. ! This unit's

AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on page 5). Storing and recalling stations for each band Using preset tuning buttons 1 To store: Press and hold down one of the preset tuning buttons (1/ to 6/) until the number stops flashing. 2 To recall: Press one of the preset tuning buttons (1/ to 6/). 4 En <QRD3211-B>4 Black plate (5,1) Section Using this unit Using this unit 02 PTY list For more details about PTY list, visit the following site: <http://www.html> When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. LOCAL (local seek tuning) Local seek tuning allows you to tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF—LV1—LV2—LV3—LV4 MW/LW: OFF—LV1—LV2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations.

SEEK (left/right key setting) You can assign a function to the left and right keys of the unit.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5599724)

[MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)

<http://yourpdfguides.com/dref/5599724>

Select MAN (manual tuning) to tune up or down manually or select PCH (preset channel) to switch between preset channels. 0 or higher) can be connected by MTP connection using the USB source. To connect an Android device, use the cable that came with the device. notes ! This function is not compatible with MIXTRAX.

! This function is not compatible with WAV. returning to root folder 1 Press and hold BAND/. Switching between playback memory devices You can switch between playback memory devices on USB storage devices with more than one Mass Storage Device-compatible memory device. You can switch between up to 32 different memory devices. Once selected, the following functions can be adjusted.

If MW/LW band is selected, only BSM, LOCAL and SEEK are available. FM SETTING (FM sound quality settings) The sound quality level can be set to match the broadcast signal conditions of the FM band signal. HI-FI – This is the setting to use to prioritize the high quality of stereo sound. ! STABLE – This is the setting to use to prioritize the low noise of monaural sound. BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. REGIONAL (regional) Note Disconnect USB storage devices from the unit when not in use. basic operations Playing songs on a USB storage device 1 Open the USB port cover. 2 Plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. When playing compressed audio, there is no sound during fast forward or reverse.

Operations using the MIXTRAX button Turning MIXTRAX on or off Only for MVH-X360BT You cannot use this function with USB MTP. For more details about MIXTRAX, refer to About MIXTRAX on page 13. ! When MIXTRAX is in use, the sound retriever function is disabled. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: MP3/WMA/WAV ! SPEANA (spectrum analyzer) En 5 <QRD3211-B>5 Black plate (6,1) Section 02 Using this unit Using this unit Selecting and playing files/ tracks from the name list 1 Press list mode. to switch to the file/track name Pausing playback 1 Press 4/PAUSE to pause or resume. @@@@ ! Key operation is disabled when MIXTRAX is on. @@Playing 1 When a file or track is selected, press M. c. Viewing a list of the files (or folders) in the selected folder 1 When a folder is selected, press M. c.

Playing a song in the selected folder 1 When a folder is selected, press and hold M. Once selected, the function below can be adjusted. RTRV is not available when MIXTRAX is turned on. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on page 6. Operations using special buttons Selecting a repeat play range to cycle between the following: 1 Press 6/ ! FLD – Repeat the current folder Playing tracks in random order to turn random play on or off.

1 Press 5/ Tracks in a selected repeat range are played in random order. ! To change songs during random play, press d to switch to the next track. Pressing c restarts playback of the current track from the beginning of the song. notes ! The iPod cannot be turned on or off when the control mode is set to CTRL AUDIO. ! Disconnect headphones from the iPod before connecting it to this unit.

! The iPod will turn off about two minutes after the ignition is switched off. Changing the name of the song or category 1 Turn M. Playing a song in the selected category 1 When a category is selected, press and hold M. c. Searching the list by alphabet 1 When a list for the selected category is disto switch to alphabet search played, press mode. ! You also can switch to alphabet search mode by turning M. Operations using the MIXTRAX button Turning MIXTRAX on or off Only for MVH-X360BT 1 Press 3/MIX to turn MIXTRAX on or off. ! For more details about MIXTRAX, refer to About MIXTRAX on page 13. 6 En <QRD3211>ne and iPod touch. Starting procedure for smartphone users Only for MVH-X360BT 1 Connect your smartphone to this unit using Bluetooth wireless technology.

Once selected, the following functions can be adjusted. 1—2—OFF (off) 1 is effective for low compression rates, and 2 is effective for high compression rates.

Setting up for hands-free phoning 1 Connection Use the Bluetooth telephone connection menu. refer to Connection menu operation on page 9. 2 Function settings Use the Bluetooth telephone function menu. The device is connected to this unit via Bluetooth. ! Compatibility with all Android devices is not guaranteed. For details about Android device compatibility with this unit, refer to the information on our website. notes ! Please check our website for a list of supported iPhone or smartphone applications for this unit. ! Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content.

! The content and functionality of the supported applications are the responsibility of the App providers. basic operations Making a phone call 1 Refer to Phone menu operation on page 10. Answering digit number may display on both this unit and the Bluetooth device. Select yes if the 6-digit numbers displayed on this unit and the Bluetooth device are the same. ! 6-digit number appears on the display of this unit.

Once the connection is established, this number disappears. ! If you are unable to complete the connection using this unit, use the device to connect to the unit. ! If three devices are already paired, DEVICEFULL is displayed and it is not possible to perform this operation. VISIBLE (setting the visibility of this unit) English En 9 <QRD3211-B>9 Black plate (10,1) Section 02 Using this unit Using this unit Bluetooth visibility can be turned on so that other devices can discover the unit. To turn the visibility of this unit on or off.

c. The default code is 0000, but you can change it with this function. To move the cursor to the next position. Returns you to the PIN code input display, and you can change the PIN code. Device name—Bluetooth device address GUEST MODE (guest mode) When this mode is turned on, if a pairing is attempted while there are already three devices paired together, the unit will move to the DEL DEVICE screen automatically and prompt you to delete a device. For details, refer to DEL DEVICE (deleting a device from the device list) on page 9. PAIRING (auto pairing) If this function is turned on while there is an iPhone connected to the unit by USB, you will be automatically prompted to pair the unit and iPhone. This function may not be available depending on what version of iOS you are using. Phone menu operation 1 Press to display the phone menu. Once selected, the following functions can be adjusted.

MISSED (missed call history) DIALLED (dialed call history) RECEIVED (received call history) 1 Press M. c. To display the phone number list. PHONE BOOK (phone book) The contacts on your phone will normally be transferred automatically when the phone is connected.



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)
<http://yourpdfguides.com/dref/5599724>

If it is not, use your phone menu to transfer the contacts. The visibility of this unit should be on when you use the phone menu. Refer to **VISIBLE** (setting the visibility of this unit) on page 9. To select the first letter of the name you are looking for. To select the desired character type. To select the name you are looking for.

To display the phone number list. To select a phone number you want to call. You can also use the preset number buttons 1/ to 6/ to recall a preset phone number. For more details about storing phone numbers, refer to **Storing and recalling phone numbers** on page 9. **Bluetooth Audio Important!** Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: — **A2DP profile (Advanced Audio Distribution Profile)**: You can only playback songs on your audio player.

The **A2DP** connection can only be used with **APP** (smartphone) and **BT AUDIO**. Once selected, the following functions can be adjusted. To invert the order of names in the phone book. ! To use a Bluetooth audio player with this unit, refer to this manual and the manual for your device for operating instructions. ! As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player.

! The sound of the Bluetooth audio player will be muted when the phone is in use. ! When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically. ! @@ ! @@@@ You will need to pair this unit with your Bluetooth audio player. @@ refer to **Connection menu operation** on page 9. @@ ! @@ ! @@@@ Playing tracks in random order to turn random play on or off. 1 Press 5/ ! @@ pausing playback 1 Press 4/PAUSE to pause or resume. @@@@ @@@@ Once selected, the following audio functions can be adjusted. ! **FADER** is not available when **SUB**. **W CTRL** are not available when **REAR/REAR** is selected in **SP-P/O MODE**. **W CTRL** is not available when **SUB**.

SLA is not available when **FM** is selected as the source. @@@@ To return to the previous display. ! **CUSTOM1** can be set separately for each source. @@@@ **CUSTOM2** is a shared setting used in common for all sources. @@@@ @@@@ Once selected, the following functions can be adjusted. @@@@ @@@@ @@@@ @@@@ ! Settings are based on the **FM** volume level, which remains unchanged. ! The **MW/LW** volume level can also be adjusted with this function. ! @@@@ ! @@@ ! Some characters may not be displayed properly. To select the segment of the clock display you wish to set. @@@@ @@@@ @@@@ @@@@ ! @@@ To turn the power save on or off.

BT MEM CLEAR (clearing the Bluetooth device data stored on this unit) Bluetooth device data stored on this unit can be cleared. To protect your personal information, clear the device memory before you pass the unit on to someone else. Clearing memory is now on standby. If you do not want to clear the Bluetooth device data stored on this unit, turn **M**. While this function is in use, do not turn off the engine.

System menu **Important PW SAVE** (power saving) is canceled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When **PW SAVE** (power saving) is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition doesn't have an **ACC** (accessory) position. Once selected, the following system menu functions can be adjusted. ! **MUTE MODE** is not available for **MVHX360BT**. **SET** are not available for **MVH-160UI**.

12 En <QRD3211-B>12 Black plate (13,1) Section Using this unit Using this unit 02 **BT VERSION** (Bluetooth version display) You can display the system versions of this unit and of Bluetooth module. This setting is not available when the source is set to **APP**. **SHORT MODE** (short playback mode) You can select the length of the playback time. 0 minutes—**OFF** (off) **MIX PATTERN** (mix pattern) The **MIXTRAX** special effects display changes with changes in the audio level. **SOUND LEVEL** – The mix pattern changes according to the sound level. ! **LOW PASS** – The mix pattern changes according to the bass level. ! **RANDOM** – The mix pattern changes randomly according to the sound level mode and low pass mode. **DISP FX** (display effect) The **MIXTRAX** special effects display can be turned on or off. **ON** (**MIXTRAX** special effects display)—**OFF** (normal display) **CUT IN FX** (manual cut-in effect) You can turn on or off the **MIXTRAX** sound effects while manually changing tracks. Once selected, the following initial menu functions can be adjusted.

! **S/W UPDATE** is not available for **MVH-160UI**. 100 (100 kHz)—50 (50 kHz) **SP-P/O MODE** (rear output and preout setting) The rear speaker leads output and the RCA output of this unit can be used to connect a full-range speaker or subwoofer. **W** – Select when there is a fullrange speaker connected to the rear speaker leads output and there is a subwoofer connected to the RCA output. **W** – Select when there is a subwoofer connected directly to the rear speaker leads output without any auxiliary amp and there is a subwoofer connected to the RCA output. ! **REAR/REAR** – Select when there is a fullrange speaker connected to the rear speaker leads output and the RCA output. If there is a full-range speaker connected to the rear speaker leads output and the RCA output is not used, you may select either **REAR/SUB**. **w** or **REAR/REAR**. **S/W UPDATE** (updating the software) English This function is used to update this unit with the latest Bluetooth software. For about Bluetooth software and updating, refer to our website. ! Never turn the unit off while the Bluetooth software is being updated.

Follow the on-screen instructions to finish updating the Bluetooth software. System menu 1 Press and hold **SRC/OFF** until the unit turns off. 2 Press and hold **SRC/OFF** until the main menu appears in the display. About **MIXTRAX** Only for **MVH-X360BT** **MIXTRAX** technology is used to insert a variety of sound effects in between songs, allowing you to experience your music as a nonstop mix complete with visual effects. notes ! Depending on the file/song, sound effects may not be available.

! Turn **MIXTRAX** off if the visual effects it produces have adverse effects on driving. refer to **Operations using the MIXTRAX button** on page 5. @@ 2 Press **SRC/OFF** to select **AUX** as the source. @@ Once selected, the following **MIXTRAX** functions can be adjusted. The function is enabled when **MIXTRAX** is on.

Initial menu 1 Press and hold **SRC/OFF** until the unit turns off. 2 Press and hold **SRC/OFF** until the main menu appears in the display. @@@@ @@@@ @@@@ @@@@ □ Secure the wiring with cable clamps or adhesive tape. @@@@ @@@@ @@@@ □ Cover any disconnected cable connectors with insulating tape. □ Do not shorten any cables. □ Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited. — Use a fuse of the rating prescribed. 14 En T Turn off the unwanted display using the procedures listed below. ! When this unit is on, control signals are sent through the blue/white cable.



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)
<http://yourpdfguides.com/dref/5599724>

Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 VDC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal. ! Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately. If they are not, an accidental detachment may result in a fire or malfunction. sTAR This unit 3 1 2 4 5 6 7 8 1 Power cord input 2 Microphone input (MVH-X360BT only) 3 Microphone (MVH-X360BT only) 4m 4 Rear output or subwoofer output 5 Front output 6 Antenna input 7 Fuse (10 A) 8 Wired remote input <QRD3211-B>14 Black plate (15,1) Section Installation Installation 03 Hard-wired remote control adapter can be connected (sold separately). Power cord 3 4 2 5 6 1 3 7 5 8 4 6 a 9 e b c d 1 To power cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different.

In this case, be sure to connect 4 to 5 and 6 to 3. 7 Connect leads of the same color to each other. 8 Black (chassis ground) 9 Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b.

C Yellow/black (MVH-160UI only) If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections. D Speaker leads White: Front left + White/black: Front left * Gray: Front right + Gray/black: Front right * Green: Rear left + or subwoofer + Green/black: Rear left * or subwoofer * Violet: Rear right + or subwoofer + Violet/black: Rear right * or subwoofer * e ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. notes ! Change the initial menu of this unit. refer to SP-P/O MODE (rear output and preout setting) on page 13. The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/black leads. Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 1 7 □ □ □ □ ! Optimum performance is obtained when the unit is installed at an angle of less than 60°. 60° English 3 2 □ □ 4 5 3 6 7 2 □ □ ! When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents. Do not use unauthorized parts as this may cause malfunctions. Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: — it may interfere with operation of the vehicle.

□ it may cause injury to a passenger as a result of a sudden stop. DIN front/rear mount This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing. DIN Front-mount 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve. If there is enough space, use the mounting sleeve that came with the vehicle. Install this unit away from hot places such as near the heater outlet. En 15 <QRD3211-B>15 Black plate (16,1) Section 03 Installation Installation 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. 1 Removing the unit 1 Remove the trim ring. CAUTION It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever.

Be sure to install the unit in such a way that it will not obstruct driving. notes ! Install the microphone in a position and orientation that will enable it to pick up the voice of the person operating the system. ! Use separately sold clamps to secure the lead where necessary inside the vehicle. 1 2 1 Dashboard 2 Mounting sleeve # Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions.

1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. ! When reattaching the trim ring, point the side with the notched tab down. 1 Microphone clip When installing the microphone on the sun visor 1 Fit the microphone lead into the groove. When installing the microphone on the steering column 1 Detach the microphone base from the microphone clip. To detach the microphone base from the microphone clip, slide the microphone base.

1 DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. 2 Insert the supplied extraction keys into both sides of the unit until they click into place. 3 Pull the unit out of the dashboard. 1 2 1 Microphone lead 2 Groove 2 3 1 Microphone 2 Microphone clip 3 Microphone base 2 Tighten two screws on each side. 1 3 Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. For details, refer to Removing the front panel and Re-attaching the front panel on page 4. 2 1 Tapping screw (5 mm × 8 mm) 2 Mounting bracket 3 Dashboard or console 2 Install the microphone clip on the sun visor. With the sun visor up, install the microphone clip. (Lowering the sun visor reduces the voice recognition rate.) Installing the microphone Only for MVH-X360BT 16 En <QRD3211-B>16 Black plate (17,1) Section Installation Additional information 03 2 Install the microphone on the steering column.

A Bluetooth connected cellular phone is currently being operated. Do not use the cellular phone at this time. A call was made with a Bluetooth connected cellular phone and then immediately terminated. As a result, communication between this unit and the cellular phone was not terminated properly. Reconnect the Bluetooth connection between this unit and the cellular phone. english 2 The display automatically returns to the ordinary display. You did not perform any operation within about 30 seconds. Common AMP ERROR This unit fails to operate or the speaker connection is incorrect; the protective circuit is activated. check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance.

1 Double-sided tape 2 Install the microphone on the rear side of the steering column. The repeat play range changes unexpectedly. Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing.



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)
<http://yourpdfguides.com/dref/5599724>

Select the repeat play range again. a subfolder is not played back.

Subfolders cannot be played when FLD (folder repeat) is selected. Select another repeat play range. NO XXXX appears when a display is changed (NO TITLE, for example). there is no embedded text information. Switch the display or play another track/file.

You are using a device, such as a cellular phone, that may cause audible interference. Move electrical devices that may be causing the interference away from the unit. The sound from the Bluetooth audio source is not played back. There is a call in progress on a Bluetooth connected cellular phone. The sound will be played back when the call is terminated. Adjusting the microphone angle USB storage device/iPod FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. en 17 <QRD3211-B>17 Black plate (18,1) Appendix Additional information Additional information NO AUDIO There are no songs. Transfer the audio files to the USB storage device and connect. The connected USB storage device has security enabled.

Follow the USB storage device instructions to disable the security. SKIPPED The connected USB storage device contains DRM protected files. The protected files are skipped. PROTECT All the files on the connected USB storage device are embedded with DRM. replace the USB storage device. N/A USB The connected USB device is not supported by this unit. Disconnect your device and replace it with a compatible USB storage device. cCHECK USB The USB connector or USB cable has shortcircuited. Check that the USB connector or USB cable is not caught in something or damaged. cCHECK USB The connected USB storage device consumes more than maximum allowable current.

Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. cCHECK USB The iPod operates correctly but does not charge. Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect.

Turn the ignition switch OFF and back ON. Then, return to the USB source. iPod failure. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

ERROR-23 USB storage device was not formatted with FAT12, FAT16 or FAT32. USB storage device should be formatted with FAT12, FAT16 or FAT32. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. STOP There are no songs in the current list.

Bluetooth device ERROR-10 The power failed for the Bluetooth module of this unit. Turn the ignition switch OFF and then to ACC or ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station. handling guidelines USB storage device Connections via USB hub are not supported. Do not connect anything other than a USB storage device.

Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. The storage device may not be recognized. ! Files may not be played back properly. ! The device may cause audible interference when you are listening to the radio. application NO BT DEVICE GO TO BT MENU TO REGISTER No Bluetooth device found. Follow the instructions that appear on the screen. Follow the instructions that appear on the screen.

DISCONNECTED PRESS BAND KEY TO RETRAY Bluetooth connection failed.

Follow the instructions that appear on the screen. cCHECK APP Connection to the application failed. Follow the instructions that appear on the screen. START UP APP The application has not started running yet. Follow the instructions that appear on the screen.

iPod Do not leave the iPod in places with high temperatures. Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting.

! You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit. @@@@ unicode (UTF-8, UTF-16) ! @@@@ There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. cAUTION ! Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, smart phones, or other devices while using this product. ! Do not leave a USB storage device in any place that is subject to high temperatures. Users of iPod with the Dock Connector should use CD-IU51. For details, consult your dealer. About the file/format compatibility, refer to the iPod manuals. Audiobook, Podcast: Compatible English CAUTION iPod compatibility This unit supports only the following iPod models. @@ Operations may vary depending on the software version of iPod.

@@@ M3u playlist: Not compatible MP3i (MP3 interactive), mp3 PRO: Not compatible USB storage device Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 500 Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned USB storage device: Only the first partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. 1 kHz (MS ADPCM) USB storage device Playback sequence is the same as recorded sequence in the USB storage device. To specify the playback sequence, the following method is recommended. 1 Create a file name that includes numbers that specify the playback sequence (e. 2 Put those files into a folder. 3 Save the folder containing files on the USB storage device. ! You cannot use this function with USB MTP. En 19 <QRD3211-B>19 Black plate (20,1) Appendix Additional information Additional information However, depending on the system environment, you may not be able to specify the playback sequence.

For USB portable audio players, the sequence is different and depends on the player. Other trademarks and trade names are those of their respective owners. â Russian character chart D: C :A :E, Ê :Л :P :X :Ы D: C :Б :Ж :М :С :Ц :Б D: C :B :З :H :T :Ч :Э D: C :Г :И, Ё :O :У : Ш, Щ :Ю D: C :Д :K :П :Ф :Ъ :Я "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www>.

D: Display C: Character Bluetooth profiles In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with the following profiles. 1 WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft

Licensing, Inc. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . +4 dBm Maximum (Power class 2) Note Specifications and the design are subject to modifications without notice. NI De geselecteerde song of het geselecteerde album wordt na de huidige song afgespeeld. □Made for iPod” u “Made for iPhone” o3 .



[You're reading an excerpt. Click here to read official PIONEER MVH-160UI user guide](http://yourpdfguides.com/dref/5599724)

<http://yourpdfguides.com/dref/5599724>