



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MVH-180UI. You'll find the answers to all your questions on the PIONEER MVH-180UI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER MVH-180UI
User guide PIONEER MVH-180UI
Operating instructions PIONEER MVH-180UI
Instructions for use PIONEER MVH-180UI
Instruction manual PIONEER MVH-180UI



[You're reading an excerpt. Click here to read official PIONEER MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)
<http://yourpdfguides.com/dref/5904334>

Manual abstract:

@@@Before You Start Thank you for purchasing this PIONEER product To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe WARNINGS and CAUTIONS in this manual. Please keep the manual in a safe and accessible place for future reference. English If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. **WARNING** • Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.

□ Do not attempt to operate the unit while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. **CAUTION** • Do not allow this unit to come into contact with moisture and/or liquids. electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.

□ Always keep the volume low enough to hear outside sounds. □ The CarStereo-Pass is for use only in Germany. En 3 • This product is evaluated in moderate and tropical climate condition under the Audio, video and similar electronic apparatus - Safety requirements, IEC 60065. If you experience problems Should this unit fail to work properly, please contact your dealer or nearest authorized PIONEER Service Station. (multi-control) dial SRC (source)/OFF Display window * Adjust the volume Frequently used operations Purpose Turn on the power* Operation Head Unit Press SRC/OFF to turn on the power.

Press and hold SRC/OFF to turn off the power. Remote Control Press SRC to turn on the power. Press and hold SRC to turn off the power. Detach button Change the display information Return to the previous display/list Return to the normal display from the menu Answering a call Ending a call Remote Control NOTE Remote control is supplied only for MVH-181UB. 4 En * When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. Detach Attach English Display indication Indication Description Appears when a lower tier of the menu or folder exists. Appears when a Bluetooth telephone is connected to this unit by HFP (Hands Free Profile) (page 10) and flashes while the telephone is on hold. (Only for Bluetooth-compatible models.) Appears when a Bluetooth audio player is connected to this unit by A2DP (Advanced Audio Distribution Profile) (page 10).

Appears when random/shuffle play is set (except when BT AUDIO is selected as the source). Appears when repeat play is set (except when BT AUDIO is selected as the source). appears when the iPod control function is set (page 10). Appears when a Bluetooth connection is made (page 10). (Only for Bluetooth-compatible models.) Insert the CR2025 (3 V) battery with the plus (+) and minus (-) poles orientated properly. important • Avoid subjecting the front panel to excessive shock. □ Keep the front panel out of direct sunlight and high temperatures. □ Always store the detached front panel in a protective case or bag. Preparing the remote control Remove the insulation sheet before use.

How to replace the battery **WARNING** Detaching the front panel Detach the front panel to prevent theft. Remove any cables and devices attached to the front panel and turn off the unit before detaching it. □ Do not ingest the battery, Chemical Burn Hazard. □ This product, including the supplied remote control, contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.

□ Keep new or used batteries out of the reach of children. If the battery is swallowed or placed inside any part of the body, consult a doctor immediately. En 5 • If the battery compartment does not close securely, stop using the product and keep it away from children. □ Do not expose the battery or remote control to excessive heat such as direct sunlight or fire. Menu Item FM STEP [100], [50] Description Select the FM tuning step from 100 kHz or 50 kHz.

CAUTION • There is a potential danger of explosion if the battery is incorrectly replaced. When replacing the battery, replace it with the same type. □ Do not handle or store the battery with metallic tools or objects. □ If the battery leaks, remove the battery and wipe the remote control completely clean. Then install a new battery. □ When disposing of used batteries, please comply with governmental regulations or environmental public institutions' rules that apply in your country/area. 3 4 [QUIT :YES] appears when all the settings have been made. To return to the first item of the setup menu, turn the M. NOTES • You can cancel the menu setting by pressing SRC/OFF. □ These settings can be made at any time from the SYSTEM settings (page 18) and INITIAL settings (page 6).

Important • Do not store the remote control in high temperatures or direct sunlight. □ Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. Setup menu When you turn the ignition switch to ON after installation, [SET UP :YES] appears in the display.

Canceling the demonstration display (DEMO OFF) 1 2 Press the M. The setup menu disappears after 30 seconds of no operation. If you prefer not to set at this time, turn the M. Dial to select the options, then press to confirm. To proceed to the next menu option, you need to confirm your selection. Description Select the language to display the text information from a compressed audio file. INITIAL settings Press and hold SRC/OFF until the unit turns off.

WJ Description Select the FM tuning step from 100 kHz or 50 kHz. Select when there is a full-range speaker connected to the rear speaker output leads and there is a subwoofer connected to the RCA output. Select when there is a passive subwoofer connected directly to the rear speaker output leads and there is a subwoofer connected to the RCA output. Select when there are full-range speakers connected to the rear speaker output leads and RCA output.



[You're reading an excerpt. Click here to read official PIONEER MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)
<http://yourpdfguides.com/dref/5904334>

If there is a full-range speaker connected to the rear speaker output leads, and the RCA output is not used, you may select either [REAR/SUB. w] or [REAR/REAR]. Select to update the unit to the latest Bluetooth software. For details on Bluetooth software and updating, visit our website. (Some of the settings will be retained even after resetting the unit, such as Bluetooth pairing information, etc. To select the band from [FM1], [FM2], [FM3], [MW] or to 6/).

English Press a number button (1/ The / buttons can be also used to select a preset station when [SEEK] is set to [PCH] in the FUNCTION settings (page 17). [REAR/REAR] Best stations memory (BSM) The six strongest stations are stored on the number buttons (1/ S/W UPDATE 1 2 3 to 6/). After selecting the band, press the M. Scanning stops when the unit receives a station. to cancel seek tuning , press / . Radio The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. NOTE [SEEK] needs to be set to [MAN] in the FUNCTION settings (page 17). To store stations manually 1 While receiving the station you want to store, press and hold one of the number buttons (1/ to 6/) until it stops flashing.

En 7 Using PTY functions SRC (source)/OFF USB port 1 2 3 The unit searches for a station by PTY (program type) information. The unit begins to search for a station. When it is found, its program service name is displayed. NOTES • To cancel the search, press the M. □ The program of some stations may differ from that indicated by the transmitted PTY. □ If no station is broadcasting the type of program you searched for, [NOT FOUND] is displayed for about two seconds and then the tuner returns to the original station. 5 mm stereo jack) PTY list For more details about PTY list, visit the following site: <http://www.2> Plug in the USB device/iPod using an appropriate cable. NOTE To automatically switch to [USB] source when a USB device/iPod is connected to the unit, set [USB AUTO] to [ON] in the SYSTEM settings (page 18). USB/iPod/AUX NOTE iPod function is not available for MVH-180UBG/180UB/181UB.

CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. Before removing the device, stop playback. 0 or later can be connected to the unit via MTP, using the cable supplied with the device. However, depending on the connected device and the numbers of the files in the device, audio files/songs may not be able to be played back via MTP.

Note that MTP connection is not compatible with WAV and FLAC* file formats, and cannot be used with the MIXTRAX function.

* The FLAC files are only compatible with MVH-180UI/180UBG/180UB/181UB. Playing back Disconnect headphones from the device before connecting it to the unit. 8 En NOTE If you use an MTP connection, [ANDROID WIRED] needs to be set to [MEMORY] in the SYSTEM settings (page 19). Purpose Alphabetical search (iPod only) Operation 1 Press to display the list. Dial to select the desired category list, then press to enter the alphabetical search mode. Dial twice also enters the alphabetical search mode. Dial to select a letter, then press to display the alphabetical list. English AUX 1 Insert the stereo mini plug into the AUX input jack. 2 Press SRC/OFF to select [AUX] as the source. NOTE If [AUX] is set to [OFF] in the SYSTEM settings, [AUX] cannot be selected as a source (page 18). Operations You can make various adjustments in the FUNCTION settings (page 16). Note that the following operations do not work for an AUX device. to operate an AUX device , use the device itself. Purpose Select a folder/album*1 Select a track/song (chapter) Fast forward or reverse*3 Search for a file from a list Operation Press 1/ Press or 2/ or . or .

Return to root folder (USB only)*1 Change drives in USB device (Devices that support the USB mass storage device class protocol only) . Repeat play Random/shuffle play Shuffle all play (iPod only) Pause/resume playback Sound retriever*2 Press and hold 5/ Press 4/PAUSE. [1]: Effective for low compression rates [2]: Effective for high compression rates Press and hold Press BAND/ . Dial to select the desired file (folder) name or category, then press to confirm. Dial to select the desired file, then press to confirm. View a list of the files in the selected folder/category*1 Play a song in the selected folder/ category*1 *1 Compressed audio files only *2 When there is no 3/S. rtrv. Button on the unit, the sound retriever function can be set by the FUNCTION settings. *3 When you use the fast forward or reverse function while playing a VBR file, the playback time may be not correct. En 9 Useful functions for iPod

Link play mode You can access songs based on the artist, album, or genre currently playing.

1 While listening to a song, press and hold to enter the link play mode. Dial to select the mode ([ARTIST], [ALBUM], [GENRE]), then press to confirm. The selected song/album will be played after the currently playing song. NOTE The selected song/album may be canceled if you use functions other than those from the link play mode t running can drain the vehicle's battery. □ Be sure to park your vehicle in a safe place and apply the parking brake before operation.

En 11 To make a phone call 1 Press to display the phone menu. 2 3 4 When two phones are connected, a phone name appears first then a phone menu will display. If you select [PHONE BOOK], proceed to step 4. Dial to select a name or phone number, then press to confirm. The phone call starts. Purpose Operation Adjust the volume of the Turn the M. Caller's voice (When private mode is on, this function is not available.) Turn the privacy mode on or off Press BAND/ during the call. To preset phone numbers 1 Select a phone number from a phone book or call history. 2 Press and hold one of the number buttons (1/ to 6/). The contact is stored in the selected preset number. To make a call using a preset number, press one of the number buttons (1/ to 6/), then press the M. To answer an incoming call 1 Press when a call is received. TIP When two phones are connected to the unit via Bluetooth and there is an incoming call while one phone is being used for a call, a message will appear in the display. To answer that incoming call, you need to end the existing call.

Voice recognition (Only for iPhone) This function is only available when an iPhone equipped with voice recognition is connected to the unit via Bluetooth. Dial and then talk into the microphone to input voice commands. to exit the voice recognition mode , press BAND/ . When a call is received. Basic operations Purpose End a call Reject an incoming call Switch between the current caller and a caller on hold Cancel a caller on hold Operation Press Press and hold Press the M.



[You're reading an excerpt. Click here to read official PIONEER MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)
<http://yourpdfguides.com/dref/5904334>

*NOTE For details on the voice recognition features, refer to the manual supplied with your iPhone. 12 En Phone menu Menu Item RECENTS [MISSED] [DIALED] [RECEIVED] PHONE BOOK*1 Display the dialed call history. Display the received call history. Display the contacts which have been transferred from your phone. Set [VISIBLE] in the Bluetooth settings to [ON] to browse the contacts via this unit.*

Recall the preset phone numbers. You can also recall the preset phone numbers by pressing one of the number buttons (1/ to 6/). Select [ON] to answer an incoming call automatically. Select [ON] if the ring tone does not come out from the car speakers. Depending on the connected phone, this function may not work.

Invert the order of names in the phone book (name view). Select whether or not to transfer the contacts from your phone automatically when your phone is connected to the unit. □ When connected for the first time, the contacts from your phone are transferred automatically, regardless of the [PB A. SYNC] setting. □ If you switch from [ON] to [OFF], the auto synchronization will not be performed on the next connection.

*□ If you switch from [OFF] to [ON], the auto synchronization will be performed when your phone is connected to the unit. □ During the auto synchronization, you cannot cancel the synchronization, even if you select [OFF]. Description Display the missed call history. Menu Item BT SETTING Description You can adjust various settings for Bluetooth connections. For details on Bluetooth settings, see page 11. English *1 The contacts on your phone will normally be transferred automatically when the phone is connected. If they are not, use your phone to transfer the contacts. *2 If two phones are connected, this function does not work on incoming calls that are received while one of the phones is being used for a call. Bluetooth audio Important • Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: –A2DP (Advanced Audio Distribution Profile) can only play back songs on your audio player. □ AVRCP (Audio/Video Remote Control Profile) can perform functions such as playback, pause, select song, etc.*

□ The sound of the Bluetooth audio player will be muted when the phone is in use. □ When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically. □ Depending on the type of Bluetooth audio player you have connected to this unit, operation and information displayed may vary based on availability and functionality. Basic operations You can make various adjustments in the FUNCTION settings (page 16). Purpose Fast forward or reverse Select a track Repeat play Operation Press and hold Press Press 6/ or . En 13 Purpose Random play* Pause/resume playback Search for a file from a list Operation Press 5/ . Dial to select the desired folder name, then press to confirm. Dial to select the desired file, then press to confirm.*

*Playback of an application via the unit The Bluetooth connection is available for MVH-X380BT. 1 2 3 4 5 6 7 Connect this unit with the mobile device. Operate the mobile device to start up the application. * Depending on the connected device, these operations may not be available. App Mode (APP mode is not available for MVH-180UBG/180UB/181UB.) You can enjoy listening to an application on an iPhone/Android device via the unit. In some cases, you can control an application by using the unit.*

For details on compatible devices, visit our website. Important Use of third party apps may involve or require the provision of personally identifiable information, whether through the creation of a user account or otherwise, and for certain applications, the provision of geolocation data. Basic operations You can make various adjustments in the FUNCTION settings (page 16). Purpose Select a track Fast forward or reverse Pause/resume playback Operation Press or . Press and hold Press BAND/ For iPhone users This function is compatible with iPhones and iPod touches installed with iOS 5.

0 or later. For Android device users This function is compatible with devices that have Android OS 2. 3 or later installed and also support Bluetooth SPP (Serial Port Profile) and A2DP (Advance Audio Distribution Profile). 14 En Using Pioneer ARC APP (Pioneer ARC APP for iPhone is not available for MVH-180UBG/180UB/181UB.) You can operate the unit from Pioneer ARC APP installed on an iPhone/ Android device. In some cases, you can control aspects of the application, such as source selection, pause, etc. , by using the unit. For details on what operations are available on the application, see the application's help section. Proceed to step 9 if you select the USB connection for iPhone or the Bluetooth connection. press BAND/ to display the previous menu list.

English WARNING Do not attempt to operate the application while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the application. APP AUTO ON] (page 19), Pioneer ARC APP on the Android device starts automatically, and all the steps are finished. NOTE If Pioneer ARC APP has not been installed on your Android device yet, a message that prompts you to install the application will appear on your Android device. For iPhone users This function is compatible with iPhones (iPhone 5 or later) and iPod touches installed with iOS 8. For Android device users This function is compatible with devices that have Android OS 4. 0 may not work properly or emit sounds due to their own software design, regardless of the OS version. NOTE You can also launch the application by pressing and holding the M. c. @@@@Connect this unit with the mobile device.

*@@FUNCTION settings The menu items vary according to the source. @@ (Available only when FM band is selected. @@@@ (Available only when FM band is selected.) Restrict the tuning station according to the signal strength. description * When there is no 3/S.*

@@BSM Settings You can adjust various settings in the main menu. Dial to select one of the categories below, then press to confirm. Dial to select the options, then press to confirm. @@ (Available only when FM band is selected. @@@@ (Available only when FM band is selected.

@[CUSTOM] can be set separately for each source. @@@@Compensate for clear sound at low volume. select the subwoofer phase. @@ description English SEEK [MAN] , [PCH] SEL DEVICE S. @@@@ •The FLAC file is played back. @@(Not available when [CONTROL iPod] is selected in the control mode. @@Menu Item AUTO PI [ON], [OFF] Description Search for a different station with the same programming, even if using a preset station. Set to [ON] when using an auxiliary device connected to the unit. Select [ON] to automatically switch to [USB] source when a USB device/iPod is connected to the unit. Select [OFF] when a USB device/iPod is being connected to the unit just for charging.

set the Bluetooth signal on/off. Mute or attenuate sound automatically when a signal from equipment with a mute function is received.



**You're reading an excerpt. Click here to read official PIONEER
MVH-180UI user guide
<http://yourpdfguides.com/dref/5904334>**

Reduce the battery power consumption. Turning on the source is the only operation allowed when this function is on. Clear the Bluetooth device data (device list, PIN code, call history, phone book, preset phone numbers) stored in the unit. [CLEARED] appears when data is successfully deleted. AUX [ON], [OFF]

Adjust the volume level for each source except FM. Each of the below combinations are set to the same setting automatically. *2 Not available when [REAR/REAR] is selected in [SP-P/O MODE] in the INITIAL settings (page 7). BT AUDIO [ON], [OFF] MUTE MODE (Only for MVH-180UI) [MUTE], [20dB ATT], [10dB ATT] PW SAVE* [ON], [OFF] SYSTEM settings You can also access to these menus when the unit is turned off.

Select the language to display the text information from a compressed audio file. Description BT MEM CLEAR [YES], [CANCEL] 18 En Menu Item BT VERSION Description Displays the system version of the unit and the Bluetooth module. 0 MIN], [OFF] MIX PATTERN [SOUND LEVEL] Description Select the length of the playback time. english APP CONN. SET [WIRED], [BLUETOOTH] ANDROID WIRED [MEMORY], [APP CONTROL] Select the appropriate connection method for an Android device.

This setting is not available when [BLUETOOTH] is selected in [APP CONN. sET]. Select [ON] to automatically launch the car remote application when an Android device is connected to the unit via AOA. (Not available when [MEMORY] is selected in [ANDROID WIRED].) Select the appropriate connection method according to your device.

Change the MIXTRAX special effects according to the audio level. The mix pattern changes according to the sound level. The mix pattern changes according to the bass level. The mix pattern changes randomly according to the sound level mode and low pass mode. Set the MIXTRAX special effects on/off. Turn the MIXTRAX sound effects on/off while manually changing the tracks. p. APP AUTO ON [ON], [OFF] [LOW PASS] [RANDOM] DISPLAY FX [ON], [OFF] CUT IN FX [ON], [OFF] * [PW SAVE] is canceled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When [PW SAVE] is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition does not have an ACC (accessory) position. Description En 19 Connections/Installation Connections Important • When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain.

Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring. Place all cables away from moving parts, such as the shift lever and seat rails. Place all cables away from hot places, such as near the heater outlet. Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment. Cover any disconnected cable connectors with insulating tape. Do not shorten any cables. Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited. When this unit is on, control signals are sent through the blue/white cable.

Connect this cable to the system remote control of an external power amp or the vehicle's autoantenna relay control terminal (max. 300mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal. Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna.

Doing so may result in battery drain or a malfunction. • The black cable is ground. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately. If they are not, an accidental detachment may result in a fire or malfunction. Placed • The graphical symbol on the product means direct current.

Wired remote input (Only for MVHX380BT/180UI) Hard-wired remote control adapter can be connected (sold separately). Microphone input (Only for MVHX380BT) Power cord ACC position No ACC position • Use of this unit in conditions other than the following could result in fire or malfunction. – Vehicles with a 12-volt battery and negative grounding. When speaker output is used by 4 channels, use speakers over 50 W (maximum input power) and between 4 Ω to 8 Ω (impedance value). Do not use 1 Ω to 3 Ω speakers for this unit. When rear speaker output is used by 2 Ω of subwoofer, use speakers over 70 W (maximum input power). * Please refer to connections for a connection method. To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below. Disconnect the negative terminal of the battery before installation. This unit MVH-X380BT/180UI/180UBG/180UB/ 181UB Microphone 4 m (Only for MVHX380BT) Rear output or subwoofer output Front output (Only for MVHX380BT/180UI) Antenna input Power cord input Fuse (10 A) To power cord input Depending on the kind of vehicle, the function of and may be different.

In this case, be sure to to and to . Connect leads of the same color to each other. Black (chassis ground) Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. Vehicle, never connect Blue/white Connect to the system control terminal of the power amp (max. Yellow/black (Only for MVH-180UI) If you use equipment with a Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections. Speaker leads White: Front left White/black: Front left Gray: Front right Gray/black: Front right Green: Rear left or subwoofer Green/black: Rear left or subwoofer Violet: Rear right or subwoofer Violet/black: Rear right or subwoofer ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. To rear output or subwoofer output Rear speaker or subwoofer * Only for MVH-X380BT/180UI Installation Important • Check all connections and systems before final installation. Do not use unauthorized parts as this may cause malfunctions.

Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: – it may interfere with operation of the vehicle. it may cause injury to a passenger as a result of a sudden stop. • The semiconductor laser will be damaged if it overheats. Install this unit away from hot places such as near the heater outlet.

Optimum performance is obtained when the unit is installed at an angle of less than 60°. When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5904334)

[MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)

<http://yourpdfguides.com/dref/5904334>

Leave ample space 5 cm English NOTES • Change the initial menu of this unit. refer to [SP-P/O MODE] (page 7). The subwoofer output of this unit is monaural.

□ When using a subwoofer of 2 Ω, be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/black leads. 5 cm DIN mount installation 1 Insert the supplied mounting 2 sleeve into the dashboard. Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. Power amp (sold separately) Perform these connections when using the optional amplifier. Dashboard Mounting sleeve • Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. system remote control Connect to blue/white cable. Power amp (sold separately) Connect with RCA cables (sold separately) To front output* Front speaker* When not using the supplied mounting sleeve 1 Line up the holes on the mounting bracket with the holes on the sides of the unit to attach the bracket. En 21 2 Install the microphone clip on the sun visor.

Lowering the sun visor reduces the voice recognition rate. 2 Screw in one screw on each side to hold the unit in place. Installing the microphone Tapping screw (5 mm × 9 mm, not supplied with product) Mounting bracket Dashboard or console Screw Bracket (Only for MVH-X380BT) The microphone should be placed directly in front of the driver at a suitable distance to pick up their voice clearly. Using the included bracket Check to make sure that the included bracket matches your particular model of vehicle and then attach it to the unit as shown below. Removing the unit (installed with the supplied mounting sleeve) Microphone clip 1 Remove the trim ring. CAUTION It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the microphone in such a way that it will not obstruct driving. It is recommended to use the clamps (sold separately) to arrange the lead. To install on the steering column 1 Slide the microphone base to detach it from the microphone clip. 2 3 Trim ring Notched tab • Releasing the front panel allows easier access to the trim ring.

□ When reattaching the trim ring, point the side with the notched tab down. Insert the supplied extraction keys into both sides of the unit until they click into place. Pull the unit out of the dashboard. To install on the sun visor 1 Fit the microphone lead into the groove. Microphone lead Groove 2 Microphone Microphone clip Microphone base Install the microphone on the rear side of the steering column.

22 En Additional Information Troubleshooting The display automatically returns to the normal display. □ No operations have been made for about 30 seconds. – Perform an operation. The repeat play range changes unexpectedly. □ Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing.

□ Select the repeat play range again. a subfolder is not played back. □ Subfolders cannot be played when [FLD] (folder repeat) is selected. □ Select another repeat play range. the sound is intermittent. □ You are using a device, such as a cellular phone, that may cause audible interference. □ Move electrical devices that may be causing the interference away from the unit. The sound from the Bluetooth audio source is not played back. → There is a call in progress on a Bluetooth-connected cellular phone. □ The sound will be played back when the call is terminated.

□ A Bluetooth-connected cellular phone is currently being operated. – Stop using the cellular phone. □ The connection between the unit and the cellular phone is not established correctly after a call made by a Bluetooth-connected cellular phone. □ Make a Bluetooth connection between the unit and the cellular phone again. English Double-sided tape Error messages Common AMP ERROR → This unit fails to operate or the speaker connection is incorrect. □ Turn the ignition switch OFF and back to ON again. If the message remains, contact your dealer or an authorized Pioneer Service Station for assistance. nO XXXX (NO TITLE, for example) → There is no embedded text information. □ Switch the display or play another track/file. En 23 USB device/iPod FORMAT READ → Sometimes there is a delay between the start of playback and when you start to hear any sound.

□ Wait until the message disappears and you hear sound. nO AUDIO → There are no songs. □ Transfer the audio files to the USB device and connect. → The connected USB device has security enabled. □ Follow the USB device instructions to disable the security.

PROTECT → All the files on the connected USB device are embedded with DRM. – Replace the USB device. N/A USB → The connected USB device is not supported by this unit. □ Disconnect your device and replace it with a compatible USB device. HUB ERROR → The USB device connected via a USB hub is not supported by this unit.

□ Connect the USB device directly to this unit using a USB cable. cHECK USB → The USB connector or USB cable has short-circuited. □ Check that the USB connector or USB cable is not caught in something or damaged. → The connected USB device consumes more than maximum allowable current. □ Disconnect the USB device and do not use it. Turn the ignition switch OFF and back to ACC or ON. □ Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back to ON, or disconnect the iPod and reconnect. eRROR-19 → Communication failed. □ Perform one of the following operations, then return to the USB source.

□ Turn the ignition switch OFF and back to ON. □ Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. eRROR-23 → USB device was not formatted properly. □ Format the USB device with FAT12, FAT16 or FAT32. □ Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. STOP → There are no songs in the current list. □ Connect the unit and the device via Bluetooth (page 10). □ Follow the instructions that appear on the screen.

START UP APP → The application has not started running yet. □ Operate the mobile device to start up the application. Bluetooth device ERROR-10 → The power failed for the Bluetooth module of the unit. □ Turn the ignition switch OFF and back to ACC or ON. handling guidelines USB storage device • Connections via USB hubs are not supported.

□ Firmly secure the USB storage device before driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. apps NO BT DEVICE GO TO BT MENU TO REGISTER → No Bluetooth device found. 24 En • Depending on the USB storage device, the following problems may occur.



[You're reading an excerpt. Click here to read official PIONEER MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)
<http://yourpdfguides.com/dref/5904334>

□ Files may not be played back properly.

□ The device may cause audible interference when you are listening to the radio. iPod • Do not leave the iPod in places with high temperatures. □ Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. □ The settings of the iPod such as the equalizer and repeat play are changed automatically when the iPod is connected to the unit. Once the iPod is disconnected, those settings will return to the original settings. □ Incompatible text saved on the iPod will not be displayed by the unit. □ The unit may not work properly depending on the application used to encode WMA files. □ There may be a slight delay at the start of the playback of audio files embedded with image data, or audio files stored on a USB device with numerous folder hierarchies. □ Russian text to be displayed on this unit should be encoded in one of the following character sets: – Unicode (UTF-8, UTF-16) – A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting Windows Media™ Audio Professional, Lossless, Voice/DRM Stream/ Stream with video Not compatible AAC files (MVH-X380BT only) English Compatible format File extension Sampling frequency Transmission rate Apple Lossless AAC file bought from the iTunes Store (.

Mp3 8 kbps to 320 kbps (CBR), VBR CAUTION • Pioneer cannot guarantee compatibility with all USB mass storage devices, and assumes no responsibility for any loss of data on media players, smartphones, or other devices while using this product. □ Do not leave discs or a USB storage device in any place that is subject to high temperatures. □ FLAC files may not be playable, depending on the encoder. 1 kHz (MS ADPCM) Compressed audio compatibility • Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. 1 kHz, 48 kHz USB device • There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. Sampling frequency En 25 Playable folder hierarchy Playable folders Playable files Playback of copyrightprotected files Partitioned USB device Up to eight tiers (A practical hierarchy is less than two tiers.) Up to 500 Up to 15 000 Not compatible Only the first partition can be played. @@@@□ Users of iPod with the Dock Connector should use the CD-IU51. For details, consult your dealer. @@@@ supported iPod software versions are shown below.

Older versions may not be supported. Made for CAUTION Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 01 to 05: Folder number to : Playback sequence Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. Sequence of audio file depends on the connected device. Note that the hidden files in a USB device cannot be played back.

□ iPod touch (1st through 5th generation) – iPod classic – iPod with video – iPod nano (1st through 7th generation) – iPhone 6 – iPhone 6 Plus – iPhone 5s – iPhone 5c – iPhone 5 – iPhone 4s – iPhone 4 – iPhone 3GS – iPhone 3G – iPhone D: Display C: Character Copyright and trademark Bluetooth The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners. WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/ or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

FLAC Copyright © 2000-2009 Josh Coalson Copyright © 2011-2013 Xiph. Org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: – Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. □ Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. □ Neither the name of the Xiph. Org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. □Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. Android & Google Play Android, Google Play, and the Google Play logo are trademarks of Google Inc. 5 kg • 50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (for subwoofer) Continuous power output: 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 Ω load, both channels driven) Load impedance: 4 Ω (4 Ω to 8 Ω allowable) Preout maximum output level: 2.

1 NOTE Specifications and the design are subject to modifications without notice. Utilisation du support inclus Vérifiez les pièces pour vous assurer que le support inclus correspond à votre modèle de véhicule en particulier, puis fixez-le à l'appareil tel qu'il est indiqué ci-dessous. Made for (Conçu pour) 01 à 05 : numéro de dossier à : séquence de lecture Périphérique USB • Il peut se produire un léger retard au début de la lecture de fichiers audio stockés sur un périphérique de – iPod touch (de la 1e à la 5e génération) – iPod classic – iPod avec vidéo – iPod nano (de la 1e à la 7e génération) – iPhone 6 – iPhone 6 Plus – iPhone 5s – iPhone 5c – iPhone 5 – iPhone 4s – iPhone 4 PRÉCAUTION Pioneer n'accepte aucune responsabilité en cas de perte de données sur l'iPod, même si la perte de données se produit pendant l'utilisation de cet appareil. Les accessoires électroniques portant la mention « Made for iPod » et « Made for iPhone » ont été conçus pour fonctionner respectivement avec un iPod ou un iPhone et sont certifiés conformes aux exigences d'Apple par le fabricant. □Made for iPod” y “Made for iPhone” significan que un accesorio electrónico ha sido diseñado para ser conectado específicamente a un iPod o a un iPhone, respectivamente, y ha sido homologado por quien lo desarrolló para cumplir con las normas de funcionamiento de Apple.



[You're reading an excerpt. Click here to read official PIONEER MVH-180UI user guide](http://yourpdfguides.com/dref/5904334)
<http://yourpdfguides.com/dref/5904334>