



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MVH-350BT. You'll find the answers to all your questions on the PIONEER MVH-350BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER MVH-350BT
User guide PIONEER MVH-350BT
Operating instructions PIONEER MVH-350BT
Instructions for use PIONEER MVH-350BT
Instruction manual PIONEER MVH-350BT

RDS MEDIA CENTER RECEIVER
AUTORADIO MULTIMEDIA RDS
RICEVITORE MULTIMEDIALE CON RDS
RECEPTOR Y CENTRO DE COMUNICACIONES RDS
RDS-MULTIMEDIA-EMPFÄNGER
RDS MEDIA CENTER ONTVANGER
ЦИФРОВОЙ МЕДИА-РЕСИВЕР

MVH-350BT
MVH-150UI

Pioneer

Owner's Manual
Mode d'emploi
Manuale d'istruzioni
Manual de instrucciones
Bedienungsanleitung
Handleiding
Руководство пользователя

English
Français
Italiano
Español
Deutsch
Dutch
Nederlands
Русский



[You're reading an excerpt. Click here to read official PIONEER MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)
<http://yourpdfguides.com/dref/5480298>

Manual abstract:

@Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. ! Avoid exposure to moisture. ! If the battery is disconnected or discharged, any preset memory will be erased. Note Function setting operations are completed even if the menu is canceled before the operations are confirmed. If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. About this manual ! In the following instructions, USB memories and USB audio players are collectively referred to as "USB storage device". ! In this manual, iPod and iPhone will be referred to as "iPod".

In case of trouble Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. 2 En Section Operating this unit Operating this unit 02 Head unit 1 2 3 4 5 Display indication 2 1 3 4 5 6 7 9 8 a b Indicator State ! Tuner: band and frequency ! RDS: program service name, PTY information and other literal information ! USB storage device and iPod: elapsed playback time and text information Only for MVH-350BT Connected to a Bluetooth device. The line is on hold. Appears when a lower tier of folder or menu exists. 4 Perform the following procedures to set the menu.

To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English or Russian. ! If the embedded language and the selected language setting are not the same, text information may not display properly. ! Some characters may not be displayed properly. 1 Turn M.C. to select the desired setting. ENG (English)—PYC (Russian) 2 Press M.C. to confirm the selection.

CLOCK SET (setting the clock) 1 2 3 4 Turn M.C. to adjust hour. Press M.C. to select minute. Turn M.C. to adjust minute. Press M.

C. to confirm the selection. English b 6 7 Part 1 SRC/OFF MULTI-CONTROL (M.C.) (list) DISP USB port MVH-350BT (phone) 6 MVH-150UI iPod c Detach button 7 8 9 a Part b c Indicator 1 2 (list) (iPod control) Sub information section TA (traffic announcements) TP (traffic program identification) (sound retriever) LOC (repeat) (random/shuffle) (auto answer) State d c Main information section BAND/ (iPod control) (back)/ DIMMER (dimmer) c/d 1/ to 6/ The list function is being operated.

This unit's iPod function is operated from your iPod. c (Bluetooth indicator) 2 3 4 5 8 9 a b d Sub information is displayed. 3 Set up menu TA function is on.

AUX input jack (3.5 mm stereo jack) 4 When you turn the ignition switch to ON after installation, set up menu appears on the display.

You can set up the menu options below. 1 After installation of this unit, turn the ignition switch to ON. SET UP appears. 2 Turn M.C. to switch to YES. FM STEP (FM tuning step) Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on. ! The tuning step remains at 50 kHz during manual tuning.

1 Turn M.C. to select the FM tuning step. 50 (50 kHz)—100 (100 kHz) 2 Press M.C. to confirm the selection. QUIT appears. 5 A TP station is tuned in. 6 The sound retriever function is on. Local seek tuning is on.

Track or folder repeat is on. Random play is on. The iPod source is selected and the shuffle or shuffle all function is on. Only for MVH-350BT Shows when the automatic answering function is on. CAUTION ! Use an optional Pioneer USB cable (CDU50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous.

! Do not use unauthorized products. 7 8 9 # If you do not operate for 30 seconds, the set up menu will not be displayed. # If you prefer not to set up at this time, turn M.C. to switch to NO.

Press to select. If you select NO, you cannot set up in the set up menu. 3 Press M.C. to select. 5 To finish your settings, turn M.C. to select YES. # If you prefer to change your setting again, turn M.C.

to switch to NO. Press to select. a En 3 Section 02 Operating this unit Operating this unit 6 Press M.C. to select. Notes ! You can set up the menu options from the system menu. For details about the settings, refer to System menu on page 11. ! You can cancel set up menu by pressing SRC/OFF. Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward (M) and then pull it toward (N) you. Basic operations ! ! ! Important Handle gently when removing or attaching the front panel. Avoid subjecting the front panel to excessive shock. Keep the front panel out of direct sunlight and high temperatures. To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. Selecting a source 1 Press SRC/OFF to cycle between: TUNER (tuner)—USB (USB)/iPod (iPod)—AUX (AUX)—BT AUDIO (Bluetooth audio) ! BT AUDIO is not available for MVH-150UI. ! Only for MVH-150UI When there is an iPod connected and a source other than iPod is selected, you can switch to iPod by pressing iPod. Adjusting the volume 1 Turn M.

C. to adjust the volume. Tuner Basic operations Selecting a band 1 Press BAND/ until the desired band (FM1, FM2, FM3 for FM or MW/LW) is displayed.

Switching preset stations 1 Press c or d. ! Select PCH (preset channel) under SEEK to use this function. For details about the settings, refer to SEEK (left/right key setting) on the next page. Manual tuning (step by step) 1 Press c or d. ! Select MAN (manual tuning) under SEEK to use this function. For details about the settings, refer to SEEK (left/right key setting) on the next page. Seeking 1 Press and hold c or d, and then release.

You can cancel seek tuning by briefly pressing c or d.



[You're reading an excerpt. Click here to read official PIONEER MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)
<http://yourpdfguides.com/dref/5480298>

While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. CAUTION For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on.

Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Frequently used menu operations Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER. Returning to the ordinary display Canceling the main menu 1 Press BAND/. Returning to the ordinary display from the list 1 Press BAND/. Note This unit's AF (alternative frequencies search) function can be turned on and off.

AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on the next page). Storing and recalling stations for each band Using preset tuning buttons 1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1/ to 6/) and hold until the preset number stops flashing. 4 En Section Operating this unit Operating this unit 02 2 Press one of the preset tuning buttons (1/ to 6/) to select the desired station. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! FREQUENCY (program service name or frequency) ! BRDCST INFO (program service name/PTY information) ! CLOCK (source name and clock) Notes ! If the program service name cannot be acquired in FREQUENCY, the broadcast frequency is displayed instead. If the program service name is detected, the program service name will be displayed. ! BRDCST INFO text information will change automatically. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area. Searching for an RDS station by PTY information You can search for general types of broadcasting programs, such as those listed in the following section. Refer to this page. (list). 1 Press 2 Turn M.C. to select a program type. NEWS/INFO—POPULAR—CLASSICS—OTHERS 3 Press M.

C. to begin the search. The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed. ! To cancel the search, press M.C. again. ! The program of some stations may differ from that indicated by the transmitted PTY. ! If no station is broadcasting the type of program you searched for, NOT FOUND is displayed for about two seconds and then the tuner returns to the original station. OTHERS (others) EDUCATE (Education), DRAMA (Drama), CULTURE (Culture), SCIENCE (Science), VARIED (Varied), CHILDREN (Children's), SOCIAL (Social affairs), RELIGION (Religion), PHONE IN (Phone in), TOURING (Travel), LEISURE (Leisure), DOCUMENT (Documentaries) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

1 Press M.C. to select the desired setting. FM: OFF—LV1—LV2—LV3—LV4 MW/LW: OFF—LV1—LV2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. TA (traffic announcement standby) 1 Press M.

C. to turn traffic announcement standby on or off. AF (alternative frequencies search) 1 Press M.C. to turn AF on or off.

NEWS (news program interruption) 1 Press M.C. to turn the NEWS function on or off. SEEK (left/right key setting) You can assign a function to the left and right keys of the unit. Select MAN (manual tuning) to tune up or down manually or select PCH (preset channel) to switch between preset channels. 1 Press M.C. to select MAN or PCH. English Function settings 1 Press M.C.

to display the main menu. 2 Turn M.C. to change the menu option and press to select FUNCTION. 3 Turn M.C. to select the function. Once selected, the following functions can be adjusted. # If MW/LW band is selected, only BSM, LOCAL and SEEK are available. BSM (best stations memory) PTY list NEWS/INFO (news and information) NEWS (News), AFFAIRS (Current affairs), INFO (Information), SPORT (Sports), WEATHER (Weather), FINANCE (Finance) POPULAR (popularme) ! CLOCK (source name and clock) ! SPEANA (spectrum analyzer) CONTROL APP ! CONTROL APP (APP MODE is displayed) ! CLOCK (source name and clock) ! SPEANA (spectrum analyzer) 2 Use M.

C. to select the desired file name (or folder name). Selecting a file or folder 1 Turn M.C. Playing 1 When a file or track is selected, press M.

C. Viewing a list of the files (or folders) in the selected folder 1 When a folder is selected, press M.C. Playing a song in the selected folder 1 When a folder is selected, press and hold M.C.

2 Turn M.C. to change the menu option and press to select FUNCTION. Once selected, the function below can be adjusted. S.RTRV (sound retriever) Automatically enhances compressed audio and restores rich sound. 1 Press M.C. to select the desired setting. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on this page.

Note Disconnect USB storage devices from the unit when not in use. 6 En Section Operating this unit Operating this unit 02 Note TRACK INFO text information will change automatically. Operations using special buttons Selecting a repeat play range 1 Press 6/ to cycle between the following: ! ONE – Repeat the current song ! ALL – Repeat all songs in the selected list ! When the control mode is set to CONTROL iPod/CONTROL APP, the repeat play range will be same as what is set for the connected iPod. Selecting a random play range (shuffle) to cycle between the following: 1 Press 5/ ! SNG – Play back songs in the selected list in random order. ! ALB – Play back songs from a randomly selected album in order. ! OFF – Not play back in random order. Playing all songs in random order (shuffle all) to turn shuffle all on. 1 Press and hold 5/ ! To turn off shuffle all, select OFF in shuffle. For details, refer to Selecting a random play range (shuffle) on this page. Pausing playback 1 Press 4/PAUSE to pause or resume.

Enhancing compressed audio and restoring rich sound (sound retriever) 1 Press 3/S.Rtrv to cycle between: 1—2—OFF (off) 1 is effective for low compression rates, and 2 is effective for high compression rates. 2 Turn M.C. to change the mode; press to select.

! ARTIST – Plays an album of the artist currently being played. ! ALBUM – Plays a song from the album currently being played. ! GENRE – Plays an album from the genre currently being played.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480298)

[MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)

<http://yourpdfguides.com/dref/5480298>

% Press BAND/ mode. to switch the control English Browsing for a song 1 Press search.

2 to switch to the top menu of list Use M.C. to select a category/song. The selected song/album will be played after the currently playing song. Notes ! The selected song/album may be canceled if you operate functions other than link search (e.g. fast forward and reverse). ! Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off. ! CONTROL iPod – This unit's iPod function can be operated from the connected iPod. ! CONTROL APP – This unit's iPod function can be operated from the connected iPod.

The unit will play back the sound from your iPod applications. ! CONTROL AUDIO – This unit's iPod function can be operated from this unit. Changing the name of the song or category 1 Turn M.C. Playlists—artists—albums—songs—podcasts —genres—composers—audiobooks Playing 1 When a song is selected, press M.C. Viewing a list of songs in the selected category 1 When a category is selected, press M.C. Playing a song in the selected category 1 When a category is selected, press and hold M.C.

Searching the list by alphabet 1 When a list for the selected category is disto switch to alphabet search played, press mode. ! You also can switch to alphabet search mode by turning M.C. twice. 2 Turn M.

C. to select a letter. 3 Press M.C. to display the alphabetical list.

! To cancel searching, press /DIMMER. Only for MVH-150UI You can also switch the control mode by pressing iPod. Notes ! Switching the control mode to CONTROL iPod/CONTROL APP pauses song playback. Operate the iPod to resume playback. ! The following operations are still accessible from the unit even if the control mode is set to CONTROL iPod/CONTROL APP. — Pausing — Fast forward/reverse — Selecting a song (chapter) Operating this unit's iPod function from your iPod This unit's iPod function can be operated from a connected iPod. If you switch to APP Mode, you can have the sound from your iPod applications be output from your car's speakers. CONTROL iPod is not compatible with the following iPod models. ! iPod nano 1st generation ! iPod with video CONTROL APP is compatible with the following iPod models. ! iPod touch 4th generation ! iPod touch 3rd generation ! iPod touch 2nd generation ! iPod touch 1st generation ! iPhone 4S ! iPhone 4 ! iPhone 3GS ! iPhone 3G ! iPhone ! The volume can only be adjusted from this unit.

Function settings 1 Press M.C. to display the main menu. Notes ! You can play playlists created with the PC application (MusicSphere). The application will be available on our website. ! Playlists that you created with the PC application (MusicSphere) are displayed in abbreviated form. Playing songs related to the currently playing song You can play songs from the following lists. • Album list of the currently playing artist • Song list of the currently playing album • Album list of the currently playing genre 1 Press and hold mode. to switch to link play 2 Turn M.C.

to change the menu option and press to select FUNCTION. 3 Turn M.C. to select the function. Once selected, the following functions can be adjusted.

! AUDIO BOOK is not available when CONTROL iPod/CONTROL APP is selected in the control mode. For details, refer to Operating this unit's iPod function from your iPod on this page. En 7 Section 02 Operating this unit Operating this unit AUDIO BOOK (audiobook speed) 1 Press M.C. to display the setting mode.

2 Turn M.C. to select your favorite setting. ! FASTER – Playback at a speed faster than normal ! NORMAL – Playback at normal speed ! SLOWER – Playback at a speed slower than normal S.RTRV (sound retriever) Automatically enhances compressed audio and restores rich sound. 1 Press M.C. to select the desired setting. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on the previous page. Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone.

1 Connection Operate the Bluetooth telephone connection menu. Refer to Connection menu operation on this page. 2 Function settings Operate the Bluetooth telephone function menu. Refer to Phone menu operation on the next page. Notes ! If private mode is selected on the cellular phone, hands-free phoning may not be available. ! The estimated call time appears in the display (this may differ slightly from the actual call time). Using voice recognition This feature can be used on an iPod equipped with voice recognition that is connected by Bluetooth with the source set to iPod or BT AUDIO. % Press and hold M.C. to switch to voice recognition mode.

The commands available with this unit are listed below. ! Song playback ! Making a phone call Storing and recalling phone numbers 1 If you find a phone number that you want to store to memory, press and hold down one of the preset tuning buttons (1/ to 6/) to store it to the relevant preset tuning button. The functions below can be used to store phone numbers to the memory. For details, refer to Phone menu operation on the next page. ! ! ! MISSED (missed call history) DIALLED (dialed call history) RECEIVED (received call history) PHONE BOOK (phone book) Basic operations Making a phone call 1 Refer to Phone menu operation on the next page.

Answering an incoming call 1 When a call is received, press Ending a call 1 Press . Rejecting an incoming call 1 When a call is received, press and hold Answering a call waiting 1 When a call is received, press Switching between callers on hold 1 Press M.C. Canceling call waiting . 1 Press and hold Adjusting the other party's listening volume 1 Press c or d while talking on the phone.

! When private mode is on, this function is not available. Turning private mode on or off 1 Press BAND/ while talking on the phone. . . . Note For details on voice recognition features, check the manual for the iPod you are using. Connection menu operation Important ! Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. ! Connected devices may not operate properly if more than one Bluetooth device is connected at a time (e.g. a phone and a separate audio player are connected simultaneously).

1 Press and hold nection menu. to display the con- Using Bluetooth wireless technology Only for MVH-350BT Using Bluetooth telephone Important ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power. ! Operations may vary depending on the kind of cellular phone. ! Advanced operations that require attention such as dialing numbers on the monitor, using the phone book, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations. ! Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480298)

[MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)

<http://yourpdfguides.com/dref/5480298>

2 Press one of the preset tuning buttons (1/ to 6/) to recall the desired phone number. 3 Press M.C. to make a call. Switching the display Selecting the desired text information You can change the display during a call. 1 Press DISP to cycle between the following: ! Call time ! Name of other party ! Number of other party # You cannot operate this step during a call. 2 Turn M.C. to select the function. Once selected, the following functions can be adjusted. 8 En Section Operating this unit Operating this unit 02 DEVICELIST (connecting or disconnecting a device from the device list) ! When no device is selected in the device list, this function is not available. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the name of a device you want to connect/disconnect. ! Press and hold M.C. to switch the Bluetooth device address and device name. 3 Press M.C. to connect/disconnect the selected device.

If the connection is established, * is indicated on the device name. DEL DEVICE (deleting a device from the device list) ! When no device is selected in the device list, this function is not available. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the name of a device you want to delete. ! Press and hold M.C. to switch the Bluetooth device address and device name. 3 Press M.C. to display DELETE YES. 4 Press M.C. to delete a device information from the device list. ! While this function is in use, do not turn off the engine. ADD DEVICE (connecting a new device) 1 Press M.C. to start searching. ! To cancel, press M.C. while searching. ! If this unit fails to find any available cellular phones, NOT FOUND is displayed. 2 Turn M.C. to select a device from the device list. ! If the desired device is not displayed, select RE-SEARCH. ! Press and hold M.C. to switch the Bluetooth device address and device name. 3 Press M.C. to connect the selected device. ! To complete the connection, check the device name (Pioneer BT Unit) and enter the PIN code on your device. ! PIN code is set to 0000 as the default. You can change this code. ! 6-digit number appears on the display of this unit. Once the connection is established, this number disappears.

! If you are unable to complete the connection using this unit, use the device to connect to the unit. ! If three devices are already paired, DEVICEFULL is displayed and it is not possible to perform this operation. In this case, delete a paired device first. A. CONN (connecting to a Bluetooth device automatically) 1 Press M.C. to turn automatic connection on or off. VISIBLE (setting the visibility of this unit) To check the availability of this unit from other devices, Bluetooth visibility of this unit can be turned on. 1 Press M.C. to turn the visibility of this unit on or off. PIN CODE (PIN code input) To connect your device to this unit via Bluetooth wireless technology, you need to enter a PIN code on your device to verify the connection. The default code is 0000, but you can change it with this function. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select a number. 3 Press M.C. to move the cursor to the next position. 4 After inputting PIN code, press and hold M.C. ! After inputting, pressing M.C. returns you to the PIN code input display, and you can change the PIN code. DEV. INFO (Bluetooth device address display) 1 Press M.C. to display the setting mode. 2 Turn M.C. to display the device information. Device name—Bluetooth device address PHONE BOOK (phone book) English Phone menu operation Important Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. 1 Press to display the phone menu. ! The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit. ! Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to VISIBLE (setting the visibility of this unit) on this page. 1 Press M.C. to display SEARCH (alphabetical list). 2 Turn M.C. to select the first letter of the name you are looking for. ! Press and hold M.C. to select the desired character type.

TOP (alphabet)—OAA (Greek alphabet)—BCE (Cyrillic alphabet) 3 Press M.C. to display a registered name list. 4 Turn M.C. to select the name you are looking for. 5 Press M.C. to display the phone number list. 6 Turn M.C. to select a phone number you want to call. 7 Press M.C. to make a call. PRESET 1-6 (preset phone numbers) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired preset number. 3 Press M.C. to make a call. ! You can also use the preset number butto recall a preset phone tons 1/ to 6/ number. For more details about storing phone numbers, refer to Storing and recalling phone numbers on the previous page. PHONE FUNC (phone function) You can set A. ANSR, R.TONE and PB INVT from this menu. For details, refer to Function and operation on the next page.

When PW SAVE is on, you cannot display the phone menu. For details about the settings, refer to PW SAVE (power saving) on page 12. 2 Turn M.C. to select the function. Once selected, the following functions can be adjusted. MISSED (missed call history) DIALLED (dialed call history) RECEIVED (received call history) 1 Press M.C. to display the phone number list. 2 Turn M.C. to select a name or phone number. 3 Press M.C. to make a call.

En 9 Section 02 Operating this unit Operating this unit Function and operation 1 Display PHONE FUNC. Refer to PHONE FUNC (phone function) on the previous page. 2 Press M.C. to display the function menu. 3 Turn M.C. to select the function. Once selected, the following functions can be adjusted. A. ANSR (automatic answering) 1 Press M.C. to turn automatic answering on or off. R.TONE (ring tone select) 1 Press M.C. to turn the ring tone on or off. PB INVT (phone book name view) 1 Press M.C. to invert the order of names in the phone book. ! Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively. When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual. ! As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player. ! When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted. ! When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically.

! Playback continues even if you switch from your Bluetooth audio player to another source while listening to a song. ! Depending on the type of Bluetooth audio player you have connected to this unit, operation and information display may not be available for some functions. Basic operations Fast forwarding or reversing 1 Press and hold c or d. Selecting a track 1 Press c or d. Starting playback 1 Press BAND/. Pausing playback 1 Press 4/PAUSE to pause or resume.



[You're reading an excerpt. Click here to read official PIONEER
MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)
<http://yourpdfguides.com/dref/5480298>

Enhancing compressed audio and restoring rich sound (sound retriever) 1 Press 3/S.Rtrv to cycle between: 1—2—OFF (off) 1 is effective for low compression rates, and 2 is effective for high compression rates. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! DEVICE INFO (device name) ! TRACK INFO (track title/artist name/album title) ! ELAPSED TIME (track number and playback time) ! CLOCK (source name and clock) ! SPEANA (spectrum analyzer) Function settings 1 Press M.C. to display the main menu. 2 Turn M.C. to change the menu option and press to select FUNCTION. 3 Turn M.C. to select the function. Once selected, the following functions can be adjusted. PLAY (play) 1 Press M.C.

to start playback. STOP (stop) 1 Press M.C. to stop the playback. S.RTRV (sound retriever) Bluetooth Audio Important ! Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: —A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player. You cannot use the A2DP connection when iPod is selected as a source. —AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc. Setting up for Bluetooth audio Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player. This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit.

1 Connection Operate the Bluetooth telephone connection menu. Refer to Connection menu operation on page 8. Notes ! TRACK INFO text information will change automatically. ! Depending on the device, text information can be changed. Operations using special buttons Selecting a repeat play range 1 Press 6/ to select a repeat play range from one or all.

! This function may not be available depending on the type of Bluetooth audio player connected. ! The repeat play range varies depending on the Bluetooth audio player in use. Playing tracks in random order to turn random play on or off. 1 Press 5/ ! The random play range varies depending on the Bluetooth audio player in use. Automatically enhances compressed audio and restores rich sound.

1 Press M.C. to select the desired setting. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on this page. Audio adjustments 1 Press M.C. to display the main menu. 2 Turn M.C. to change the menu option and press to select AUDIO.

10 En Section Operating this unit Operating this unit 02 3 Turn M.C. to select the audio function. Once selected, the following audio functions can be adjusted. ! FADER is not available when SUB.W/SUB.W is selected in SP-P/O MODE. For details, refer to SP-P/O MODE (rear output and preout setting) on the next page. ! SUB.W, SUB.

W CTRL and HPF SETTING are not available when REAR/REAR is selected in SP-P/O MODE. For details, refer to SP-P/O MODE (rear output and preout setting) on the next page. ! SUB.W CTRL and HPF SETTING are not available when SUB.W is selected in OFF.

For details, refer to SUB.W (subwoofer on/off setting) on this page. FADER (fader adjustment) 1 Press M.C. to display the setting mode.

2 Turn M.C. to adjust the front/rear speaker balance. BALANCE (balance adjustment) 1 Press M.C. to display the setting mode. 2 Turn M.C. to adjust the left/right speaker balance. EQ SETTING (equalizer recall) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the equalizer. POWERFUL—NATURAL—VOCAL—CUSTOM1—CUSTOM2—FLAT—SUPER BASS The equalizer band and equalizer level can be customized when CUSTOM1 or CUSTOM2 is selected. If selecting CUSTOM1 or CUSTOM2, complete the procedures outlined below. If selecting other options, press M.C. to return to the previous display.

! CUSTOM1 can be set separately for each source. However, USB and iPod are all set to the same setting automatically. ! CUSTOM2 is a shared setting used in common for all sources. 3 Press M.C.

to display the setting mode. 4 Press M.C. to cycle between the following: Equalizer band—Equalizer level 5 Turn M.C.

to select the desired setting. Equalizer band: 80HZ—250HZ—800HZ— 2.5KHZ—8KHZ Equalizer level: +6 to -6 LOUDNESS (loudness) Loudness compensates for deficiencies in the low-frequency and high-frequency ranges at low volume. 1 Press M.C. to select the desired setting. OFF (off)—LOW (low)—MID (mid)—HI (high) SUB.W (subwoofer on/off setting) This unit is equipped with a subwoofer output which can be turned on or off. 1 Press M.C.

to select the desired setting. NOR (normal phase)—REV (reverse phase)— OFF (subwoofer off) SUB.W CTRL (subwoofer adjustment) Only frequencies lower than those in the selected range are outputted from the subwoofer. 1 Press M.C. to display the setting mode. 2 Press M.C. to cycle between the following: Cut-off frequency—Output level—Slope level Rates that can be adjusted will flash. 3 Turn M.

C. to select the desired setting. Cut-off frequency: 50HZ—63HZ—80HZ— 100HZ—125HZ—160HZ—200HZ Output level: -24 to +6 Slope level: -6—-12 BASS BOOST (bass boost) 1 Press M.C. to display the setting mode.

2 Turn M.C. to select a desired level. 0 to +6 is displayed as the level is increased or decreased. HPF SETTING (high pass filter adjustment) When you do not want low sounds from the subwoofer output frequency range to play from the front or rear speakers, turn on the HPF (high pass filter).

Only frequencies higher than those in the selected range are output from the front or rear speakers. 1 Press M.C. to display the setting mode. 2 Press M.C. to cycle between the following: Cut-off frequency—Slope level 3 Turn M.C. to select the desired setting. Cut-off frequency: OFF—50HZ—63HZ—80HZ —100HZ—125HZ—160HZ—200HZ Slope level: -6— -12 SLA (source level adjustment) English SLA (Source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

! Settings are based on the FM volume level, which remains unchanged. ! The MW/LW volume level can also be adjusted with this function. ! When selecting FM as the source, you cannot switch to SLA. ! USB and iPod are all set to the same setting automatically. 1 Press M.C. to display the setting mode. 2 Turn M.C. to adjust the source volume.

Adjustment range: +4 to -4 System menu Important PW SAVE (power saving) is canceled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When PW SAVE (power saving) is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition doesn't have an ACC (accessory) position. 1 Press M.C. to display the main menu.

2 Turn M.C. to change the menu option and press to select SYSTEM.



[You're reading an excerpt. Click here to read official PIONEER MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)
<http://yourpdfguides.com/dref/5480298>

3 Turn M.C.

to select the system menu function. Once selected, the following system menu functions can be adjusted. ! MUTE MODE is not available for MVH-350BT. ! BT AUDIO, BT MEM CLEAR and BT VERSION are not available for MVH-150UI. En 11 Section 02 Operating this unit LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English or Russian. ! If the embedded language and the selected language setting are not the same, text information may not display properly. ! Some characters may not be displayed properly. 1 Turn M.C. to select the desired setting.

ENG (English)—PYC (Russian) CLOCK SET (setting the clock) 1 Press M.C. to display the setting mode. 2 Press M.C. to select the segment of the clock display you wish to set. Hour—Minute 3 Turn M.C. to adjust the clock. 12H/24H (time notation) 1 Press M.C. to select the desired setting. 12H (12-hour clock)—24H (24-hour clock) AUTO PI (auto PI seek) The unit can automatically search for a different station with the same programming, even during preset recall. 1 Press M.C.

to turn Auto PI seek on or off. AUX (auxiliary input) Activate this setting when using an auxiliary device connected to this unit. 1 Press M.C. to turn AUX on or off.

MUTE MODE (mute mode) Sound from this system is automatically muted or attenuated when a signal from equipment with a mute function is received. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. You can select any one of the options in the following list: ! MUTE – Muting ! 20dB ATT – Attenuation (20dB ATT has a stronger effect than 10dB ATT) ! 10dB ATT – Attenuation BT AUDIO (Bluetooth audio activation) You need to activate the BT AUDIO source in order to use a Bluetooth audio player. 1 Press M.C.

to turn the BT AUDIO source on or off. PW SAVE (power saving) Switching this function on enables you to reduce the consumption of battery power. ! Turning on the source is the only operation allowed when this function is on. 1 Press M.C. to turn the power save on or off. BT MEM CLEAR (clearing the Bluetooth device data stored on this unit) Bluetooth device data stored on this unit can be cleared. To protect personal information, we recommend that you clear this data before transferring this unit to other persons. The following types of data on this unit will be cleared in such cases. ! Phone book ! Call history ! Preset number ! PIN code ! Registration assignment ! Information of the connected Bluetooth telephone 1 Press M.

C. to show the confirmation display. YES is displayed. Clearing memory is now on standby. If you do not want to clear the Bluetooth device data stored on this unit, turn M.

C. to display CANCEL and press it again to select. 2 Press M.C. to clear the memory.

CLEARED is displayed and the Bluetooth device data is cleared. ! While this function is in use, do not turn off the engine. BT VERSION (Bluetooth version display) You can display the system versions of this unit and of Bluetooth module. 1 Press M.C. to display the information. Initial menu 1 Press and hold SRC/OFF until the unit turns off. 2 Press and hold SRC/OFF until the main menu appears in the display. 3 Turn M.C.

to change the menu option and press to select INITIAL. 4 Turn M.C. to select the initial menu function. Once selected, the following initial menu functions can be adjusted. ! S/W UPDATE is not available for MVH-150UI. FM STEP (FM tuning step) Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on. ! The tuning step remains at 50 kHz during manual tuning.

1 Press M.C. to select the FM tuning step. 50 (50 kHz)—100 (100 kHz) SP-P/O MODE (rear output and preout setting) Switching the dimmer setting You can adjust the brightness of illumination. 1 Press M.

C. to display the main menu. 2 Turn M.C. to display ILLUMI and press to select.

3 Press M.C. to select the desired setting. OFF (off)—ON (on) ! You can also change the dimmer setting by /DIMMER. pressing and holding 12 En Section Operating this unit Installation 02 03 ACC position No ACC position 2 Press SRC/OFF to select AUX as the source. Note AUX cannot be selected unless the auxiliary setting is turned on. For more details, refer to AUX (auxiliary input) on the previous page. ! Use of this unit in conditions other than the following could result in fire or malfunction. — Vehicles with a 12-volt battery and negative grounding. — Speakers with 50 W (output value) and 4 W to 8 W (impedance value).

Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! Source name ! Source name and clock ! To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below. — Disconnect the negative terminal of the battery before installation. — Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring. — Place all cables away from moving parts, such as the shift lever and seat rails. — Place all cables away from hot places, such as near the heater outlet. — Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment. — Cover any disconnected cable connectors with insulating tape. — Do not shorten any cables. — Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited. — Use a fuse of the rating prescribed. S/W UPDATE (updating the software) This function is used to update this unit with the latest Bluetooth software. For about Bluetooth software and updating, refer to our website. ! Never turn the unit off while the Bluetooth software is being updated.

1 Press M.C. to display the data transfer mode. Follow the on-screen instructions to finish updating the Bluetooth software. If an unwanted display appears Turn off the unwanted display using the procedures listed below.

1 Press M.C. to display the main menu. System menu 1 Press and hold SRC/OFF until the unit turns off. 2 Press and hold SRC/OFF until the main menu appears in the display. 2 Turn M.C. to change the menu option and press to select SYSTEM. 3 Turn M.C.

to display DEMO OFF and press to select. 4 5 Turn M.C. to switch to YES. Press M.C. to select. T The rear speaker leads output and the RCA output of this unit can be used to connect a full-range speaker or subwoofer. Select a suitable option for your connection. 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting.

You can select any one of the options in the following list: ! REAR/SUB.W – Select when there is a fullrange speaker connected to the rear speaker leads output and there is a subwoofer connected to the RCA output. ! SUB.W/SUB.W – Select when there is a subwoofer connected directly to the rear speaker leads output without any auxiliary amp and there is a subwoofer connected to the RCA output.

[You're reading an excerpt. Click here to read official PIONEER MVH-350BT user guide](#)



<http://yourpdfguides.com/dref/5480298>

! REAR/REAR – Select when there is a fullrange speaker connected to the rear speaker leads output and the RCA output. If there is a full-range speaker connected to the rear speaker leads output and the RCA output is not used, you may select either REAR/SUB.W or REAR/REAR. 3 Turn M.C. to change the menu option and press to select SYSTEM. 4 Turn M.C. to select the system menu function. Once selected, the following system menu functions can be adjusted.

For details, refer to System menu on page 11. Connections Important ! When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain. F — Never wire the negative speaker cable directly to ground. — Never band together negative cables of multiple speakers. English OF Using an AUX source 1 Insert the stereo mini plug into the AUX input jack. O N ! When this unit is on, control signals are sent through the blue/white cable. Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal. ! Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. ! The black cable is ground. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately. If they are not, an accidental detachment may result in a fire or malfunction.

STAR This unit 3 1 2 45 6 7 8 1 Power cord input 2 Microphone input (MVH-350BT only) 3 Microphone (MVH-350BT only) 4m 4 Rear output or subwoofer output 5 Front output 6 Antenna input 7 Fuse (10 A) 8 Wired remote input En 13 Section 03 Installation Installation Hard-wired remote control adapter can be connected (sold separately). Power cord 3 4 2 5 6 1 3 7 5 8 4 6 a 9 e b c d 1 To power cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different. In this case, be sure to connect 4 to 5 and 6 to 3. 3 Yellow Back-up (or accessory) 4 Yellow Connect to the constant 12 V supply terminal. 5 Red Accessory (or back-up) 6 Red Connect to terminal controlled by ignition switch (12 V DC).

7 Connect leads of the same color to each other. 8 Black (chassis ground) 9 Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. Connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b. a Blue/white Connect to system control terminal of the power amp (max. 300 mA 12 V DC). b Blue/white Connect to auto-antenna relay control terminal (max. 300 mA 12 V DC). c Yellow/black (MVH-150UI only) If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

*d Speaker leads White: Front left + White/black: Front left * Gray: Front right + Gray/black: Front right * Green: Rear left + or subwoofer + Green/black: Rear left * or subwoofer * Violet: Rear right + or subwoofer + Violet/black: Rear right * or subwoofer * e ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. Notes ! Change the initial menu of this unit. Refer to SP-P/O MODE (rear output and preout setting) on page 12. The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/ black leads. Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 1 7 □ □ □ □ ! Optimum performance is obtained when the unit is installed at an angle of less than 60°. 60° 3 2 □ □ 4 5 3 6 7 2 □ □ ! When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.*

1 System remote control Connect to Blue/white cable. 2 Power amp (sold separately) 3 Connect with RCA cables (sold separately) 4 To Front output 5 Front speaker 6 To Rear output or subwoofer output 7 Rear speaker or subwoofer Leave ample 5 cm space 5 cm 5cm cm Installation ! ! ! Important Check all connections and systems before final installation. Do not use unauthorized parts as this may cause malfunctions. Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: — it may interfere with operation of the vehicle.

— it may cause injury to a passenger as a result of a sudden stop. DIN front/rear mount This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing. DIN Front-mount 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve.

If there is enough space, use the mounting sleeve that came with the vehicle. ! The semiconductor laser will be damaged if it overheats. Install this unit away from hot places such as near the heater outlet. 14 En Section Installation Installation 03 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. 1 Removing the unit 1 Remove the trim ring. Installing the microphone Only for MVH-350BT 1 English CAUTION It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the unit in such a way that it will not obstruct driving. 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. ! When reattaching the trim ring, point the side with the notched tab down. 2 2 1 Dashboard 2 Mounting sleeve # Make sure that the unit is installed securely in place.

An unstable installation may cause skipping or other malfunctions. Note Install the microphone in a position and orientation that will enable it to pick up the voice of the person operating the system. DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. 2 Insert the supplied extraction keys into both sides of the unit until they click into place. 3 Pull the unit out of the dashboard. When installing the microphone on the sun visor 1 Install the microphone on the microphone clip. 1 2 1 Microphone clip 2 Clamp Use separately sold clamps to secure the lead where necessary inside the vehicle. When installing the microphone on the steering column 1 Install the microphone on the microphone clip. 1 2 3 2 Tighten two screws on each side. 1 3 Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480298)

[MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)

<http://yourpdfguides.com/dref/5480298>

Press the detach button and push the front panel upward and pull it toward you. For details, refer to Removing the front panel to protect your unit from theft and Re-attaching the front panel on page 4. 1 Microphone 2 Microphone clip 4 1 Microphone 2 Microphone base 3 Microphone clip 4 Fit the microphone lead into the groove. # Microphone can be installed without using microphone clip. In this case, detach the microphone base from the microphone clip. To detach the microphone base from the microphone clip, slide the microphone base. 2 1 Tapping screw (5 mm × 8 mm) 2 Mounting bracket 3 Dashboard or console 2 Install the microphone clip on the sun visor. With the sun visor up, install the microphone clip. (Lowering the sun visor reduces the voice recognition rate.) En 15 Section 03 Installation Additional information 2 Install the microphone clip on the steering column.

1 Troubleshooting Symptom The display automatically returns to the ordinary display. The repeat play range changes unexpectedly. Cause You did not perform any operation within about 30 seconds. Action Perform operation again. Symptom The sound from the Bluetooth audio source is not played back. Cause There is a call in progress on a Bluetooth connected cellular phone. A Bluetooth connected cellular phone is currently being operated. A call was made with a Bluetooth connected cellular phone and then immediately terminated. As a result, communication between this unit and the cellular phone was not terminated properly. Action The sound will be played back when the call is terminated.

Do not operate the cellular phone at this time. 2 3 Depending on Select the repeat the repeat play play range again. range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. Select another repeat play range. Reconnect the Bluetooth connection between this unit and the cellular phone. 1 Double-sided tape 2 Install the microphone clip on the rear side of the steering column. 3 Clamp Use separately sold clamps to secure the lead where necessary inside the vehicle. A subfolder is Subfolders cannot played not be played back. when FLD (folder repeat) is selected. NO XXXX ap- There is no empears when a bedded text information.

display is changed (NO TITLE, for example). The unit is malfunctioning. There is interference. You are using a device, such as a cellular phone, that transmits electric waves near the unit. Switch the display or play another track/file.

Error messages When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message. Adjusting the microphone angle Move electrical devices that may be causing the interference away from the unit. The microphone angle can be adjusted. 16 En Appendix Additional information Additional information Common Message AMP ERROR Cause Unit fails to operate or speaker connection is incorrect; protective circuit is activated. Action Check the speaker connection.

If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance. Message PROTECT Cause All the files in the USB storage device are embedded with Windows Media DRM 9/10. The USB device connected to is not supported by this unit. Action Transfer audio files not embedded with Windows Media DRM 9/10 to the USB storage device and connect. ! Connect a USB Mass Storage Class compliant device. ! Disconnect your device and replace it with a compatible USB storage device. Check that the USB connector or USB cable is not caught in something or damaged. Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. Message CHECK USB Cause The iPod operates correctly but does not charge.

Action Make sure the connection cable for the iPod has not shorted out (e.g., not caught in metal objects). After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect. Message ERROR-16 Cause The iPod firmware version is old. iPod failure. Action English Update the iPod version. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. Select a list that contains songs.

Transfer songs to the iPod. N/A USB ERROR-19 USB storage device/iPod Message FORMAT READ Cause Sometimes there is a delay between the start of playback and when you start to hear any sound. There are no songs. Action Wait until the message disappears and you hear sound. CHECK USB The USB connector or USB cable has shortcircuited.

CHECK USB Transfer the audio files to the USB storage device and connect. Follow the USB storage device instructions to disable the security. Play an audio file not embedded with Windows Media DRM 9/10. NO AUDIO The connected USB storage device has security enabled. SKIPPED The connected USB storage device contains files embedded with Windows Mediaä DRM 9/ 10.

The connected USB storage device consumes more than maximum allowable current. Communication Perform one of failed. the following operations. –Turn the ignition switch OFF and back ON. –Disconnect the USB storage device. –Change to a different source. Then, return to the USB source. iPod failure. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

USB storage device should be formatted with FAT12, FAT16 or FAT32. STOP There are no songs in the current list. No related songs. NOT FOUND Bluetooth device Message ERROR-10 Cause The power failed for the Bluetooth module of this unit. Action Turn the ignition switch OFF and then to ACC or ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station. ERROR-23 USB storage device was not formatted with FAT12, FAT16 or FAT32. En 17 Appendix Additional information Additional information Handling guidelines USB storage device Address any questions you have about your USB storage device to the manufacturer of the device. Connections via USB hub are not supported. Do not connect anything other than a USB storage device.

Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. ! Operations may vary. ! The storage device may not be recognized.

! Files may not be played back properly. ! The device may generate noise in the radio. About iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting. ! You cannot set Repeat to off on the iPod when using this unit.

Repeat is automatically changed to All when the iPod is connected to this unit. Incompatible text saved on the iPod will not be displayed by the unit.



[You're reading an excerpt. Click here to read official PIONEER MVH-350BT user guide](http://yourpdfguides.com/dref/5480298)
<http://yourpdfguides.com/dref/5480298>

M3u playlist: Not compatible MP3i (MP3 interactive), mp3 PRO: Not compatible Playback of copyright-protected files: Not compatible Partitioned USB storage device: Only the first partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. WAV File extension: .wav Quantization bits: 8 and 16 (LPCM), 4 (MS ADPCM) Sampling frequency: 16 kHz to 48 kHz (LPCM), 22.05 kHz and 44.1 kHz (MS ADPCM) CAUTION! Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, smart phones, or other devices while using this product. ! Do not leave a USB storage device in any place that is subject to high temperatures. Compressed audio compatibility (USB) WMA File extension: .

wma Bit rate: 48 kbps to 320 kbps (CBR), 48 kbps to 384 kbps (VBR) Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz Windows Media Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible Supplemental information Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. Russian text to be displayed on this unit should be encoded in one of the following character sets: ! Unicode (UTF-8, UTF-16) ! A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting This unit may not operate correctly depending on the application used to encode WMA files. There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. iPod compatibility This unit supports only the following iPod models. Supported iPod software versions are shown below. Older versions may not be supported. Made for ! iPod touch 4th generation (software version 5.1.1) ! iPod touch 3rd generation (software version 5.

1.1) ! iPod touch 2nd generation (software version 4.2.1) ! iPod touch 1st generation (software version 3.1.

3) ! iPod classic 160GB (software version 2.0.4) ! iPod classic 120GB (software version 2.0.1) ! iPod classic (software version 1.

1.2) ! iPod with video (software version 1.3.0) ! iPod nano 6th generation (software version 1.2) ! iPod nano 5th generation (software version 1.0.2) ! iPod nano 4th generation (software version 1.0.4) iPod Do not leave the iPod in places with high temperatures. To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.

Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. MP3 File extension: .mp3 Bit rate: 8 kbps to 320 kbps (CBR), VBR Sampling frequency: 8 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis) Compatible ID3 tag version: 1.0, 1.1, 2.2, 2.3, 2.4 (ID3 tag Version 2.

x is given priority over Version 1.x.) USB storage device Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 500 Playable files: up to 15 000 18 En Appendix Additional information Additional information ! iPod nano 3rd generation (software version 1.1.

3) ! iPod nano 2nd generation (software version 1.1.3) ! iPod nano 1st generation (software version 1.3.1) ! iPhone 4S (software version 5.

1.1) ! iPhone 4 (software version 5.1.1) ! iPhone 3GS (software version 5.1.1) ! iPhone 3G (software version 4.2.1) ! iPhone (software version 3.1.2)

Depending on the generation or version of the iPod, some functions may not be available.

Operations may vary depending on the software version of iPod. When using an iPod, an iPod Dock Connector to USB Cable is required. A Pioneer CD-IU51 interface cable is also available. For details, consult your dealer. About the file/format compatibility, refer to the iPod manuals. Audiobook, Podcast: Compatible Example of a hierarchy 01 02 D: C :X D: C :Ц :б D: C :Ч :Э D: C : III, III :Ю D: C :Б :Я MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit [http://www.](http://www.mp3licensing.com)

mp3licensing.com. English 03 04 05 Level 1 Level 2 Level 3 Level 4 : Folder : Compressed audio file 01 to 05: Folder number 1 to 6: Playback sequence :BI D: Display C: Character Bluetooth profiles In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with the following profiles. ! GAP (Generic Access Profile) ! OPP (Object Push Profile) ! HFP (Hands Free Profile) 1.

5 ! HSP (Head Set Profile) ! PBAP (Phone Book Access Profile) ! A2DP (Advanced Audio Distribution Profile) ! AVRCP (Audio/Video Remote Control Profile) 1.3 USB storage device Playback sequence is the same as recorded sequence in the USB storage device. To specify the playback sequence, the following method is recommended. 1 Create a file name that includes numbers that specify the playback sequence (e.g.

, 00Ixxx.mp3 and 099yyy.mp3). 2 Put those files into a folder. 3 Save the folder containing files on the USB storage device. However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player.

WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. iPod & iPhone Copyright and trademark Bluetooth The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

CAUTION Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. Russian character chart D: C D: C :Б :Ж :М :C D: C :Б :З :H :T D: C :Г :И, Ы :O :Y D: C :Д :K :П :Ф :A : E, Ё :Л :P Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. iTunes Apple and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.

S. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.



[You're reading an excerpt. Click here to read official PIONEER](#)

[MVH-350BT user guide](#)

<http://yourpdfguides.com/dref/5480298>