



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MVH-8300BT. You'll find the answers to all your questions on the PIONEER MVH-8300BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER MVH-8300BT
User guide PIONEER MVH-8300BT
Operating instructions PIONEER MVH-8300BT
Instructions for use PIONEER MVH-8300BT
Instruction manual PIONEER MVH-8300BT

Pioneer

Operation Manual

RDS MEDIA CENTER RECEIVER

MVH-8300BT
MVH-7300

 **Bluetooth®**



English



[You're reading an excerpt. Click here to read official PIONEER MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

Manual abstract:

4 Do not allow other persons to use this system until they have read and understood the operating instructions. 5 Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle. 6 Do not operate this display if doing so in any way will divert your attention from the safe operation of your vehicle. @@@@8 Never use headphones while driving. 9 To promote safety, certain functions are disabled unless the parking brake is on, and the vehicle is not in motion. 10 Never set the volume of your display so high that you cannot hear outside traffic and emergency vehicles. **WARNING** Do not attempt to install or service your display by yourself. Installation or servicing of the display by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards. To ensure safe driving **WARNING ! LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**

! To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with video that is visible to the driver. ! To avoid the risk of accident and the potential violation of applicable laws, no viewing of front seat video should ever occur while the vehicle is being driven. ! In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed. When you attempt to watch a video image while driving, the warning Viewing of front seat video source while driving is strictly prohibited.

will appear on the front display. To watch a video image on the front display, park your vehicle in a safe place and apply the parking brake. 4 En Section Precautions To avoid battery exhaustion Keep the vehicle engine running when using this unit to avoid draining the battery power. ! When no power is supplied to this unit, such as when the vehicle battery is being replaced, the microcomputer of this unit returns to its initial condition. We recommend that you transcribe the audio adjustment data.

01 Precautions **WARNING** Do not use with vehicles that do not feature an ACC position. En 5 Section 02 Before you start ! If the battery is disconnected or discharged, any preset memory will be erased. Note Function setting operations are completed even if the menu is cancelled before the operations are confirmed. If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Operating environment This unit should be used within the temperature ranges shown below. Operating temperature range: 10 °C to +60 °C EN300328 ETC test temperature: 20 °C and +55 °C Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. In case of trouble Should this product fail to operate properly, please contact your dealer or nearest authorized Pioneer Service Station.

Resetting the microprocessor The microprocessor must be reset in the following situations: ! Before using this unit for the first time after installation ! If the unit fails to operate properly ! When strange or incorrect messages appear on the display About this unit The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function only operates in areas with broadcasting RDS signals for FM stations. **CAUTION !** Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. ! Avoid exposure to moisture. **RESET** button 1 Remove the front panel.

2 Press **RESET** with a pen tip or other pointed instrument. 6 En Section Before you start Demo mode Important Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. 02 Before you start The demo automatically starts when the ignition switch is set to ACC or ON while the unit is turned off. Turning off the unit does not cancel demo mode. To cancel the demo mode, operate the function in the initial setting menu.

Operating the demo while the ignition switch is set to ACC may drain battery power. Refer to Demonstration (demo display setting) on page 32. About this manual ! This manual describes operations of both MVH-8300BT and MVH-7300. Only MVH8300BT features Bluetooth functions, so the explanations for those functions do not apply to MVH-7300. ! In the following instructions, USB memories, USB portable audio players, and SD memory cards are collectively referred to as "external storage devices (USB, SD)".

If only USB memories and USB portable audio players are indicated, they are collectively referred to as "USB storage devices". ! In this manual, iPod and iPhone will be referred to as "iPod". En 7 Section 03 Operating this unit Head unit Optional remote control The remote control CD-R320 is sold separately. 8 9 Part Part AUX input jack (3.5 mm stereo/ video jack) Microphone input jack for auto EQ measurement (back/display off) Detach button SD memory card slot Remove the front panel to access the SD memory card slot. a Part +/ (VOLUME) MUTE Operation Press to increase or decrease volume. Press to mute. Press again to unmute. Press to perform manual seek tuning, fast forward, reverse and track search controls. Press to display an audio function.

Press to select different displays for the audio source. Press to select the basic screen or image screen for the video source. ! If the background setting on the entertainment menu is turned off, you can switch between the basic screen and image screen. Press to pause or resume playback.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3630297)

[MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)

<http://yourpdfguides.com/dref/3630297>

Press to display functions. 1 HOME 5 b a/b/c/d 2 3 SRC/OFF MULTI-CONTROL (M.C.) 6 7 c AUDIO d DISP/SCRL 4 USB port 8 CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. Do not use unauthorized products. e f e FUNCTION 8 En Section Operating this unit Part LIST/ ENTER Operation Press to display the list depending on the source.

While in the operating menu, press to control functions. Press to select among three FM bands and MW/LW bands. When playing external storage devices containing a mixture of various media file types, press to switch between media file types to play. Music (compressed audio)-- Video (DivX video files)--Photo (JPEG picture files) Press to return to the ordinary display from the list/function menu. Press to cancel the initial setting menu.

Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Grab the front panel and remove. 3 Always keep the detached front panel in a protection device such as a protection case. Re-attaching the front panel 1 Slide the front panel up until it clicks. The front panel and the head unit are connected on the upper side.

Make sure that the front panel has been properly connected to the head unit. 03 g Operating this unit h BAND/ESCAPE Note You cannot operate function settings, audio adjustments, list menus, etc. by pressing a/b/c/d of the remote control. Use multi-control of the head unit instead. 2 Press the lower side of the front panel until it is firmly seated. If you can't attach the front panel to the head unit successfully, try again. Forcing the front panel into place may result in damage. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Selecting a source 1 Press SRC/OFF to cycle between: Radio (tuner)--USB (USB storage device)/iPod (iPod connect for each function.

1 Display the system menu. Refer to Basic menu operations on page 9. 2 Use M.C. to select the Guide Info. Turn to change the menu option. Press to select. Guide information is displayed. Operation Turn M.C.

Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. 1 Connection Operate the Bluetooth telephone connection menu. Refer to Connection menu operation on page 25. 2 Function settings Operate the Bluetooth telephone function menu. Refer to Phone menu operation on page 26.

Push M.C. up or down. Push M.C.

left or right. Basic operations Press M.C. Making a phone call 1 Refer to Phone menu operation on page 26. Press and hold M.C. Answering an incoming call 1 When a call is received, press M.C. ! You can also perform this operation by pushing M.C.

up. Ending a call 1 Press M.C. Rejecting an incoming call 1 When a call is received, push M.C. down. Push and hold M.C. up. Answering a call waiting 1 When a call is received, press M.

C. ! You can also perform this operation by pushing M.C. up. Push M.

C. up. Push M.C. down.

Press M.C. to display the next page. En 11 Section 03 Operating this unit Switching between callers on hold 1 Push M.C. up. Canceling call waiting 1 Push M.C. down. Adjusting the other party's listening volume 1 Push M.

C. left or right while talking on the phone. Turning private mode on or off 1 Push and hold M.C. up while talking on the phone. Radio Basic operations 1 Local T Text A-EQ 16:54 Radio Text Text FM1 P.CH 1 40. 00 MHz Notes ! If private mode is selected on the cellular phone, hands-free phoning may not be available. ! The estimated call time appears in the display (this may differ slightly from the actual call time). 3 2 1 Indicator display area Refer to Indicator list on page 41.

2 Text information area ! PTY name ! Program service name ! Band/Preset number/Frequency indicator 3 Source image display Manual tuning (step by step) 1 Push M.C. left or right. Seeking 1 Push and hold M.C.

left or right, and then release. You can cancel seek tuning by pushing M.C. left or right. While pushing and holding M.

C. left or right, you can skip stations. Seek tuning starts as soon as you release M.C. Note This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to the next page). 12 En Section Operating this unit Using PI Seek If the tuner cannot find a suitable station, or the reception status deteriorates, the unit automatically searches for a different station with the same programming. During the search, PI SEEK is displayed and the sound is muted. BSM (best stations memory) BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. 1 Press M.

C. to turn BSM on. To cancel, press M.C. again. Regional (regional) When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. 1 Press M.C. to turn the regional function on or off. Local (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sical) Others Educate (Education), Drama (Drama), Culture (Culture), Science (Science), Varied (Varied), Children (Children's), Social (Social affairs), Religion (Religion), Phone In (Phone in), Touring (Travel), Leisure (Leisure), Document (Documentaries) Note If MW/LW band is selected, only BSM or Local is available.

Storing and recalling radio text You can store data from up to six radio text. 1 Display the radio text you want to store in the memory. Refer to Radio Text (displaying radio text) on this page. 2 Press M.C.

The preset screen is displayed. 3 Use M.C. to store the selected radio text in the memory. Turn to change the preset number.

Press and hold to store. 14 En Section Operating this unit Playing moving images Basic operations If an iPod with video capabilities is connected to this unit using an interface cable such as the CD-IU50V (sold separately), you can enjoy the video contents of the iPod as an iPod source. You need not change the AUX setting. Playing files on a USB storage device 1 Open the USB port cover. 2 Plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Playing files on an SD memory card 1 Remove the front panel. 2 Insert an SD memory card into the SD card slot. Insert it with the contact surface facing down, and press on the card until it clicks and completely locks into place. 3 Re-attach the front panel.

Stopping playback of files on an SD memory card 1 Remove the front panel. 2 Press on the SD memory card until it clicks. The SD memory card is ejected. 3 Pull out the SD memory card. 4 Re-attach the front panel. Playing videos on an iPod 1 Open the USB port cover. 2 With an interface cable (e.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3630297)

[MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)

<http://yourpdfguides.com/dref/3630297>

g., CD-IU50V), connect the iPod to a USB cable and AUX input using the iPod Dock Connector. Selecting a folder 1 Push M.

C. up or down. Selecting a file (chapter) 1 Push M.C. left or right.

Fast forwarding or reversing 1 Push and hold M.C. left or right. 03 Operating this unit 1 2345 7890 2 A-EQ 3 16:54 You can switch to the basic screen or the image screen. Refer to Display (display setting) on page 17.

1 File information area for the currently playing file External storage device (USB, SD) ! Folder/file number indicator iPod ! Song number indicator 2 Indicator display area Refer to Indicator list on page 41. 3 Text information area External storage device (USB, SD) ! Folder name ! File name iPod ! Song title ! Artist name ! Album title 4 Play time indicator 5 Scrubber bar 6 Remaining time indicator Video 8888'88" Text Text -8888'88" 4 5 6 Notes ! Disconnect USB storage devices from the unit when not in use. ! Incompatible text stored with the video image file may not be displayed or may be displayed incorrectly. ! Incompatible text saved on the iPod will not be displayed by the unit. ! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod cannot be turned on or off unless the control mode is set to App. ! The iPod will turn off about two minutes after the ignition switch is set to OFF. En 15 Section 03 Operating this unit ! When playing external storage devices that contain a mixture of various media file types, switch between media file types when playing different files. Refer to A/V Format (switching media file types) on the next page. Searching the list by alphabet 1 When a list for the selected category is displayed, push and hold M.

C. left or right to switch to alphabet search mode. 2 Turn M.C. to select a letter. 3 Press M.C. to display the alphabetical list. Changing the name of the video (skip 100 items at once) 1 Push M.C.

up or down. Changing the name of the video (automatically skip 100 items each time) 1 Push and hold M.C. up or down. Selecting and playing files from the name list 1 Display the list menu.

Refer to Basic menu operations on page 9. 2 Use M.C. to select the desired file name (or folder name). Changing the file or folder name 1 Turn M.

C. Playing 1 When a file is selected, press M.C. Viewing a list of the files (or folders) in the selected folder 1 When a folder is selected, press M.C. Changing the file or folder name (skip 100 items at once) 1 Push M.C. up or down. Changing the file or folder name (automatically skip 100 items each time) 1 Push and hold M.C.

up or down. Playing DivXâ VOD content Some DivX VOD (video on demand) content may only be playable a fixed number of times. When you attempt to play back this type of content saved on an external storage device, the remaining number of times it can be played is shown on-screen. You can then decide whether or not to play back the contents of the external storage device. ! If there is no limit to the number of times the DivX VOD content can be viewed, then you may insert the external storage device into your player and play the content as often as you like, and no message will be displayed. ! You can confirm the number of times that the content can be played by checking the number displayed after Remaining Views:. Important ! In order to play DivX VOD contents on this unit, you first need to register the unit with your DivX VOD contents provider. For details on your registration code, refer to Displaying the DivXâ VOD registration code on page 36. ! DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices.

Browsing for a video on the iPod 1 Display the list menu. Refer to Basic menu operations on page 9. 2 Use M.C. to select a category/video.

Changing the name of the video or category 1 Turn M.C. Playing 1 When a video is selected, press M.C. Viewing a list of the files (or folders) in the selected folder 1 When a category is selected, press M.

C. 16 En Section Operating this unit % If a message is displayed after inserting the external storage device containing DivX VOD content, use M.C. to select a desired mode. Turn to change the mode. Press to select. ! Play Playback of the DivX VOD content ! Next Play Skip to the next file ! Stop If you do not want to play the DivX VOD content 03 1 Press M.C. to display the setting mode. 2 Turn M.

C. to select the desired setting. Full (full)--Just (just)--Cinema (cinema)--Zoom (zoom)--Normal (normal) For details about the settings, refer to Changing the wide screen mode on page 36. 3 Press M.C. to confirm the selection. Display (display setting) You can switch to the basic screen or the image screen. 1 Press M.C. to display the setting mode.

2 Press M.C. to select the desired setting. A/V Format (switching media file types) 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select the desired setting. Music (compressed audio)--Video (DivX video files)--Photo (JPEG picture files) 3 Press M.

C. to confirm the selection. DivX® Subtitle (DivX subtitle file settings) Operating this unit Function settings 1 Press M.C. to display the function menu. 2 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. External storage device (USB, SD) Play/Pause (play/pause) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting. Play--Pause 3 Press M.C. to confirm the selection. Play Mode (repeat play) 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select a repeat play range. ! All Repeat all files ! File Repeat the current file ! Folder Repeat the current folder 3 Press M.

C. to confirm the selection. Stop (stopping playback) 1 Press M.C. to stop playback.

Time Search (time search) 1 Press M.C. to display the setting mode. 2 Turn M.C. to find the part you want to play. 3 Press M.C. to confirm the selection. Wide Mode (switching the wide mode) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting. Original (DivX subtitles) -- Custom (DivX external subtitles) For details about the settings, refer to Setting the DivX subtitle file on page 36. 3 Press M.C. to confirm the selection. TV Aspect (aspect ratio settings) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting.

16 : 9 -- Letter Box -- Pan Scan For details about the settings, refer to Setting the aspect ratio on page 36. 3 Press M.C. to confirm the selection. DivX® VOD (DivXâ VOD registration code) 1 Press M.

C. to display the setting mode. 2 Use M.C. to display the desired code. Turn to change the menu option. Press to select. Registration Refer to Displaying the DivXâ VOD registration code on page 36. Deregistration Refer to Displaying the deregistration code on page 37. Audio Lang.

(audio language settings) En 17 Section 03 Operating this unit You can switch the audio language during playback when playing a file recorded with dialog in two or more languages.



[You're reading an excerpt. Click here to read official PIONEER
MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. 3 Press M.C. to confirm the selection.

Subtitle Lang. (subtitle language settings) You can switch subtitle language during playback when playing file recorded with subtitles in one or more languages. 1 Press M.C. to display the setting mode.

2 Turn M.C. to select the desired setting. 3 Press M.C.

to confirm the selection. 1 Press M.C. to display the setting mode. 2 Turn M.C. to find the part you want to play. 3 Press M.C. to confirm the selection.

Wide Mode (switching the wide mode) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. Full (full)--Just (just)--Cinema (cinema)--Zoom (zoom)--Normal (normal) For details about the settings, refer to Changing the wide screen mode on page 36. 3 Press M.C. to confirm the selection.

Display (display setting) You can switch to the basic screen or the image screen. 1 Press M.C. to display the setting mode. 2 Press M.C. to select the desired setting. ABC Search (alphabet search mode setting) When this setting is on, you can switch to alphabet search mode by turning M.C. twice while using the browse function of the iPod.

Refer to Searching the list by alphabet on page 16. 1 Press M.C. to turn the setting for when M.C. is turned twice on or off. Sound Retriever (sound retriever) Automatically enhances compressed audio and restores rich sound. 1 Press M.C. to display the setting mode.

2 Turn M.C. to select the desired setting. Off (off)--1--2 1 is effective for low compression rates, and 2 is effective for high compression rates. 3 Press M.C. to confirm the selection. iPod Play/Pause (pause) 1 Press M.C. to pause or resume.

Shuffle Mode (shuffle) 1 Press M.C. to display the setting mode. 2 Turn M.C.

to select your favorite setting. ! Songs Play back songs in the selected list in random order. ! Albums Play back songs from a randomly selected album in order. ! Off Cancel random play. 3 Press M.

C. to confirm the selection. Play Mode (repeat play) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select a repeat play range. ! One Repeat the current song ! All Repeat all songs in the selected list 3 Press M.C.

to confirm the selection. Control Mode (control mode) This function is not compatible with the following iPod models. ! iPod nano 1st generation ! iPod 5th generation 1 Press M.C. to select your favorite setting. ! App This unit's iPod function can be operated from the connected iPod. ! Audio This unit's iPod function can be operated from this unit. Time Search (time search) Notes ! Switching the control mode to App pauses song playback. Operate the iPod to resume playback. ! The following functions are still accessible from the unit even if the control mode is set to App.

-- Volume, fast forward/reverse, track up/down, pausing ! When the control mode is set to App, operations are limited as follows: 18 En Section Operating this unit -- Only Play/Pause (pause), Control Mode (control mode), Wide Mode (switching the wide mode) and Display (display setting) functions are available. -- The browse function cannot be operated from this unit. ! You can select the following functions if the background setting on the entertainment menu is off. -- Wide Mode (switching the wide mode) -- Display (display setting) -- DivX® Subtitle (DivX subtitle file settings) -- TV Aspect (aspect ratio settings) -- Subtitle Lang. (subtitle language settings) 03 Playing audio Basic operations 1 234 789 S.

Rtrv 2 A-EQ 3 Operating this unit 16:54 1 File information area for the currently playing file External storage device (USB, SD) ! Folder/file number indicator iPod ! Song number indicator 2 Indicator display area Refer to Indicator list on page 41. 3 Text information area External storage device (USB, SD) ! Song title/artist name/album title-- folder/file name iPod ! Song title ! Artist name ! Album title 4 Artwork/Source image display area iPod ! Artwork display or Source image display External storage device (USB, SD) ! Source image display 5 Play time indicator 6 Scrubber bar 7 Remaining time indicator Playing songs on a USB storage device 1 Open the USB port cover. 2 Plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Music 4 8888'88" Text Text Text -8888'88" 5 6 7 En 19 Section 03 Operating this unit Playing songs on an SD memory card 1 Remove the front panel.

2 Insert an SD memory card into the SD card slot. Insert it with the contact surface facing down, and press on the card until it clicks and completely locks into place. 3 Re-attach the front panel. Stopping playback of files on an SD memory card 1 Remove the front panel. 2 Press on the SD memory card until it clicks. The SD memory card is ejected. 3 Pull out the SD memory card. 4 Re-attach the front panel. Playing songs on an iPod 1 Open the USB port cover. 2 Connect an iPod to the USB cable using an iPod Dock Connector.

Selecting a folder 1 Push M.C. up or down. Selecting a track (chapter) 1 Push M.C. left or right. Fast forwarding or reversing 1 Push and hold M.C. left or right. Playing a song in the selected folder 1 When a folder is selected, press and hold M.

C. Browsing for a song on the iPod Operations are the same as those for moving images. (Refer to Browsing for a video on the iPod on page 16.) The following operation is available. Playing a song in the selected category 1 When a category is selected, press and hold M.

C. Notes ! Disconnect USB storage devices from the unit when not in use. ! Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Disconnect headphones from the iPod before connecting it to this unit. !

The iPod cannot be turned on or off unless the control mode is set to App.

! The iPod will turn off about two minutes after the ignition switch is set to OFF. However, the categories in the top tier are different from those for moving images. ! Video (video) ! Playlists (playlists) ! Artists (artists) ! Albums (albums) ! Songs (songs) ! Podcasts (podcasts) ! Genres (genres) ! Composers (composers) ! Audiobooks (audiobooks) Function settings 1 Press M.C. to display the function menu. 2 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. External storage device (USB, SD) Play/Pause (pause) 1 Press M.

C. to pause or resume. Random (random play) Selecting and playing files/ tracks from the name list Operations are the same as those for moving images. (Refer to Selecting and playing files from the name list on page 16.) The following operation is available. 1 Press M.C. to turn random play on or off. Play

Mode (repeat play) 20 En Section Operating this unit 03 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select a repeat play range.



[You're reading an excerpt. Click here to read official PIONEER MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

! All Repeat all files ! File Repeat the current file ! Folder Repeat the current folder 3 Press M.

C. to confirm the selection. Sound Retriever (sound retriever) Automatically enhances compressed audio and restores rich sound. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. Off (off)--1--2 1 is effective for low compression rates, and 2 is effective for high compression rates. 3 Press M.C. to confirm the selection. Time Search (time search) 1 Press M.C.

to display the setting mode. 2 Turn M.C. to find the part you want to play. 3 Press M.C. to confirm the selection. Display (display setting) You can switch to the desired text information. 1 Press M.C.

to display the setting mode. 2 Press M.C. to select the desired setting. A/V Format (switching media file types) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting.

Music (compressed audio)--Video (DivX video files)--Photo (JPEG picture files) 3 Press M.C. to confirm the selection. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select your favorite setting. ! Songs Play back songs in the selected list in random order.

! Albums Play back songs from a randomly selected album in order. ! Off Cancel random play. 3 Press M.C. to confirm the selection. Play Mode (repeat play) 1 Press M.C. to display the setting mode. 2 Turn M.C.

to select a repeat play range. ! One Repeat the current song ! All Repeat all songs in the selected list 3 Press M.C. to confirm the selection. Link Search (link search) You can play songs from the following lists.

· Album list of the currently playing artist · Song list of the currently playing album · Album list of the currently playing genre 1 Press M.C. to display the setting mode. 2 Turn M.C.

to change the mode; press to select. ! Artists Displays the album list of currently playing artist. ! Albums Displays a song list from the album currently being played. ! Genres Displays an album list from the genre currently being played. 3 Use M.C. to select an album or song from the list. For more details about the selection operation, refer to Browsing for a video on the iPod on page 16. Control Mode (control mode) This function is not compatible with the following iPod models. ! iPod nano 1st generation ! iPod 5th generation 1 Press M.

C. to select your favorite setting. ! App This unit's iPod function can be operated from the connected iPod. ! Audio This unit's iPod function can be operated from this unit. Audiobooks (changing of audiobook speed) Operating this unit iPod Play/Pause (pause) 1 Press M.C. to pause or resume. Shuffle All (shuffle all) 1 Press M.C. to turn shuffle all on.

To turn off, set Shuffle Mode in the Function menu to off. Shuffle Mode (shuffle) En 21 Section 03 Operating this unit Playing still images When a USB/SD device that contains JPEG picture files is connected, this unit starts a slideshow from the first folder/picture on the device. The player displays the pictures in each folder in alphabetical order. 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select your favorite setting. ! Faster Playback at a speed faster than normal ! Normal Playback at normal speed ! Slower Playback at a speed slower than normal 3 Press M.

C. to confirm the selection. Sound Retriever (sound retriever) Automatically enhances compressed audio and restores rich sound. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. Off (off)--1--2 1 is effective for low compression rates, and 2 is effective for high compression rates.

3 Press M.C. to confirm the selection. Time Search (time search) 1 Press M.C. to display the setting mode. 2 Turn M.C. to find the part you want to play. 3 Press M.

C. to confirm the selection. ABC Search (alphabet search mode setting) When this setting is on, you can switch to alphabet search mode by turning M.C. twice while using the browse function of the iPod.

Refer to Searching the list by alphabet on page 16. 1 Press M.C. to turn the setting for when M.C.

is turned twice on or off. Basic operations 1 2345 7890 2 A-EQ 3 16:54 You can switch to the basic screen or the image screen. Refer to Display (display setting) on the next page. 1 Folder/file number indicator 2 Indicator display area Refer to Indicator list on page 41. 3 Text information area ! Folder name ! File name Playing files on a USB storage device 1 Open the USB port cover. 2 Plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. Playing files on an SD memory card 1 Remove the front panel. 2 Insert an SD memory card into the SD card slot. Insert it with the contact surface facing down, and press on the card until it clicks and completely locks into place.

3 Re-attach the front panel. Photo Text Text Notes ! Switching the control mode to App pauses song playback. Operate the iPod to resume playback. ! The following functions are still accessible from the unit even if the control mode is set to App. -- Volume, fast forward/reverse, track up/ down, pausing ! When the control mode is set to App, operations are limited as follows: -- Only Play/Pause (pause), Control Mode (control mode), Wide Mode (switching the wide mode) and Display (display setting) functions are available. -- The browse function cannot be operated from this unit. 22 En Section Operating this unit Stopping playback of files on an SD memory card 1 Remove the front panel. 2 Press on the SD memory card until it clicks. The SD memory card is ejected. 3 Pull out the SD memory card.

4 Re-attach the front panel. Selecting a folder 1 Push M.C. up or down. Selecting a file 1 Push M.

C. left or right. Searching every 10 files 1 Push and hold M.C. left or right.

03 1 Press M.C. to turn random play on or off. Play Mode (repeat play) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select a repeat play range. ! All Repeat all files ! Folder Repeat the current folder 3 Press M.

C. to confirm the selection. Capture (capturing an image in JPEG files) You can capture image data and use it as wallpaper. Images can be stored and recalled easily in this unit. ! Only one image can be stored on this unit. Old images are overwritten with the new ones. 1 Press M.C. to display the setting mode. 2 Turn M.

C. to select the desired setting. 3 Press M.C. to confirm the selection.

Rotate (picture rotation) 1 Press M.C. to display the setting mode. 2 Press M.C.

to rotate the displayed picture 90° clockwise. Wide Mode (switching the wide mode) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. Full (full)--Just (just)--Cinema (cinema)--Zoom (zoom)--Normal (normal) For details about the settings, refer to Changing the wide screen mode on page 36. 3 Press M.C.

to confirm the selection. Time Per Slide (slideshow interval time setting) JPEG files can be viewed as a slide show on this unit. In this setting, the interval between each image can be set.



[You're reading an excerpt. Click here to read official PIONEER
MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. ! 5sec JPEG images switch at intervals of 5 seconds ! 10sec JPEG images switch at intervals of 10 seconds ! 15sec JPEG images switch at intervals of 15 seconds ! Manual JPEG images can be switched manually 3 Press M.C. to confirm the selection. Display (display setting) Operating this unit Notes ! Disconnect USB storage devices from the unit when not in use. ! Incompatible text stored with the video image file may not be displayed or may be displayed incorrectly. ! When playing external storage devices that contain a mixture of various media file types, switch between media file types when playing different files.

For details about the settings, refer to A/V Format (switching media file types) on page 21. Selecting and playing files from the name list Operations are the same as those for moving images. (Refer to Selecting and playing files from the name list on page 16.) Function settings 1 Press M.C.

to display the function menu. 2 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. Play/Pause (pause) 1 Press M.C. to pause or resume. Random (random play) En 23 Section 03 Operating this unit You can switch to the basic screen or the image screen. 1 Press M.

C. to display the setting mode. 2 Press M.C. to select the desired setting. A/V Format (switching media file types) 1 Press M.C. to display the setting mode. 2 Turn M.C.

to select the desired setting. For details about the settings, refer to A/V Format (switching media file types) on page 21. 3 Press M.C. to confirm the selection. 1 Press M.C. to display the setting mode. 2 Select a file. The following operations are available.

The operating method is the same as that for the basic operations. Refer to Basic operations on page 22. ! Selecting a folder ! Selecting a file ! Searching every 10 files Play/Pause (pause) 1 Press M.C. to pause or resume. Random (random play) Note You can select the following functions if the background setting on the entertainment menu is off. ! Capture (capturing an image in JPEG files) ! Rotate (picture rotation) ! Wide Mode (switching the wide mode) ! Display (display setting) 1 Press M.C. to turn random play on or off. Play Mode (repeat play) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select a repeat play range. ! All Repeat all files ! Folder Repeat the current folder 3 Press M.C. to confirm the selection. Capture (capturing an image in JPEG files) For details about the settings, refer to Capture (capturing an image in JPEG files) on the previous page. 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired setting.

3 Press M.C. to confirm the selection. Rotate (picture rotation) 1 Press M.C.

to display the setting mode. 2 Press M.C. to rotate the displayed picture 90° clockwise. Wide Mode (switching the wide mode) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting.

Full (full)--Just (just)--Cinema (cinema)--Zoom (zoom)--Normal (normal) For details about the settings, refer to Changing the wide screen mode on page 36.

3 Press M.C. to confirm the selection. Time Per Slide (slideshow interval time setting) For details about the settings, refer to Time Per Slide (slideshow interval time setting) on the previous page. 1 Press M.C. to display the setting mode. 2 Turn M.C.

to select the desired setting. 3 Press M.C. to confirm the selection. Introduction of operations for playback of still images as a slideshow You can view still images saved to a USB/SD as a slideshow while listening to audio from another source.

For details about the settings, refer to Slide Show (slide show viewing) on page 30. Function settings 1 Press M.C. to display the function menu. 2 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. Return (ending slideshow) 1 Press M.C. to end the slideshow.

Photo Selection (selecting photos) 24 En Section Operating this unit Note When the USB or SD source is selected, this unit cannot view still images on USB/SD as a slideshow. 03 Bluetooth Telephone This function is available only for MVH-8300BT. For details on basic operations after connecting to a cellular phone, refer to Using Bluetooth telephone on page 11. ! PIN code is set to 0000 as the default.

You can change this code. Refer to PIN Code (PIN code input) on the next page. Operating this unit Connection menu operation Important Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. 1 Display the phone menu. Refer to Basic menu operations on page 9. 2 Use M.C. to select Connection. Turn to change the menu option. Press to select.

3 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. Device List (connecting or disconnecting a cellular phone from the device list) 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the name of a device you want to connect.

3 Press and hold M.C. to switch the Bluetooth device address and device name. 4 Press M.C. to connect the selected cellular phone. While connecting, the circular indicator flashes. To complete the connection, check the device name (MVH-8300BT) and enter the PIN code on your cellular phone. If the connection is established, a circular indicator appears next to the device name. Delete Device (deleting a cellular phone from the device list) En 25 Section 03 Operating this unit 1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the name of a device you want to delete. 3 Press M.C. to select the device you want to delete. Press and hold M.C.

to switch the Bluetooth device address and device name. 4 Use M.C. to select Yes. Turn to change the menu option.

Press to select. To cancel, select No. ! While this function is in use, do not turn off the engine. Add Device (connecting a new cellular phone) 1 Press M.C. to start searching. ! To cancel, press M.C. while searching. 2 Turn M.C. to select a device from the device list. ! If the desired device is not displayed, select Search Again. ! If five devices are already paired, Memory Full is displayed and it is not possible to perform this operation. In this case, delete a paired device first.

3 Press and hold M.C. to switch the Bluetooth device address and device name. 4 Press M.C. to connect the selected cellular phone. While connecting, Pairing flashes. To complete the connection, check the device name (MVH8300BT) and enter the PIN code on your cellular phone. If the connection is established, Paired is displayed and the phone menu appears. Special Device (setting a special device) Bluetooth devices that are difficult to establish a connection with are called special devices.

If your Bluetooth device is listed as a special device, select the appropriate one. 1 Press M.C. to display the setting mode. 2 Use M.C. to select a special device. Turn to change the menu option. Press to select. 3 Use a cellular phone to connect to this unit.

[You're reading an excerpt. Click here to read official PIONEER](#)



[MVH-8300BT user guide](#)

<http://yourpdfguides.com/dref/3630297>

To complete the connection, check the device name (MVH-8300BT) and enter the PIN code on your cellular phone. If the connection is established, a circular indicator appears next to the device name. ! If five devices are already paired, Memory Full is displayed and it is not possible to perform this operation. In this case, delete a paired device first. Auto Connect (connecting to a Bluetooth device automatically) 1 Press M.C. to turn automatic connection on or off. Visibility (setting the visibility of this unit) To check the availability of this unit from other devices, Bluetooth visibility of this unit can be turned on. 1 Press M.C.

to turn the visibility of this unit on or off. ! While setting Special Device, Bluetooth visibility of this unit is turned on temporarily. Device Information (Bluetooth device address display) 1 Press M.C. to display the Bluetooth device address and device name. PIN Code (PIN code input) To connect your cellular phone to this unit via Bluetooth wireless technology, you need to enter a PIN code on your phone to verify the connection. The default code is 0000, but you can change it with this function. 1 Press M.C. to display the setting mode.

2 Turn M.C. to select a number. 3 Press M.C.

to move the cursor to the next position. 4 After inputting the PIN code (up to 8 digits), press M.C. The PIN code can be stored in the memory. ! When you press and hold M.

C. in the same display, the PIN code you entered is stored in this unit. ! Pressing M.C. in the confirmation display returns you to the PIN code input display, and you can change the PIN code. Phone menu operation Important Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. 1 Display the phone menu. Refer to Basic menu operations on page 9. 2 Turn M.C.

to select the function. After selecting, perform the following procedures to set the function. 26 En Section Operating this unit Recent (recent call history) You can make a phone call by selecting from dialed calls, received calls, and missed calls in this menu. 1 Press M.C. to display Missed Calls (missed call history), Dialed Calls (dialed call history) or Received Calls (received call history). 2 Use M.C. to select the desired list. Turn to change the menu option.

Press to select. 3 Press M.C. to make a call. 4 When you find a phone number that you want to store in the memory, press and hold M.

C. right. Phone Book (phone book) ! The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit. Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to Visibility (setting the visibility of this unit) on the previous page. Press M.C. to display the alphabetical list. Turn M.C. to select the first letter of the name you are looking for. ! Press and hold M.C.

to select the desired character type. alphabetCyrillic alphabet Press M.C. to display a registered name list. Turn M.C. to select the name you are looking for. Press M.C. to display the phone number list.

Use M.C. to select the phone number you want to call. Turn to change the phone number. Press to select.

Press M.C. to make a call. When you find a phone number that you want to store in the memory, press and hold M.C.

right. Connection (phone connection) Operate the Bluetooth telephone connection menu. Refer to Connection menu operation on page 25. 03 Operating this unit Function and operation 1 Display Phone Function. Refer to Phone Function (phone function) on this page. 2 Press M.C. to display the function menu. 3 Turn M.C.

to select the function. After selecting, perform the following procedures to set the function. Auto Answer (automatic answering) 1 Press M.C. to turn automatic answering on or off. Ring Tone (ring tone select) 1 Press M.C. to turn the ring tone on or off. ! 1 2 3 4 5 6 7 8 Preset Dial (preset phone numbers) 1 Press M.C.

to display the setting mode. 2 Use M.C. to select the desired preset number. Turn to change the menu option.

Press to select. 3 Press M.C. to make a call. Phone Function (phone function) You can set Auto Answer and Ring Tone from this menu.

For details, refer to Function and operation on this page. En 27 Section 03 Operating this unit Audio Adjustments 1 Display the audio menu. Refer to Basic menu operations on page 9. 2 Turn M.C. to select the audio function. After selecting, perform the following procedures to set the audio function.

Fader/Balance (fader/balance adjustment) 1 Press M.C. to display the setting mode.

2 Push M.C. up or down to adjust the front/rear speaker balance. Adjustment range (front/rear): Front 15 to Rear 15 3 Push M.C. left or right to adjust the left/right speaker balance. Adjustment range (left/right): Left 15 to Right 15 ! Select F/R 0 when only using two speakers. ! When the rear output setting and preout setting are Subwoofer, you cannot adjust front/rear speaker balance. Sonic Center Control (sonic center control) Sound that is suited for the listening position can easily be created with this function. 1 Press M.

C. to display the setting mode. 2 Push M.C. left or right to select a listening position.

@@ You can turn the auto-equalizer on or off. 1 Press M.C. to turn the auto-equalizer on or off. You cannot use this function if auto EQ has not been carried out.

@@ Adjusted equalizer curve settings are stored in Custom1 or Custom2. ! A separate Custom1 curve can be created for each source. @@! A Custom2 curve that is common for all sources can be created. @@ 1 Press M.C. to display the setting mode. 2 Turn M.C. to select an equalizer curve. @@ left or right to select the equalizer band to adjust.

40Hz--80Hz--200Hz--400Hz--1kHz--2.5kHz --8kHz--10kHz 4 Push M.C. up or down to adjust the level of the equalizer band. @@ 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting.

Off (off)--Low (low)--Mid (mid)--High (high) 3 Press M.C. to confirm the selection. @@ 1 Press M.C.

to turn subwoofer output on or off. @@@@ 1 Press M.C. to display the setting mode. 2 Turn M.

C. to select the phase of subwoofer output. Normal (normal phase)--Reverse (reverse phase) 3 Push M.C. up or down to adjust the output level of the subwoofer. Adjustment range: +6 to 24 4 Push M.C. left or right to select the cut-off frequency. @@ Refer to Basic menu operations on page 9. 2 Turn M.

C. to select the system function. @@ to display the guide information. Refer to About guide information on page 11. Clock ADJ (date and clock) 1 Press M.C. to display the setting mode. 2 Press M.C. to select the segment of the clock display you wish to set.

Day--Month--Year--Hour--Minute--AM/PM 3 Turn M.C. to set the date and time. Picture ADJ (picture adjustment) 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select the function to be adjusted. Press to select.

Brightness--Contrast--Color--Hue--Dimmer --Temperature--Black Level For details about the settings, refer to Changing the picture adjustment on page 37. When you select Black Level, press M.



[You're reading an excerpt. Click here to read official PIONEER
MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

C. to turn the setting on or off. 3 Turn M.C. to increase or decrease the level of the selected item. Adjustment range: +24 to 24 ! Dimmer can be adjusted from +48 to +1. ! Temperature can be adjusted from +3 to 3. System Lang.

(menu language settings) 03 1 Press M.C. to display the setting mode. 2 Turn M.C. to adjust the level. Adjustment range: 0 to +6 3 Press M.C. to confirm the selection. High Pass Filter (high pass filter adjustment) When you do not want low sounds from the subwoofer output frequency range to play from the front or rear speakers, turn on the HPF (high pass filter).

Only frequencies higher than those in the selected range are output from the front or rear speakers. 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the cut-off frequency. Off (off)--50Hz--63Hz--80Hz--100Hz--125Hz 3 Press M.C. to confirm the selection.

@@! When selecting FM as the source, you cannot switch to SLA. ! Settings are based on the FM volume level, which remains unchanged. ! The MW/LW volume level can also be adjusted with this function. 1 Press M.C. to display the setting mode. 2 Push M.C. up or down to adjust the source volume. @@Refer to Basic menu operations on page 9.

2 Turn M.C. to select the entertainment function. @@to display the setting mode. 2 Turn M.C. to select the desired setting. @@to confirm the selection. Clock (entertainment clock) 1 Press M.C. to turn entertainment clock display on or off. @@Slide Show (slide show viewing) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the external storage device. USB (USB storage device)--SD (SD memory card) Slideshow will start. Appearance (screen/illumination color) 1 Press M.C. to display the setting mode. 2 Turn M.C. to change the desired screen/illumination color. Press to select. @@3 Turn M.C. to change the desired illumination color. @@Function menus ! System menu ! Initial menu ! On-screen display ! Multi language setting for DivX ! @@! Some characters may not be displayed properly. ! @@1 Press M.

C. to display the setting mode. 2 Turn M.C. to select the desired language. @@to confirm the selection. @@You can turn off the warning tone. 1 Press M.C. to turn warning tone on or off. @@1 Press M.C. to turn AUX Input on or off. @@! @@1 Press M.C.

to display the setting mode. 2 Turn M.C. to select the desired setting. ! Mute Muting ! @@ATT -10dB Attenuation ! Off Turns the sound muting/attenuation off 3 Press M.

C. @@@@! @@2 Press M.C. to display the initial setting menu. 3 Turn M.C. to select the initial setting. @@@@It may be preferable to set the tuning step to 50 kHz when AF is on. 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select the FM tuning step. 100kHz (100 kHz)--50kHz (50 kHz) 3 Press M.C. to confirm the selection. @@1 Press M.C. to turn Auto PI seek on or off.

A-EQ Measurement (auto-equalizing) The auto-equalizer is an equalizer curve created by auto EQ (refer to Auto EQ (auto-equalizing) on the next page). You can turn the auto-equalizer on or off. Rear Speaker (rear output and subwoofer setting) Operating this unit Customizing the illumination color 1 Use M.C. to select Color Setting in the Appearance (Illumination color).

Refer to Appearance (screen/illumination color) on the previous page. 2 Use M.C. to customize the color. Turn for fine tuning. Push left or right to adjust the next color. 3 Press M.C. to store the customized color in the memory. The illumination color will be switched to the customized color. En 31 Section 03 Operating this unit This unit's rear output (rear speaker leads output and RCA rear output) can be used for full-range speaker (Full) or subwoofer (Subwoofer) connection. If you switch the rear output setting to Subwoofer, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp. Initially, the unit is set for rear full-range speaker connection (Full). 1 Press M.C.

to display the setting mode. 2 Turn M.C. to change the setting. Subwoofer (subwoofer)--Full (full-range speaker) ! Even if you change this setting, there will be no output unless you turn the subwoofer output on (refer to Subwoofer1 (subwoofer on/off setting) on page 28). ! If you change this setting, subwoofer output in the audio menu will return to the factory settings. 3 Press M.C. to confirm the selection. Demonstration (demo display setting) 1 Press M. C. to turn the demo display on or off. Video Signal (video signal setting) Be sure to adjust the video signal setting to one that is suitable for your country. 1 Press M.C.

to display the setting mode. 2 Turn M.C. to select an appropriate video signal. PAL--NTSC 3 Press M.

C. to confirm the selection. BT Memory Clear (resetting the Bluetooth wireless technology module) This function is available only for MVH-8300BT. Bluetooth telephone data can be deleted. To protect personal information, we recommend deleting this data before transferring the unit to other persons. The following settings will be deleted. ! phone book entries on the Bluetooth telephone ! preset numbers on the Bluetooth telephone ! registration assignment of the Bluetooth telephone ! call history of the Bluetooth telephone ! information of the connected Bluetooth telephone ! PIN code 1 Press M.C. to display the setting mode. 2 Use M.

C. to select Yes. Turn to change the mode. Press to select. Cleared is displayed and the settings are deleted. To cancel, select No. ! While this function is in use, do not turn off the engine. BT Ver. Info. (Bluetooth version display) This function is available only for MVH-8300BT. 1 Press M.C. to display the Bluetooth (microprocessor) version of this unit. Software Update (updating the software) This function is available only for MVH-8300BT. This function is used to update this unit with the latest software.

For information on the software and updating, refer to our website. 1 Press M.C. to display the setting mode. 2 Use M.

C. to select Yes to show a confirmation display. Turn to change the mode. Press to select. To cancel, select No. Follow the on-screen instructions to finish updating the software. Ever Scroll (scroll mode setting) When ever scroll is set to On, recorded text information scrolls continuously in the display. Set to off if you prefer the information to scroll just once. 1 Press M.C.

to turn the ever scroll on or off. Auto EQ (auto-equalizing) The auto-equalizer automatically measures the car's interior acoustic characteristics, and then creates an auto-equalizer curve based on that information. ! To perform this function, dedicated microphone (e.g. CD-MC20) is required. WARNING As a loud tone (noise) may be emitted from the speakers when measuring the car's interior acoustic characteristics, never perform auto EQ while driving. CAUTION ! Thoroughly check the conditions before performing auto EQ as the speakers may be damaged if these functions are performed when: -- The speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.) 32 En Section Operating this unit -- A speaker is connected to a power amp delivering output higher than the speaker's maximum input power capability.



[You're reading an excerpt. Click here to read official PIONEER
MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)
<http://yourpdfguides.com/dref/3630297>

! If the microphone is placed in an unsuitable position the measurement tone may become loud and measurement may take a long time, resulting in battery drainage.

Be sure to place the microphone in the specified location. 03 -- The fader/balance settings return to the center position. @@@@! @@@@! Be sure to carry out auto EQ using the optional microphone. @@! In order to perform auto EQ, the front speaker must be connected. ! @@! @@@@! @@-- The reflected sound within the car is strong and delays occur.

-- The LPF on active subwoofers or external amps delay the lower sounds. ! Auto EQ changes the audio settings as follows: Performing auto EQ 1 Stop the car in a place that is quiet, close all the doors, windows and sun roof, and then turn the engine off. If the engine is left running, engine noise may prevent correct auto EQ. 2 Fix the optional microphone in the center of the headrest of the driver's seat, facing forward. The auto EQ may differ depending on where you place the microphone.

If desired, place the microphone on the front passenger seat to carry out auto EQ. 3 Turn the ignition switch to ON or ACC. If the car's air conditioner or heater is turned on, turn it off. Noise from the fan in the air conditioner or heater may prevent correct auto EQ. # If this unit is turned off, press SRC/OFF to turn the source on. 4 Display the initial setting menu. Refer to Initial Settings on page 31. En 33 Section 03 Operating this unit 5 Use M.C. to enter the auto EQ measurement mode.

Turn to change the menu option. Press to select. 6 Plug the microphone into the microphone input jack on this unit. Other functions Using an AUX source When connecting auxiliary device using the front AUX input. ! You need to activate the AUX setting in the initial setting menu. Refer to AUX Input (auxiliary input) on page 30. ! If an iPod with video capabilities is connected to this unit via 3.5 mm plug (4 pole) cable (such as the CD-V150M), you can enjoy the video contents of the connected iPod. ! A portable audio/video player can be connected by using a 3.5 mm plug (4 pole) with an RCA cable (sold separately).

However, depending on the cable, a reverse connection between the red (right side audio) cable and yellow (video) cable may be required in order for the sound and video image to be reproduced correctly. % Insert the mini plug into the AUX input jack on this unit. For more details, refer to Head unit on page 8. This auxiliary device is automatically set to AUX. 7 Press M.

C. to start auto EQ. 8 When the 10-second countdown starts, get out of the car and close the door within 10 seconds. A measurement tone (noise) is emitted from the speakers, and auto EQ measurement begins. # It takes about nine minutes for auto EQ measurement to be completed when all the speakers are connected.

To stop auto EQ, press M.C. 9 When auto EQ is completed, Complete is displayed. When the car's interior acoustic characteristics cannot be measured correctly, an error message will be displayed. (Refer to Understanding auto EQ error messages on page 40.) 10 Store the microphone carefully in the glove compartment or another safe place. If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, color change or malfunction. Function settings 1 Press M.C. to display the function menu.

2 Turn M.C. to select the function. After selecting, perform the following procedures to set the function. A/V Change (auxiliary device signal setting) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting.

! Audio auxiliary device connected with a stereo mini plug cable ! Video auxiliary video device connected with 4-pole mini plug cable (e.g., CD-V150M) 3 Press M.C. to confirm the selection.

Display (display setting) 34 En Section Operating this unit You can switch to the basic screen or the image screen. 1 Press M.C. to display the setting mode. 2 Press M.

C. to select the desired setting. Wide Mode (switching the wide mode) 1 Press M.C. to display the setting mode. 2 Turn M.C. to select the desired setting. Full (full)--Just (just)--Cinema (cinema)--Zoom (zoom)--Normal (normal) For details about the settings, refer to Changing the wide screen mode on the next page. 3 Press M.

C. to confirm the selection. 03 Operating this unit Notes ! You can select Display and Wide Mode, when Video has been selected. ! You can select the following functions if the background setting on the entertainment menu is off. -- Wide Mode (switching the wide mode) -- Display (display setting) Switching the display indication Display indication can be switched on or off. % Press and hold . # Pressing one of the buttons will turn on display indication. En 35 Section 04 Detailed instructions Changing the wide screen mode You can select a desired mode for enlarging a 4:3 picture to a 16:9 picture. % Display the screen mode. Refer to Wide Mode (switching the wide mode) on page 17.

Full (full screen) The 4:3 picture is enlarged in the horizontal direction only, giving you a 4:3 TV picture (normal picture) without any omissions. Just (just) The picture is enlarged slightly at the center and the amount of enlargement increases horizontally toward the edges of the screen, enabling you to enjoy a 4:3 picture without sensing any disparity even when viewing on a wide screen. Cinema (cinema) The picture is enlarged by the same proportion as Full or Zoom in the horizontal direction and by an intermediate proportion between Full and Zoom in the vertical direction; ideal for a cinemasized picture (wide screen picture) where captions lie outside the picture. Zoom (zoom) The 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema sized picture (wide screen picture). Normal (normal) The 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture.

Notes ! Different settings can be stored for each video source. ! When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different. ! Remember that using the wide mode feature of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law. ! The video image will appear coarser when viewed in Cinema or Zoom mode. Setting the DivX subtitle file You can select whether or not to display DivX external subtitles.

! The DivX subtitles will be displayed even when Custom is selected if no DivX external subtitle files exist. ! You can select the following functions if the background setting on the entertainment menu is off. % Display the DivX subtitle file setting mode. Refer to DivX® Subtitle (DivX subtitle file settings) on page 17. ! Original Display the DivX subtitles ! Custom Display the DivX external subtitles Notes ! Up to 42 characters can be displayed on one line.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/3630297)

[MVH-8300BT user guide](http://yourpdfguides.com/dref/3630297)

<http://yourpdfguides.com/dref/3630297>