



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER MVH-X370BT. You'll find the answers to all your questions on the PIONEER MVH-X370BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PIONEER MVH-X370BT**  
**User guide PIONEER MVH-X370BT**  
**Operating instructions PIONEER MVH-X370BT**  
**Instructions for use PIONEER MVH-X370BT**  
**Instruction manual PIONEER MVH-X370BT**



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)  
<http://yourpdfguides.com/dref/5827143>

### Manual abstract:

It is especially important that you read and observe WARNINGS and CAUTIONS in this manual. Please keep the manual in a safe and accessible place for future reference. (multi-control) dial \*1 Display window If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. Detach button \*1 BAND/ /DIMMER Display button\*2 WARNING • Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards. □ Do not attempt to operate the unit while driving.

Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. Frequently used operations The available buttons vary depending on the unit. Purpose Turn on the power\* Operation Press SRC/OFF to turn on the power. Press and hold SRC/OFF to turn off the power. CAUTION • Do not allow this unit to come into contact with moisture and/or liquids.

electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. □ Always keep the volume low enough to hear outside sounds. □ The Pioneer CarStereo-Pass is for use only in Germany. Adjust the volume Select a source Change the display information Return to the previous display/list Return to the normal display from the menu.

Answering/ending a call (Only for MVHX370BT) If you experience problems Should this unit fail to work properly, please contact your dealer or nearest authorized PIONEER Service Station. En 3 \* When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. important • Avoid subjecting the front panel to excessive shock. □ Keep the front panel out of direct sunlight and high temperatures. □ Always store the detached front panel in a protective case or bag. Display indication Indication Description Appears when a lower tier of the menu or folder exists. Appears when traffic announcements are received (page 11). appears when the sound retriever function is set (page 12). Appears when random/shuffle play is set (except when BT AUDIO is selected as the source).

Appears when repeat play is set (except when BT AUDIO is selected as the source). appears when the iPod control function is set (page 7). Appears when a Bluetooth connection is made (page 8). (Only for Bluetooth-compatible models. ) Setup menu When you turn the ignition switch to ON after installation, [SET UP :YES] appears in the display. The setup menu disappears after 30 seconds of no operation. If you prefer not to set at this time, turn the M. Dial to select the options, then press to confirm. To proceed to the next menu option, you need to confirm your selection. Description Menu Item LANGUAGE Select the language to display the text information from a [ENG](English), compressed audio file.

[PYC](Russian) , [TUR](Turkish) Set the clock. Select the FM tuning step from 100 kHz or 50 kHz. CLOCK SET FM STEP [100], [50] Detaching the front panel Detach the front panel to prevent theft. Remove any cables and devices attached to the front panel and turn off the unit before detaching it. 3 4 [QUIT :YES] appears when all the settings have been made.

To return to the first item of the setup menu, turn the M. Detach Attach NOTES • You can cancel the menu setting by pressing SRC/OFF. □ These settings can be made at any time from the SYSTEM settings (page 13) and INITIAL settings (page 5). 4 En Canceling the demonstration display (DEMO OFF) 1 2 3 4 1 2 3 4 Radio The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception.

The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. Receiving preset stations Press and hold SRC/OFF until the unit turns off. Press BAND/ to select the band from [FM1], [FM2], [FM3], [MW] or [LW]. to 6/ ). Press a number button (1/ The / buttons can be also used to select a preset station when [SEEK] is set to [PCH] in the FUNCTION settings (page 12). nOTE The options vary depending on the unit. Best stations memory (BSM) The six strongest stations are stored on the number buttons (1/ Menu Item FM STEP [100], [50] SP-P/O MODE [REAR/SUB. W] Description Select the FM tuning step from 100 kHz or 50 kHz. Select when there is a full-range speaker connected to the rear speaker output leads and there is a subwoofer connected to the RCA output. Select when there is a passive subwoofer connected directly to the rear speaker output leads and there is a subwoofer connected to the RCA output.

Select when there are full-range speakers connected to the rear speaker output leads and RCA output. If there is a full-range speaker connected to the rear speaker output leads, and the RCA output is not used, you may select either [REAR/SUB. w] or [REAR/REAR]. Select to update the unit to the latest Bluetooth software. For details on Bluetooth software and updating, visit our website. (Some of the settings will be retained even after resetting the unit, such as Bluetooth pairing information, etc. ) 1 2 3 to 6/ ). After selecting the band, press the M. Scanning stops when the unit receives a station. to cancel seek tuning , press / .

NOTE [SEEK] needs to be set to [MAN] in the FUNCTION settings (page 12). S/W UPDATE SYSTEM RESET [YES], [CANCEL] To store stations manually 1 While receiving the station you want to store, press and hold one of the number buttons (1/ to 6/ ) until it stops flashing. En 5 Using PTY functions The unit searches for a station by PTY (program type) information. USB/iPod/AUX NOTE iPod function is not available for MVH-170UBG/170UB. The unit begins to search for a station.

When it is found, its program service name is displayed. Playing back Disconnect headphones from the device before connecting it to the unit. USB port NOTES • To cancel the search, press the M. □ The program of some stations may differ from that indicated by the transmitted PTY. □ If no station is broadcasting the type of program you searched for, [NOT FOUND] is displayed for about two seconds and then the tuner returns to the original station.



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)

<http://yourpdfguides.com/dref/5827143>

**PTY list** For more details about PTY list, visit the following site: <http://www.2> Plug in the USB device/iPod using an appropriate cable. **CAUTION** Use an optional Pioneer USB cable (CD-U50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. Before removing the device, stop playback. **mTP connection** A device installed with Android OS 4. 0 or later can be connected to the unit via MTP, using the cable supplied with the device. However, depending on the connected device and the numbers of the files in the device, audio files/songs may not be able to be played back via MTP. Note that MTP connection is not compatible with WAV and FLAC\* file formats, and cannot be used with the MIXTRAX function. \* The FLAC files are only compatible with MVH-170UI/170UBG/170UB. **6 En AUX 1** Insert the stereo mini plug into the AUX input jack.

**2 Press SRC/OFF** to select [AUX] as the source. **NOTE** If [AUX] is set to [OFF] in the SYSTEM settings, [AUX] cannot be selected as a source. [1]: Effective for low compression rates [2]: Effective for high compression rates Press and hold BAND/. . English Return to root folder (USB only)\*1 Operations You can make various adjustments in the FUNCTION settings (page 11). Note that the following operations do not work for an AUX device. to operate an AUX device, use the device itself. **Purpose** Select a folder/album\*1 Select a track/song (chapter) Fast forward or reverse Search for a file from a list Operation Press 1/ Press or 2/ or . Change drives in USB device Press BAND/ (Devices that support the USB mass storage device class protocol only) \*1 Compressed audio files only \*2 When there is no 3/S. Rtrv button on the unit, the sound retriever function can be set by the FUNCTION settings.

**Useful functions for iPod Link play mode** You can access songs based on the artist, album, or genre currently playing. **1** While listening to a song, press and hold to enter the link play mode. Dial to select the mode ([ARTIST], [ALBUM], [GENRE]), then press to confirm. The selected song/album will be played after the currently playing song. **NOTE** The selected song/album may be canceled if you use functions other than those from the link play mode (e. Dial to select the desired file (folder) name or category, then press to confirm. Dial to select the desired file, then press to confirm. playback starts. View a list of the files in the selected folder/ Press the M. Play a song in the selected folder/ category\*1 **Alphabetical search (iPod only)** Press and hold the M. Dial to select the desired category list, then press to enter the alphabetical search mode. Dial twice also enters the alphabetical search mode. Dial to select a letter, then press to display the alphabetical list. **iPod control** You can control the unit via a connected iPod. The following iPod models are not compatible with this function. □ iPod nano 1st generation, iPod with video **1** Press BAND/ during playback, then select the control mode. [CONTROL iPod/CTRL iPod]: The unit's iPod function can be operated from the connected iPod. [CONTROL AUDIO/CTRL AUDIO]: The unit's iPod function can only be operated by the buttons on the unit. In this mode, the connected iPod cannot be turned on or off. **NOTES** • Pressing iPod can also switch the control mode (only for MVH-170UI).

□ Switching the control mode to [CONTROL iPod/CTRL iPod] pauses song playback. use the connected iPod to resume playback. Repeat play Random/shuffle play Shuffle all play (iPod only) Press and hold 5/ En 7 • The following operations are still accessible from the unit, even if the control mode is set to [CONTROL iPod/CTRL iPod]. □ Pause, fast forward/reverse, song/chapter selection • The volume can only be adjusted from the unit. **6** Make sure the same 6-digit number appears on this unit and the device, then select "Yes" on the device. **NOTES** • [DEVICE FULL] appears if the unit has already been paired with three other devices. In this case, delete one of the paired devices. See [DEL DEVICE] or [GUEST MODE] in the connection menu (page 8). □ Depending on the device, the PIN code is required in step 6. in this case, input [0000].

**About MIXTRAX (USB/iPod only)** (Only for MVH-X370BT) The MIXTRAX function creates a non-stop mix of your music library, accompanied by illumination effects. For details on MIXTRAX settings, see page 13. **NOTES** • This function is not compatible with an Android device connected via MTP. □ When USB is selected as a source and the MIXTRAX function is in use, the sound retriever function is disabled. □ Depending on the file/song, sound effects may not be available.

□ Turn the MIXTRAX function off if the illumination effects it produces interfere with driving. **TIP** The Bluetooth connection can be also made by detecting the unit from the Bluetooth device. To do so, [VISIBLE] in th hold Operation Press . When a call is received. RECEIVED En 9 Menu Item PRESET 1-6 Description Recall the preset phone numbers.

You can also recall the preset phone numbers by pressing one of the number buttons (1/ to 6/ ). Select [ON] to answer an incoming call automatically. **Purpose** Random play\* Pause/resume playback Search for a file from a list Operation Press 5/ . Dial to select the desired folder name, then press to confirm. Dial to select the desired file, then press to confirm. **TONE:** [ON], [OFF] PB INVT Select [ON] if the ring tone does not come out from the car speakers. Depending on the connected phone, this function may not work. Invert the order of names in the phone book (name view). \* Depending on the connected device, these operations may not be available. \*1 The contacts on your phone will normally be transferred automatically when the phone is connected.

If they are not, use your phone to transfer the contacts. \*2 If two phones are connected, this function does not work on incoming calls that are received while one of the phones is being used for a call. **App Mode** (APP mode is not available for MVH-170UBG/170UB. ) You can enjoy listening to an application on an iPhone/Android device via the unit. In some cases, you can control an application by using the unit. For details on compatible devices, visit our website.

**Important** Use of third party apps may involve or require the provision of personally identifiable information, whether through the creation of a user account or otherwise, and for certain applications, the provision of geolocation data. **Bluetooth audio Important** • Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: – A2DP (Advanced Audio Distribution Profile) can only play back songs on your audio player. □ AVRCP (Audio/Video Remote Control Profile) can perform functions such as playback, pause, select song, etc. □ The sound of the Bluetooth audio player will be muted when the phone is in use.

□ When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically.



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)

<http://yourpdfguides.com/dref/5827143>

□ Depending on the type of Bluetooth audio player you have connected to this unit, operation and information displayed may vary based on availability and functionality. For iPhone users This function is compatible with iPhones and iPod touches installed with iOS 5. 0 or later. For Android device users This function is compatible with devices that have Android OS 2.

3 or later installed and also support Bluetooth SPP (Serial Port Profile) and A2DP (Advance Audio Distribution Profile). Basic operations You can make various adjustments in the FUNCTION settings (page 11). Purpose Fast forward or reverse Select a track Repeat play\* Operation Press and hold Press Press 6/ or . 10 En Playback of an application via the unit The Bluetooth connection is available for MVH-X370BT. NOTES • The Bluetooth-related menu items in the following tables are not available for MVH-170UI/170UBG/ 170UB.

□ iPod-related menu items in the following tables are not available for MVH-170UBG/170UB. □ APP mode-related menu items in the following tables are not available for MVH-170UBG/170UB. 1 2 3 4 5 6 7 Connect this unit with the mobile device. Dial to select one of the below, then press to confirm. Operate the mobile device to start up the application. FUNCTION settings The menu items vary according to the source. Menu Item FM SETTING [TALK], [STANDARD], [MUSIC] Match the sound quality level with the broadcast signal conditions of the FM band signal. (Available only when FM band is selected. ) Store the six strongest stations on the number buttons (1/ to 6/ ) automatically. REGIONAL [ON], [OFF] Limit the reception to the specific regional programs when AF (alternative frequencies search) is selected.

(Available only when FM band is selected. ) Description English BSM Basic operations You can make various adjustments in the FUNCTION settings (page 11). Purpose Select a track Fast forward or reverse Pause/resume playback Operation Press or . Press and hold Press BAND/ LOCAL FM: [OFF], [LV1], [LV2], [LV3], [LV4] Restrict the tuning station according to the MW/LW: [OFF], [LV1], [LV2] signal strength. ) Allow the unit to retune to a different frequency providing the same station. (Available only when FM band is selected. ) Interrupt the currently selected source with news programs. (Available only when FM band is selected. ) Settings You can adjust various settings in the main menu. Dial to select one of the categories below, then press to confirm. Dial to select the options, then press to confirm. NEWS [ON], [OFF] 3 En 11 Menu Item SEEK [MAN], [PCH] Description Assign / buttons to seek the stations one by one (manual tuning) or select a station from the preset channels. RTRV USB iPod [1] (effective for low compression rates), [2] (effective for high compression rates), [OFF] Enhance compressed audio and restore rich sound. Not available when; • USB is selected as a source and the MIXTRAX function is set to on. • The FLAC file is played back.

(Available for MVH-170UI/170UBG/170UB) Change the playback speed. @@@@ select the subwoofer phase. Compensate for clear sound at low volume. @@@@ Set to [ON] when using an auxiliary device connected to the unit. @@ select the time notation.

@@ description Menu Item APP CONN. @@@@\*2 Not available when [APP] is selected as the source. @@ Reduce the battery power consumption. @@@@ [CLEARED] appears when data is successfully deleted. Displays the system version of the unit and the Bluetooth module. @@ The mix pattern changes according to the sound level. The mix pattern changes according to the bass level. @@ Select the length of the playback time. @@@@ 14 En Connections/Installation Connections Important • When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain. □ Never cut the insulation of the power cable of this unit in order to share the power with other devices.

The current capacity of the cable is limited. □ When this unit is on, control signals are sent through the blue/white cable. Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal. □ Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. • The black cable is ground. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately.

If they are not, an accidental detachment may result in a fire or malfunction. ) (Only for MVH-X370BT) Rear output or subwoofer output Front output (Only for MVH-X370BT/ 170UI) Antenna input Power cord input Fuse (10 A) Wired remote input (Only for MVHX370BT/170UI) Hard-wired remote control adapter can be connected (sold separately). Microphone input (Only for MVHX370BT) Power cord Perform these connections when not connecting a rear speaker lead to a subwoofer. ACC position No ACC position • Use of this unit in conditions other than the following could result in fire or malfunction. □ To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below.

□ Disconnect the negative terminal of the battery before installation. □ Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring. □ Place all cables away from moving parts, such as the shift lever and seat rails. □ Place all cables away from hot places, such as near the heater outlet.

□ Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment. □ Cover any disconnected cable connectors with insulating tape. □ Do not shorten any cables. This unit MVH-X370BT/170UI/170UBG/170UB To power cord input Depending on the kind of vehicle, the function of and may be different. In this case, be sure to connect to and to . Yellow Back-up (or accessory) Yellow Connect to the constant 12 V supply terminal. red Accessory (or back-up) Red Connect to terminal controlled by the ignition switch (12 V DC). Connect leads of the same color to each other. Black (chassis ground) Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. connect and when Pin 5 is an antenna control type.

In another type of vehicle, never connect and . Blue/white Connect to the system control terminal of the power amp (max. Yellow/black (Only for MVH-170UI) If you use equipment with a Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

Speaker leads White: Front left White/black: Front left Gray: Front right Gray/black: Front right Green: Rear left or subwoofer Green/black: Rear left or subwoofer Violet: Rear right or subwoofer Violet/black: Rear right or subwoofer ISO connector In some vehicles, the ISO connector may be divided into two.



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)  
<http://yourpdfguides.com/dref/5827143>

In this case, be sure to connect to both connectors. En 15 English NOTES • Change the initial menu of this unit. refer to [SP-P/O MODE] (page 5). The subwoofer output of this unit is monaural. □ When using a subwoofer of 70 W (2 Ω), be sure to connect the subwoofer to the violet and violet/black leads of this unit.

Do not connect anything to the green and green/black leads. Power amp (sold separately) Perform these connections when using the optional amplifier. □ It may interfere with operation of the vehicle. □ It may cause injury to a passenger as a result of a sudden stop. • The semiconductor laser will be damaged if it overheats.

Install this unit away from hot places such as near the heater outlet. □ Optimum performance is obtained when the unit is installed at an angle of less than 60°. □ When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents. 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. Using the included bracket You can also use the included bracket to mount the unit.

Check to make sure that the included bracket matches your particular model of vehicle and then attach it to the unit as shown below. Dashboard Mounting sleeve Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. DIN Rear-mount Leave ample space 5 cm 1 Line up the holes on the mounting bracket with the holes on the sides of the unit to attach the bracket. System remote control Power amp (sold separately) Connect with RCA cables (sold separately) To front output\* Front speaker\* To rear output or subwoofer output Rear speaker or subwoofer \*

Only for MVH-X370BT/170UI 5 cm DIN front/rear mount This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing. 2 Screw in one screw on each side to hold the unit in place. Screw Bracket Removing the unit DIN Front-mount 1 Tapping screw (5 mm × 8 mm) Mounting bracket Dashboard or console Remove the trim ring. installation Important • Check all connections and systems before final installation. □ Do not use unauthorized parts as this may cause malfunctions.

□ Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. □ Do not install this unit where: 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve. If there is enough space, use the mounting sleeve that came with the vehicle. Trim ring Notched tab • Releasing the front panel allows easier access to the trim ring. □ When reattaching the trim ring, point the side with the notched tab down. 16 En 2 3 Insert the supplied extraction keys into both sides of the unit until they click into place. Pull the unit out of the dashboard. 2 Install the microphone clip on the sun visor. Lowering the sun visor reduces the voice recognition rate.

2 Install the microphone on the rear side of the steering column. English Installing the microphone (Only for MVH-X370BT) The microphone should be placed directly in front of the driver at a suitable distance to pick up their voice clearly. Microphone clip Double-sided tape CAUTION It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the microphone in such a way that it will not obstruct driving. It is recommended to use the clamps (sold separately) to arrange the lead.

To install on the steering column 1 Slide the microphone base to detach it from the microphone clip. To install on the sun visor 1 Fit the microphone lead into the groove. Microphone lead Groove Microphone Microphone clip Microphone base En 17 Additional Information Troubleshooting The display automatically returns to the normal display. □ No operations have been made for about 30 seconds. – Perform an operation.

The repeat play range changes unexpectedly. □ Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. □ Select the repeat play range again. a subfolder is not played back. □ Subfolders cannot be played when [FLD] (folder repeat) is selected. □ Select another repeat play range. the sound is intermittent. □ You are using a device, such as a cellular phone, that may cause audible interference. □ Move electrical devices that may be causing the interference away from the unit. The sound from the Bluetooth audio source is not played back.

→ There is a call in progress on a Bluetooth-connected cellular phone. □ The sound will be played back when the call is terminated. □ A Bluetooth-connected cellular phone is currently being operated. – Stop using the cellular phone. □ The connection between the unit and the cellular phone is not established correctly after a call made by a Bluetooth-connected cellular phone. □ Make a Bluetooth connection between the unit and the cellular phone again.

PROTECT → All the files on the connected USB device are embedded with DRM. – Replace the USB device. N/A USB → The connected USB device is not supported by this unit. □ Disconnect your device and replace it with a compatible USB device.

cHECK USB → The USB connector or USB cable has short-circuited. □ Check that the USB connector or USB cable is not caught in something or damaged. → The connected USB device consumes more than maximum allowable current. □ Disconnect the USB device and do not use it. Turn the ignition switch OFF and back to ACC or ON.

□ Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back to ON, or disconnect the iPod and reconnect. eRROR-19 → Communication failed. □ Perform one of the following operations, then return to the USB source. □ Turn the ignition switch OFF and back to ON.

□ Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. eRROR-23 → USB device was not formatted properly. □ Format the USB device with FAT12, FAT16 or FAT32. □ Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. STOP → There are no songs in the current list. Error messages Common AMP ERROR → This unit fails to operate or the speaker connection is incorrect. □ Turn the ignition switch OFF and back to ON again. If the message remains, contact your dealer or an authorized Pioneer Service Station for assistance.

nO XXXX (NO TITLE, for example) → There is no embedded text information. □ Switch the display or play another track/file. USB device/iPod FORMAT READ → Sometimes there is a delay between the start of playback and when you start to hear any sound. □ Wait until the message disappears and you hear sound.



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)

<http://yourpdfguides.com/dref/5827143>

nO AUDIO → There are no songs. □ Transfer the audio files to the USB device and connect. → The connected USB device has security enabled. □ Follow the USB device instructions to disable the security. Bluetooth device ERROR-10 → The power failed for the Bluetooth module of the unit. □ Turn the ignition switch OFF and back to ACC or ON.

apps NO BT DEVICE GO TO BT MENU TO REGISTER → No Bluetooth device found. □ Connect the unit and the device via Bluetooth (page 8). □ Follow the instructions that appear on the screen. START UP APP → The application has not started running yet. □ Operate the mobile device to start up the application.

□ The settings of the iPod such as the equalizer and repeat play are changed automatically when the iPod is connected to the unit. Once the iPod is disconnected, those settings will return to the original settings. □ Incompatible text saved on the iPod will not be displayed by the unit. 1/48 [kHz] 16 bit 1/2 ch USB device • There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. Playable folder hierarchy Up to eight tiers (A practical hierarchy is less than two tiers.

) Playable folders Up to 500 Playable files Up to 15 000 Playback of copyright- Not compatible protected files Partitioned USB Only the first partition device can be played. English Compressed audio compatibility • Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. □ The unit may not work properly depending on the application used to encode WMA files. □ There may be a slight delay at the start of the playback of audio files embedded with image data, or audio files stored on a USB device with numerous folder hierarchies. □ Russian text to be displayed on this unit should be encoded in one of the following character sets: – Unicode (UTF-8, UTF-16) – A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting MP3 files File extension Bit rate Sampling frequency. □ Firmly secure the USB storage device before driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. □ Depending on the USB storage device, the following problems may occur. □ Files may not be played back properly. □ The device may cause audible interference when you are listening to the radio.

Compatible ID3 tag version iPod compatibility This unit supports only the following iPod models. supported iPod software versions are shown below. Older versions may not be supported. Made for M3u playlist MP3i (MP3 interactive), mp3 PRO WAV files • WAV file formats cannot be connected via MTP. 1 kHz (MS ADPCM) iPod • Do not leave the iPod in places with high temperatures. □ Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. CAUTION • Pioneer cannot guarantee compatibility with all USB mass storage devices, and assumes no responsibility for any loss of data on media players, smartphones, or other devices while using this product. □ Do not leave discs or a USB storage device in any place that is subject to high temperatures. @@ □ FLAC files may not be playable, depending on the encoder.

file extension. @@ wMA files File extension. @@ □ Users of iPod with the Dock Connector should use the CD-IU51. For details, consult your dealer. @@ □ Audiobook, Podcast: Compatible Russian character chart This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

FLAC Copyright © 2000-2009 Josh Coalson Copyright © 2011-2013 Xiph. Org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: – Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. □ Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. □ Neither the name of the Xiph. Org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

□ Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. CAUTION Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. Sequence of audio file depends on the connected device. Note that the hidden files in a USB device cannot be played back. Example of a hierarchy Folder Compressed audio file D: Display C: Character Copyright and trademark Bluetooth The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

01 to 05: Folder number to : Playback sequence iTunes Apple and iTunes are trademarks of Apple Inc. WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. 0 (Free Lossless Audio Codec) (Only for MVH170UI/170UBG/170UB) WAV signal format: Linear PCM & MS ADPCM (Non-compressed) NOTE Specifications and the design are subject to modifications without notice. 0 μV/75 Ω, mono, S/N: 30 dB) Signal-to-noise ratio: 72 dB (IEC-A network) Audio Maximum power output: 50 W × 4 70 W × 1/2 Ω (for subwoofer) Continuous power output: 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 Ω load, both channels driven) Load impedance: 4 Ω (4 Ω to 8 Ω allowable) Preout maximum output level: 2. Vis taraudeuse (5 mm × 8 mm) Support de montage Tableau de bord ou console Utilisation du support inclus Vous pouvez également utiliser le support pour monter l'appareil. Les accessoires électroniques portant la mention « Made for iPod » et « Made for iPhone » ont été conçus pour fonctionner respectivement avec un iPod ou un iPhone et sont certifiés conformes aux exigences d'Apple par le fabricant. □ Made for iPod” y “Made for iPhone” significan que un accesorio electrónico ha sido diseñado para ser conectado específicamente a un iPod o a un iPhone, respectivamente, y ha sido homologado por quien lo desarrolló para cumplir con las normas de funcionamiento de Apple.



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](http://yourpdfguides.com/dref/5827143)

<http://yourpdfguides.com/dref/5827143>

*Die Kennzeichnungen „Made for iPod“ und „Made for iPhone“ bedeuten, dass ein elektronisches Zubehörteil spezifisch zum Anschluss an iPod oder iPhone konstruiert wurde und entsprechend vom Entwickler als die Leistungsstandards von Apple erfüllend zertifiziert wurde. □Made for iPod“ u “Made for iPhone“  
03 .*



[You're reading an excerpt. Click here to read official PIONEER MVH-X370BT user guide](#)

<http://yourpdfguides.com/dref/5827143>