



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER X-EM11. You'll find the answers to all your questions on the PIONEER X-EM11 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PIONEER X-EM11**  
**User guide PIONEER X-EM11**  
**Operating instructions PIONEER X-EM11**  
**Instructions for use PIONEER X-EM11**  
**Instruction manual PIONEER X-EM11**



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)  
<http://yourpdfguides.com/dref/5598697>

**Manual abstract:**

Book Page 2 Thursday, June 7, 2012 9:43 AM **IMPORTANT CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN** The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. d3-4-2-1-1\_A1\_En **WARNING**

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture. D3-4-2-1-3\_A1\_En **VENTILATION CAUTION** When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side). **WARNING** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed.

D3-4-2-1-7b\*\_A1\_En **WARNING** Before plugging in for the first time, read the following section carefully. The voltage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e.

g. , 230 V or 120 V) written on the rear panel. D3-4-2-1-4\*\_A1\_En **WARNING** To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. D3-4-2-1-7a\_A1\_En **Operating Environment** Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked) Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or D3-4-2-1-7c\*\_A1\_En strong artificial light) **CAUTION** This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. This product is for general household purposes.

Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty K041\_A1\_En period. **CLASS 1 LASER PRODUCT** D58-5-2-2a\_A1\_En **WARNING** When using this product, confirm the safety information shown on the bottom of the unit. D3-4-2-2-4\_B1\_En Store small parts out of the reach of children and infants.

Book Page 3 Thursday, June 7, 2012 9:43 AM If the AC plug of this unit does not match the AC outlet you want to use, the plug must be removed and appropriate one fitted. Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

If connected to an AC outlet, the cut-off plug can cause severe electrical shock. Make sure it is properly disposed of after removal. The equipment should be disconnected by removing the mains plug from the wall socket when left unused for a long period of time (for example, when on D3-4-2-2-1a\_A1\_En vacation). **CAUTION** The **STANDBY/ON** switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation). D3-4-2-2-2a\*\_A1\_En **POWER-CORD CAUTION** Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc.

, on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement. S002\*\_A1\_En **Condensation** If the unit is moved suddenly from a cold place into a warm room (in winter, for example) or if the temperature in the room in which the player is installed rises suddenly due to a heater, etc. , water droplets (condensation) may form inside (on operating parts and the lens). When condensation is present, the player will not operate properly and playback is not possible. Let the player stand at room temperature for 1 or 2 hours with the power turned on (the time depends on the extent of condensation).

The water droplets will dissipate and playback will become possible. Condensation can also occur in the summer if the player is exposed to the direct wind from an air-conditioner. If this happens, move the player to a different place. S005\_A1\_En [European model only] **Information for users on collection and disposal of old equipment and used batteries** Symbol for equipment These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

**Symbol examples for batteries** By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. These symbols are only valid in the European Union. For countries outside the European Union: If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal. And Canadian model only] This Class B digital apparatus complies with Canadian ICES-003.

D8-10-1-3\_A1\_En **The Safety of Your Ears is in Your Hands** Get the most out of your equipment by playing it at a safe level – a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. sound can be deceiving. Over time, your hearing "comfort level" adapts to higher volumes of sound, so what sounds "normal" can actually be loud and harmful to your hearing.



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)

<http://yourpdfguides.com/dref/5598697>

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. ESTABLISH A SAFE LEVEL: • Set your volume control at a low setting. □ Slowly increase the sound until you can hear it comfortably and clearly, without distortion. □ Once you have established a comfortable sound level, set the dial and leave it there. BE SURE TO OBSERVE THE FOLLOWING GUIDELINES: • Do not turn up the volume so high that you can't hear what's around you. • Use caution or temporarily discontinue use in potentially hazardous situations. □ Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

Model only] 1) 2) 3) 4) 5) 6) 7) Read these instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. install in accordance with the manufacturer's instructions. 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer. 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. D3-7-13-69\_En This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: — Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help.

D8-10-1-2\_A1\_En Information to User Alterations or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment. D8-10-2\_A1\_En WARNING: Handling the cord on this product or cords associated with accessories sold with the product may expose you to chemicals listed on proposition 65 known to the State of California and other governmental entities to cause cancer and birth defect or other reproductive harm.

D36-P5\_B1\_En CAUTION This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections. Book Page 6 Thursday, June 7, 2012 9:43 AM Thank you for buying this Pioneer product. Please read through these operating instructions so that you will know how to operate your model properly. After you have finished reading the instructions, put them in a safe place for future reference. Overview of the main unit . 24 Do not place objects on this unit . Searching for RDS programs (European model only). 08 Adjusting sound Adjusting the volume level . Book Page 7 Thursday, June 7, 2012 9:43 AM Before you start 01 Chapter 1: English Before you start Introduction With this system, you can: •fluorescent light nearby.

If this happens, move the product away from the fluorescent light. Overview of the remote control 10 □ 1 2 3 4 • Open or close the disc tray. 11 Main display 12 Disc tray • Place the disc with the label side up. Press and hold to play forward quickly within a track. Book Page 11 Thursday, June 7, 2012 9:43 AM Part names and functions 02 1 2 3 4 □ STANDBY/ON • Switch between standby and on.

15 □ MODE • Use to select the play mode of each input source. • [DISC] Repeat 1 □ Repeat all □ Random □ (Back to beginning) • [USB] Repeat 1 □ Repeat album □ Repeat all □ Random □ (Back to beginning) • [iPod] (X-EM21 only) Repeat 1 □ Repeat all □ Random □ (Back to beginning) • Use to stop playback. □ In the standby mode, press and hold to enable or disable the feature demonstration. □ In the working mode, press to display the clock for a while. □ In the standby mode, press and hold to set the clock.

Press and hold to play quickly within a track. 19 PTY/ASPM (European model only) • Search for RDS program types. □ Press and hold to search for the RDS auto station program memory. 6 • Skip to the previous or next album. (X-EM21 only) □/□ 20 RDS (European model only) • Display the available information of an RDS radio station. 7 • Use to play , pause , or resume playback. □ In the standby mode, press and hold to switch APS between on and off. □ Enter the track number to select a track directly. □ Enter the sequence number to select a preset radio station. 11 □ OPEN/CLOSE 12 SLEEP/TIMER • Open or close the disc tray.

□ Set the sleep timer in the working mode. Book Page 12 Thursday, June 7, 2012 9:43 AM 03 Connections Chapter 3: Connections Connect speakers Note • For the best sound quality, use the supplied speakers only. □ Connect speakers with the same or higher impedance only. refer to Additional information > Specifications for details.



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)

<http://yourpdfguides.com/dref/5598697>

□ To avoid magnetic interference or unwanted noise, never place this product too close to any radiation devices. L L FM antenna installation Note • The antenna on the back panel is used to improve reception of FM. Extend this antenna and fix it to a position with the best reception. □ Never tug strongly on the antenna line since damage of an antenna may be caused. Connect the speaker cable plugs to the SPEAKER OUT sockets. □ the left one to the L+/L- socket • the right one to the R+/R- socket FM ANT.

AC IN Connect power Note • Before you connect the AC power cord, make sure that you have completed all other connections. And Canadian model European model To the wall outlet AC IN Connect the AC power cord to • the AC IN~ socket on the back panel, and • the wall outlet. Book Page 13 Thursday, June 7, 2012 9:43 AM Getting started 04 Chapter 4: English Getting started CAUTION • Use of controls or adjustments or performance of procedures other than herein expressly specified may result in hazardous radiation exposure or other unsafe operation. Always follow the instructions in this chapter in sequence. selecting a source Press INPUT repeatedly to select a source.

□ [DISC]: the disc in the disc tray • [USB]: . wma/. @@@@ – The clock is displayed. □ If the clock is not set, [---] blinks. @@@@ the minute digits blink.

@@@@ 2 3 4 Press □ to eject the disc tray. Load a disc with the printed side facing up. Press □ again to close the disc tray. 1 Connect the USB storage device to the USB socket. @@Playback starts automatically after a few seconds. @@Playing from a USB storage device This system can play . mp3 and . @@@@ @@@@Skip to the previous or next track. @@@@Enter the number of a track to play it. select an available play mode.

@@@@@ english Français For a CD 1 Press □ to stop playback. @ @] and [P01] (the sequence number) are displayed with [00] blinking. 4 Press PROGRAM again to program the selected track. @ @] and [P01] are displayed with [A00] blinking. 4 Press PROGRAM again to confirm the selected album. 6 Press PROGRAM again to confirm the selected track. @@Note • No audio output from the PHONES socket in this situation. □ When operating directly on iPod/iPhone, do hold the iPod/ iPhone with the other hand to prevent loose connection. □ iPod/iPhone will not play automatically when docked if the source is not selected as [iPod]. Enjoying audio through the dock Note • The peak current through the dock connector is limited as 1 000 mA for iPod/iPhone. To avoid damage to your iPod/iPhone and this system, securely load your iPod/iPhone as indicated. compatible iPod/iPhone models This system supports the following iPod and iPhone models. □ iPhone 4S • iPhone 4 • iPhone 3GS • iPhone 3G • iPod touch (1st, 2nd, 3rd, and 4th generations) • iPod nano (3rd, 4th, 5th, and 6th generations) • iPod classic Some of the functions may be restricted for some models. □ This system has been developed and tested for the software version of iPod/iPhone indicated on the website of Pioneer. Jp/homeav/support/ios/eu/ • Installing software versions other than the ones indicated on the website of Pioneer to your iPod/iPhone may result in incompatibility with this system.

1 Press iPod on the remote control or INPUT repeatedly on the main unit to switch the source to [iPod]. 2 3 4 Remove the terminal cover from the dock. Connect your iPod/iPhone to the dock. Play a track on your iPod/iPhone. Book Page 17 Thursday, June 7, 2012 9:43 AM Using the dock (X-EM21 only) 06 Charging your iPod/iPhone Once the iPod/iPhone is docked and recognized, charging starts.

English Unloading your iPod/iPhone Français Note • Risk of damage to the dock or your iPod/iPhone: Do not twist or shake your iPod/iPhone during unloading. 1 2 Pull the iPod/iPhone out of the dock. Attach the terminal cover to the dock. Book Page 18 Thursday, June 7, 2012 9:43 AM 07 Listening to the FM radio Chapter 7: Listening to the FM radio Tuning to an FM radio station Note • Make sure that you have connected and fully extended the FM antenna. Display RDS information (European model only) RDS (Radio Data System) is a service that allows FM stations to show additional information. If you tune to an RDS radio station, [RDS] and the station name are displayed. 1 Press TUNER on the remote control or INPUT repeatedly on the main unit to switch the source to tuner. 2 Press and hold □/□ until the frequency starts to change. • To tune to a station at a specific frequency , press □/□ repeatedly until the desired frequency is displayed. Tip • In the FM mode, you can press TUNER repeatedly to switch the sound setting between [FM ST] (stereo) and [FM MONO] (monophonic).

1 Tune to an RDS radio station. 2 Press RDS repeatedly to scroll through the available information: • Station name • Program type such as [NEWS] (news), [SPORT] (sport), [POP M] (pop music). □ Text messages • Frequency Searching for RDS programs (European model only) You can search for a program type. programming radio stations Note • You can program up to 20 preset radio stations. □ To overwrite a programmed radio station, store another one with its sequence number. 2 Press □/□ to select the program type you want to hear. 3 Press PTY/ASPM to search for the program type. The system starts searching in the station presets. If [NO FOUND] is displayed, it means the tuner couldn't find that program type at the time of the search. 3 Press □/□ to allocate a sequence number from 1 to 20 to this radio station, and then press PROGRAM to confirm.

The preset sequence number and the frequency of this radio station are displayed. ASPM (Auto Station Program Memory) (European model only) You can program up to 20 preset RDS stations. All the available RDS stations are programmed. (up to 20 stations) Tuning to a preset radio station • Press □/□ to select the sequence number of that preset radio station. □ Enter its sequence number with numeric keypad.

Book Page 19 Thursday, June 7, 2012 9:43 AM Adjusting sound 08 Chapter 8: English Adjusting sound The following operations are applicable to all supported media. Français Adjusting the volume level • On the remote control, press VOL +/- repeatedly. □ On the main unit, rotate VOLUME clockwise or counterclockwise. □ When the power is turned off (to the standby mode) with the volume set high, the volume is set to a moderate level when the power is turned back on. español P.

BASS control When the power is first turned on, the unit will enter the P. BASS mode which emphasizes the bass frequencies. BASS on the main unit or remote control. Book Page 20 Thursday, June 7, 2012 9:43 AM 09 Other features Chapter 9: Other features Turn on/off automatically You can set a time for automatic power on and off. Note • Make sure that you have set the clock before this setup. Setting the sleep timer In the working mode, press SLEEP/TIMER repeatedly to select a preset period (15, 30, 45, 60, or 90 minutes).

1 Tune to an RDS radio station. 2 Press RDS repeatedly to scroll through the available information: • Station name • Program type such as [NEWS] (news), [SPORT] (sport), [POP M] (pop music). □ Text messages • Frequency Searching for RDS programs (European model only) You can search for a program type. programming radio stations Note • You can program up to 20 preset radio stations. □ To overwrite a programmed radio station, store another one with its sequence number. 2 Press □/□ to select the program type you want to hear. 3 Press PTY/ASPM to search for the program type. The system starts searching in the station presets. If [NO FOUND] is displayed, it means the tuner couldn't find that program type at the time of the search. 3 Press □/□ to allocate a sequence number from 1 to 20 to this radio station, and then press PROGRAM to confirm.

The preset sequence number and the frequency of this radio station are displayed. ASPM (Auto Station Program Memory) (European model only) You can program up to 20 preset RDS stations. All the available RDS stations are programmed. (up to 20 stations) Tuning to a preset radio station • Press □/□ to select the sequence number of that preset radio station. □ Enter its sequence number with numeric keypad.

Book Page 19 Thursday, June 7, 2012 9:43 AM Adjusting sound 08 Chapter 8: English Adjusting sound The following operations are applicable to all supported media. Français Adjusting the volume level • On the remote control, press VOL +/- repeatedly. □ On the main unit, rotate VOLUME clockwise or counterclockwise. □ When the power is turned off (to the standby mode) with the volume set high, the volume is set to a moderate level when the power is turned back on. español P.

BASS control When the power is first turned on, the unit will enter the P. BASS mode which emphasizes the bass frequencies. BASS on the main unit or remote control. Book Page 20 Thursday, June 7, 2012 9:43 AM 09 Other features Chapter 9: Other features Turn on/off automatically You can set a time for automatic power on and off. Note • Make sure that you have set the clock before this setup. Setting the sleep timer In the working mode, press SLEEP/TIMER repeatedly to select a preset period (15, 30, 45, 60, or 90 minutes).



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)

<http://yourpdfguides.com/dref/5598697>

When the sleep timer is activated, [SLEEP] is displayed on the upper-right corner of the main display. □ To deactivate the sleep timer, press SLEEP/TIMER repeatedly until [SLEEPOFF] is displayed. 1 In standby mode, press and hold SLEEP/TIMER. [TIMER ON] (time for auto power on) blinks.

Routing audio from other devices Through the AUX IN socket The hour digits blink. the minute digits blink. 6 Press SLEEP/TIMER to confirm the time for auto power on. [TIMER ON] blinks. □ If you want to set the power-off time, press □ □/ □ □ □ to select [TIMER OFF] (time for auto power off), and then repeat steps 2-6. 1 Connect a stereo mini-plug cable (commercially available) to • the AUX IN socket on the front panel of the main unit, and • the headphones socket on the external device (for example, an MP3 player). 9 Select the input ([DISC], [USB], [iPod] or [FM]) by pressing INPUT on the main unit or one of the input function buttons on the remote control. □ For the tuner source, you still need to press □ □/ □ □ □ to select a programmed radio station. □ [iPod] can only be selected on the X-EM21. 10 Press SLEEP/TIMER.

The clock time is displayed. • To deactivate the timer, press SLEEP/TIMER again. □ The power cannot be turned on while the timer is being set. Finish setting the time, then turn on the power. 2 Press AUX on the remote control or INPUT repeatedly on the main unit to switch the source to [AUX IN]. Book Page 21 Thursday, June 7, 2012 9:43 AM Other features 09 Listening through the headphones Plug your headphones into the PHONES socket on the front panel of the main unit. Note • No audio output from the headphones socket when you listen to the docked iPod/iPhone. Book Page 22 Thursday, June 7, 2012 9:43 AM 10 Additional information Chapter 10: Additional information USB playability information Compatible USB devices: • USB flash memory (USB1.0 (Full Speed)) • Memory cards (an additional card reader is required) Supported formats: • USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes) • MP3 bitrates (data rates): 32 kbps to 320 kbps and variable bitrates • WMA v9 or earlier • Directory nesting up to 8 levels • Number of albums/folders: maximum 99 • Number of tracks/files: maximum 999 (depending on file name length) • ID3 tag v2.0 or later (Only English letters and numbers are supported).

• File name in Unicode UTF8 (maximum length: 16 bytes) Audio files cannot be played depending on the encoding software settings, USB device type, recording, other conditions. Unsupported formats: • Empty albums: an album that does not contain MP3/WMA files • Unsupported file formats are skipped. DJF are ignored and not played. 1 kHz, 48 kHz • Supported bitrates: 32 kbps to 320 kbps, variable bitrates Audio files cannot be played depending on the encoding software settings, USB device type, recording, other conditions. Book Page 23 Thursday, June 7, 2012 9:43 AM Additional information 10 Troubleshooting WARNING • Never remove the casing of this apparatus. Incorrect operation is often mistaken for trouble or malfunction. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Inspect the other components and electrical appliances being used. If the trouble cannot be rectified even after checking the points below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.

□ If the unit does not operate normally due to external effects such as static electricity, disconnect the power plug from the outlet and insert it again to return to normal operating conditions. english Français Problem No power. Solution Make sure that the AC power cord is connected properly. Make sure that there is power at the AC outlet. With a power-saving feature, the system switches off automatically 15 minutes after the system stays inactive. Español No sound or poor sound. Make sure that the speakers are connected correctly. no response from the system. Reconnect the AC power plug, and then turn on the system again. With a power-saving feature, the system switches off automatically 15 minutes after the system stays inactive.

remote control does not work. Before you press any function button, select the correct source with the remote control instead of the main unit. Reduce the distance between the remote control and the main unit. Aim the remote control directly at the sensor on the front panel of the main unit. Make sure that you place the disc with its label facing upwards.

Wait until the moisture condensation at the lens has cleared. replace or clean the disc. Make sure that the recordable disc is finalized and the format is supported. uSB storage device is not supported. Make sure that the USB storage device is compatible with the system. try another one. Cannot play some files on the USB storage device. radio reception is poor. Make sure that the file format is supported. Make sure that the file quantity does not exceed the maximum. Increase the distance between the system and other electrical appliances. Solution Power has been interrupted or the AC power cord has been disconnected. The iPod or iPhone is not properly connected to the unit. Is the AC power cord of the unit plugged in? Audio from the iPod/iPhone cannot be heard via the headphones connected to the unit. iPod or iPhone will not charge.

The iPod or iPhone is not making full contact with the connector. The iPod or iPhone is not supported. refer to page 16 for compatible models. □ This accessory is not made to work with The iPhone battery is low. please charge the iPhone. iPhone™ or “This accessory is not supported by iPhone” appears on iPhone iPhone is not properly docked. screen. Cautions on use When moving this unit When moving this unit, be sure to first check that there is no disc loaded and disconnect the iPod/iPhone. Then press □ STANDBY/ON, wait until [GOOD BYE] disappears on main display to turn off, and then unplug the power cord. Damage may occur if the unit is transported or moved with a disc inserted, or when another device is connected to the iPod/iPhone connector port, USB terminal, or AUX IN miniplug jack.

Do not place objects on this unit Do not place any objects on top of this unit. Do not obstruct the ventilation holes. Do not use this unit on shaggy rugs, beds, sofas, etc., or wrapped in cloth, etc. Doing so will prevent the heat from dispersing, leading to damage. do not expose to heat. Do not place this unit on top of an amplifier or other components that generate heat. When rack mounting it, to avoid the heat given off by the amplifier or other audio components, place it on a shelf below the amplifier. □ Turn off the power of this unit when not using it. @@ If this happens, turn off the power of this unit.

@@ □ Do not place this unit on top of a TV or color monitor. @@@@ Book Page 25 Thursday, June 7, 2012 9:43 AM Additional information 10 Cleaning the product • Unplug the power cord from the power outlet when cleaning this unit.



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)  
<http://yourpdfguides.com/dref/5598697>

□ Clean this unit using a soft cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, and then wipe again with a soft, dry cloth. • Alcohol , thinner , benzene , insecticides , etc. , could cause the print or paint to peel off. Also, leaving rubber or vinyl products in contact with this unit for long periods of time could mar the cabinet. • When using chemical-impregnated wipes , etc. , read the cautions included with the wipes carefully. □ Do not attach pieces of paper or stickers to discs.

Doing so could warp discs, making it impossible to play them. Also, note that rental discs often have labels attached to them, and the glue of the label may have oozed out. Check that there is no glue around the edges of such labels before using rented discs. english Français About specially shaped discs Specially shaped discs (heart-shaped , hexagonal , etc. ) cannot be played on this unit. Do not attempt to play such discs, as they could damage this unit. Cleaning the lens • The lens of this unit should not become dirty in normal use, but if for some reason it should malfunction due to dust or dirt, consult your nearest Pioneer authorized service center. Although lens cleaners for players are commercially available, we advise against using them since some may damage the lens. Español Handling discs Storing • Always place discs in their cases and store them vertically, avoiding hot, humid places, places exposed to direct sunlight and extremely cold places. □ Be sure to read the cautions included with the disc.

About iPod/iPhone Cleaning discs • Discs may not play if there are fingerprints or dust on them. In this case, use a cleaning cloth, etc. , to gently wipe the disc from the inside towards the outside. Do not use dirty cleaning cloths. □ Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Do not use benzene, thinner or other volatile chemicals. Also, do not use record spray or antistatic agents.

□ For tough dirt, apply some water to a soft cloth, wring out thoroughly, wipe off the dirt, and then wipe off the moisture with a dry cloth.

• Do not use damaged (cracked or warped) discs. □ Do not let the signal surface of discs get scratched or dirty. , at 8 ohms, 1 kHz with no more than 5 % total harmonic distortion. \* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers • Disc Disc diameter . 93 lb) x 2 Note • The specifications and design of this product are subject to change without notice. □ Corporation and product names mentioned herein are trademarks or registered trademarks of the respective corporations. □ This accessory is not made to work with La batterie de iPhone est faible.

Book Page 21 Thursday, June 7, 2012 10:04 AM Información adicional 10 Solución de problemas ADVERTENCIA • No quite nunca la caja de este aparato.

□ This accessory is not made to work with iPhone” o “This accessory is not supported by iPhone” Aparece en la pantalla del iPhone. .



[You're reading an excerpt. Click here to read official PIONEER X-EM11 user guide](http://yourpdfguides.com/dref/5598697)

<http://yourpdfguides.com/dref/5598697>