



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER XV-DV303. You'll find the answers to all your questions on the PIONEER XV-DV303 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER XV-DV303  
User guide PIONEER XV-DV303  
Operating instructions PIONEER XV-DV303  
Instructions for use PIONEER XV-DV303  
Instruction manual PIONEER XV-DV303



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>



















..... 60 Moving the unit .

.....  
.....  
.....

.. 60 Additional connections .....

.....  
.....  
.....

..... 61 Connecting external antennas ...

.....  
.....  
.....

. 61 Connecting auxiliary components .....

.....  
.....  
.....

61 Troubleshooting .....

.....  
.....  
.....  
.....

... 63 General .....

.....  
.....  
.....

..... 63 DVD/CD/Video CD player .

.....  
.....  
.....

..... 64 Tuner .....

.....  
.....  
.....

..... 65 Error Messages .....

.....

.....  
.....  
.....

..... 65 Screen sizes and disc formats .

.....  
.....  
.....

.. 66 Widescreen TV users .....

.....  
.....  
.....

..... 66 Standard TV users ...

.....  
.....  
.....

66 Language code list .....

.....  
.....  
.....

..... 67 Country code list ..

.....  
.....  
.....  
.....

.... 67 Preset Code List .

.....  
.....  
.....

. 68 Glossary .....

.....  
.....  
.....

. 70 Specifications .....

.....  
.....  
.....

.. 72 Power cord caution .....

.....  
.....  
.....

..... 73 08 Adjusting the sound Adjusting the bass and treble ..

.....

.....

.....

... 47 Adjusting the effect level .....

.....

.....

.....

..... 47 Boosting the bass level ....

.....

.....

.....

.....

.. 47 Using Midnight and Quiet listening .....

.....

.. 48 Muting the sound ...

.....

.....

.....

.....

.....

.. 48 Reducing the TV and line signal levels .....

.. 48 09 Using the timer Setting the wake-up timer ...

.....

.....

.....

... 49 Turning the wake-up timer on/off ..

.....

..... 50 Setting the sleep timer ...

.....

.....

.....

.....

... 50 10 The Initial Settings menu Using the Initial Settings menu .....

.....

.....

..... 51 Video settings .....

.....

.....

.....

.....

.....

.....

. 51 TV Screen ....

.....

.....

.....

.....

.....

..... 51 S Video Out ..

.....

.....

.....

.....  
.....  
.....  
..... 52 Language settings ...

.....  
.....  
.....  
.....

.....  
52 Audio Language .....

.....  
.....  
.....

. 52 Subtitle Language .....

.....  
.....  
.....

..... 52 DVD Menu Language .

.....  
.....  
.....  
.....

.. 53 Subtitle Display .....

.....  
.....  
.....

.....  
53 Display settings .....

.....  
.....  
.....  
.....  
.....

... 53 OSD Language .....

.....  
.....  
.....

.....  
.. 53 On Screen Display ...

.....  
.....  
.....

..... 53 Angle Indicator .....

.....  
.....  
.....  
.....

..... 54 Options ..

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....

*54 Parental Lock .*



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)  
<http://yourpdfguides.com/dref/2443634>

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 54 5 En 01 Before you start Introduction to home theater You are probably used to using stereo equipment to listen to music, but may not be used to home theater systems that give you many more options (such as surround sound) when listening to soundtracks. Home theater refers to the use of multiple audio channels to create a surround sound effect, making you setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information. · Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

7 En 01 Before you start · There are many different recording bitrates available to encode your MP3 files. This unit was designed to be compatible with all of them. Audio encoded at 128Kbps should sound close to regular CD Audio quality. This player will play lower bit-rate MP3 tracks, but please note that the sound quality becomes noticeably worse at lower bit-rates. DVD Video regions All DVD Video discs carry a region mark on the case somewhere that indicates which region(s) of the world the disc is compatible with. Your DVD player also has a region mark, which you can find on the rear panel. Discs from incompatible regions will not play in this player. Discs marked ALL will play in any player. The diagram below shows the various DVD regions of the world.

Titles, chapters and tracks DVD discs are generally divided into one or more titles.

Titles may be further subdivided into chapters. Title 1 Title 2 Title 3 Chapter 1 Chapter 2 Chapter 3 Chapter 1 Chapter 1 Chapter 1 Chapter 2 CDs and Video CDs are divided into tracks. Track 1 Track 2 Track 3 Track 4 Track 5 Track 6 CD-ROMs containing MP3 files are divided into folders and tracks. Folders may also contain further subfolders. mp3 mp3 mp3 mp3 mp3 mp3 Folder A Track 1 Track 2 Track 3 Folder B Track 1 Folder C Track 1 Track 2 8 En Controls and displays 02 Front panel English 1 OPEN/CLOSE 0 7 2 3 DVD/CD ¶6 4 FM/AM TUNER DOWN 5 VOLUME -- UP 6 STANDBY/ON + PHONES 7 8 9 1 OPEN/CLOSE Opens the disc tray 2 7 Stops playback 3 DVD/CD / 6 Switches to the DVD/CD function and starts/pauses/resumes playback 4 FM/AM (TUNER) Switches to the tuner function and toggles between the AM and FM bands 5 VOLUME buttons Adjusts the volume 6 STANDBY/ON Switches the player on or into standby 7 Remote sensor 8 Timer indicator Lights when the timer is set 9 PHONES jack Headphone jack 9 En 02 Controls and displays Remote control 3 DVD buttons AUDIO Selects the audio channel or language (page 32) SUBTITLE Selects a subtitle display (page 32) STANDBY/ON 1 2 3 4 5 6 7 8 9 SOUND MODE DVD/CD FM/AM TV L1/L2 LINE ANGLE Changes the camera angle during DVD multi-angle scene playback (page 33) ZOOM Changes the zoom level (page 32) 4 Sound mode buttons AUTO Automatically selects a decoding format depending on the source (pages 4345) SURROUND

Selects a surround mode (pages 4345) ADV.

SURROUND Selects a DSP mode (pages 4344, 46) 5 ROOM SETUP Press to automatically adjust the surround sound settings according to your room type (S, M, or L) (page 15) AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED 14 15 16 17 BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER RETURN TUNE 10 /e 18 E/ 11 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM ¶ CLEAR 12 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME 13 SHIFT 19 6 BASS MODE Press to bring up the low end for certain kinds of music or sound sources (page 47) 7 VOLUME Adjusts the volume 8 DVD SETUP Displays (or exits) the on-screen DVD display 1 STANDBY/ON Switches the player on or into standby 2

Function select buttons Selects the source you want to listen to 10 En Controls and displays 02 SYSTEM SETUP (SHIFT+DVD SETUP) Press to make various system settings in standby; choose your surround sound settings when the unit is switched on 9 ENTER, TUNE & cursor control buttons Navigates on-screen displays and menus; ENTER selects an option or executes a command 10 SOUND MODE Adjusts the tone and effect level (page 47) 11 Playback controls 3 Starts/resumes playback 1 and /e Use for reverse slow motion playback, frame reverse and reverse scanning ; and E/ Use for forward slow motion playback, frame advance and forward scanning 4 / FOLDER Jumps to the beginning of the current chapter/track (or folder by pressing SHIFT + 4), then to previous chapters/tracks/folders ¶ / FOLDER + Jumps to the next chapter/track (or folder by pressing SHIFT + ¶ ) 8 Pauses playback; press again to restart 7 Stops playback 12 Number buttons and SHIFT functions The number buttons can be used for selecting tracks directly, the functions above the buttons are accessed by pressing SHIFT at the same time as the button. PROGRAM Use to program/play a program list (pages 3031) REPEAT Selects a repeat play mode (page 26) RANDOM Selects a random play mode (page 27) TEST TONE Outputs the test tone (for speaker setup) (pages 4142) CH LEVEL Press to adjust the speaker level (page 42) TIMER Selects the timer menu (pages 4950, 15) DVD DISP Changes the displayed information on the display (pages 3334) DIMMER Makes the fluorescent display (FL) dimmer or brighter (page 57) CLEAR Clears an entry ENTER Selects menu options, etc. (works exactly the same as the ENTER button in 9 above) 13 SHIFT Press to access the functions/commands written in green on the remote English 11 En 02 Controls and displays 14 QUIET/MIDNIGHT Adjusts the sound for low listening levels (page 48) 15 MUTE Mutes the volume 16 SYSTEM DISP Switches between information and clock displays 17 DVD MENU Displays the DVD menu (for CDs, Video CDs and MP3 discs, the Disc Navigator screen appears) TOP MENU (SHIFT + DVD MENU) Displays the top menu of a DVD disc 18 RETURN Press to return to a previous menu screen 19 TV CONTROL Switches the TV on or into standby INPUT SELECT Switches the TV input CHANNEL +/- Selects channels on the TV VOLUME +/- Adjusts the volume on the TV Display 1 2 3 4 5 6 7 8 9 MIDNIGHT QUIET MP3 PGM RPT - 1 RDM ATT kHz MHz 96kHz PRO LOGIC DIGITAL ADV.SURR. 10 11 12 13 3 QUIET Lights when the Quiet mode is switched on 4 MP3 Lights during playback of an MP3 disc 1 3 Lights during playback of a CD, VCD, DVD or MP3 2 MIDNIGHT Lights during Midnight listening 12 En Controls and displays 02 5 PGM Lights during program play 6 RPT-1 RPT lights during repeat play (RPT-1 lights during repeat one-track play) 7 RDM Lights during random playback 8 ATT Lights when you attenuate (reduce) the line signal level (can only be used with an analog signal) 9 Surround sound indicators 2 PRO LOGIC II This lights to indicate Dolby Prologic II decoding 2 DIGITAL This lights to indicate decoding of a Dolby Digital\*1 signal 96kHz Lights when a 96kHz source is detected (won't light if the source is copyprotected) ADV.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)  
<http://yourpdfguides.com/dref/2443634>

*SURR Lights when one of the Advanced Surround listening modes is selected DTS This lights to indicate decoding of a DTS\*2 signal Speaker indicators ( ) These indicate either stereo ( ) or multichannel (all speakers light in the display) listening 13 Character display 11 10 Even when all indicators are lit, you may not hear sound from all the speakers in your setup. Tuner indicators European model only Lights when in one of the RDS display or search modes English Lights when a broadcast is being received Lights when a stereo FM broadcast is being received in auto stereo mode Lights when FM mono reception is selected Timer indicators Lights when the wake-up timer is active Lights when the timer is set Lights when the sleep timer is active 12 Lights during multi-angle scenes on a DVD disc \*1 Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. \*2 "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc. 13 En 03 Getting started Setting the unit to match your TV system When you switch on the system for the first time, you should see a welcome screen displayed on your TV. From here you can set up the player to work with the kind of TV you have. After this, use the Quick Room Setup (next page) to jump right in and start playing some discs. VOLUME SYSTEM SETUP TUNE + 3 Use the / (cursor left/right) buttons to select either 'Wide screen' or 'Standard size screen' according to the kind of TV you have, then press ENTER. See also Screen sizes and disc formats on page 66 if you're not sure which one to choose. Let's Get Started Menu What kind of TV do you have? TOP MENU Use the / cursor buttons DVD SETUP ST DVD MENU ST+ to choose, then press [ENTER] ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 7 ; FOLDER + Wide screen (16:9) Standard size screen (4:3) 4 & 1 European model only: Use the / buttons (cursor up/down) to choose a language.*

*Hello! Select the display language using the cursor keys on the remote English français Deutsch Italiano Español 4 Press ENTER again to finish setting up. Let's Get Started Menu Setup complete If you're finished setting up, choose [Complete], to start again choose [Back] Complete Back Choose one then press Enter 2 Press ENTER to move on to the next screen. · Select BACK then press ENTER if you want to go back and change the setting you just made. Welcome to Pioneer DVD! Thank you for purchasing this Pioneer DVD player. Before using, please take a little time to setup your DVD player Put the batteries into the remote control Next, press the [ENTER] button on the remote control and start the Let's Get Started Menu Next 14 En Getting started 03 Using the Quick Room Setup · Default setting: M (not applicable to the European model--see note below) Depending on the distance of your speakers from the listening position, choose between Small, Medium, or Large (see the following table). · Press ROOM SETUP repeatedly to select your room type then press ENTER. Setting the clock English After setting the unit to match your TV system, the first thing to do is to set the clock. This only needs to be done once (unless all power to the unit is cut) and will enable you to use the timer features. STANDBY/ON S Front Center Surround M 1.8m (6 ft) 1.*

*5m (5 ft) 1.8m (6 ft) L 1.8m (6 ft) 1.5m (5 ft) 2.7m (9 ft) DVD/CD FM/AM TV L1/L2 LINE 1. 8m (6 ft) 1.5m (5 ft) 0.9m (3 ft) AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 7 RANDOM & CLEAR · The channel levels will also be adjusted according to the distance setting. · If you have already set the channel levels manually (see Setting the relative volume level of each channel on page 41), you will see ROOM in the display when you first press the ROOM SETUP button. European model only · Since the default channel levels are not the same as the channel levels for any of the room setup options, ROOM will show in the display when you first press the ROOM SETUP button.*

*See Setting the relative volume level of each channel on page 41 for more on individual channel level settings. 1 PROGRAM 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT Press TIMER (SHIFT+6). 2 If CLOCK ADJ isn't already selected, use the / buttons to select it. 3 4 5 Press ENTER. Use the / buttons to set the hour. Press ENTER. 15 En 03 Getting started 6 Use the minute. / buttons to set the Setting up the remote to control your TV You can set up the supplied remote to control your TV. Here's how to set it up. 1 Switch on your TV.*

*7 Press ENTER to confirm. The display flashes to indicate the clock is set. · Press SYSTEM DISP anytime to cycle through display options to show the current time. See Displaying disc information on pages 3334 for more on this. 2 Find the name of the manufacturer of your TV in the Preset Code List on page 68-69. Next to each manufacturer is one or more three digit codes. These tell the remote what kind of TV you have. If the name of the manufacturer of your TV does not appear in the table, you won't be able to set up this remote to control your TV. 3 Point the remote at your TV, hold down the CLEAR button, then enter the three digit code for your TV. The remote transmits an on/off signal to the TV.*

*If you've entered the correct code, your TV should switch off. If your TV doesn't turn off, repeat the procedure using the next code in the list until your TV switches off successfully. Once set, you can then use the following individual TV controls. Button What it does Switches your TV on or into standby.*

*CHANNEL +/- Changes the TV channel.*

*VOLUME +/- Adjusts the volume. INPUT Switches the TV's input between the built in TV tuner and an external video source. Changing the clock format · Default setting: 12HOUR You can choose to display the clock in either 12 or 24 hour formats. 1 Switch the system into standby. 2 Press SYSTEM SETUP (SHIFT+DVD SETUP).*

*3 Use the / buttons to select hour format (Default setting: 12HOUR). The current clock format is shown in the display. 4 Use the / buttons to select either 12 or 24 hour clock format. 5 Press ENTER to confirm. 16 En Getting started 03 Using the on-screen displays English For ease of use, this player makes extensive use of graphical on-screen displays (OSDs).*



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)  
<http://yourpdfguides.com/dref/2443634>



You should get used to the way these work as you'll need to use them when setting up the player, using some of the playback features, such as program play, and when making more advanced settings for audio and video. All the screens are navigated in basically the same way, using the cursor buttons to change the highlighted item and pressing ENTER to select it. QUIET/MIDNIGHT MUTE · Throughout this manual, 'Select' means use the cursor buttons to highlight an item on-screen, then press ENTER. · The button guide at the bottom of every OSD screen shows you which buttons you'll need to use for that screen. Playing discs AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU The basic playback controls for playing DVD, CD, Video CD and MP3 discs are covered here.

Further functions are detailed in the next chapter. 1 If the player isn't already on, press STANDBY/ON to switch it on. If you're playing a DVD or Video CD, also turn on your TV and make sure that it is set to the correct video input. 2 Press 0 OPEN/CLOSE to open the disc tray. 3 Load a disc. Load a disc with the label side facing up, using the disc tray guide to align the disc (if you're loading a double-sided DVD disc, load it with the side you want to play face down).

DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM ¢ CLEAR 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 9 0 Button DVD SETUP What it does Displays/exits the on-screen display Changes the highlighted menu item ENTER Selects the highlighted menu item (both ENTER buttons work in exactly the same way) Returns to the main menu without saving changes RETURN 17 En 03 Getting started 4 Press 3 (6) to start playback. If you're playing a DVD or Video CD, a menu may appear. See pages 2021 for how to navigate these. If you're playing an MP3 disc, it may take a few seconds before playback starts, depending on the complexity of the file structure on the disc.

· I have a widescreen TV so why are there black bars at the top and bottom of the screen when I play some discs? Some movie formats are such that even when played on a widescreen TV, black bars are necessary at the top and bottom of the screen. This is not a malfunction. · I have a standard (4:3) TV and set the player to show widescreen DVDs in pan & scan format, so why do I still get black bars top and bottom with some discs? Some discs override the display preferences of the player, so even if you have 4:3 (Pan & Scan) selected, those discs will still be shown in letterbox format. This is not a malfunction. · After I load a DVD disc, it ejects automatically after a few seconds! Most likely, the disc is the wrong region for your player.

The region number should be printed on the disc; check it against the region number of the player (which you can find on the rear panel). See also page 8. If the region number is OK, it may be that the disc is damaged or dirty. Clean the disc and look for signs of damage. See also page 59.

· Why won't the disc I loaded play? First check that you loaded the disc the right way up (label side up), and that it's clean and not damaged. See page 59 for information on cleaning discs. If a disc loaded correctly won't play, it's probably an incompatible format or disc type, such as DVD-Audio or DVD-ROM. See page 6 for more on disc compatibility. 18 En Getting started 03 Basic playback controls The table below shows the basic controls on the remote for playing discs. The following chapter covers more playback features in more detail. Button 3 What it does Starts playback. DVD and Video CD: if the display shows RESUME, playback starts from the resume point. Pauses a disc that's playing, or restarts a paused disc. Stops playback.

DVD and Video CD: Display shows RESUME. Press 7 again to cancel the resume function. Press to start fast reverse scanning. Press 3 (play) to resume normal playback. Press to start fast forward scanning. Press 3 (play) to resume normal playback. Skips to the start of the current track or chapter, then to previous tracks/chapters. Skips to the next track or chapter. Skips to the next/previous folder when listening to an MP3 disc. · If the disc is stopped, playback starts from the selected title (for DVD) or track number (for CD/Video CD) after a few seconds (or after pressing ENTER).

· If the disc is playing, playback jumps to the start of the selected chapter or track after a few seconds (or after pressing ENTER). English 8 7 TV L1/L2 LINE STANDBY/ON DVD/CD FM/AM AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP 1 VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE ; RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM ¢ CLEAR 4 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME ¢ FOLDER +/(SHIFT+ 4/¢) Numbers SHIFT 19 En 03 Getting started · With Video CDs, the RESUME function is canceled when you switch to another function. VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ Front panel controls The 0 (OPEN/CLOSE) button opens the disc tray. The 7 (stop), and 6 (play/pause) buttons on the front panel work in exactly the same way as the 7, 3 and 8 buttons on the remote control. OPEN/CLOSE 0 7 DVD/CD ¶6 FM/AM TUNER TUNER DOWN VOLUME -- UP STANDBY/ON 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM ¢ CLEAR 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT + Button PHONES What it does Displays the 'top menu' of a DVD disc--this varies with the disc.

Displays a DVD disc menu-- this varies with the disc and may be the same as the 'top menu' (for CDs, Video CDs and MP3 discs, the Disc Navigator screen appears). Moves the cursor around the screen. TOP MENU (SHIFT+ DVD MENU) DVD MENU · You may find with some DVD discs that some playback controls don't work in certain parts of the disc. This is not a malfunction. DVD-Video disc menus Many DVD-Video discs contain menus from which you can select what you want to watch.

They may give access to additional features, such as subtitle and audio language selection, or special features such as slideshows. See the disc packaging for details. Sometimes DVD-Video menus are displayed automatically when you start playback; others only appear when you press DVD MENU or TOP MENU.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)  
<http://yourpdfguides.com/dref/2443634>

*ENTER RETURN* Numbers Selects the current menu option. Returns to the previously displayed menu screen. Highlights a numbered menu option (some discs only). Press *ENTER* to select. 20 *En Getting started* 03 *Video CD PBC menus* Some Video CDs have menus from which you can choose what you want to watch. These are called *PBC (Playback control)* menus. You can play a *PBC Video CD* without having to navigate the *PBC menu* by starting playback using a number button to select a track, rather than the 3 (6) button.

*Listening to auxiliary components* After you have connected a source to the *LINE* jack(s) on the rear of the unit, you can listen to the auxiliary component(s) by pressing the *LINE* button. If you have chosen to connect your TV (or a component other than the TV) to the TV (*AUDIO*) jacks on the rear panel, press the *TV* button to hear it. English *VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ STANDBY/ON ENTER SOUND MODE TUNE RETURN DVD/CD E/ FM/AM TV L1/L2 LINE /e 1 FOLDER 3 8 REPEAT ; FOLDER + AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE 4 PROGRAM 7 RANDOM & CLEAR AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT* · Press the *LINE* button repeatedly to switch between *LINE 1* (analog) and *LINE 2* (digital). · Press the *TV* button to hear the TV through this system. Button *RETURN* Numbers 4 & What it does Displays the *PBC* menu. Selects a numbered menu option. Displays the previous menu page (if there is one). Displays the next menu page (if there is one). Automatic power on buttons There are a number of buttons other than *STANDBY/ON* ( ) which will switch the unit on. *OPEN/CLOSE* (front panel only), *DVD/CD* (6 on the front panel), *FM/AM*, *TV*, and *LINE* switch the unit on directly into that function.

(In the case of *DVD/CD* (6), if there is a DVD or a CD loaded it will start playing.) 21 *En 04 Playing discs Introduction* With most of the features described in this chapter, you can make use of on-screen displays. For an explanation of how to navigate these, see *Using the on-screen displays* on page 17. Many of the functions covered in this chapter apply to DVD discs, Video CDs, CDs and MP3s, although the exact operation of some varies slightly with the kind of disc loaded. With CDs and MP3 discs, you can use the front panel display instead of the OSD for many features.

Some DVD discs restrict the use of some functions (random or repeat, for example). This is not a malfunction. When playing Video CDs, some of the functions are not available during *PBC* playback. If you want to use them, start the disc playing using a number button to select a track. 1 Press *DVD SETUP* and select 'Disc Navigator' from the on-screen display.

*Play Mode Disc Navigator Initial Settings* 2 Select what you want to play. Depending on the type of disc you have loaded, the Disc Navigator looks slightly different. The screen for DVD discs shows the titles on the left and the chapters on the right. Select a title, or a chapter within a title. Disc Navigator Title 1-10 DVD Title 01 Title 02 Title 03 Title 04 Title 05 Title 06 Title 07 Title 08 Chapter 1-3 Chapter 001 Chapter 002 Chapter 003 Using the Disc Navigator to browse the contents of a disc (Available only when using the OSD) Use the Disc Navigator to browse through the contents of a disc to find the part you want to play. The screen for CDs and Video CDs shows a list of tracks. Disc Navigator Track 1-10 · It's not possible to use the Disc Navigator when playing a Video CD in *PBC* mode, or an unfinalized CD-R/RW disc. CD Track 01 Track 02 Track 03 Track 04 Track 05 Track 06 Track 07 Track 08 22 *En Playing discs 04* The screen for an MP3 disc shows the folder names on the left and the track names on the right. Select a folder, or a track within a folder. Disc Navigator Folder 1-17 MP3 001.

ACP 002. Nth Degree 003. Pfeuti 004. Live 005. Glitch music 006. CodHead 007. Thermo 008. Missing Man Track 1-10 001. Gravity deluxe 002. Tesla's patent 003.

Border dispute 004. Delayed by rain 005. Accident incident 006. Pigeon post 007. Outernational 008.

*Vacuum tube English* · Sound can be heard while scanning audio CDs and MP3 discs. · MP3 discs have one scanning speed only. · There are no subtitles displayed and no sound while scanning DVDs and Video CDs. · Depending on the disc, normal playback may automatically resume when a new chapter is reached on a DVD disc. Playback starts after you press *ENTER*.

*Playing in slow motion* · The disc navigator is not available unless there is a disc loaded. · Another way to find a particular place on a disc is to use one of the search modes. See *Searching a disc* on page 31. You can play DVDs and Video CDs forward or backward at various slow motion speeds. 1 During playback, press 8 (pause). Scanning discs You can fast-scan discs forward or backward at various different speeds. 1 During playback, press 1 or ; (remote) to start scanning. 2 Press repeatedly to increase the scanning speed. · The scanning speed is shown on-screen. 3 To resume normal playback, press 3 (play).

2 Press and hold /e or E/ until slow motion playback starts. · The slow motion speed is shown onscreen. · There is no sound during slow motion playback 3 Press repeatedly to change the slow motion speed. · The slow motion speed is displayed onscreen. 4 To resume normal playback, press 3 (play). 23 *En 04 Playing discs Looping a section of a disc* · Video CD only supports forward slow motion playback. · The picture quality during slow motion playback is not as good as during normal playback. · Depending on the disc, normal playback may automatically resume when a new chapter is reached. The *A-B Repeat* function allows you to specify two points (A and B) within a track (CD and Video CD) or title (DVD) that form a loop which is played over and over. *Frame advance/frame reverse* You can advance or back up a DVD disc frame-by-frame.

With Video CDs, you can only use frame advance. 1 During playback, press 8 (pause). · It's not possible to use *A-B Repeat* when playing an MP3 disc, a Video CD in *PBC* mode, an unfinalized CD-R/RW disc, and some DVDs. 1 During playback, press *DVD SETUP* and select 'Play Mode'. 2 Select 'A-B Repeat' from the list of functions on the left.

*Play Mode* 2 Press /e or E/ to reverse or advance a frame at a time. 3 To resume normal playback, press 3 (play). *A-B Repeat Repeat Random Program Search Mode A(Start Point) B(End Point) Off* · The picture quality when using frame reverse is not as good as frame advance. · Depending on the disc, normal playback may automatically resume when a new chapter is reached.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>

3 Press ENTER on 'A(Start Point)' to set the loop start point.

Play Mode A-B Repeat Repeat Random Program Search Mode A(Start Point) B(End Point) Off 24 En Playing discs 04 4 Press ENTER on 'B(End Point)' to set the loop end point. Play Mode Using the OSD English 1 During playback, press DVD SETUP and select 'Play Mode'. A-B Repeat Repeat Random Program Search Mode A(Start Point) B(End Point) Off 2 Select 'Repeat' from the list of functions on the left. Play Mode A-B Repeat Repeat Title Repeat Chapter Repeat Repeat Off After pressing ENTER, playback jumps back to the start point and plays the loop. The minimum loop time is 2 seconds. 5 To resume normal playback, select 'Off' from the menu. Random Program Search Mode 3 Select a repeat play option. If program play is active, select Program Repeat to repeat the program list, or Repeat Off to cancel. For DVD discs, select Title Repeat or Chapter Repeat (or Repeat Off). Play Mode While the loop is being played, you can press CLEAR to resume normal playback.

Using repeat play There are various repeat play options, depending on the kind of disc loaded. It's also possible to use repeat play together with program play to repeat the tracks/chapters in the program list (see Creating program lists on page 28). A-B Repeat Repeat Random Program Search Mode Title Repeat Chapter Repeat Repeat Off For CDs and Video CDs, select Disc Repeat or Track Repeat (or Repeat Off). It's not possible to use repeat play when playing a Video CD in PBC mode, an unfinalized CD-R/RW disc, and some DVDs. Play Mode A-B Repeat Repeat Random Program Search Mode Disc Repeat Track Repeat Repeat Off 25 En 04 Playing discs For MP3 discs, select Disc Repeat, Folder Repeat or Track Repeat (or Repeat Off). You can't use repeat and random play at the same time. Play Mode A-B Repeat Repeat Random Program Search Mode Disc Repeat Folder Repeat Track Repeat Repeat Off If you switch camera angles during repeat play, repeat play is cancelled. Using random play Use the random play function to play titles or chapters (DVD) or tracks (CD, Video CD and MP3 discs) in a random order. Using the front panel display During playback, press REPEAT (SHIFT+2) select a repeat play option. Press repeatedly to cycle through the different options: During DVD playback Repeat Chapter Repeat Title Repeat Off You can set the random play option when a disc is playing or stopped.

It's not possible to use random play when playing a Video CD in PBC mode, an unfinalized CD-R/RW disc, and some DVDs. Using the OSD 1 Press DVD SETUP and select 'Play Mode'. 2 Select 'Random' from the list of functions on the left. Play Mode During CD/VCD/MP3 playback Repeat Track Repeat Off Repeat Disc Repeat Folder\* \* Available during MP3 playback only To stop repeat play, press CLEAR at any time. A-B Repeat Repeat Random Program Search Mode Random Title Random Chapter Random Off 26 En Playing discs 04 3 Select a random play option.

For DVD discs, select Random Title or Random Chapter (or Random Off) Play Mode During CD/VCD/MP3 playback, random play of all tracks on the disc (or within an MP3 disc folder) begins. To stop random play, press CLEAR at any time. English A-B Repeat Repeat Random Program Search Mode Random Title Random Chapter Random Off To stop the disc and cancel random playback, press 7 (stop). To cancel random playback without stopping playback, press CLEAR. The rest of the disc plays out.

When random play is used with MP3 discs, only tracks from the current folder are played. During random play, the 4 and c buttons function a little differently to normal: 4 returns to the beginning of the current track/chapter. You can't go back further than this. c selects another track/chapter at random from those remaining. For CDs, Video CDs and MP3 discs, select On or Off to switch random play of all tracks on the disc (or within an MP3 disc folder) on or off. Play Mode A-B Repeat Repeat Random Program Search Mode On Off Using the front panel display Press RANDOM (SHIFT+3) select a random play option then press ENTER. During DVD playback, press repeatedly to cycle through the different options: Chapter random play Random Off You can't use random play together with program or repeat play. Title random play 27 En 04 Playing discs Creating program lists This feature lets you program the play order of titles/chapters/folders/tracks on a disc. 3 Select 'Create/Edit' from the list of program options. Play Mode A-B Repeat Repeat Create/Edit Playback Start Playback Stop Program Delete Program Memory Off It's not possible to use program play when playing a Video CD in PBC mode, or an unfinalized CD-R/RW disc.

Random Program Search Mode Using the OSD If you're playing a DVD disc or a Video CD, you should already be using the OSD to navigate the contents. For CDs and MP3 discs (in cases when you're not using the OSD), see Using the front panel display on page 30-31. 1 Press DVD SETUP and select 'Play Mode'. The playlist edit screen that appears depends on the kind of disc loaded. On the left side is the program list, then to the right is a list of titles (if a DVD disc is loaded), tracks (for CDs and Video CDs), or folder names (for MP3 discs). On the far right is a list of chapters (for DVD) or track names (for MP3). 4 Select a title, chapter, folder or track for the current step in the program list. For a DVD disc, you can add a whole title, or a chapter within a title to the program list. To add a title, select the title. With DVDs and Video CDs, you can also press PROGRAM (SHIFT+1) on the remote to skip directly to step 4.

2 Select 'Program' from the list of functions on the left. Play Mode Program Program Step 01. 01 02. 03. 04. 05. 06. 07. 08. Title 1-38 Title 01 Title 02 Title 03 Title 04 Title 05 Title 06 Title 07 Title 08 Chapter 1-4 Chapter 001 Chapter 002 Chapter 003 Chapter 004 A-B Repeat Repeat Random Program Search Mode Create/Edit Playback Start Playback Stop Program Delete Program Memory Off 28 En Playing discs 04 To add a chapter, first highlight the title, then press (cursor right) and select a chapter from the list.

To add a track, first find the folder, then press (cursor right) and select a track name from the list. English Program Program Step 01. 01-003 02. 03. 04. 05. 06. 07. 08. Title 1-38 Title 01 Title 02 Title 03 Title 04 Title 05 Title 06 Title 07 Title 08 Chapter 1-4 Chapter 001 Chapter 002 Chapter 003 Chapter 004 Program Program Step 01.

001-003 02. 03. 04. 05. 06. 07. 08. Folder 1-6 001. ACP 002. Nth Degree 003. Pfeuti 004.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>

Live 005. Glitch music 006. CodHead Track 1-10 001. Gravity deluxe 002.

Tesla's patent 003. Border dispute 004. Delayed by rain 005. Accident incident 006. Pigeon post 007.

Outernational 008. Vacuum tube For a CD or Video CD, select a track to add to the program list. After pressing ENTER to select the title/chapter/folder/track, you'll automatically be taken to the next step in the program list. 5 Repeat step 4 to build up a program list. A program list can contain up to 24 steps. 6 To play the program list, press 3 (play). Program play remains active until you turn off program play (following page), erase the program list (following page), eject the disc or switch off the player. Program Program Step 01. 04 02. 03.

04. 05. 06. 07. 08. Track 1~12 Track 01 Track 02 Track 03 Track 04 Track 05 Track 06 Track 07 Track 08 For an MP3 disc, you can add a whole folder, or a track within a folder to the program list. · To add a folder, select the folder. Editing program lists using the OSD After creating a program list, you can add, delete and change steps. Program Program Step 01. 001 02.

03. 04. 05. 06. 07.

08. Folder 1-6 001. ACP 002. Nth Degree 003. Pfeuti 004.

Live 005. Glitch music 006. CodHead Track 1-10 001. Gravity deluxe 002. Tesla's patent 003. Border dispute 004. Delayed by rain 005. Accident incident 006. Pigeon post 007. Outernational 008.

Vacuum tube 1 Press DVD SETUP and select 'Play Mode'. 2 Select 'Program' from the list of functions on the left. 29 En 04 Playing discs 3 Select 'Create/Edit' from the list of program options. 4 To clear a step, highlight the step number and press CLEAR. 5 To insert a step in the middle of the program list, highlight the step where you want the new step to appear, then select a title/chapter/folder/track to add. After pressing ENTER, the new step is inserted into the list. 6 To add a step to the end of the program list, highlight the next free step then select a title/chapter/folder/track to add. 3 Select a program play function. · Create/Edit See above · Playback Start Starts playback of a saved program list · Playback Stop Turns off program play, but does not erase the program list · Program Delete Erases the program list and turns off program play · Program Memory (DVD only) Select On to save the program list for the disc loaded. (Select Off to cancel the program memory for the disc loaded) Other functions available from the OSD program menu As well as creating and editing a program list, you can start program play, cancel program play, erase the program list, and memorize a program list from the Program menu.

1 Press DVD SETUP and select 'Play Mode'. 2 Select 'Program' from the list of functions on the left. Play Mode · Program lists are saved for the disc loaded.

When you load a disc with a saved program list, program play is automatically turned on. · You can save program lists for up to 24 discs.

After that, the oldest one is replaced with the new one saved. · To save your program list and exit the program edit screen without starting playback, press DVD SETUP (don't press RETURN, your program list won't be saved). · During playback, you can press CLEAR at any time to switch off program play. A-B Repeat Repeat Random Program Search Mode Create/Edit Playback Start Playback Stop Program Delete Program Memory Off Using the front panel display Even though the OSD is available for CDs and MP3 discs, the front panel display provides enough information to make a program list easily. 30 En Playing discs 04 1 Make sure the disc is stopped, then press PROGRAM (SHIFT+1).

You're prompted to enter the first track in the program list. 2 To clear the most recent track in the program, press CLEAR. Press repeatedly to clear several steps. English POO 3 O OO Clearing the program list You must clear the program list to program a new one. · Press CLEAR while the disc is stopped. 2 Use the number buttons to select a folder/track for the current step in the program list then press ENTER. After selecting a folder on an MP3 disc, select a track in the same way. For MP3s you can also use the / buttons to choose folder input mode or track input mode and the / buttons to select folder numbers or track numbers. Searching a disc You can search DVD discs by title or chapter number, or by time. CDs can be searched by track number, and Video CDs by track number or time.

MP3 discs can be searched by folder or track number. PO 1 3 3 · It's not possible to use the search options when playing a Video CD in PBC mode, or an unfinalized CD-R/RW disc. 1 Press DVD SETUP and select 'Play Mode'. 2 Select 'Search Mode' from the list of functions on the left. The search options that appear depend on the kind of disc loaded. The screen below shows the DVD search options. Play Mode Wait for the display to prompt you after completing each selection. If you make a mistake, press CLEAR to delete the last (most recently) programmed track. 3 Repeat step 2 to build up a program list. A program list can contain up to 24 steps.

4 To play the program list, press 3 (play). Program play remains active until you press 7(stop), clear the playlist (see below), eject the disc or switch off the player. Clearing a track from the program list 1 Press PROGRAM (SHIFT+1). A-B Repeat Repeat Random Program Search Mode Title Search Chapter Search Time Search 31 En 04 Playing discs 3 Select a search mode. 4 Use the number buttons to enter a title, chapter, folder or track number, or a time.

Play Mode Switching DVD audio languages When playing a DVD disc recorded with dialog in two or more languages, you can switch audio language anytime during playback. · Press AUDIO repeatedly to select an audio language option. Audio Current /Total 1/2 French Dolby Digital 3/2. ICH A-B Repeat Repeat Random Program Search Mode Title Search Chapter Search Time Search Input Chapter 001 · For a time search, enter the number of minutes and seconds into the currently playing title (DVD) or track (Video CD) you want playback to resume from. For example, press 4, 5, 0, 0 to have playback start from 45 minutes into the disc.

For 1 hour, 20 minutes and 30 seconds, press 8, 0, 3, 0. 5 Press ENTER to start playback. · To set audio language preferences, see Audio language on page 52. Switching audio channels when playing a Video CD When playing a Video CD, you can switch between stereo, just the left channel or just the right channel. · Press AUDIO repeatedly to select an audio channel option. Audio Stereo Switching subtitles Some DVD discs have subtitles in one or more languages; the disc box will usually tell you which subtitle languages are available. You can switch subtitle language anytime during playback. · Press SUBTITLE repeatedly to select a subtitle option.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>

Current / Total Subtitle 1/2 English Zooming the screen Using the zoom feature you can magnify a part of the screen by a factor of 2 or 4, while watching a DVD or Video CD. · During playback, use the ZOOM button to select the zoom factor.

· Normal · 2x · 4x · To set subtitle preferences, see Subtitle language on page 52. 32 En Playing discs 04 Normal Switching camera angles English Some DVD discs feature scenes shot from two or more angles--check the disc box for details. When a multi-angle scene is playing, a icon appears on screen to let you know that other angles are available (this can be switched off if you prefer--see page 54). · During playback (or when paused), press ANGLE to switch angle.

Zoom 2x Zoom 2x Zoom 4x Zoom 4x · It's not possible to use repeat playback when switching camera angles. · Since DVD and Video CD have a fixed resolution, picture quality will deteriorate, especially at 4x zoom. This is not a malfunction. 2 Use the cursor buttons to change the zoomed area. You can change the zoom factor and the zoomed area freely during playback. · If the navigation square at the top of the screen disappears, press ZOOM again to display it.

Displaying disc information Using the OSD Various track, chapter and title information, as well as the video transmission rate for DVD discs, can be displayed on-screen while a disc is playing. · To show/switch the information displayed, press DVD DISP (SHIFT+8). When a disc is playing, the information appears at the top of the screen. Keep pressing DVD DISP to change the displayed information. · DVD displays Play Title 3 DVD Total 7.

02 1 Angle Current / Total Elapsed Remain 11/38 2.05 4.57 French English Audio Dolby Digital 3/2.1CH Subtitle Play Chapter Tr. Rate 3 DVD Elapsed 2.05 Remain Total 4.57 7.02 8.6Mbps Current / Total 11/38 off 33 En 04 Playing discs · CD and Video CD displays Play Track Using the front panel display Total 4.43 3 CD Elapsed 0.23 Remain 4.20 Current / Total 2/16 You can check various track, chapter and title information on the front panel display while a disc is playing. · To show/switch the information displayed, press DVD DISP (SHIFT+8). Keep pressing DVD DISP to change the displayed information. · DVD displays Elapsed Time Title Remaining Time Play Disc 3 CD Elapsed 0.

23 Remain 58.51 Total 57.14 off · MP3 disc displays Play 3 MP3 Remain 12.42 Total 13.00 Current / Total Elapsed Track 1/17 0.18 Track Name Outernational Play 3 MP3 Chapter Remaining Time Current / Total Folder 2/7 Folder Name ACP · Video CD displays (except during PBC play) off Elapsed Time Disc Remaining Time · You can see disc information (number of titles/chapters, tracks, folders and so on from the disc navigator screen. See Using the disc navigator to browse the contents of a disc on page 22-23. Track Remaining Time · CD displays Elapsed Time Track Remaining Time Disc Remaining Time · MP3 disc displays Elapsed Time Track Name Folder Name · Press SYSTEM DISP to switch between the clock and the front panel displays above. 34 En Listening to the radio 05 Choosing stations The tuner can receive both FM and AM broadcasts, and lets you memorize your favorite stations so you don't have to manually tune in every time you want to listen. 2 Tune to a frequency.

There are three tuning modes--manual, auto, and high-speed: Manual tuning: Press TUNE + or repeatedly to change the displayed frequency. Auto tuning: Press and hold TUNE + or until the frequency display starts to move, then release. The tuner will stop on the next station it finds. Repeat to search for other stations. English STANDBY/ON DVD/CD FM/AM TV LI/L2 LINE AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU High-speed tuning: Press and hold TUNE + or until the frequency display starts to move rapidly.

Keep the button held down until you reach the frequency you want. If necessary, fine tune the frequency using the manual tuning method. DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN Improving poor FM reception If you're listening to an FM station in stereo but the reception is weak, you can improve the sound quality by switching to mono. 1 Press SYSTEM SETUP (SHIFT+DVD SETUP). 2 Use the / (cursor left/right) buttons to choose FM MONO/AUTO 3 Use the / (cursor up/down) buttons to select MONO then press ENTER.

The MONO indicator lights when the tuner is in mono reception mode. Select AUTO in step 3 to switch back to auto-stereo mode (the stereo indicator lights when receiving a stereo broadcast). /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM c CLEAR 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT 1 Press FM/AM (remote) or TUNER (front panel) to switch to the tuner and select the AM or FM band. Press repeatedly to switch between AM and FM. 35 En 05 Listening to the radio Memorizing stations You can save up to 30 station presets so that you always have easy access to your favorite stations without having to tune in manually each time. 1 Tune to an AM or FM radio station. For the FM band, select mono or auto-stereo reception as necessary. This setting is saved along with the preset. 2 Press SYSTEM SETUP (SHIFT+DVD SETUP). 3 Use the / (cursor left/right) buttons to choose ST.

MEMORY then press ENTER. STANDBY/ON DVD/CD FM/AM TV LI/L2 LINE AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + 4 If necessary, use the / (cursor up/ down) buttons to select the station preset you want. There are 30 preset locations; each can store one station preset. 5 Press ENTER to save the station preset. TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + Listening to station presets 1 Make sure the TUNER function is selected. 2 Use the ST +/- buttons to select a station preset. 4 PROGRAM 7 RANDOM c CLEAR 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT · If the unit is unplugged from the power supply completely, saved stations will remain for several days, after which you'll have to save them again. 36 En Listening to the radio 05 An introduction to RDS European model only Radio Data System, or RDS as it's usually known, is a system used by FM radio stations to provide listeners with various kinds of information--the name of the station and the kind of show they're broadcasting, for example.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>

This information shows up as text on the display, and you can switch between the kind of information shown. Although you don't get RDS information from all FM radio stations, you do with most.

Probably the best feature of RDS is that you can search automatically by type of program. So, if you felt like listening to jazz, you could search for a station that's broadcasting a show with the program type, JAZZ. There are around 30 such program types, including various genres of music, news, sport, talk shows, financial information, and so on. This system lets you display three different kinds of RDS information: Radio Text, Program Service Name, and Program Type. Radio Text (RT) is messages sent by the radio station.

These can be anything the broadcaster chooses--a talk radio station might give out its telephone number as RT, for example. Program Service Name (PS) is the name of the radio station. Program Type (PTY) indicates the kind of program currently being broadcast. This unit can search for and display the following program types: SPORT EDUCATE DRAMA CULTURE SCIENCE VARIED POP M ROCK M EASY M LIGHT M CLASSICS OTHER M WEATHER FINANCE CHILDREN SOCIAL RELIGION PHONE IN TRAVEL LEISURE JAZZ COUNTRY NATION M OLDIES FOLK M DOCUMENT Documentaries Sports Educational material Radio drama Arts and culture Science and technology Usually talk-based material, such as quiz shows or interviews. Pop music Rock music Easy listening music 'Light' classical music 'Serious' classical music Other music not fitting any of the above categories Weather reports Finance and business Children's entertainment Social affairs Religious programming Phone-in talk shows Travel Leisure interests and hobbies Jazz music Country music Popular music in a language other than English Popular music from the '50s English NEWS AFFAIRS INFO News Current affairs General information

In addition, there is a program type, ALARM!, used for exceptional emergency announcements.

You can't search for this, but the tuner will switch automatically to this RDS broadcast signal. 37 En 05 Listening to the radio Using the RDS display European model only To display the different types of RDS information available (RT, PS and PTY as explained on the previous page), press SYSTEM DISP on the remote control to cycle through the types of RDS information. Each press changes the display as follows: Searching for RDS programs European model only One of the most useful features of RDS is the ability to search for a particular kind of radio program. You can search for any of the program types (listed on the previous page). 1 Use the BAND button to select the FM band. RDS is only broadcast on FM. 2 Press SYSTEM DISP repeatedly until PTY SEARCH appears in the display. 3 Use the / (cursor up/down) buttons to select the program type you want to hear. 4 Press ENTER to search for the program type. The system starts searching through the station presets for a match.

When it finds one, the search stops and the station plays for five seconds. 5 If you want to keep listening to the station, press ENTER within the 5 seconds. If you don't press ENTER, searching resumes. RT Frequency Clock PS PTY PTY SEARCH · If any noise is picked up while displaying the RT scroll, some characters may be displayed incorrectly. · If you see NO DATA in the RT display, it means no RT data is being transmitted from the broadcast station. The display will automatically switch to the PS data display. If no PS data is transmitted from the station, the frequency will be displayed. · In the PTY display, there are cases where NO DATA or NO TYPE is shown. If this happens, the PS display is shown after a few seconds. · This unit converts lower case characters transmitted by broadcast stations to upper case characters.

· RDS searches station presets only. 38 En Setting up for surround sound 06 Choosing your surround sound settings To get the best possible surround sound from your system, make the settings below. This is particularly important when using Dolby surround. You should only need to make these settings once (unless you change the placement of your speakers, or sometimes, depending on the disc you're playing). Refer to the following pages for details on each of the settings.

1 Press SYSTEM SETUP (SHIFT+DVD SETUP). 2 Use the / (cursor left/right) buttons to choose the option you want to adjust. It will be easiest to adjust each of the settings in turn, following the order below. The current setting is shown for each option as you cycle through the display. Front speaker distance setting (page 40) Specify the distance from your listening position to the front speakers.

Center speaker distance setting (page 40) Specifies the distance from your listening position to the center speaker. Surround speaker distance setting (page 40) Specify the distance from your listening position to the surround speakers. Dynamic range control setting (page 40) Compress the dynamic range of the sound track. Dual mono setting (page 41) Isolate one channel when listening to discs with dual mono encoding. LFE attenuator setting (page 41) Specify the peak level for the LFE channel. English STANDBY/ON DVD/CD FM/AM TV L1/L2 LINE AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM c CLEAR 1 TEST TONE

2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT 39 En 06 Setting up for surround sound 3 Use the / (cursor up/down) buttons to adjust the setting. 4 Repeat steps 3 and 4 to make other settings. @@@@ You can set separate levels for each surround mode. 1 Press SURROUND repeatedly to select a multi-channel listening mode. The Surround mode can be set to anything but AUTO or STEREO.

2 Press TEST TONE (SHIFT+4) to hear the test tone. @@@@ The channel level range is ± 10 dB. @@ After you're finished with one channel, use the / (cursor left/right) buttons to move to the next. STANDBY/ON DVD/CD FM/AM TV L1/L2 LINE AUDIO DVD SUBTITLE ANGLE ZOOM QUIET/ MIDNIGHT MUTE AUTO ROOM SETUP SURROUND ADVANCED BASS MODE SYSTEM DISP VOLUME SYSTEM SETUP TUNE + TOP MENU DVD SETUP ST DVD MENU ST+ ENTER SOUND MODE TUNE RETURN /e E/ 1 FOLDER 3 8 REPEAT ; FOLDER + 4 PROGRAM 7 RANDOM c CLEAR 1 TEST TONE 2 CH LEVEL 3 TIMER 4 7 5 DVD DISP 6 DIMMER ENTER 8 INPUT 9 TV CONTROL CHANNEL 0 VOLUME SHIFT · Since the subwoofer transmits an ultralow frequency its sound may seem quieter than it actually is.



[You're reading an excerpt. Click here to read official PIONEER XV-DV303 user guide](http://yourpdfguides.com/dref/2443634)

<http://yourpdfguides.com/dref/2443634>