



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID DPA-07051D. You'll find the answers to all your questions on the POLAROID DPA-07051D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID DPA-07051D**  
**User guide POLAROID DPA-07051D**  
**Operating instructions POLAROID DPA-07051D**  
**Instructions for use POLAROID DPA-07051D**  
**Instruction manual POLAROID DPA-07051D**



Two Screen Portable DVD Player  
User's Manual



**Questions?  
Need some help?**  
This manual should help you  
understand your new product.

If you still have questions, call  
our help line found on the  
insert with this icon:



Or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

20080110



[You're reading an excerpt. Click here to read official POLAROID DPA-07051D user guide](http://yourpdfguides.com/dref/1312677)  
<http://yourpdfguides.com/dref/1312677>

**Manual abstract:**

**Caution:** Laser radiation when open. **Power Supply:** Connect the supplied power adapter to the side of the DVD player in the slot marked "Power In". Plug the two-prong end of the power cord to an AC outlet. If you have difficulty inserting the plug, turn it over and reinsert it; if the unit will not be used for a long time, disconnect the power from the outlet. Note: before plugging in the power cord to an AC outlet, make sure that all the connections have been made. **2 Important Safety Instructions CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions. Read these instructions. Keep these instructions.

Heed all warnings. Follow all instructions. Do not use near water. Clean only with dry cloth. Do not block any ventilation openings.

Maintain well-ventilated conditions around the product. Do not place on bed, sofa, or anything that blocks ventilation. Install in accordance with the manufacturer's instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and at the point where they exit the apparatus. 11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the car/apparatus to avoid injury from tip-over. 13. Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, which as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases, shall be placed on the apparatus.

Note: Do not touch the color TFT LCD screen by hand directly. 1. 2. 3. 4.

5. 6. 7. **3 Important Safety Instructions Copyright Protection** This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited. **IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT 2. DANGER: Visible laser radiation when open and interlock failed or defected. Avoid direct exposure to beam. 3. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit.**

Leave all servicing to qualified personnel. **Region Code Information** DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc. **WEEE** This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to [www.polaroid.com](http://www.polaroid.com) and click on "Company" or call the customer service number for your country listed in the instruction manual.

**4 Features High-quality Audio and Video** · Excellent Sound: Dolby Digital Decoder delivers great sound. **AV Output:** Analog audio and video output. **Advanced Playing Functions** · · · · · **Compatibility:** Compatible with DVD, CD, and JPEG discs, etc. **On-Screen Display:** You can choose English, French, Spanish, etc. for the on-screen display language.

**Particular Performance:** Multi-speed, fast forward, fast backward, slow playback, and repeated playback. **Search by Time:** Search for a certain track of a disc by selected time. **Last Memory Playback:** Memorizes the stopped playback track and continues playing the disc from this spot when the power remains on. (Only available for DVD and CD discs.) **Special Functions:** Supports screen multi-angle viewing and zooming functions.

5 **Accessories** Your portable DVD player may not include all accessories listed below. To purchase additional accessories for your player, visit [www.polaroid.com](http://www.polaroid.com). **ITEM NAME Remote Control (with battery) Power Supply Cord with AC Adaptor Power Supply Cord DC Adapter (Car Adapter) Audio/Video Cables Headphone Straps Bag Operation Manual Note:** Accessories and their parts numbers are subject to change without prior notice. 6 **Contents Important Safety Instructions Features Accessories View of Front Panel View of Side Panels Remote Control System Connections Power Supply Notes on Discs Playback Operation DVD Playback CD Playback JPEG Playback System Setup Straps Bags Definitions Troubleshooting Specifications 2 5 6 8 9 10 12 13 14 15 16 17 18 20 23 24 27 28 29 7 View of Front Panel\*** 1. LCD screen 2. / : press to select different options or to return to the previous list, track, or chapter. 3. : press once to pause the playback; press again to resume playback.

4. : press to stop playback; press twice to stop completely. 5. **SETUP** button: press to access or exit the system setup menu. 6. **ENTER** button: press to access playback or to confirm your selection. 7. / : press to select different options or to search forward fast. 8. **Disc tray** 9.

**Open button:** press to open disc tray 10. / : press to select different options or to search backward fast 11. / : press to select different options or to skip to the next list, track, or chapter. 12. **Remote sensor** 13.

**MENU** button: press to access or exit the menu 14. **AV IN/OUT** button: press to select audio/video in/out 15. **FUNCTION** button: press the **FUNCTION** button to change the brightness and color level. \* Your portable DVD player may differ from the player shown. 8 **View of Side Panels\* Ride Side View** 1. **Volume Control Knob:** Used to adjust the volume of headphones and speaker 2. **Headphone Jack:** Used to connect to headphones for private listening.



**[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1312677)**

**[DPA-07051D user guide](http://yourpdfguides.com/dref/1312677)**

**<http://yourpdfguides.com/dref/1312677>**

When headphone is plugged in, the speakers will automatically turn off. 3. Audio Input/Output Jack: For connecting to an external amplifier or audio source 4. Video Input/Output Jack: For connecting to an external monitor or video source 5. DC 9/12V Input Jack: Used to connect the DC adaptor Left Side View 1. DC 9/12V Input Jack: Used to connect the DC adaptor 2. Headphone Jack: Used to connect to headphones for private listening. When headphone is plugged in, the speakers will automatically turn off.

3. Power ON/OFF Switch: Switch the power on or off \* Your portable DVD player may differ from the player shown. 9 Remote Control\* 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18.

19. 20. 21. 22. 23. 24. MUTE button: press to turn volume on or off INFO button: press repeatedly to display or cancel the detailed information of the disc during playback TITLE button: press to display the title menu if it exists on the disc Direction button: press to select different options ENTER button: press to access playback or confirm your selection SETUP button: press to enter the unit's setup menu 0-9 number buttons: press to select numbers NEXT button: press to skip to the next list, track, or chapter PREV button: press to return to the previous list, track, or chapter SUBT button: press to select a subtitle language or to turn the subtitles on or off (when playing a disc coded with subtitles) ANGLE button: press to access various camera angles if the DVD disc contains multiple camera angles A-B button: press to play a section of the disc from point A to point B. Press once to select the starting point A, press again to select the end point B. During A-B repeat playback, press this button to stop the repeat ZOOM button: press to realize different zoom functions REP button: press to repeat a chapter, title, or entire disc MENU button: press to access the DVD disc menu during playback PAUSE button: press to pause playback, press the PLAY button to resume normal playback STOP button: press stop to stop playback, press twice to stop completely. Press the PLAY button to resume playback.

PLAY button: press to start playback +10 button: press the 10+ button followed by another number to select a number greater than 9 GOTO button: press to select the desired disc starting time, title, or chapter REV SCAN button: press to search backward during playback FWD SCAN button: press to search forward during playback SLOW button: press to activate slow playback function AUDIO button: press to select different languages when a DVD disc with multiple audio languages is being played; press to select different audio tracks when a CD disc is being played \* Your portable DVD player may differ from the player shown. 10 Remote Control Installing the Remote Control Battery 1. 2. 3. Pull the battery holder out from the remote control as shown below. Load a new battery properly with the (+) side up. Insert the battery holder back into the remote control. Battery Type: CR2025 3V Battery service life: approximately 1 year under normal use (at room temperature) Using the Remote Control Point the remote control to the remote sensor on the unit within a 5-meter range and 60-degree angles, without obstacles between the remote control and remote sensor. Notes: · Improper use of the battery may cause overheating, explosion or ignition, which can result in an injury or fire. Battery leakage may damage the remote control.

· Do not expose the remote control to direct sunlight. · Do not recharge, disassemble, deform, or heat the battery. · Immediately replace the exhausted battery. · Take out battery when the remote is not being used for a long period of time. 11 System Connections · Always ensure that the DVD player, TV, and any other electrical equipment to be connected are switched off and unplugged from the power supply.

Ensure that you observe the color coding when connecting audio and video cables. Connecting to a TV Connecting to an Amplifier Follow the drawing below to connect the DVD player Refer to your audio equipment's manual before to the TV's audio/video input with the audio/video connecting. Follow the drawing below to connect the cables. DVD player to an AV amplifier. Connecting to an External AV Source Connecting to the Headphones The player supports an AV signal input function.

Use Connect the headphones to the headphone jack on the AV cables to connect the player to an external either side of the player. When headphones are AV signal source such as a DVD, VCR, etc. After connected, the speakers will automatically turn off. connecting, switch the DVD/AV IN to AV IN. Note: Noise may occur in speakers when there is an external au the ENTER/ENT button to confirm. Press the PAUSE/ button to pause during playback and the PLAY button to resume normal playback. Press the STOP/ button once to stop playback. Then press the PLAY button to resume normal playback from the place where the STOP button was pressed. Press the STOP/ button twice to stop playback completely. Press the MENU button during playback.

The root menu will appear on the screen. Press the direction buttons ( ) to select the item you want to play and press the ENTER/ENT button to confirm. You can also press the 0-9 and +10 buttons to select the item you prefer. In general, the content of a DVD disc can be divided into several titles. There are also several menus in a title. Press the TITLE button during playback. The title menu will appear on the screen. Press the direction buttons ( ) to select the title or disc menu item you want to watch and then press the ENTER/ ENT button to confirm. You can also press the 0-9 and +10 buttons to select the item you prefer. (remote only) Press the ZOOM button repeatedly to shift among 1x - 2x - 3x - 4x zooming effect and normal playback.

Press the button to go to the previous chapter. Press the button to go to the next chapter. Press the / button (and hold it for several seconds) to start fast forward/ rewind playback. Press it (and hold it for several seconds) repeatedly to fast forward/rewind at the speed of 2x, 4x, 8x, 16x, and normal playback. Press PLAY to return to normal playback.

Press the SLOW button repeatedly and slow playback will at the speed of 1/2, 1/4, 1/8, 1/16, and normal playback. @@@@Press the A-B button a third time to cancel the preat segment. @@Use the direction buttons to select the item you want to set. @@Press the GOTO button again to exit.

@@(remote only) DVD discs can contain up to 8 audio bit streams.

For example: English, French, etc. @@@@A DVD disc can be recorded with at most 32 subtitles. @@(remote only) Press the ANGLE button to play the disc in multi-angle. @@@@Press the ANGLE button repeatedly to view different angle options. @@Press the PLAY/ to resume normal playback.

@@@Press the STOP/ button twice repeatedly to stop playback completely. @@@@Press the PLAY/ button to return to normal playback. Press the button to play the previous chapter.



[You're reading an excerpt. Click here to read official POLAROID](#)

[DPA-07051D user guide](#)

<http://yourpdfguides.com/dref/1312677>

Press the button to play the next chapter. @@ Use the direction buttons to select the item you want to set.

@@ Press the GOTO button again to exit. @@@@ Press it repeatedly and the display will be as follows: Left Right Stereo. (remote only) 17 Playback Operation JPEG Playback Pre-Operation 1. Load a JPEG in the disc tray and the player will search and play the disc automatically. buttons to select 2. The screen displays the root folder with several subdirectories/subfolders. Use the desired folder. Then press the ENTER/ENT button or PLAY/ button to confirm your selection. buttons to select desired file. Then press the 3.

The screen enters the subfolder with several files. Use the ENTER/ENT button or PLAY/ button to confirm your selection. 4. Press the button to return to the previous folder or directory. Note: many discs have other items besides pictures.

Buttons Operation STOP/ button PAUSE/ button Press the STOP / button to return to the previous folder. Press the direction buttons ( ) to select the picture you prefer and then press the ENTER/ ENT button to resume normal playback. Press the PAUSE/ button to pause during playback. Press the PLAY/ button to resume normal playback. Press the STOP / button to return to the previous folder.

Press the direction buttons ( ) to select the picture you prefer and then press the ENTER/ ENT button to resume normal playback. Press the button to play the previous chapter. Press the button to play the next chapter. Press the ZOOM button repeatedly to shift among 4/3, 3/2, 7/4, 2, 1/4, and 1/2 zooming in and out effect and normal playback. During playback, press the GOTO button to select the desired file. Press the 0-9 buttons directly to select according to your preference. (remote only) Under folder status, press the button to enter REPEAT setup. Then press the ENTER/ENT button repeatedly to set the repeat mode and the screen will display as follows in sequence: DISC NORMAL DISC REPEAT SHUFFLE NORMAL SINGLE TRACK REPEAT TRACK FOLDER FOLDER REPEAT. Press the button to exit. (remote only) MENU button & buttons ZOOM button GOTO button REPEAT function 18 Playback Operation JPEG Playback (continued) Rotating Pictures While viewing a picture, use the direction buttons to rotate the picture.

Press the button to rotate the current picture clockwise: Press the button to rotate the current picture counterclockwise: Press the button to rotate the current picture up and down: Press the button to rotate the current picture left and right: 19 System Setup\* You can change the default settings of this unit to customize its performance to your own preferences. Note: Program the system while playback is stopped completely or there is no disc in the player. To Set up your system: 1. Press the SETUP button and the setup menu will appear on the screen. 2. Press the direction buttons to select a sub-menu to program and press the ENT/ENTER button to access. In the sub-menu, use the button to highlight the "MAIN PAGE" and press the ENT/ENTER button to exit. 3. Press the SETUP button again to exit the setup menu at any time during setting. TV SYSTEM · Use the direction buttons to select your TV system.

Press ENTER to confirm. SCREENSAVER · To turn on or off the screensaver, use the direction buttons to select ON or OFF. Press ENTER to confirm. TV TYPE · Use the direction buttons to select your aspect ration. Press ENTER to confirm \* Your portable DVD player functions may differ from the player shown.

20 System Setup\* PASSWORD · Use the direction buttons to enter 8-8-8-8 (factory default). Press ENTER to confirm. You will be required to create a new password. Use the direction buttons to enter the desired password. Press ENTER to confirm.

To reset the password, reset the portable DVD player to factory defaults. RATING · Use the direction buttons to select the rating you want to set your portable DVD player. The default is set to ADULT. Press ENTER to confirm. Note: not all discs are coded with ratings. DEFAULT · To reset the portable DVD player to factory default settings, use the direction buttons to select RESTORE. Press ENTER to confirm. OSD LANGUAGE · Use the direction buttons to select the desired OSD language. Press ENTER to confirm. \* Your portable DVD player functions may differ from the player shown.

21 System Setup\* AUDIO LANGUAGE · Use the direction buttons to select the desired language. Press ENTER to confirm. Note: not all discs support all languages. SUBTITLE LANGUAGE · Use the direction buttons to select the desired language. Press ENTER to confirm. Note: not all discs support all languages. MENU LANGUAGE · Use the direction buttons to select the desired language. Press ENTER to confirm. Note: not all discs support all languages. POWER RESUME · Use the direction buttons to select ON or OFF.

Press ENTER to confirm. \* Your portable DVD player functions may differ from the player shown. 22 Straps To attach the DVD player to the car seat headrest: 1. 2. 3.

4. 5. 6. 7. Place the DVD player on a soft and smooth surface with the bottom facing up.

Loosen the strap and remove the buckle. Insert the strap through the holes (fig. 1). Make sure the inside of the strap faces up. Thread the strap into the buckle (fig. 2 and 3). After threading, make sure the outside of the buckle faces up. Repeat these steps for the other strap. Adjust the length of the strap according to the backrest of the seat. Fasten the straps on the headrest of the seat (fig.

4). Make sure the two straps are between the headrest and the headrest support rods. 23 Bags Depending on your portable DVD player model, your player may or may not include a Polaroid bag. If your portable DVD player does not include a bag, you can visit [www.polaroid.com](http://www.polaroid.com) to purchase. INSTRUCTIONS FOR ATTACHING YOUR PORTABLE DVD PLAYER CASE IN A VEHICLE Please read and follow these instructions carefully when attaching this case inside your vehicle. For easy installation, do not place the DVD player in the case until the case is attached inside the vehicle. Caution 1. Do not use this DVD player case as a swing, car seat, or for any other purpose than to hold a DVD player and accessories.

2. The DVD player case is intended for viewing only from the rear seats. No not install or use this product in the front seat of a vehicle. 3. In case of collision or a sudden stop, to reduce the chance of injury, always keep the DVD player strapped securely while the vehicle is moving.

Your DVD player can be securely attached in one of the following ways to view movies from the rear seats: · Directly behind either the driver or passenger seat · Between two front bucket seats Caution Always position the plastic hooks and strap adjustment slider so they do not contact the back of the head of the person in the front seat. 24 Carrying Case To attach the DVD player case to a seat back (figures 1 and 2) 1.



[You're reading an excerpt. Click here to read official POLAROID DPA-07051D user guide](http://yourpdfguides.com/dref/1312677)  
<http://yourpdfguides.com/dref/1312677>

@@2. Locate the two straps with hooks on each end. 3.

Hook one end of each strap to the rings at the top of the case (A). 4. Criss-cross the straps around the front of the headrest (B) and hook the straps to a second set of rings on the lower part of the case (C). 5. Tighten up the straps until secure. To suspend the DVD player case between two bucket seats (figure 3): 1.

@@2. Locate the two straps with hooks on each end. 3. Hook one end of each strap to the rings at the top of the case (A).

4. @@5. @@@@Each section is numbered as chapter or title numbers Title 1 Chapter 1 Chapter 2 .....

Title 2 Chapter 1 .....

.. Track (CD) CDs are divided into some sections (tracks). Each section is numbered as tracks. Track 1 Track 2 Track 3 .

..... JPEG JPEG is a common picture format that has small file size and low quality-loss rate of picture.

Hundreds of pictures can be stored in a disc in this format. In order to utilize the real digital album, use film to make a picture CD in JPEG format. 27  
Troubleshooting If you suspect there is something wrong with the DVD player, immediately turn off the power. Disconnect the power connector and check that there is no smoke or excessive heat coming from the unit. Never open or try to repair the unit yourself. There are no user serviceable parts inside.

PROBLEM . . . The player cannot play . . . . There is no sound . . . There is no picture . . Poor AV performance . . . The remote control does not work . .  
POSSIBLE CAUSE The disc cover may not be closed. There may be no disc in the DVD drive. The disc may not be put in the right way. The disc may be dirty or warped.

The player's region code may not be the same as the disc's region code. There may be water on the lens. The system connection may be incorrect. The speakers may be turned down. The sound setup of the DVD may be incorrect.

The disc may be dirty or warped. The LCD may not be in correct video mode. The system connectivity may be incorrect. The unit may not be in AV OUT mode. The disc may be dirty or warped.

There may be some obstructions between the remote control and the player. The remote control may not be pointed at the player. The remote control battery may be inserted incorrectly. The remote control batteries may be out of power or weak. . . . . POSSIBLE SOLUTION Close the disc cover. Put a disc in to the DVD drive. Put the disc in with the label side up. Clean or change the disc. Make sure the player's region code is the same as the DVD's region code.

Remove the disc and keep the player turned off for at least two hours.

Connect the system correctly. Turn on the speakers. Setup the sound of the DVD correctly. Clean or change the disc. . . . . Choose the correct video mode. Connect the system correctly. Switch the AV IN/OUT on the right panel to OUT. . . . . Clean or change the disc. Remove the obstruction between the remote control and the player. Point the remote control directly at the player.

Make sure the polarity of each battery is correct. Replace the batteries. Other possibilities: Static or external interference may cause the player to function abnormally. In order to recover normal status, please unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, please cut off the power supply and consult your service center or qualified technician.

28 Specifications TFT Screen Size Laser Wavelength Frequency Response Audio Signal-to-Noise Ratio Audio Distortion+Noise Channel Separation Dynamic Range Audio Out Video Out Dimensions Weight 8 inches (16:9) 780/650nm 20Hz-20kHz  $\pm 2.5$ dB 85dB -70dB (1kHz) 70dB (1kHz) 80dB (1kHz) Out Level 2V $\pm 0.2$  I.0, Load 10k Out Level IVP-P $\pm 0.2$ , Load 75 Unbalanced Negative 230mm x 383mm x 154mm Approximately 0.

73kg DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved. For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com). "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation. 29 .



[You're reading an excerpt. Click here to read official POLAROID](#)

[DPA-07051D user guide](#)

<http://yourpdfguides.com/dref/1312677>