



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID DVC-00725F. You'll find the answers to all your questions on the POLAROID DVC-00725F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID DVC-00725F**  
**User guide POLAROID DVC-00725F**  
**Operating instructions POLAROID DVC-00725F**  
**Instructions for use POLAROID DVC-00725F**  
**Instruction manual POLAROID DVC-00725F**



**5.0 Megapixel HD Digital Camcorder  
DVC-00725F**

**User's Manual**



**Questions?  
Need Some Help?**  
This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>

**Manual abstract:**

3. 4. 5. @@Up / Lighting Button 8. OK / Menu Button 9. Self Timer / Left Button 10. HD / Down Button 11. Record Button 12. Flash / Right Button 13. @@LCD Panel 15.

TV Port 16. HDMI Port 17. Mini USB / Battery Charging Port 18. Ports Slide Cover 19. Power Button 15 16 17 20.

Self-timer LED 21. Tripod mount 22. Battery / SD card door 0 1 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 3 Table of Contents Product Overview.

.....

.....

.....

.....

.....

.....

.....

.....

.....2~3 Table of Contents.

.....

.....

.....

.....

.....

.....

.....

.....

.....4 1 Getting Started.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....7 · Package Contents .

.....

.....

.....

.....

.....

.....

.....

.....

.....8 · Checking the Battery Level ...

.....

.....

.....

.....

.....

.....

.....

...9 · Installing and Removing the Battery .....

.....

.....



.....  
.....  
.....  
.....

*.15 · Photo Recording .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*15 · Using the Intelligent Lighting Function .....*

.....  
.....  
.....

*.....16 · Using the Zoom Function .*

.....  
.....  
.....  
.....  
.....  
.....

*....16 · Setup Options in the Record Menu .....*

.....  
.....  
.....  
.....  
.....

*.17 · Setup Operations in the Record Mode ....*

.....  
.....  
.....  
.....

*....17 · Video Mode Settings.. ....*

.....  
.....  
.....  
.....

*.....18 · ..... Video Resolution....*

.....  
.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

*..18 Macro Mode Setting.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...19 Exposure Settings.. .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....20 Sharpness Settings.. .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....21 White Balance Settings.*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....22 *Stabilization Setting..* ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....23 *Night Mode Feature...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....24 *Photo Resolution..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....25 *Macro Mode Setting..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....26 *Exposure Settings.*

.....  
.....  
.....  
.....



.37 · Effect Setting. ....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

...38 · Setting Menu .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.39 ······ Sound.. ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....40 Time Setting.. ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..40 Format Memory (when there is no SD card in the camera).. .

.....  
.....  
.....  
.....

.....41 Format Card (when there is an SD Card in the camera). ....



.....  
.....  
.....  
.....

.....41 TV System..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..42 Language.. .....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....42 Information..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.43 Default Setting.. .....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

.....43 . . . . . Selftimer (Photo Record Mode Only).

.....  
.....  
.....

.....  
.....  
.....

.....31 Sharpness Setting..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....32 White Balance Settings...

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....33 Multi-snap (Photo Record Mode Only).

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.....34 Backlight (Photo Record Mode Only). ...

.....

.....  
.....  
.....



.....  
.....  
.....

.....  
.....  
.....  
.....

*.....47 Thumbnail Function.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....48 Locking Videos. ..*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*48 Repeating Videos.. ...*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*49 Deleting Photos.. .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
*.....51 Thumbnail Function...*

.....  
.....  
.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
*.....52 Locking Photos.*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....52 Make a Slide Show..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....53 · Photo Playback .*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*....50 4 Transferring & Viewing Video onto a PC.*

.....

.....  
.....  
.....  
.....54 · *Transferring Photos or Videos to a Computer.* .

.....  
.....  
.....  
.....54 · *Viewing a Video on a PC ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....54 · *Sharing A Video* .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....54 *Polaroid DVC-0075F Digital Camera User Guide* [www.polaroid.com](http://www.polaroid.com) 5 5 *View Photos and Videos on a TV* .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....55 · *Connecting to a High-Definition TV.* .....

.....  
.....  
.....  
.....  
.....  
.....55 · *Connecting to a non-high-definition 16:9 (Wide) or 4:3 TV* ....

.....  
.....56 *Video File Converter* ....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....57 · *Media Converter*.....

.....  
.....  
.....  
.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....70 · *Polaroid Online Services* ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....70 · *ArcSoft Software Help* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....70 12 *Appendix* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....71 · *Technical specifications* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....71 · *Default Settings* ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....72 · *System Requirements* .....

.....









4. Use the Up/Down Buttons to choose between ON or OFF.

(You will see on the upper right corner of the LCD display.) 5. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Stabilization Option · The captured screen will be smaller when stabilization is enabled. · Digital Zoom is disabled when stabilization is activated.

Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 3 NOTE: Night Mode Feature Use Night Mode for night scenes or low light conditions.

(You will see on the upper left corner of the LCD display.) Record Menu Setup Screen OK Button Night Mode Option To avoid blurry pictures, place the camera on a flat, steady surface, or use a tripod. NOTE: Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). 4 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Still Capture Settings Photo Resolution To change the picture resolution: 1. In Video/Photo Record Mode, press the OK Button to switch to the record setup menu screen. 2. Use Right/Left Buttons to select the Still Capture Menu. The submenu of the Still Capture Menu will pop up on the screen. 3. Use the Up/Down Buttons to select the Resolution Setting then press the OK Button to switch to the Resolution submenu. 4. Use the Up/Down Buttons to move between the three settings.

(You will see on the upper left corner of the LCD display.) 5. Press the OK Button to confirm the setting and exit. Display Screen OK Button Image Resolution Option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

com 5 Macro Mode Setting With the Macro Mode enabled, you could take close-up images of objects from a distance of 1cm to 30cm (0.39 inches~11.8 inches). To enable the Macro Mode: 1. In the Video/Photo Record Mode, press the OK Button to switch to the record setup menu screen.

2. Use the Right/Left Buttons to select the Still Capture Menu. The submenu of the Still Capture Menu will pop up on the screen. 3. Use the Up/Down Buttons to select the Macro Mode then press the OK Button to switch to the Macro Mode submenu. 4. Use the Up/Down Buttons to move between the two settings. 5. Press the OK Button to confirm the setting and exit. (You will see on the lower right corner of the LCD display.)

) 6. To switch back to the default value, select 'Normal' in the Macro Mode submenu. Display Screen OK Button Macro Mode Option 6 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Exposure Settings The camera adjusts image exposure automatically. In certain circumstances you may wish to adjust the exposure compensation setting. To change Exposure setting: 1. In the Video/Photo Record Mode, press the OK Button to switch to the record setup menu screen. 2. Use the Right/Left Buttons to select the Still Capture Menu.

The submenu of the Still Capture Menu will pop up on the screen. 3. Use the Up/Down Buttons to move to the Exposure Option. Press the OK Button and then Exposure Submenu will pop up on the screen. 4.

Use Up/Down Buttons to choose preferred EV value. When selected the change is immediate. 5. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Exposure Option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

7 Two in One (Photo Record Mode Only) With camera set to Two in One mode, you can combine two snapshots into one Photo. To enable Two in One: 1. In the Video/Photo Record Mode, press the OK Button to switch to the record setup menu screen. 2. Use the Right/Left Buttons to select the Still Capture Menu. The submenu of the Still Capture Menu will pop up on the screen. 3. Use the Up/Down Buttons to select the Two in One feature then press the OK Button to switch to the Two in One submenu. 4.

Use the Up/Down Buttons to choose either ON or OFF. 5. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Two in One Option 1. Press Camera Shutter Button to take first photo on the left side of the LCD display. 2. Align the subject on the right side of the LCD display and press the Camera Shutter Button to take second Photo. 3. Press the Playback Button to view the Two in One Photo. 8 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

polaroid.com Photo Frame (Photo Record Mode Only) Your camera features a popular electronic photo frame feature. You can take your pictures with a preferred electronic photo frame. To enable Photo Frame Feature: 1. In the Still Capture menu, use the Up/Down Buttons to select the Photo Frame option, then press the OK Button to switch to the Photo Frame submenu.

2. Use the Up/Down Buttons to locate your preferred photo frame then select the Set option and Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Photo Frame option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 9 Flash (Photo Record Mode Only) This camera has three flash settings.

You can change the flash setting by either the hot key (Right Button) or using the Option Setting. · Auto Flash ( ) The flash fires automatically according to lighting conditions. Use this setting for most photographic scenes. ) The pre-flash will fire to reduce the red-eye effect. The flash will not fire under any circumstances. Use this mode when taking images in a place where flash photography is prohibited, or when the subject is far away (beyond 10 feet). · Red Eye Reduction( · Flash off ( ) To change the Flash setting: 1. When in the Still Capture menu, use Up/Down Buttons to select the Flash Option, then press the OK Button to switch to the Flash submenu. 2. Use the Up/Down Buttons to move between the three settings.

3. Press the OK Button to confirm the setting and exit. The flash will be disabled automatically when battery power is low.( Record Menu Setup Screen OK Button Flash option NOTE: ) 30 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Selftimer (Photo Record Mode Only) The selftimer allows you to take pictures with a ten-second time delay. The Self-timer LED on the front of the camera will also blink. The speed of blinking will increase just before the Photo is taken. To enable the Selftimer: 1. When in the Still Capture menu, use the Up/Down Buttons to select the Selftimer, then press the OK Button to switch to the Selftimer submenu.

2. Use the Up/Down Buttons to choose between On or Off. 3. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Selftimer option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

polaroid.com 31 Sharpness Setting You can soften and sharpen images to achieve different effects. To change sharpness setting: 1. When in the Still Capture Menu, use the Up/Down Buttons to select the Sharpness Option, then press the OK Button to switch to the Sharpness submenu. 2.

Use the Up/Down Buttons to move between the nine levels. When selected the change is immediate.



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>

3. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen OK Button Sharpness option 3 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) White Balance Settings The camera adjusts the color balance of images automatically. Four manual white balance settings are available: . . . . AUTO: Daylight: Fluorescent: Tungsten: The camera automatically adjusts white balance. Use this setting for outdoor brightly lit scenes. Use this setting indoors with fluorescent lighting.

Use this setting indoors with tungsten/incandescent lighting. To change White Balance Setting: 1. When in the Still Capture Mode, use the Up/Down Buttons to select the White Balance option, then press the OK Button to switch to the White Balance submenu. 2. Use the Up/Down Buttons to move between the four settings. When selected the change is immediate. 3. Press the OK Button to confirm the setting and exit. (You will see on the lower right corner of the LCD display.) Record Menu Setup Screen OK Button White Balance option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

33 Multi-snap (Photo Record Mode Only) With the camera set to Multi-snap Mode, you can take five continuous pictures (the flash is disabled). To enable Multi-snap: 1. When in the Still Capture Mode, use the Up/Down Buttons to select the Multi-snap, then press OK Button to switch to the Multi-snap submenu. 2.

Use the Up/Down Buttons to choose between On or Off. 3. Press the OK Button to confirm the setting and exit. (You will see on the upper left corner of the LCD display.) Record Menu Setup Screen OK Button Multi-snap option Need help with your digital camera? Call our toll-free customer service number.

Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). 34 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Backlight (Photo Record Mode Only) With the camera set to the backlight Mode, you can take shots when bright light is behind the subject. To enable the Backlight Feature: 1. When in the Still Capture Menu, use the Up/Down Buttons to select the Backlight feature, then press the OK Button to switch to the Backlight submenu. 2. Use the Up/Down Buttons to choose between On or Off.

3. Press the OK Button to confirm the setting and exit. (You will see on the upper left corner of the LCD display.) Record Menu Setup Screen OK Button Backlight option Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 35 Date Printing (Photo Record Mode Only) To enable the Date Printing Feature: 1. When in the Still Capture Menu, use the Up/Down Buttons to select the Date Printing feature, then press the OK Button to switch to the Date Printing submenu. 2. Use the Up/Down Buttons to choose between On or Off. 3.

Press the OK Button to confirm the setting and exit. (You will see the date on the lower left corner of the LCD display.) Record Menu Setup Screen OK Button Date Printing option Date would be shown on the Photo once date printing is enabled. NOTE: Night Mode Use Night Mode for night scenes or low light conditions. Record Menu Setup Screen OK Button Night Mode option NOTE: To avoid blurry pictures, place the camera on a flat, steady surface, or use a tripod.

36 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Motion Detection Motion Detection feature allows you to record a moving object. Turn the motion detection on, the camera will start to record video automatically if it detects motion and will stop recording if it does not detect motion. To enable the Motion Detection Feature: 1.

In the Video/Photo Record Mode, press the OK Button to switch to record menu setup screen. 2. Use the Right/Left Buttons to move to the Motion Detect Option. The submenu of Motion Detect will pop up on the screen. 3. Use the Up/Down Buttons to choose between ON or OFF. 4. Press the OK Button to confirm the setting and exit. (You will see on the lower left corner of the LCD display.) Record Menu Setup Screen Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

polaroid.com 37 · Effect Setting This setting allows control over the color tones and moods of a picture or video. The effects can be Normal, B/W(Black/White), Classic and Negative. To change the Effect setting: 1. In the Video/Photo Record Mode, press the OK Button to switch to the record menu setup screen. 2. Use the Right/Left Buttons to move to the Effect Option. The submenu of the Effect will pop up on the screen. 3. Use the Up/Down Buttons to move between the four settings.

When selected the change is in effect immediately. 4. Press the OK Button to confirm the setting and exit. Record Menu Setup Screen 38 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Setting Menu The Setting submenu contains options for configuring your camera set up. To change advanced settings: 1. In the Video/Photo Record Mode, press the OK Button to switch to the record menu setup screen. 2. Use the Right/Left Buttons to move to the Setting option, then the Setting Submenu will pop up on the screen.

3 Use the Up/Down Buttons to move between settings. Record Menu Setup Screen Setting Option . . . . . Sound (operation sound) Time setting Format Memory or Card TV System Language Information Default Setting NOTE: · Please refer to Format Memory/Card on page 41. Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 39 Sound Enable or disable the sound by using the Up/Down buttons then press the OK Button to confirm the setting. Record Menu Setup Screen OK Button Sound option Time Setting · Move between Date, Time, Set and Exit by using the Left/Right buttons. · Adjust the date and time by using the Up/Down Buttons, then select the Set to confirm each change. · Select Exit to leave the Time Setting without any change. Record Menu Setup Screen OK Button Sound option NOTE: If the battery is removed from the camera for an extended period of time or the battery is depleted, you may need to reset the date and time. 40 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

polaroid.com Format Memory (when there is no SD Card in the camera) Record Menu Setup Screen OK Button Format Memory option Format Card (when there is an SD Card in the camera) Record Menu Setup Screen OK Button Format Card option NOTE: · All the data will be erased when the SD card is formatted. Make sure all the data is copied to a PC before formatting the SD card. @@NTSC: USA, Canada, Japan, South Korea and Taiwan etc. PAL: UK, Europe, China, Australia, Singapore and Hong Kong etc. @@@@Off: Do not show the indicator(s) on the LCD screen. @@@@. There are 2 options in the Playback Mode, Videos and Photos. · Direction Buttons can be used to select the specific option. · Press OK Button to view videos or photos. @Left Button: Go to the previous Video/Photo.

OK/Enter Button: Enter to Video or Photo option menu.



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>



@@Switch between Record and Playback modes 2. Return to the previous page. @@@Magnification Indicator. @@Press Playback Button to select Playback Mode.

Use Direction Buttons to select the Video option. 2. Press OK Button to go to Video Playback Mode. Display Screen 3. Use Right/Left Buttons to go to the next or last Video.

4. Press Record Button to play and press it again to pause. 5. @@6. Use Up/Down Buttons to adjust volume. 7. Press OK Button to go to the Video option menu. 8. @@@@Press OK Button to go to the Delete menu. 3.

Use Right/Left Buttons to select the Video. 4. @@5. @@6. @@· Videos on a written-protected memory card cannot be deleted. · The delete function will only erase unlocked videos. Locked videos must be unlocked before being deleted. @@@@Press OK Button to view nine thumbnail videos. 3. @@This function can prevent the videos from being deleted accidentally.

Operation 1. Use Right/Left Buttons to select the Lock option ( ) 2. Press OK Button to go to the Lock menu. Display Screen 3. Use Right/Left Buttons to select the Video.

4. @@5. @@6. Press OK Button to exit. 48 Polaroid DVC-0075F Digital Camera User Guide www.

polaroid.com Repeating Videos This function automatically repeats playing a single Video or all videos in order. Operation 1. Use Right/Left Buttons to select the Repeat One option ( ) or Repeat All option ( ) 2. Press OK Button to start repeating, press it again to stop. Display Screen Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid DVC-0075F Digital Camera User Guide www.

polaroid.com 49 · Photo Playback Operation 1. Press Playback Button to select Playback Mode. Use Right/Left Buttons to select the Photos option. 2. Press the OK Button to go to Photo Playback Mode. Display Screen 3. Use the Right/Left Buttons to go to the next or last Photo. 4. While the Photo is selected, use Tele/ Wide Buttons to magnify.

5. To navigate the magnified Photo, use Direction Buttons to navigate the magnified Photo. Press Playback Button again to exit navigation mode. 6. Press OK Button to go to the Photo option menu.

7. Use Right/Left Buttons to select five options, Delete, Thumbnail, Lock, Slideshow, or Exit. 50 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com Deleting Photos Operation 1.

@@Press OK Button to go to the Delete menu. 3. Use Right/Left Buttons to select the Photo. 4. Use Up Button to delete all pictures and Down Button to delete single Photo. 5. Before a Photo is deleted, a confirmation screen will appear; choosing "Yes" will execute the operation and "No" to cancel the operation. 6. Press OK Button to exit. NOTE: · If a memory card is inserted, you can delete only those pictures stored on the card.

· Pictures on a written-protected memory card cannot be deleted. · The delete function will only erase unlocked pictures. Locked pictures must be unlocked before being deleted. Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 51 Thumbnail Function Operation 1. @@While selecting the Thumbnail option, press the OK Button to view nine thumbnail pictures. 3. To view a Photo, use the Direction Buttons to select the Photo. 4.

Press the OK Button to view the selected Photo. Locking Photos A single picture or all pictures can be locked. This function can prevent the pictures from being deleted accidentally. Operation 1. Use Right/Left Buttons to select the Lock option ( ) Display Screen 2.

Press the OK Button to go to the Lock menu. 3. Use the Right/Left Buttons to select the Photo. 4. Use the Up Button to lock/unlock all pictures and the Down Button to lock/unlock single Photo.

5. Before a Photo is locked/unlocked, a confirmation screen will appear; choosing "Yes" will execute the operation, "No" will cancel the operation. 6. Press the OK Button to exit. 5 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com Make a Slide Show This function automatically repeats all pictures in order. Operation 1. Use Right/Left Buttons to select the Slideshow option ( ) 2. Press the OK Button to start the slide show; press it again to stop.

Display Screen Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 53 4 Transferring & Viewing Video onto a PC · Transferring Photos or Videos to a Computer You can transfer pictures or videos stored on your camera to a computer and send them in emails to friends or post them on websites. To do this you should: 1. Connect the computer and camera with the provided mini USB 2.0 cable.

The LED will light up and blink. 2. After the LED stops blinking, videos can be found on your computer at "My Computer\Removable Disk\DCIM\100PHOTO" 3. In these folders, you can read, delete, move, or copy any Video/Photo you want. 4.

Use the bundled ArcSoft application software to edit the videos or pictures. · Viewing a Video on a PC When playing a Video for the first time, the correct Video Codec should be installed in PC. To do this: 1. Insert the CD-ROM into the computer's CD-ROM drive. Click "Install Video Codec" and follow the on-screen instructions to complete the installation.

2. Start the video player such as Windows Media Player to view AVI Videos. · Sharing A Video You can share the recorded videos with your friends via internet or CD. Make sure the correct Video Codec is installed on your friends' PC. Video Codec is available in the provided CD. 54 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 5 Viewing Photos and Videos on a TV · Connecting to a High-Definition TV 1. Connect HDMI cable to a HD TV. 2.

Set video input source of a TV to " HDMI" option. 3. The steps for viewing stored pictures and Video on a TV are exactly the same as for viewing them on the LCD display. NOTE: The camera can not capture videos or photos when it is connected to a high-definition TV. The LCD Panel does not work when the camera is connected to a high-definitionTV. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid DVC-0075F Digital Camera User Guide www.

polaroid.com 55 · Connecting to a non-high-definition 16:9 (Wide) or 4:3 TV 1. Connect one end of the AV cable to your camera's AV Out port. 2. Connect the other end of the cable to a TV.

3. The steps for viewing stored photos and Video on a TV are exactly the same as for viewing them on the LCD display. NOTE: The LCD display does not work when the camera is connected to a TV. Polaroid DVC-0075F Digital Camera User Guide www.polaroid.

com 56 6 Video File Converter Bundled software CD contains ArcSoft MediaConverter that features video file converter to convert multiple video formats into compatible format with your camera.

[You're reading an excerpt. Click here to read official POLAROID](#)



[DVC-00725F user guide](#)

<http://yourpdfguides.com/dref/1313109>

In this way, you can convert various video files formats and playback your favorite videos on your camera. · Media Converter To convert a video file: 1. Install the ArcSoft MediaConverter onto your PC ( Refer to section 10). 2. Click [ Start ] --> [ (All) Programs ] --> [ ArcSoft MediaConverter ] --> [ MediaConverter ]. 3. MediaConverter main Screen will appear on your desktop. 4. Click [Add File] .

Preview Window Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 57 5. Select the Video file you want to convert. 6. You can preview your media files before converting. To preview media files, use the following control functions. · · Click Click to start previewing. to stop previewing. Make sure your media files can be previewed before converting.

58 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 7. Click on [ Start ] to begin converting files. Preview Window 8. The Task Report window will pop up after the task is completed. 9. Before transferring the converted file to your camera, rename the converted file to " CLIPXXXX.avi". (XXXX should be a four figures, eg 0001 to 9999) 10.

Connect your camera to PC and copy the converted video to "My Computer\Removable Disk\DCIM\200MOVIE" in your camera. 11. After transferring the converted video to the camera, press Playback Button to enjoy your favorite Video. Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 59 7 Using the SD (Secure Digital) Card · Using the SD Card Your camera comes with built-in flash memory for storing photos and video clips. You can expand the memory by using a Polaroid SD card (sold separately) (up to 4GB). The camera senses whether a memory card is inserted, and automatically saves photos and video clips accordingly. Note that you cannot save photos or video clips to the built-in flash memory while a memory card is installed in the camera. Memory card precautions: 1.

Use only a compatible SD memory card with this camera preferably a Polaroid SD card. 2. Electrostatic charge, electrical noise, and other phenomena can cause data corruption or even loss. Always make sure that you always back up important data on other media (MO disc, computer hard drive, etc.). 3. If a memory card starts to behave abnormally, you can restore normal operation by formatting it. However, we recommend that you always take along with more than one memory card whenever using the camera far away from your home or office. 4. We recommend that you format a memory card when using it for the first time, or whenever the card you are using seems to be the cause of abnormal pictures.

Remember to format a memory card if it was used in another digital camera or other devices. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com.

60 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com IMPORTANT! · Make sure you turn off the camera before inserting or removing a memory card. · Be sure to orient the card correctly when inserting it. Never try to force a memory card into the slot when you feel resistance. · SD memory cards have a write protection switch that you can use to protect files from accidental deletion. However, you must remove the write protection whenever you want to record new files onto it, format it, or delete its files. · Files contained in the SD card recorded by other cameras may conflict with the DVC-00725F camera, and valuable data in your existing SD card may be distorted or lost when the card is inserted in the DVC-00725F camera. We strongly recommend the user to use a new or formatted Polaroid (not included) SD card for the DVC-00725F camera. The manufacturer is not liable for losing or corrupting any valuable data or files in your SD card due to improper operation. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid DVC-0075F Digital Camera User Guide www.

polaroid.com 61 Inserting the SD card 1. Turn off the camera. 2. Open the camera's battery/SD card door by pushing it outwards as illustrated. 3. Insert the SD card and ensure the card is inserted the correct position as illustrated. 4. Close the camera's battery/SD card door by pressing it downwards and slide it back to lock. Removing the SD card To remove the SD card, turn off your camera and open the camera's battery/SD card door.

Gently push the SD card inwards and then release it. The SD card will eject out of the SD card slot. IMPORTANT! · Never insert any other object into the camera's SD card slot. Doing so results in the risk of damage to the camera and card. · Should water or any foreign objects ever get into the card slot, immediately turn off the camera, remove the battery or disconnect the AC adapter, and contact your dealer or the nearest service provider. · Never remove a card from the camera while the camera is powered on. Doing so can cause the Photo or video recording operation to fail, and even damage the memory card. 6 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 8 Burning the Recorded Clip into DVD Bundled software CD contains ArcSoft MediaImpression also features burning the video clip into DVD.

You can preserve your precious videos on DVD to share with family and friends. To create a DVD: 1. Install the ArcSoft MediaImpression onto your PC (Refer to Section 10). 2. Click [ Start ] --> [ (All) Programs ] --> [ ArcSoft MediaImpression ] 3. ArcSoft MediaImpression main Screen will appear on your desktop. 4. Click [ Make Video ]. Polaroid DVC-0075F Digital Camera User Guide www.polaroid.

com 63 5. The operation screen will appear: · · · · Select the folder that contains the file(s) you want to use. Select the file(s) Click button to put the file(s) into slide Click [Burn to Disc] 1 2 3 4 6. Click [ Start ] to start DVD burning. 64 Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 9

Uploading Video Files to YouTube The bundled software CD contains ArcSoft MediaImpression which features uploading the recorded videos to YouTube. It will help you to share them with your family and friends on the YouTube website. · ArcSoft MediaImpression To upload video files to YouTube: 1. Install the ArcSoft MediaImpression onto your PC (Refer to Section 10).

2. Click [Start] --> [ (All) Programs ] --> [ ArcSoft MediaImpression ] 3. ArcSoft MediaImpression main Screen will appear on your desktop. 4. Click [ Video] Option.

Polaroid DVC-0075F Digital Camera User Guide www.polaroid.com 65 5. Select the video file you want to upload and click [ Upload to YouTube] option at the bottom menu. 6.

If this is your first time using of this function, please follow the instruction on YouTube Setting Panel. 66 Polaroid DVC-0075F Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>



polaroid.com 7. Go to <http://www.youtube.com/login>, then Log onto your YouTube account. (If you do not have a YouTube account, sign up here first.) 8. After you log onto your YouTube account, Click [ Get Authorization ] button below.

Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 67 Click [Allow] Button shown on YouTube website. 9. Click [Save] Button to upload the video. 68 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 10 Installing Bundled Software · Installing Video Codec to view videos correctly on PC Before connecting this camera to a computer for the first time, you should install the correct Video Codec on the computer in order to view videos on PC. The Video Codec is on the CD-ROM disc provided in the package. To install Video Codec: 1.

Insert the CD-ROM into the computer's CD-ROM drive. The autorun screen will appear. 2. Click "Install Video Codec". Follow the on-screen instructions to complete the installation.

Depending on your operating system, you may have to restart your computer after installing it. · Installing Bundled ArcSoft Software The CD-ROM supplied with this camera contains the other 2 pieces of software. · ArcSoft MediaConverter can convert multiple video formats into compatible format with your camera. · ArcSoft MediaImpression is a user-friendly application that helps you managing your media for you, and gives you funny and exciting ways to create and share projects featuring your photo and video files. Support the feature of uploading videos easily to YouTube.

The detailed information can be found in online help of all the bundled software. To install the bundled software: 1. Insert the CD-ROM into your computer's CD-ROM drive. The autorun screen appears. 2. Select the piece(s) of software you want to install from the list, then click Install Application Software. Follow the on-screen instructions to complete the installation. Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 69 11 Getting Help · Polaroid Online Services · ArcSoft Software Help Website: <http://www.polaroid.com>

[www.polaroid.com](http://www.polaroid.com) For United States ArcSoft HQ Support Centre (Fremont, CA 94538) Tel.: 1-510-979-5599 Fax: 1-510-440-7978 E-mail: [support@arcsoftsupport.com](mailto:support@arcsoftsupport.com) Web: <http://www.arcsoft.com/en/support/> For Europe ArcSoft Europe Support Centre (Ireland) Tel.: +353-(0) 61-702087 Fax: +353-(0) 61-702001 E-mail: [eurosupport@arcsoft.com](mailto:eurosupport@arcsoft.com) For Japan ArcSoft Japan Support Centre (Tokyo) Tel.: +81-3-5795-1392 Fax: +81-3-5795-1397 E-mail: [support@arcsoft.jp](mailto:support@arcsoft.jp) Web: <http://www.arcsoft.jp>

For Latin America E-mail: [latinsupport@arcsoftsupport.com](mailto:latinsupport@arcsoftsupport.com) For China ArcSoft China Support Centre (Hangzhou) Tel.: +86-571-88210575 E-mail: [support@arcsoft.com.cn](mailto:support@arcsoft.com.cn)

cn Web: <http://www.arcsoft.com.cn/new/support> For Taiwan ArcSoft Taiwan Support Centre (Taiwan) Tel.: +886-(0) 2-2506-9355 Fax: +886-(0) 2-2506-8922 E-mail: [support@arcsoft.com.tw](mailto:support@arcsoft.com.tw)

com.tw Web: [www.arcsoft.com.tw](http://www.arcsoft.com.tw) Visit <http://www.arcsoft.com> for technical support and frequently asked questions (FAQ's). ©2008 by 70 All rights reserved "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, USA. Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

com 12 Appendix · Technical specifications Sensor Lens . . . . . Sensor: 5.0 MP CMOS Focal Length: 6.8~34 mm Normal focus: 1cm ~ infinite Macro focus: 1cm ~ 30cm F No.: 3.5~3.7 LCD Screen Exposure Control Image Resolution Video Resolution Shutter Optical Zoom White Balance Storage Self-timer File Format Flash (for still) Flash Range Image Play TV Out Power Supply Dimension 2.7" LCD -/+1.0 EV in 1/3 step High: 3744X2808 Low: 1600X1200 HD: 1280X720 30fps VGA: 640X480 30fps Electrical shutter 5X Auto / Manual (Daylight / Fluorescent / Tungsten) · Internal Memory: 64MB Nand Flash External Memory: Supports SD/MMC card Standard: 2592X1944 D1: 720X480 30fps QVGA: 320X240 30fps Approx. 10 seconds · Still Image: JPEG Video Clip: AVI (H.264) Auto / Red Eye Reduction / Off 3m (9.

9 ft) Single / Thumbnails / Slideshow Digital : HDMI Analog: Composite Video (NTSC/PAL Selectable) NP60 Lithium-ion Rechargeable Battery · Size: (W) 117 mm x (D) 56 mm x (H) 65 mm Weight: Approximately 314g (without battery); 340g(with battery) PC Interface Mini USB2.0 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 71 · Default Settings The following table indicates the camera's default settings as well as the functionality of the feature. Either it is always on or only functions one time.

NOTE: The "One Time" setting is valid once (either Video or Photo capture) or until the power goes off. Setting Resolution Stabilization Flash Date Printing Night Mode Sound TV System Language Volume Macro Exposure Sharpness White Balance Two in One Photo Frame Self timer Functionality Always Always Always Always Always Always Always Always One Time One Time One Time One Time One Time One Time One Time One Time 0EV Level 5 Auto Off Off Off Default Factory Setting HD for Video Standard for Photos Off Off Off Off On NTSC English Level 8 7 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Multi-snap Backlight Mode Motion Detect Effect Format Memory / Format Card Information Intelligent Lighting One Time One Time

One Time One Time One Time One Time One Time Off Off Off Normal Off On Off NOTE: The default language for the LCD screen may vary with the different shipment destinations. · System requirements . . . . . Microsoft Windows 2000/XP/Vista Intel Pentium III 800MHz or above 256 MB RAM CD-ROM Drive 700 MB free HDD space Available USB port 16-bit Color Display NOTE: The LCD screen is manufactured using extremely high-precision technology. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording. Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 73 13 Troubleshooting · Troubleshooting 1.If the LCD image is not clear when shooting, how can the focus be adjusted? Make sure the subject is within the focus range; Normal mode is at least 30 cm (11.8 inches) away from the lens. In the Macro mode, the subject needs to be between 1 to 30 cm (0.39 to 11.8 inches) away.

Make sure the camera is not in the Marco mode if your subject is within the normal focus range. If it is on, you will see the Macro [ ] on the lower right side of the LCD display. If your subject is at least 30cm (11.8 inches) away and the camera is set to Macro, the subject will look out of focus on the LCD display.

2.The flash is not working. The camera is in Macro Mode. The battery power is low. 3.When recording, the digital zoom does not function. @@@@Delete these files and the others can then be played normally.



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>

*@@Make sure that the focus range is NOT set in the Macro mode; the flash is disable in this mode. Scroll through Photo modes and set Flash to Auto. In Auto mode camera flash fires ONLY when necessary (in dark setting as example). 6.*

*Why do some of my indoor pictures look blurry and dark? In these photo capture conditions, the camera's shutter time is much longer, therefore you may need to turn on the flash and/or use a tripod. You will hear the shutter sound when the photo is taken. 7.How do I charge battery? Your computer will not charge battery when connected. ONLY the supplied AC charger can be used.*

*Your camera must be turned OFF; the blinking led indicates charging, when the light is green charging is complete. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 75 · Tips, Your Safety & Maintenance Your Camera should only be operated within the following environment. · 32 - 95° Fahrenheit; 5 - 35° Celsius · 20% - 80% relative humidity, non condensing The battery life and image quality may be impaired when the camera is operated beyond these conditions. . . . . Camera Cautions NEVER immerse any part of the camera or its accessories into any fluid or liquid.*

*ALWAYS disconnect the camera from your PC or TV before cleaning it. ALWAYS remove dust or stains on the camera with a soft cloth dampened with water or neutral detergent. NEVER place hot items on the surface of the camera. NEVER attempt to open or disassemble the camera because such doing will violate any warranty claim. · Regulatory Information FCC Notice This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 76 Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.*

*These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: . . . . Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.*

*Connect the equipment into an outlet on a circuit different from that to which the receiver is needed. Consult the dealer or an experienced radio/TV technician for help. Shielded cable must be used with this unit to ensure compliance with the Class B FCC limits. Under the environment with electrostatic discharge, the product may malfunction and require user to reset the product. Polaroid DVC-0075F Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 77 Questions? Need some help? This manual should help you understand your new product. If you have questions, call our customer service help number. Look for the insert with this icon: or visit [www.polaroid.com](http://www.polaroid.com). US 1008 Part No.: OMDVC-00725FUS001 .*



[You're reading an excerpt. Click here to read official POLAROID DVC-00725F user guide](http://yourpdfguides.com/dref/1313109)  
<http://yourpdfguides.com/dref/1313109>