



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID DVG-1080P. You'll find the answers to all your questions on the POLAROID DVG-1080P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID DVG-1080P
User guide POLAROID DVG-1080P
Operating instructions POLAROID DVG-1080P
Instructions for use POLAROID DVG-1080P
Instruction manual POLAROID DVG-1080P



5.0 Megapixel HD Digital Camcorder
DVG-1080P
User's Manual



**Questions?
Need Some Help?**

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit
www.polaroid.com/support.

DIGITAL QUALITY. POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID DVG-1080P user guide](http://yourpdfguides.com/dref/1313111)
<http://yourpdfguides.com/dref/1313111>

Manual abstract:

3. 4. Speaker Capture Lens Light Microphone 5. LED 6. Tele/Wide Button 7. Picture Shutter Button 8. OK / Menu Button 9. Movie Shutter Button 10. Right Button 11. Left Button 12. Record/ Play Button 13. TV Port 14. HDMI Port 15. Battery Cover 16. @@LCD Panel 18. Power Button 19. Tripod mount 20. @@...

.....
.....
.....
.....
.....
.....
.....
.....

.7 · Package Contents

.....
.....
.....
.....
.....
.....

.....8 · Checking the Battery Level .

.....
.....
.....
.....
.....
.....

.....9 · Installing and Removing the Battery

.....
.....
.....
.....
.....

....9 · Using Your Battery .

.....
.....
.....
.....

....10 · Inserting and Removing an SD Card

.....
.....
.....
.....

.....11 · Turning the Camera On and Getting Started....

.....
.....
.....

.....12 · Turning the Camera Off..

.....
.....
.....
.....
.....
.....
.....

.....12.2 Record Mode

.....
.....
.....
.....
.....
.....
.....
.....
.....

..13 · Button Function

.....
.....
.....
.....
.....
.....
.....
.....

13 · LCD Display Information

.....
.....
.....
.....
.....
.....

.....14 · Movie Recording ..

.....
.....
.....
.....
.....
.....
.....
.....

.....17 · Photo Recording

.....
.....
.....
.....
.....
.....
.....
.....

.....
17 · Using the Zoom Function

.....
.....
.....
.....
.....

.....
.18 · Record Menu Option

.....
.....
.....
.....
.....

.....
...19 · Record Mode Functions ..

.....
.....
.....
.....
.....

.....
.19 · Movie Mode Submenu Functions

.....
.....
.....
.....
.....

.....
.....20 · Picture Mode Submenu Setting... ..

.....
.....
.....
.....

.....
....22 · · Picture Resolution.

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
...22 Selftimer (Picture Record Mode Only)..

.....
.....
.....
.....

.....28 4 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com LCD Display Information .

.....29 Operations for Playback Mode...

..31 Movie Playback.. .

.....32 Movie Playback Mode Menur.. .

...33 · Deleting Movies ..

33 · Lock Movies.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..35 · Repeat Movies.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

36 · Picture Playback

.....
.....
.....
.....
.....
.....
.....

...37 · Picture Playback Mode Menu .

.....
.....
.....
.....
.....

38 · Delete Pictures.. ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

...38 · Lock pictures. .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....40 · *Make a Slide Show.*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

41 4 *Setting up your Camera*

.....
.....
.....

.....
.....
.....
.....

.42 · *Setting Menu*

.....
.....
.....

.....
.....
.....
.....

....42 · *Sound.*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

....42 Information..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..43 Time Setting.. .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....43 Format..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..44 TV.. .

.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

51 · *Transferring Pictures or Movies to a Computer*

.....
.....
.....

..51 7 *Burning the Recorded Clip onto a DVD* ...

.....
.....
.....

.....53 8 *Uploading Video Files to YouTube* ..

.....
.....
.....

....56 *Polaroid DVG-1080P HD Camcorder User's Guide* www.polaroid.com 5 9 *Specifications and System Requirements*

.....
.....
.....

....60 · *Specifications*

.....
.....
.....

.....
.....
.....

.....60 · *System Requirements*

.....
.....
.....

.....
.....
.....

.....62 10 *Troubleshooting* ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

..63 · Troubleshooting ...

.....

.....

.....

.....

.....

.....

.....

.....

.....63 11 Getting Help

.....

.....

.....

.....

.....

.....

.....

.....

.....

.64 · Polaroid Online Services

.....

.....

.....

.....

.....

.....

.....64 · ArcSoft Software Help .

.....

.....

.....

.....

.....

.....

.....

.....64 6 Polaroid DVG-1080P HD Camcorder User's Guide www.

polaroid.com 1 Getting Started Thank you for purchasing your new Polaroid DVG-1080P high definition digital video camera. This camera with a 5.0 Megapixel sensor can take high definition videos and high quality still images up to 8.0 Mega pixels.

Outstanding features that your DVG-1080P digital video camera has: · A high quality glass lens system for well exposed sharp pictures from 0.5m to infinity including a 5X optical zoom mode and 4X digital zoom mode Automatic white balance and exposure compensation to suit lighting conditions Large 2.5 inch LCD screen for easier image preview and review. · · Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 7 · Package Contents Quick Start Guide Guide de Démarrage rapide Schnellanleitung Guida Rapida Guía Rápida de Inicio Guia de Inicio Rápido DVG-1080P Quick Start Guide Warranty Card AC Adapter Software CD-ROM NP60 Battery Digital Video Camera USB Cable HDMI Cable AV Cable 8 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com · Checking the Battery Level Check the battery power level before taking videos or photos. 1. Turn on the camera. 2.

Check the battery power level that appears on the LCD screen. Battery power is full. Battery power is adequate. Battery power is low. Battery power is exhausted. Please recharge the battery. · Installing and Removing the Battery 1. Open the camera's battery cover by pushing it outwards as illustrated. 2. Insert the battery as illustrated.

3. Close the battery cover by pushing it forwards. 4. To remove the battery, recover the battery cover the same way when installing. 5.

Pull the battery out with your finger. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 9 · Using Your Battery Our laboratory testing has shown that our digital camera models comply with industry standard battery consumption levels (Camera & Imaging Products Association commonly known as CIPA). All digital cameras are high drain products.

For the best performance and prolonged battery life, we recommend the use of a high capacity battery designed for such applications. (The lithium ion battery included with your camera is a high capacity battery). Here are some helpful hints to extend battery life considerably by limiting the following activities: · · · Reviewing photos on the LCD Screen Excessive use of the flash Remove the battery from your camera when not in use to prevent battery leakage. WARNING!

· · · · · The battery should be replaced by an adult. Use recommended or equivalent type of batteries only. Insert the batteries in the correct orientation. Remove the exhausted battery from the camera immediately. Do not short the supply terminals. Please dispose of the battery properly. These instructions

should be retained for future reference.

10 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com · Inserting and Removing an SD Card The camera comes with internal memory which allows you to store pictures and movies. You can expand the memory capacity by using an optional SD memory card. 1. Insert the memory card into the camera as shown in the illustration. 2. To remove the SD card, press the card inwards to release it. 3. When the card pops out, gently remove it from the slot. Note: · When a memory card is inserted, movies/pictures are saved on card rather than on the built-in memory. · Protecting Data on an SD Card: SD card is read-only by locking the SD card. Pictures and movies cannot be recorded when the SD card is locked. Make sure the lock is in writeable position inserting into your camera. MB Writeable position Write-Protected Position Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 11 · Turning the Camera On and Getting Started 1. To turn on the camera: Flip out the LCD panel or press and hold the Power Button for one second. When the camera is turned on, the green LED will turn on 2. To record a movie: press the Record button (). 3. To take a picture: press the Camera Shutter button () halfway down till the focusing frame turns from white to green, then press the Camera Shutter button all the way down to take your picture.



[You're reading an excerpt. Click here to read official POLAROID DVG-1080P user guide](http://yourpdfguides.com/dref/1313111)
<http://yourpdfguides.com/dref/1313111>

Focusing Frame: White Focusing Frame:Green 4. To view stored movies or pictures, press the Record/Play button () once to switch to the Playback Mode..
@@Press Menu/OK Button when in Record Mode. @@@@3. Submenu will pop out while move to each main menu option. 4. Press Down Button to enter the folder of main option you select.

5. Press Right/Left: Shoot with an effect that makes skin tones more natural. 3. Night: Use Night mode for night scenes or low light conditions. 4. @@B/W: The image is converted to black-and-white. 6. @@7. @@In the Effect submenu, press the Down Button to enter Scene. 2.

Use theRight/Left Buttons to move between the 7 settings. 3. @@@@Operation 1. In the Effect Submenu, press the own buttons to select Exposure. 2. @@@@3. Press the OK Button to confirm your setting. @@Three manual white balance settings are available. · Auto: The camera automatically adjusts white balance for most pho. tographic scenes.

· Daylight: Used in bright outdoor scenes.. · Fluorescent: Used for fluorescent lighting conditions. · Tungsten: Used for tungsten lighting conditions. Operation 1. In the Effect Submenu, press the Down buttons to select WB 2. Use the Right/Left Buttons to move between the four settings. The change can be seen on the LCD display. 3. Press the OK Button to confirm your setting.

Display Screen Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 27 3 Playback Mode · Button Functions The Buttons have the following functions in Movie and Picture Playback Modes. Direction Button Right Button: Go to the next movie/picture. Fast forward Left Button: Go to the previous movie/ picture. @@@@Switch between Record and Playback modes.

2. Return to the previous page. @@Current Number/ Total number of movie or picture. @@Operation 1. @@Press the Direction Button to select the specific option.

@@@@Press the Menu/OK button to view the Videos/Photos. Display Screen 2. 3. 4. @@2.

@@Press the Menu/OK button to play the movies. Display Screen 3. @@4. @@@@2. @@Display Screen · Delete Movies Operation 1. Use the Up/Down Buttons to select the Delete option. @@Press the Menu/OK Button to go to the Delete menu. 3. Use the Right/Left Buttons to select the movie. 4.

@@Press RECORD/PLAY Button to exit. 5. @@6. @@· Movies on a write-protected memory card cannot be deleted. · The delete function will only erase unlocked videos. @@This function can prevent the movies from being deleted accidentally. @@Display Screen 3. Use the Right/Left Buttons to select the Movie. @@@@Operation 1. @@2.

Press the Menu/OK Button to start repeating, press it again to stop and return to the previous page. Display Screen 36 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com · Picture Playback Operation 1. 2.

In the Picture thumbnail preview folder, use the direction buttons to locate the picture you want to view. Press the Menu/OK button to view the picture.

Display Screen 3. Use the Right/Left Buttons to go to the next or last picture. 4.

While the picture is being viewed, use Tele Button to magnify it. 5. Use the Direction Buttons to navigate the magnified picture. Press the Menu/ OK Button to exit the navigation mode. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 37 · Picture Playback Mode Menu Operation 1. In Picture Playback Mode, press Menu/OK Button to enter Picture Playback menu screen. 2. Use Up/Down Buttons to select three options, Delete, Lock, and Slideshow.

Display Screen · Delete Picture Operation 1. Use Down Buttons to select the Delete option. Display Screen 38 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 2. Press Menu/OK Button to go to the Delete menu. 3. Use Right/Left Buttons to select the picture. 4. Use Up Button to delete all pictures or Down Button to delete single picture.

Or Press RECORD/PLAY Button to exit. 5. Before a picture is deleted, a confirmation screen will appear; choosing "Yes" will execute the operation, "No" will cancel the operation. 6. Press Menu/OK Button to validate the setting.

NOTE: · If a memory card is inserted, you can delete only those pictures stored on the card. · Pictures on a write-protected memory card cannot be deleted. · The delete function will only erase unlocked pictures. Locked pictures must be unlocked before being deleted. Polaroid DVG-1080P HD Camcorder User's Guide www.

polaroid.com 39 · Lock Pictures Single or all pictures can be locked. This function can prevent pictures from being deleted accidentally. Operation 1. Use the Up/Down Buttons to select the Lock option. Display Screen 2. Press the Menu/OK Button to go to the Lock menu. 3. Use the Right/Left Buttons to select the picture. 4.

Use the Up Button to lock/unlock all pictures or Down Button to lock/unlock single picture. 5. Press the RECORD/PLAY Button to exit. 40 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com · Make Slide Show This function automatically repeats all pictures in order. Operation 1. Use Up/Down Buttons to select the Slideshow option. 2. Press Menu/OK Button to start the slide show; press it again to stop and return to the previous page.

Display Screen Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit

www.polaroid.com. Polaroid DVG-1080P HD Camcorder User's Guide www.

polaroid.com 41 4 Setting Up Your Camera · Setting Menu Operation 1. In the Record Mode, press the Menu/ OK Button to enter the record menu screen. 2. Use the Right/Left Buttons to select Setting.

3. This Setting Submenu contains 7 options for configuring your Camera's set up. They are Sound (operation sound),Information,Time Setting,Format,TV,Language,and Default Setting. @@Operation 1. 2. 3. In the setting submenu, press the Down Button to enter Sound. Use the Right/Left Buttons to choose between On or Off. Press Menu/OK Button to confirm your setting. @@Off: Do not show the indicator(s) on the LCD display.

1. In the setting submenu, press the Down Button select Information. 2. Use the Right/Left Buttons to choose between On or Off. 3. Press the Menu/OK Button to confirm your setting. 1 · Time Setting Operation 1. In the setting Submenu, press the Down Button to select Time Setting. @@Adjust the date and time by using the Left/ Right Buttons. Press the OK Button to confirm your setting.

@@@No: Do not format the built-in memory or SD card (if inserted). Operation 1. 2. In the setting Submenu, press the Down Button to select Format. Press the Menu/OK Button to go to the Format confirmation screen.

@@@4. 5. Use Right/Left Buttons to choose between Yes or No. @@@@@Wrong TV system setting may cause image screen flickering. NTSC standard: USA, Canada, Japan, South Korea and Taiwan etc.

@@@2. 3. In the setting Submenu, press the Down Button select TV.

[You're reading an excerpt. Click here to read official POLAROID](#)



[DVG-1080P user guide](#)

<http://yourpdfguides.com/dref/1313111>

Use the Right/Left Buttons to choose between NTSC(60Hz) or PAL(50Hz). @@Operation 1. 2. 3. @@Use the Right/Left Buttons to choose the language options. Press the Menu/OK Button to confirm your setting. Display Screen · Default Setting To restore the camera back to default factory settings, select this option.

46 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Operation 1. In the setting Submenu, press the Down Button to go to Default Setting. 2. Press the Menu/OK Button to go to the Default Setting confirmation screen. Display Screen 3. Use the Right/Left Buttons to choose between Yes or No. 4. @@5.

Press the Menu/OK Button to confirm your setting. The following table indicates the camera's default setting Setting Resolution Stabilization Motion Detect Default Factory Setting HD (1080p) for Movie Standard for Picture Off Off 47 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Self-timer Macro Mode Scene Exposure WB (White Balance) Sound Information TV Language Volume Off Normal Auto 0EV Auto On On Depends where sold Depends where sold Level 12 Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. 48 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 5 Viewing Pictures and Movies on a TV · Connecting to a High-Definition 16:9(Wide) TV 1.

2. 3. 4. Connect one end of the HDMI cable to your camera's HDMI Out port. Connect the other end of the to a television. Set video input source of your TV to the "HDMI" option. The steps for viewing stored pictures and movie on a TV are exactly the same as for viewing them on the LCD monitor. Note: The camera will not capture a movie recording or take pictures when it is connected to an HDTV. The LCD Panel will not turn on when the camera is connected to an HDTV. · Connecting to a non-high-definition 4:3 TV 1.

2. 3. Connect one end of the AV cable to your camera's AV Out port. Connect the other end of the cable to a television. The steps for viewing stored pictures and movie on a TV are exactly the same as for viewing them on the LCD monitor. 49 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Note: The LCD Panel will not turn on when the camera is connected to a TV. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. 50 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 6 Viewing Pictures and Movies on PC · Installing Bundled Software The CD-ROM supplied with this camera contains 2 pieces of software.

· ArcSoft MediaImpression is a user-friendly application that helps you managing your media, burning your video into DVD, and uploading your videos to YouTube easily. Adobe Reader is a popular program that you need to have installed to view the User's Manual. Many computer users will find they already have this software installed on their computer. To install the bundled software: 1. 2.

Insert the CD-ROM into your computer's CD-ROM drive. The autorun screen appears. Click "Install ArcSoft MediaImpression". Follow the on-screen instructions to complete the installation. Note: The detailed information can be found in online help of all the bundled software. · Transferring Pictures or Movies to a Computer You can transfer pictures or movies stored on your camera to a computer and send them in emails to friends or post them on websites. To do this you should: Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 51 1. 2.

3. 4. Connect the computer and camera with the supplied mini USB 2.0 cable. The LED will light up and blink. After the LED stops blinking, movies and picture(s) can be found on your computer at "My Computer\Removable Disk\DCIM\100MEDIA". @@@@To create a DVD: 1. Install ArcSoft MediaImpression (Refer to Section 7). 2. Click Windows [Start]->[(All) Programs]->[ArcSoft MediaImpression].

3. ArcSoft MediaImpression main Screen will appear on your desktop. 4. Click [Make Movie]. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 53 5. The operation screen will appear: · Select the folder that contains the video files you want to burn. · Select the file(s). · Click button to add the files into slide.

· Click [Burn to Disc]. 54 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 6. @@@@To upload video files to YouTube: 1. @@2. Click [Start]->[(All) Programs]->[ArcSoft MediaImpression] 3. ArcSoft MediaImpression main Screen will appear on your desktop. 4. Click [Video] Option.

56 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 5. Select the video file you want to upload and click [Upload to YouTube] option at the bottom menu. 6. If this is your first time using this function, please follow the instruction on YouTube Lowercase S Panel. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 57 7. Using the web browser on you PC, Go to http://www.

youtube.com/ login, then Log onto your YouTube account. (If you do not have a YouTube account, You will need to create an account first.) 8. After you log onto your YouTube account, Click [Get Authorization] button below.

58 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Click [Allow] Button shown on YouTube website. 9. Click [Save] Button to upload the video.

Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 59 9 Specifications and System Requirements · Specification Image sensor Operation modes Lens Focus range Zoom 5 Mega pixel CMOS sensor Movie record, Picture record f=6.8 ~ 34mm; F3.5 ~3.7 Macro: 1 cm ~ 80cm Normal: 10cm ~ infinite HD(1080p):1X~10X (5X Optical + 2X Digital) . Other video resolution: 1X~20X (5X Optical + 4X Digital) Electronic 2.5"LCD Built-in 128MB memory (partial memory is used for firmware code); SD/SDHC card slot support High 3200x2400 (8M Pixels) Std 2592x1944 (5M Pixels) Low 2048x1536 (3M Pixels) Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Shutter LCD monitor Storage media Image resolution 60 Movie resolution HD(1080p) 1440X1080(30fps) HD(720p) 1280X720(30fps) WVGA 848X480(60fps) VGA 640X480(30fps) QVGA 320X240(30fps) Auto/Manual (Daylight, Fluorescent, Tungsten) +1EV~ -1EV 10 seconds delay Digital light On/Light On/Off Picture: JPG Movie: AVI Single Image/Slideshow Mini USB 2.

0 Port NTSC/PAL Selectable, HDMI Lithium-ion Rechargeable Battery 104(H) * 82(W) * 38(D) mm 119g (without battery) White balance Exposure Self timer Light File format Image play PC interface TV out Battery Dimension Weight Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com 61 · System requirements Microsoft Windows 2000/XP/Vista Intel Pentium III 800MHz or above 256 MB RAM CD-ROM Drive 700 MB free HDD space Available USB port 16-bit Color Display Note: The LCD screen is manufactured using extremely high-precision technology.



[You're reading an excerpt. Click here to read official POLAROID DVG-1080P user guide](#)

However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon:

Or visit www.polaroid.com. 62 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com

10 Troubleshooting · Troubleshooting If the LCD image is not clear when shooting, how can the focus be adjusted? If you are taking pictures less than 80cm, make sure the camera is set to the Macro mode.. 2. The light is not working.

The battery power is low. 3. The files on the memory card do not display smoothly when the LCD shows the "!" marking. The "!" means the SD card is low speed or has incompatible content on the card. The way to solve this condition is to format SD card by using this camera instead of PC (Please refer to the detailed Format instruction in Section 3).

4. Why do some of my indoor pictures look blurry and dark? The camera automatically adjusts exposure time under low light/ indoor condition. Keep camera (and photographed subject) steady for several seconds when taking pictures. Shutter will sound when picture has been taken. (The use of a tripod is recommended as well in these lighting conditions) 5. How do I charge the battery? You cannot use the USB port to charge the camera's battery. You should use the AC charger that came with your camera. The light will blink when charging and will remain steady when charging is complete. 1. Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com

[polaroid.com](http://www.polaroid.com) 63 · 11 Getting Help · Polaroid Online Services · ArcSoft Software Help Website: <http://www.polaroid.com> For United States ArcSoft HQ Support Centre (Fremont, CA 94538) Tel.: 1-510-979-5599 Fax: 1-510-440-7978 E-mail: support@arcsoftsupport.com Web:

<http://www.arcsoft.com/en/support/> For Europe ArcSoft Europe Support Centre (Ireland) Tel.: +353-(0) 61-702087 Fax: +353-(0) 61-702001 E-mail:

eurosupport@arcsoft.com For Japan ArcSoft Japan Support Centre (Tokyo) Tel. : +81-3-5795-1392 Fax: +81-3-5795-1397 E-mail: support@arcsoft.jp Web: <http://www.arcsoft.jp> For Latin America E-mail: latinsupport@arcsoftsupport.com For China ArcSoft China Support Centre (Hangzhou) Tel.

: +86-571-88210575 E-mail: support@arcsoft.com.cn Web: <http://www.arcsoft.com.cn/new/support>

For Taiwan ArcSoft Taiwan Support Centre (Taiwan) Tel.: +886-(0) 2-2506-9355 Fax: +886-(0) 2-2506-8922 E-mail: support@arcsoft.com.tw Web: www.arcsoft.com.tw Visit <http://www.arcsoft.com> for technical support and frequently asked questions (FAQ's). (C)2009 Polaroid by All rights reserved "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation.

64 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com Part No.: UMDVG1080PUS001 66 Polaroid DVG-1080P HD Camcorder User's Guide www.polaroid.com.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313111)

[DVG-1080P user guide](http://yourpdfguides.com/dref/1313111)

<http://yourpdfguides.com/dref/1313111>