



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID FDM-1015. You'll find the answers to all your questions on the POLAROID FDM-1015 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID FDM-1015**  
**User guide POLAROID FDM-1015**  
**Operating instructions POLAROID FDM-1015**  
**Instructions for use POLAROID FDM-1015**  
**Instruction manual POLAROID FDM-1015**

10" Under-the-Cabinet LCD TV with DVD Player  
FDM-1015



User's Manual



2006002



[You're reading an excerpt. Click here to read official POLAROID FDM-1015 user guide](http://yourpdfguides.com/dref/1312993)  
<http://yourpdfguides.com/dref/1312993>

**Manual abstract:**

@@@ Plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it, if the unit will not be used for a long time, disconnect the plug from the outlet. NOTE: Before plugging the power cord into an AC outlet, make sure that all the connections have been made. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions. -2- Important Safety Instructions 1) 2) 3) 4) 5) 6) Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use near water. Clean only with dry cloth. the product, Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions. 8) 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer. 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Note: Do not touch the color TFT LCD screen by hand directly. 7) Do not block any ventilation openings.

Maintain well ventilated conditions around -3- Important Safety Instructions CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. Region code information DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc. The region code of this unit is 1. IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT 2. DANGER: Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. 3. CAUTION: Do not open the top cover.

There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel. -4- FCC Notice NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

-5- Table of Contents Important Safety Instruction----- 2 FCC

Notice----- 3 Table of

Contents----- 6 Characteristic Features

----- 7 Disc Information ----- 8

Front Panel ----- 9 Rear Panel and Display

Panel----- 11 Remote Control ----- 12

Preparation -----12 Using the Remote

Control-----12 System Connections -----

16 16 Connecting To External AV Signal Source -----Connecting To TV Signal Input

Source----- 16 Connecting To the Antenna -----17

Connecting To the Power Adapter ----- 18 Radio

Function----- 19 TV Function

----- 20 AV Function

----- 24 Play Operation

----- 25 Playback Functions

----- 27 System Setup -----

29 DVD Setup ----- 29 LCD Setup

----- 30 Installing the Unit in

Kitchen----- 31 Troubleshooting -----

33 Specifications ----- 34 -6- Characteristic Features This product incorporates DVD

player, LCD display, TV receiver and radio function in one system.



[You're reading an excerpt. Click here to read official POLAROID FDM-1015 user guide](http://yourpdfguides.com/dref/1312993)  
<http://yourpdfguides.com/dref/1312993>

*It is designed for convenient use in the kitchen. Please refer to page 30 for the installation instructions. Special Functions Supports Multi-language. Advanced Playing Function Compatibility Plays: DVD, CD and JPEG discs. On-Screen Display Displays your choice of English, Spanish, or French. Fast Search Function Multi-speed, fast forward, slow reverse, and repeat playback. Zoom Function Allows the viewer to enlarge or reduce the picture. Search By Time Multiple Mode . . . . DVD TV Radio External Audio & Video Input mode High Quality Property Video Screen Supports normal screen (4:3) and wide screen (16:9) aspect ratios. AV Input External Audio, Video input can be connected to most external AV sources.*

*LCD (Liquid Crystal Display) Screen Color video screen designed with LCD technology clearly shows video data. Amplifier Function Built-in 2x5w stereo amplifier with left and right speakers. Switching Power Adapter Automatically adapts to the voltage required. Search for a certain time on a disc. TV Functions . . . . Receive TV signal clearly. Search for TV channels automatically. Automatically memorize the channels. Radio Functions . . . . Receive AM/FM signal clearly. Search for radio stations automatically. Store radio stations easily. Search for radio stations in high or low frequency range. -7- Disc Information Disc Formats Supported By This Player DISC LOGO DIAMETER PLAYBACK TIME/ PLAYABLE SIDES 133 min (SS-SL) 12cm DVD 242 min (SS-DL) 266 min (DS-SL) 484 min (DS-DL) 41 min (SS-SL) 8cm 75 min (SS-DL) 82 min (DS-SL) 150 min (DS-DL) 12cm CD 8cm JPEG 12cm 20 min 74 min The disc maker specifies the operation of some DVD discs. Please refer to the instruction manual with the disc. Care of Discs Do not touch the playing surface of the disc. Do not stick paper or labels on the disc. Cleaning of Discs If a disc has fingerprints or dust on it, lightly wipe the disc with soft cloth from the center of the disc outward. Storage of Discs Do not expose discs to direct sunlight or excessive temperatures. Never use record cleaning sprays, or any other solvents to clean your discs. -8- Front Panel Front Panel Drawing 1. POWER Button Under DVD mode, press once to go to beginning of the current track/chapter. Press twice to go to the previous track/chapter. 7. mode. 8. (SEEK )Button Button Press to enter or exit the STANDBY mode. 2. 3. 4. Disc Tray EJECT Button (PLAY/PAUSE) Button Used to load disc. Press to open or close the disc tray.*

*Press to start or pause playback under DVD mode. 5. mode. 6. Button (STOP) Button Press to stop playback under DVD Press to go to the next track under DVD Under radio mode, press once to fine tune frequency backward. Press for about 1.5 seconds to search radio stations backward automatically. Under DVD mode, press it to activate fast backward playback. -9- Front Panel 9. (SEEK +) Button 16. /CH+ Button Press to select items in the setup menu. Press to select channels or radio stations forward under TV or radio mode. Press to adjust the value upward when setting the time on the display panel. 17. /VOL Button Press to select items in the setup menu. Press to decrease the volume. Press to decrease the value in the picture setup menu. 18. VOL+ Button Press to select items in the setup menu. Press to increase the value in the picture setup menu. 19. TIME/ ENT Button Press to set the time when the time is displayed on the display panel. Use the , buttons to select the editing , position of hour or minute, use the or minute upward and downward. Under FM/AM status, press it once to display the time. Press it twice to set the time. Press to confirm the time or selections in setup menu. 20. TV/LCD SETUP Button Press to enter the LCD setup menu. 21.*

*LCD Screen Presents a high resolution picture. Under radio mode, press once to fine tune frequency forward. Press for about 1.5 seconds to search radio stations forward automatically. Under DVD mode, press it to activate fast forward playback. 10. Remote Sensor Receives remote control signal for operation. 11. SOURCE Button Press to shift among DVD, TV, AV, FM and AM mode. 12. MUTE Button Press to turn the speaker output on or off. The corresponding information will be displayed on the display panel. 13. SET Button Press to enter or exit from the timer setup menu. Press to memos again to select the end point (B). Press it a third time to stop the A-B Repeat. - 14 - Remote Control 19. EJECT Button Press to open or close the disc tray. 20. AUDIO Button Press to access various audio languages, when the DVD disc contains multiple audio languages. 21. 0-9 number Buttons Select numbers by pressing these buttons. 22. GOTO Button Press to select the desired disc starting Time, Track or Title. 23. +10 Button Under DVD mode, press to enter track/chapter numbers which are bigger than 9 by pressing this button first, then additional number buttons are needed. 24. 16:9/4:3 Button Press to shift the aspect ratio between 16:9 and 4:3. 25. DVD SETUP Button Press to access the DVD setup menu under DVD mode.*

*26. INFO Button Press to display detailed playback information under DVD mode. Press repeatedly to display additional information or to turn the information display off. 27. LCD ON/OFF Button Press to turn the LCD screen display on or off under DVD, TV and AV mode. 28. TIME Button Press to set the time when the time is displayed on the display panel. Use the buttons to select the editing position of hour or minute, use the buttons to adjust the value of the hour or minute upward and downward. Under FM/AM status, press it once to display the time. Press it twice to set the time. 29. NEXT Button Press to go to the next track under DVD mode. 30. PREV Button Under DVD mode, press to go to beginning of current track or chapter. Press twice to go to beginning of a previous track or chapter. 31. MUTE Button Press to turn on/off the speaker output. The corresponding information will be displayed on the display panel. 32. (PAUSE ) Button Press to pause playback in DVD mode. 33. ZOOM Button Press to enter and cycle through zoom functions, use the direction buttons to pan around the screen in DVD mode. 34. VOL+/- Buttons Press to increase or decrease the speaker volume level. 35. SLOW Button Press to activate slow playback. - 15 - System Connections . . . . Do not connect the power cord until all other connections have been made. Each time you restart the unit, it remembers the last function used. Please make all the connections before installing the unit in the kitchen. Connecting To External AV Signal Source Connections should be made as follows: Connect the L/R audio cables according to the marks on the rear panel of the unit: Left audio cable is plugged into the upper jack; the right audio cable is plugged into the lower jack.*

*Connecting To TV Signal Input Source - 16 - System Connections Connecting To Antenna Connect the supplied AM/FM antennas to listen to the radio.*



[You're reading an excerpt. Click here to read official POLAROID FDM-1015 user guide](http://yourpdfguides.com/dref/1312993)  
<http://yourpdfguides.com/dref/1312993>

... In order to improve the signal, move AM loop antenna away from system and other equipment. Extend FM antenna fully. Keep the FM antenna as horizontal as possible after connection. When connecting the supplied AM loop antenna, connect two black cords to AM and ground jacks as shown below. OUT DOOR FM ANTENNA (not supplied) . . . If the FM reception is poor, use a 75 coaxial cable (not supplied) to connect system to an outdoor FM antenna as above. If you connect the system with outdoor FM antenna, you should earth the system in order to avoid lightning strike. Do not connect the earth wire to gas pipe to prevent gas explosion. - 17 - System Connections Connecting To the Power Adapter This unit is powered via the switching power adapter (supplied). See the below figure for details: 1.

Connect the AC adapter to jack marked with "DC 12V IN" on the rear panel of the unit. 2. 3. Plug the two-prong end of the power cord to the grounded electrical socket. When not using the unit, turn off the power of the unit first, and then unplug the power supply to prevent malfunctions.

- 18 - Radio Function Radio Function Operation Press the FM/AM button on the remote control or the SOURCE button on the front panel to enter FM or AM radio mode. Then press the SEEK+/- button for about 1.5 seconds on the remote control or front panel to start searching forward/backward from the current frequency. Press the SEEK+/- button again to stop searching. Radio frequency will be displayed on the display panel.

The frequency range of FM is from 87.5MHz to 107.9MHz, frequency range of AM is from 520 kHz to 1710 kHz. Fine Tuning Press the SEEK+/- button on the remote control or front panel once to fine tune the frequency forward/backward under radio mode. Semi-memorizing radio stations If you like a radio station and want to store it for later listening, press the SETUP/SET button to memorize it. "SAVE 00" will be displayed on the display panel, "00" represents the default station number. There are two methods to organize the memorized stations: . Use the , buttons to adjust the channel number for your preference, and then press the SETUP/SET button again, the station will be memorized with the coded station number. . Press the SETUP/SET button again, the station will be automatically memorized with the default station number in sequence. You can store radio stations from 0 to 19, total 20FM or 20AM radio stations. If no buttons are pressed within 3 seconds of pressing the SETUP/SET button first time, the frequency will appear on the display panel again, and the station will not be stored.

Accessing memorized radio stations . First use the number buttons on the remote control for input, then press the ENT button for confirmation to go to the selected radio station directly; Or without pressing any button and wait a moment, it also goes to the selected radio station. . Press the , buttons on the remote control or front panel to select the radio stations forward and backward. When selecting the stations, the "CH 00" will appear on the display panel, where the "00" is the channel number of the stored radio station. After a few seconds, the "CH 00" disappears and the radio frequency will be displayed once again. - 19

- TV Function Basic Operation Connect the antenna to the antenna jack on the rear panel. After connecting the antenna, connect the power supply cord. If the player is in standby mode, press the POWER button on the front panel to turn on the power. Press the TV button on the remote control to shift to TV mode.

Press the , buttons on the remote control to select the desired channel. To go to a channel directly, first press the number buttons on the remote control for input and then press the ENT button for confirmation.

You may also wait for a moment without pressing the ENT button and the unit will go to the selected channel. @@@@ Use the , buttons to select the item and enter it. @@Signal Use the direction button to select CATV TV signal input mode. Use the direction button to select ANT TV signal input mode. Channel Use the , buttons to change the channel.

@@@@@ During tuning, press the button to exit the auto memory. @@ Use the , buttons to enter the item and to select. @@Timer Use the , direction buttons to select ON or OFF. @@@@ Press the , direction buttons to shift between am and pm. When the playback of the signal source is over, the player will enter standby mode.

Signal Use the , direction buttons to select CATV, ANT, FM or AM. Channel Use number buttons to input the desired TV channels. In CATV signal input mode, there are 124 channels to choose from (2-125); in ANT signal input mode, there are 68 channels to choose from (2-69). Note: The function is active as long as the unit is continuously supplied with power. The unit will automatically play the selected input signal at the set start time and enter standby mode at the set end time each day. - 23 - AV Function AV Function The player has an additional AV input so it can function as a monitor for a DVD player, video cassette player, satellite receiver, video game, etc. When an AV source is connected, press the AV button on the remote control to enter external input AV mode. Picture Parameter Setup Press the SETUP/SET button once on remote control to enter PICTURE setup menu, and screen will display as shown:

PICTURE BRIGHTNESS CONTRAST COLOR LANGUAGE RESET EXIT 10 10 10 ENGLISH Use the , buttons to select the item you want to set (Brightness, Contrast, Color). Use the , buttons to adjust the items between 0 and 20. Use the , buttons to select the Language, press the , buttons to select English, French or Spanish.

Select Reset and press the ENT button to return to the factory default settings. First use the buttons to highlight PICTURE, and then press the button on the remote control to exit from the setup menu. Note: Under AV mode, if there is no signal, the LCD screen will be blue. When connected to an AV signal source, make sure the type of the selected AV signal source is NTSC. - 24 - Play Operation Preparation 1. 2. 3. 4. 5. 6.

Install the unit in the kitchen; refer to page 30 for details. After connecting the unit to the AC power, turn on the unit's power by pressing the POWER button on the front panel or the remote control. Press the DVD button on the remote control or the SOURCE button to shift to DVD mode. Press the EJECT button on the front panel or the remote control to open the disc tray. Load the disc with the label facing up.

Press the EJECT button again to close the disc tray. The player will automatically search for the disc and start playback. DVD Playback Menu Normally there is a selecting menu for DVD discs. You can press the MENU button to enter the menu, and use the direction buttons to highlight an item you would like to select.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1312993)

[FDM-1015 user guide](http://yourpdfguides.com/dref/1312993)

<http://yourpdfguides.com/dref/1312993>

Press the ENT button to select it.

Audio DVD discs can contain up to 8 audio bit streams. For Example: English, French and Spanish, etc. To select the audio bit stream you prefer press the AUDIO button on the remote control during playback. The DVD player will play the next audio bit stream every time you press the AUDIO button in succession. Note: This function is only available for discs that have several audio bit streams recorded onto it. Subtitle A DVD disc can be recorded with up to 32 subtitles. Press the SUBTITLE button on the remote control during playback to select the one you prefer. NOTE: This function is only available on DVD discs that are recorded with multisubtitles. - 25 - Play Operation Title & Chapter Normally there are several titles in a DVD disc, and several chapters (sections) in a title. You can select any title or chapter quickly by entering the relevant number.

CD Playback The player will play all tracks on a CD disc by default. You can use the (PREV/NEXT skip) buttons, or number buttons to select a track. and JPEG Playback JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film. Normal Playback Load a JPEG disc in. Use the ENT button and ,direction button to select a submenu with picture, and then use the , direction button to select the contents. · Many discs have other contents besides pictures. Picture Rotation This can be used only when the picture is normally displayed. Once another picture is selected, rotation will be cancelled automatically.

During playback, use the direction buttons to rotate the picture. Zoom and Move The ZOOM button is used to turn on/off the zoom and move functions. When this function is turned on, use the / (REV/FWD SCAN) buttons to control zoom proportion and the screen will display the relevant proportion. When this function is turned off, the picture will resume normal size. Press the MENU button to return to menu page.

· Some JPEG discs may not support rotation or zooming functions. - 26 - Playback Functions Stop During playback, press the playback of a disc. Press the STOP button once on the remote control to stop PLAY button and the DVD Player will resume playback of the disc from the point where it was stopped. Pause Press the PAUSE button once on remote control or front panel to pause playback. PLAY button to resume normal playback.

Resume Playback Press the Press the STOP button at the point if you wish to stop the playback of a disc. The PLAY button to resume normal playback. The DVD Player will resume the DVD Player will memorize the location where playback of the disc was stopped. playback of the disc from the location where it was stopped. This function will not operate if the disc is removed from the DVD Player. Press the STOP button twice (2x). Playback of the disc will stop.

When the PLAY button is pressed again, playback of the disc will start from the beginning of disc. Zoom Press the ZOOM button on the remote control to cycle through the different zoom settings. Fast Playback Press the playback.

or button on the remote control to activate fast forward or backward Search By Time During DVD disc playback, press the GOTO button on the remote control once, there will be a menu displayed on the screen. You can set or select items for your preference. Use the enter and use the , , direction buttons to select items, press the ENT button to direction buttons to select the desired item. Press the direction button to return. When select the Title or Chapter, use number buttons to input desired title or chapter. Some DVD discs do not support the search function. - 27 - Playback Functions Slow Playback Press the SLOW button to activate slow playback. There is no slow playback for CD discs. Previous and Next Press the PREV Press the NEXT Track. button once to return to the currently playing Chapter or Track.

button and playback of the disc will start from the next Chapter or Press it twice and playback will start from the previous Chapter or Track. Repeat To repeat a Title, Chapter or Track, press the REPEAT button on the remote control. Continually pressing the REPEAT button will display a menu as follows: Repeat Chapter, Title, All. You can temporarily select a section of a DVD that you would like to play repeatedly. You do this by marking the start and the end of the section using the A-B button.

During playback press the A-B button on the remote control at the beginning of the segment (point A) you wish to play repeatedly. Press the A-B button again to mark the end of the segment (point B). The DVD player will automatically return to point A and repeat playback of the selected segment (A-B). To resume normal playback, press the A-B button again. Screen Mode Press the 16:9/4:3 button on the remote control to switch the screen aspect ratio between 16:9 and 4:3.

- 28 - System Setup DVD Setup You can customize the set up menu to your own preference. Press the DVD SETUP button on the remote control to display the setup menu. The menu will include "General Setup", "Speaker Setup", "Dolby Digital Setup", "Video Setup", and "Preference Setup". Press the direction button ( ) on the remote control to select a category. All the items in the category will appear on the screen. Press the ENT button to enter the category. Category When you enter a category all the items under this category will appear, the highlighted category is the current set up. Press the right direction button ( ) on the remote control to select another category (new selection will be highlighted). Press the ENT button for confirmation. Press the left direction button ( ) to enter the other setup menu(s).

General Setup TV Display Select Normal/PS or Normal/LB when a 4:3 TV is connected. Select Wide when using a 16:9 screen on the unit or when a wide screen TV is connected to the video output. OSD Lang There are three different OSD languages for selection. You can select English, French or Spanish.

Screen Saver When activated, under stop mode, the unit will go into screen saver mode if the same image remains on the screen for several minutes. Speaker Setup Down mix Select "LT/RT", the player will output the audio signal in Mix-Mono. Select "Stereo", then the player will output a stereo signal. Dolby

Digital Setup Dual Mono The function is used to select from Stereo, Left only, Right only, and Mix-mono. - 29 - System Setup Dynamic Use this item to adjust linear dynamic compression rate to get different signal compression effects. Video Setup Sharpness Use this setting to adjust the sharpness level Brightness

Use this setting to adjust the brightness level.

Contrast Use this setting to adjust the contrast level.



[You're reading an excerpt. Click here to read official POLAROID FDM-1015 user guide](http://yourpdfguides.com/dref/1312993)  
<http://yourpdfguides.com/dref/1312993>

*Preference Page Note: For preference setting, the unit must be in the stop mode. Audio, Subtitle, Disc Menu This setting allows you to hear or read the subtitles of a DVD in your choice of English, Spanish and French etc. if the disc contains multiple languages. Default Reset Use this function to reset all the settings.*

*LCD Setup Under DVD mode, press the SETUP/SET button on the remote control or front panel, there will be menu displayed on the screen. PICTURE BRIGHTNESS CONTRAST COLOR LANGUAGE RESET EXIT 10 10 10 ENGLISH Use the , buttons to select the items you want to set (Brightness, Contrast, Color). @@@@Select Reset and press the ENT button to resume the original status. @@The suggested mounting position of the unit is under a wall cabinet.*

*@@@Installing steps: - 31 - Installing the unit in Kitchen 1.*

*@@@Drill four holes with diameter of 8mm. You can use the connecting steel panel to check the holes. 2. @@3. 4. Lock the connecting steel panel to the unit with the screws. As shown in the above figures, install the unit with the supplied mounting screws and spacers step by step. Quick hints: Since the unit is rather heavy, be careful while doing the installation work. To reduce risk of fire, do not place any heating or cooking appliance beneath the unit, especially while the LCD screen is open for viewing. Mount the unit so that its AC power cord can be plugged directly to a wall outlet.*

*Do not use a converter or extension cord. Be sure that the AC power cord has no slack when the player is working, because the cord acts as an FM wire antenna. If the AC power cord has some slack, wind it up to the cord hook until the cord has no slack. The unit has a built-in ferrite bar antenna for AM radio reception. condition of AM reception before fixing in position. Install the unit as far as possible from other electrical devices such as: refrigerators, microwave oven, fluorescent lamp, etc. Check the - 32 - Troubleshooting SYMPTOM CHECK ITEM . . . . Make sure a disc is loaded. Make sure the disc is loaded with label side up. Disc should be clean, not dirty or warped. Player's region code should be the same as the region code of the DVD disc.*

*Make sure water condensation has not occurred. If it has, remove the disc and keep the player power on until the moisture evaporates. Make sure system connection is correct. Make sure the player is not under muting mode. Press the MUTE button to turn on the speaker.*

*Make sure the volume is adjusted to the lowest. Adjust the volume upward. Is your disc dirty or warped? Clean or replace it. Make sure the video type of the AV signal source is NTSC. Make sure system connection is correct.*

*Is your disc dirty or warped? Clean or replace it. Make sure the player is not in A-B repeat status. Press A-B button to cancel A-B repeat status. Is your disc dirty or warped? Clean or replace it. Make sure there are no obstructions between the remote control and the player. Make sure the remote control is pointing at the player. Make sure batteries are inserted correctly (check polarity). Replace weak batteries. The player cannot play. There is no sound.*

*. . . . . There is no picture or picture is unsteady. Position of the picture is incorrect. Cannot continue to play and plays a section repeatedly. . The remote control does not work. . . . Other Notes: Static or other external interfere may cause the player to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician. - 33 - Specifications LCD Screen Size Laser Wavelength Video System Frequency Response Audio Signal-to-Noise Audio Distortion + Noise Channel Separation Dynamic Range System Radio Frequency Range AM FM 10.2 inches Wavelength: 780/650nm NTSC 20Hz~20kHz 85 dB -70dB (1KHz)*

*70dB (1KHz) 80dB (1KHz) PLL 520~1710kHz 87.5~107.9MHz AC100V~ 240V, 50/60Hz 30W 3.1"H X 14.6"W X 10.2"D About 6.6 lbs.*

*±2.5dB Power Power Consumption Dimensions Weight DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992*

*-1997 Dolby Laboratories, Inc.*

*All rights reserved. For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com) or in the US call 1-866-289-5168 and in Canada call 1-866-301-7922. "Polaroid" and "Polaroid Pixel" are registered trademarks of Polaroid Corporation, Waltham, MA USA. - 34 - .*



[You're reading an excerpt. Click here to read official POLAROID](#)

[FDM-1015 user guide](#)

<http://yourpdfguides.com/dref/1312993>