



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID I1036. You'll find the answers to all your questions on the POLAROID I1036 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID I1036
User guide POLAROID I1036
Operating instructions POLAROID I1036
Instructions for use POLAROID I1036
Instruction manual POLAROID I1036



10.0 Megapixel Digital Camera i1036

User Guide



Questions? Need Some Help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit
www.polaroid.com/support.

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](http://yourpdfguides.com/dref/2645384)

<http://yourpdfguides.com/dref/2645384>

Manual abstract:

0 Megapixel Digital Camera i1036 User Guide Questions? @@@@7 Declaration of Conformity

.....
.....
.....
.....
.....
.....
.....

..... 8 Trademark Recognition

.....
.....
.....
.....
.....
.....
.....
.....

... 8 · Safety and Handling Precautions ..

.....
.....
.....
.....
.....
.....
.....

.. 8 Camera Information ...

.....
.....
.....
.....
.....
.....
.....

... 8 Battery Information

.....
.....
.....
.....
.....
.....
.....

.... 9 2 Introduction .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..10 · Camera Features

.....
.....
.....
.....
.....
.....
.....
.....

.....
... 10 · Package Contents ..

.....
.....
.....
.....
.....
.....
.....
.....

... 11 · Camera Views.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

12 · Camera Buttons

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.... 14 · Navigation Control

.....
.....

.....
.....
.....
.....

. 17 · Inserting the Battery..

.....
.....
.....
.....
.....
.....
.....

..... 17 · Inserting an SD/SDHC Memory Card ..

.....
.....
.....
.....
.....

..... 18 · Turning the Power On and Off . .

.....
.....
.....
.....
.....
.....
.....

..... 19 · Initial Settings .

.....
.....
.....
.....
.....
.....
.....

..... 19 Setting the Language

.....
.....
.....
.....
.....
.....
.....

.....19 Setting the Date & Time

.....
.....
.....

.....
.....
.....
.....

.....19 · Modes.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

... 20 Record mode ..

.....
.....
.....
.....

.....
.....
.....

... 20 Playback mode ..

.....
.....
.....
.....
.....

.....
.....
.....

..... 20 2 Polaroid i1036 Digital Camera User Guide www.polaroid.com Switching between Record mode and Playback Mode ...

.....
.....

..... 20 Selecting the Record mode options section ...

.....
.....
.....

.... 20 4 Using the LCD Screen

.....
.....

.....

.....

.....

.....

.....

.....21 · LCD Screen Layout ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 21 Record Mode Screen Layout...

.....

.....

.....

.....

.....

.....

.....

..... 21 Playback Mode Screen Layout ...

.....

.....

.....

.....

.....

.....

.....

..... 23 Changing the LCD Screen Display

.....

.....

.....

.....

.....

.....

..... 26 5 Recording Photos, Videos and Voices

.....

.....

.....

.....

.....

.....28 · Taking Photos . . .

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

... 28 · *Using the Image Stabilizer*

.....
.....
.....

.....
.....
.....
.....

. 29 · *Setting the Zoom Control*

.....
.....

.....
.....
.....
.....

.....
.....

.... 29 · *Using Flash* .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 30 · *Setting the Focus Mode* .

.....

.....
.....
.....
.....

.....
.....
.....

..... 31 · *Using the Function Manual* .

.....
.....
.....
.....

.....
.....
.....
.....

..... 31 *My Mode*

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 32 Resolution

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 32 Quality

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 33 EV Compensation .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 33 White Balance ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
... 34 ISO ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 35 Metering ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

35 Color Mode.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 36 · Using the Record Manual ..

.....
.....
.....

.....
.....
.....

..... 37 · Setting Scene Mode

.....
.....
.....
.....

..... 45 · Setting the Drive Mode

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 46 · Setting the AEB

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 47 · Setting the AF Area ..

.....
.....
.....
.....
.....
.....
.....
.....

.... 47 · Setting the AF Lamp .

.....
.....
.....
.....
.....
.....
.....
.....

..... 48 · Setting Sharpness .

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

49 · Setting Contrast

.....
.....

.....
.....
.....

.....
.....
.....

... 49 · Setting the Digital Zoom

.....
.....
.....

.....
.....
.....

... 50 · Setting the Date Stamp ..

.....
.....

.....
.....
.....

.....
.....

..... 50 · Setting the Auto Review.....

.....
.....
.....

.....
.....
.....

..... 51 · Recording Movies

.....
.....
.....

.....
.....

.....
.....
.....
.....
..... 55 · *Viewing Thumbnails*.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
..... 55 · *Zooming images* ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 56 · *Playing Movies*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

57 · *Playing Voice Recording*.....

.....
.....
.....

.....
.....
.....
.....

.....
..... 58 · *Playing Voice Memo* ...

.....
.....

.....
.....
.....
.....

.....

.....
.....
..... 59 · *Deleting an Image/Video/Audio ..*

.....
.....
.....

.....
.....
.....
..... 59 *Using the Delete Button..*

.....
.....
.....

.....
.....
.....
.....
..... 59 · *Setting Playback Menu*

.....
.....
.....

.....
.....
.....

.....
.....
..... 60 · *Setting Slideshow .*

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
..... 61 · *Deleting Files*

.....
.....

.....
.....
.....

.....
.....
.....

..... 62 *To delete a photo/video/audio clip ...*

.....
.....

.....
.....
.....
.....
.....
..... 62 To delete a single file .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 62 To delete attached voice memo ...

.....
.....

.....
.....
.....
.....

..... 63 To delete multiple files ..

.....
.....
.....

.....
.....
.....
.....

.....
.....

... 64 To delete all files ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 64 · Protecting/Unprotecting Files ..

.....
.....
.....

.....
.....
.....
.....

. 64 To protect files

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... *64 To protect/unprotect a single file*

.....
.....
.....

.....
.....
.....

..... *64 To protect/unprotect multiple files.*

.....
.....
.....
.....

.....
.....
.....

.. *65 To protect all files*

.....
.....
.....
.....

.....
.....
.....
.....

65 To unprotect files

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *65 · Red-Eye Correction .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 66 · Voice Memo..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 67 4 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Photo Editing

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 67 · Trim ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 69 · Resize

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

70 · Setting Startup Image

.....
.....

.....
.....
.....
.....

..... 71 · Setting DPOF

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 71 To set DPOF on a single image/all image

.....
.....
.....
.....

..... 72 To reset DPOF

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 72 · PictBridge ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 71 7 Using the Setup Menu

.....
.....
.....
.....

.....
.....
.....

....73 · *Setting Sounds*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 73 · *Setting Power Save* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 74 · *Setting LCD Save*....

.....
.....

.....
.....
.....

.....
.....
.....

..... 74 · *Setting Date & Time* ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 75 · *Setting Language*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
75 · Setting File Numbering
.....

.....
.....
.....
.....
.....
.....
.....
..... 75 · Setting TV Out ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
... 76 · Setting LCD Brightness

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.... 76 · Setting Battery Type

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
76 · Setting Memory Kit

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 76 · Reset All ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 77 8 Installing the Software onto a Computer ...

.....
.....

.....
.....
.....

78 · Installing the Software

.....
.....
.....
.....

.....
.....
.....
.....

.... 78 &middle dot cable to connect I/O devices to this equipment. Any changes or modifications not expressly approved by the manufacturer may void your warranty and service agreement. Declaration of Conformity This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions: · This device may not cause harmful interference. · This device must accept any interference received, including interference that may cause undersired operation. Trademark Recognition Windows 98/2000/ME/XP are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Windows is an abbreviated term referring to the Microsoft Windows Operation System. All other companies or product names are trademarks or registered trademarks of their respective companies. · Safety and Handling Precautions Camera Information · · · · · 8 Do not disassemble or attempt to service the camera yourself. Do not expose the camera to moisture, or extreme temperatures. Allow the camera to warm up when moving from cold to warm temperatures.

Do not touch the camera's taking lens. Do not expose the lens to direct sunlight for extended periods. Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the product. Wipe the product with a slightly damp soft cloth.

Polaroid i1036 Digital Camera User Guide www.polaroid.com Battery Information · · · · · Turn off the camera before installing or removing batteries.. Use only the provided batteries or type of battery and charger that came with your camera. Using other types of batteries, or charger may damage the equipment and invalidate the warranty. If applicable, when using Li-ion battery in this product, ensure that they are inserted correctly. Inserting the battery upside down can cause damage to the product and possibly cause an explosion. When the camera is used for an extended period of time, it is normal for the camera body to feel warm.

Download all pictures and remove the batteries from the camera if you are going to store the camera for a long period of time. Ensure you select the correct battery type in the setup menu and use a fully charged or fresh battery. There is a risk of damaging the product or personal injury if the battery is replaced by an incorrect type. Dispose of used batteries properly. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i1036 Digital Camera User Guide www.polaroid.

com 9 2 Introduction Congratulations on the purchase of your new Polaroid digital camera. This manual provides you step-by-step instructions on how to use your camera, and is intended for your reference only. · Camera Features · · · · · 10 megapixels resolution Up to 3x optical zoom and 5x digital zoom 1/2.3 inch CCD image sensor 2.7 inch color LCD display 32MB internal flash memory with optional external SD/SDHC card Supports up to 4GB of SD card, and up to 32GB of SDHC card Sleek metallic finish Easy-to-use button interface DCF, DPOF, PictBridge compatibility Slideshow feature to review your pictures and movies A/V output to view your pictures and movies on your TV USB port to transfer photos and movies to your PC Need help with your digital camera? Call our toll-free customer service number.



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](#)

Look for the insert with this icon: Or visit www.polaroid.com. 10 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Package Contents Please check the contents of your camera package. It should contain: Quick Start Guide Guide de Démarrage rapide Schnellanleitung Guida Rapida Guía Rápida de Inicio Rápido i1036 Quick Start Guide Polaroid i1036 Camera Driver (PC) ArcSoft MediaImpressionTM: (PC/Mac) ArcSoft Print Creations® (PC/Mac) Adobe® Acrobat® ReaderTM (PC/Mac) User Guide (in PDF format) The CD-ROM includes Wrist Strap 2 x AA Batteries USB Cable Polaroid i1036 Digital Camera User Guide www.polaroid.com 11 · Camera Views Front View Flash Self-timer LED / AF Assist Lamp Zoom Lens Microphone Back View Zoom buttons LCD screen SET DISP Play button Operation Lamp SET button / 4-way navigation control Function / Delete button MENU FUNC Menu button 12 Polaroid i1036 Digital Camera User Guide www.polaroid.com Top View Power button Speaker Image Stabilizer button Shutter button Bottom View Battery door Tripod socket SD card door Left/Right View USB / TV Out Hand strap retainer Polaroid i1036 Digital Camera User Guide www.polaroid.com 13 · Camera Buttons Button Power Image Stabilizer Shutter Your camera is equipped with different buttons for ease of use. Description Press to turn the power on or off. The image stabilizer sets the optimal ISO value according to light levels to compensate for camera shake.

Press to set stabilizer on/off. Press to capture an image or start/stop recording a video or audio clip. If the camera is turned off, press and hold to turn on camera in Playback mode. If the camera is turned on, press to toggle camera between the Playback or Record mode. Press the zoom buttons to change zoom magnification.. Press to enter the menu. In the Record mode, press to enter function menu. In the Playback mode, press to delete an image, video or audio clip. Play Zoom Menu Function/ Delete · Navigation Control The 4-way Navigation Control and the SET button allows you to access the various menus available from the On Screen Display (OSD).

You can configure a wide range of camera settings to ensure the best results for your photos and videos. Further functions of these buttons are as follows: Face Tracking/ Rotate Button Macro Button SET Button SET DISP Flash Button Display Button 14 Polaroid i1036 Digital Camera User Guide www.polaroid.com Button SET Usage 1. Confirms a selection when using the OSD menus.

1. In the Record mode, press to scroll through the flash mode options(Auto, Anti Red-eye, Fill, Slow Sync and Off) 2. In the Playback mode, press to view the next image, video or audio clip. 3. In the Playback Video mode, press to fast forward video playback 4.

In the Menu, press to enter the submenu or to navigate through the menu selections. 1. In the Record mode, press to turn on/off Macro. 2. In the Playback mode, press to view the previous image, video or audio clip. 3. In the Playback Video mode, press to rewind video playback 4. In the Menu, press to exit a submenu or to navigate through the menu selections. 1. In the Menu, press to navigate through the menu and submenu selections.

2. In the Record mode, press to turn the face tracking function on or off. 3. In the Playback Video/ Audio mode, press to Start/Pause video or audio playback. 4. In the Playback photo mode, press to rotate the image clockwise 90 degrees with each press of the button. This feature is applicable for still images only. 1.

In the Playback mode, press to change the LCD screen display to show or hide OSD icons. 2.

In the Record mode, press to change LCD screen display to show or hide OSD icons and guide lines. 3. In the Menu, press to navigate through the menu and submenu selections. 4. In the Playback Video/ Audio mode, press to stop video/audio playback.

Flash/ Right Macro/ Left Up/Face Tracking/ Rotate Display/ Down Polaroid i1036 Digital Camera User Guide www.polaroid.com 15 · Camera Memory Internal memory Your camera has 32MB of internal memory. Users can store images up to 10MB. If there is no memory card inserted in the camera, all images, videos and audio clips recorded are automatically stored in the internal memory.

Expanding Your Camera's Memory Your camera supports SD cards of up to 4GB in size. It also supports SDHC card with a maximum capacity of 32GB. If there is a memory card inserted in the SD card slot, the camera automatically saves all images, videos and audio clips in the external storage card. NOTE: · Not all cards may be compatible with your camera. When purchasing a card, please check the card's specifications and take the camera with you. Polaroid branded memory cards are recommended. 16 Polaroid i1036 Digital Camera User Guide www.polaroid.com 3 Getting Started · Attaching the Wrist Strap SET DISP MENU FUNC. · Inserting the Battery Follow these instructions to insert the AA battery into the battery compartment.

Please read "Battery Information" on page 9 before inserting/removing the battery. 1. Open the battery door by following the illustration below. 2. Insert the batteries into the compartment as shown in the illustration. Polaroid i1036 Digital Camera User Guide www.polaroid.com 17 3. Flip the door back into place as shown in the illustration and slide the locking tab in the direction of the arrow. · Inserting a SD/SDHC Memory Card Expand your camera's memory by using SD or SDHC memory cards.

Your camera supports SD cards of up to 4GB and SDHC cards of up to 32GB in size. Follow these instructions to insert the SD/SDHC card. 1. Make sure the power is off before inserting a SD/SDHC memory card. 2.

Swing on the SD card door in the direction of the arrow and flip the door open. 3. Insert the SD/SDHC card into the memory card slot label side up. 4. Push the SD/SDHC card into the memory slot until it clicks into place.

5. Close the SD card door as shown in the illustration. To remove the SD/SDHC card, gently push the card inward with your finger and release it. Pull out the card carefully. 18 Polaroid i1036 Digital Camera User Guide www.polaroid.com M B · Turning the Power On and Off · There are two ways to turn on the camera: Press and hold the Power button. The start up image displays briefly and the startup sound plays if enabled. The zoom lens extends and the camera is turned on in the Record mode. Press and hold the Playback button.

The camera is turned on in Playback mode. The zoom lens is not extended. · To turn off the camera, press the Power button. See "Modes" on page 20 to know more about Record and Playback mode. · Initial Settings When you turn on your camera for the very first time, you will be asked to establish the initial settings of your camera. When you turn the Power button on, the Language Menu is displayed on the LCD screen for you to setup your display language.



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](http://yourpdfguides.com/dref/2645384)
<http://yourpdfguides.com/dref/2645384>

Setting the Language 1. Press or DISP to move through the selections. 2. Press SET to select your language.
Setting the Date & Time 1. Press or DISP, to change the value of the date and time. 2. Press SET to apply. 3.

If necessary, press MENU to close the menu. Now, you are ready to start taking photos and videos. NOTE: · Holding down or DISP, changes the values continuously. · If the battery is removed for more than 48 hours, the Date & Time will have to be reset. Polaroid i1036 Digital Camera User Guide www.polaroid.com 19 · Modes Your camera has two modes: Record mode · Set to the Record mode to capture still images, record videos and audio clips. · Record mode can be further set to mode options like auto, movie and scene selection modes. See "Selecting the Record mode options" below. Playback mode · Set your camera to Playback mode to view and edit captured images and playback videos and audio clips. You can also attach a voice memo to still images in this mode. When you turn on your camera using the Power button, you are automatically in the Record mode. Switching between Record mode and Playback Mode Selecting the Record mode options section Press the Play button to switch between Record and Playback modes. Maximize the quality and ease of use of your camera by using the different mode options. The mode options allow you to capture images with preset settings according to the scene conditions.

1. Set the camera to Record mode. Record Mode 2. Press MENU to launch Record Mode Menu. 3. Select Record Mode by pressing the DISP button once, and press to enter its submenu. 4. Select a mode 5. Press the SET button to confirm your selection..

Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF NOTE: · For more information, see "Using the Record Menu" on page 37. · Use the 4-way navigation control to move through the menu selections. 20 Polaroid i1036 Digital Camera User Guide www.polaroid.com 4 Using the LCD Screen The high resolution 2.

7" LCD display shows all important information regarding your cameras' settings as well as the visual image of your photo or video. This display is called the On Screen Display or OSD. · LCD Screen Layout The following illustrations shows the LCD screen layout and the icon descriptions. Record Mode Screen Layout 1 2 3 4 5 27 26 25 24 23 22 21 307 10M 6 7 8 9 10 11 12 13 0.0EV F 3.

0 1/ 30 16 15 ISO AUTO 20 19 18 17 14 No. 1 2 3 4 5 Item Record Mode Flash Self-timer / Burst Shots available Image Stabilizer Description Indicates the current record mode settings. Indicates flash settings. Indicates drive mode settings. Indicates the remaining shots available. Indicates Image Stabilizer function is on. Polaroid i1036 Digital Camera User Guide www.polaroid.com 21 No. 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 Battery Item Description Indicates battery power level.

Indicates current storage media in use. Indicates whether the date stamp is enabled. Indicates whether the AEB function is enabled. Indicates whether the image stabilizer function is enabled. Displays saturation settings. Displays contrast settings. Graphic display of ISO settings. Displays ISO settings. Use to frame subject you wish to capture. Displays shutter speed settings.

Displays aperture settings. Indicates that the camera is recommending that you enable the image stabilizer feature. Indicates macro is enabled. Displays exposure settings. Indicates whether the face tracking is enabled.

Displays white balance settings. Displays metering settings. Displays sharpness settings. Displays quality settings. Displays resolution settings. Indicates AF lamp is enabled. Storage media Date stamp AEB Stabilizer Saturation Contrast Histogram ISO Focus area Shutter speed Aperture value Shake warning Macro Exposure Face tracking White balance Metering Sharpness Quality Resolution AF lamp 22 Polaroid i1036 Digital Camera User Guide www.polaroid.com Playback Mode Screen Layout The Playback mode display varies depending on the type of file being viewed. Playback mode display of still images: 1 2 34 5 27/27 10 9 10M SET : 6 7 ISO 0EV 400 F 3.0 1/30 2009/01/01 01:57 8 No. 1 2 3 4 5 6 7 8 9 10 Protect Movie clip Item Playback mode Description Indicates playback mode. Indicates the file is protected. Indicates the file is a movie. Indicates the button to press on the camera to play a movie or audio file.

Indicates the file number over the total number of files in the memory card. Indicates battery power level. Indicates where images (data) are stored. Displays recording information of the file. Indicates the file is marked for printing. Displays image size. Button intro File no. / Total no. Battery Storage media Recording information DPOF Resolution Polaroid i1036 Digital Camera User Guide www.polaroid.com 23 Playback mode of videos: 1 2 34 5 27/27 SET : 9 6 7 2009/01/01 01:57 8 12 0:00:16 / 0:00:20 11 WT 10 No. 1 2 3 4 5 6 7 8 9 10 11 12 Protect Movie clip Button intro Item Playback mode Description Indicates playback mode. Indicates the file is protected. Indicates the file is a movie. Indicates the button to press on the camera to play a movie or audio file.

Indicates the file number over the total number of files in the memory card. Indicates battery power level. Indicates where images (data) are stored. Displays recording information of the file. Indicates volume settings.

Indicates the buttons to press on the camera to apply the functions. Displays playing status. Indicates played time. 72 File no. / Total no. Battery Storage media Recording information Volume Key indicator Playing status Played time 24 Polaroid i1036 Digital Camera User Guide www.polaroid.com Playback mode of audio clips: 1 2 3 4 27/27 SET : 8 5 6 2009/01/01 01:57 7 11 0:00:16 / 0:00:20 10 WT 9 No. 1 2 3 4 5 6 7 8 9 10 11 Protect Item Playback mode Description Indicates playback mode. Indicates the file is protected.

Indicates the button to press on the camera to play a movie or audio file. Indicates the file number over the total number of files in the memory card. Indicates battery power level. Indicates where images (data) are stored. Displays recording information of the file. Indicates volume settings. Indicates the buttons to press on the camera to apply the functions. Displays playing status. Indicates played time. Button intro File no.

/ Total no. Battery Storage media Recording information Volume Key indicator Playing status Played time Polaroid i1036 Digital Camera User Guide www.polaroid.com 25 Changing the LCD Screen Display The type of information displayed on the LCD screen can be changed using the DISP button. Press the DISP button repeatedly to change the LCD display from one type to another.
In Record Mode, the LCD display can be changed into any of the following: 307 10M 10M 307 0.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/2645384)

[I1036 user guide](http://yourpdfguides.com/dref/2645384)

<http://yourpdfguides.com/dref/2645384>

0EV ISO AUTO OSD on Full OSD on Guide lines on OSD off NOTE: · The OSD information may vary depending on the record mode type. · Use the "Guide lines" to properly align your image for capture. 26 Polaroid i1036 Digital Camera User Guide www.polaroid.com In Playback mode, the LCD display can be changed into any of the following: 27/27 10M 27/27 10M SET : SET : SET : ISO 2009/01/01 01:57 0EV 400 F 3.0 1/30 2009/01/01 01:57 00:00:53/00:01:11 Full OSD on NOTE: OSD on LCD display cannot be changed for the following situations: · Manual exposure mode · Recording movie or audio clips · Playing movie or audio clips · Playing slideshow OSD off Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i1036 Digital Camera User Guide www.polaroid.com 27 5 Recording Photos, Videos and Voices · Taking Photos Now that you are familiar with your camera, you are now ready to take your photos. Taking photos with your camera is very simple. 307 1.

Turn on the camera by pressing the 10M Power button. By doing this, your camera is set to Record mode. 2. Frame your shot using the focus frame on the LCD display. See illustration on the right. 0.0EV ISO AUTO 3. Press the shutter button halfway down. The camera automatically adjusts the focus and exposure. When the camera is ready to take the photo, the focus frame turns green, the shutter speed and aperture value are displayed. (When the focus frame is in red and the operation F 3.0 1/30 LED blinks, the subject is not in focus. Release the shutter button, recompose the scene and press the shutter button halfway to reset the focus.) 4. Press the Shutter button all the way down to capture your image. ISO AUTO When the shake warning icon appears, hold the camera steadily, with your arms at your side or use a tripod to stabilize the camera to prevent a blurry image. You may need to turn on the camera's flash or enable the Image Stabilizer feature to get a better picture. 28 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Using the Image Stabilizer The Image Stabilizer function prevents blurred images caused by shaking. This function is only available if ISO is set to Auto. See "ISO" on page 35 on how to adjust the ISO settings. Image Stabilization Button To activate Stabilizer · Press the Stabilizer button on top of your camera to enable/disable the stabilizer. · Setting the Zoom Control Your camera features up to 3x optical zoom and up to 4x of digital zoom. Optical zoom is achieved by mechanically adjusting the lens while digital zoom is activated through the menu settings. Press to zoom out. · Press to zoom in. · 1.

Press the Zoom buttons to zoom in or zoom out an image. 2. The zoom indicator appears on the LCD display. 3. Keeping pressing the T button and the camera switches from optical zoom to digital zoom when it reaches the maximum optical zoom. 4. The zoom setting does not reset to wide angle after taking a picture. Use the W button to return to the wide angle setting if you want to take a normal size picture. Optical zoom x5.0 Zoom buttons Digital zoom 307 10M 0.

0EV ISO AUTO NOTE: · Digital zoom is not activated in recording movies. · Digital zoom is only available in the Standard Zoom mode. Polaroid i1036 Digital Camera User Guide www.polaroid.com 29 · Using Flash When taking pictures in difficult lighting conditions, use the Flash to get the correct exposure. This function cannot be activated when recording movies or continuous shooting. To activate the Flash · Press the Flash/Right button on your camera repeatedly until your desired flash mode is displayed on the LCD display. Flash button SET DISP Your camera is equipped with five flash modes: Auto. The flash fires automatically whenever extra lighting is needed. Red-eye reduction. The flash fires twice to reduce the red-eye effect. Always on. The flash fires whenever you press the shutter button regardless of lighting conditions. Slow sync. The flash fires with a delay and uses slow shutter speed. Off. The flash is turned off. NOTE: · Flash function is only available in shooting still images but not available in Burst and AEB modes. · Do not charge the flash while pressing the zoom button. Charge the flash after releasing the zoom button if necessary.

10M Auto flash is enabled. 307 30 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Setting the Focus Mode This function allows users to define the type focus when recording a still image or a movie clip. To set the Focus mode · Press the Macro button repeatedly until the desired focus mode icon is displayed on the lower left corner of the LCD display. Macro button SET DISP Your camera supports the four focus modes: Normal. With normal focus, the focus range starts from 0.4m(1.31ft). When the camera is set to Normal mode, there is no icon displayed on the screen. Macro. This mode is designed for close-up photography. If Macro is enabled, you can capture the detail and sharpness of a very close image by fixed focus. (Please refer to page 88 for the macro focus range). 307 10M PF Pan Focus.

When Pan Focus is set, the camera focuses on every object. INF Infinity. When Infinity is set, the camera focuses on distant objects. Macro enabled The Function Menu is used to adjust capture settings in Record Mode. It contains My Mode, Resolution, Quality, EV Compensation, White Balance, ISO, Metering, and Color Mode.

Press the FUNC button of your camera to launch the Function Menu. FUNC Press the FUNC button again to close the menu. · The Menu bar displays the current status of your camera settings. Only the available functions for the settings are shown as icon on the menu bar. 31 · Using the Function Menu Polaroid i1036 Digital Camera User Guide www.polaroid.com · The available options for each item on the menu bar are shown in the Menu options. Use the or key to move through the menu selections then press the SET button to save and apply changes. Menu bar 10M 0EV · AWB ISO AUTO Program N · My Mode Menu options 10M The My Mode function displays the 6 most recent modes used in order. When you move through the different modes in the menu options, the items on the menu bar changes synchronously to the corresponding available settings.

0EV AWB ISO AUTO Program · Resolution N The Resolution function is used to set the resolution before you capture the image. Changing the resolution affects the number of images that can be stored in your memory card. The higher the resolution, the more memory space is required. The table below shows the resolution values for still images. Icon 10M 3:2 8M 5M 10M 0EV AWB ISO AUTO A2 Size 10M 3:2 8M 5M 3M 16:9 N Pixel Size 3648 x 2736 3648 x 2432 3264 x 2448 2592 x 1944 Icon 3M 16:9 VGA Pixel Size 2048 x 1536 1920 x 1080 640 x 480 32 Polaroid i1036 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](http://yourpdfguides.com/dref/2645384)
<http://yourpdfguides.com/dref/2645384>

polaroid.com · *Quality* The quality determines the amount of compression applied to your photos. More compression results in a more detailed image. However, the higher the quality, the more memory space is required in your memory card. 10M 0EV AWB ISO AUTO Fine · EV Compensation EV stands for Exposure Value.

In difficult lighting conditions, the auto exposure function of your camera may be misled into giving the wrong readings. The EV Compensation function allows you to adjust the exposure value and correctly expose your images. Available for still images only. · N 10M 0EV AWB ISO AUTO 0EV N To adjust EV settings, press the or keys to increase/decrease the value. As you adjust the settings, the LCD display displays the adjusted image when applying these EV settings.

Press the SET button to save and apply changes. The available settings are: 0EV, +0.3EV, +0.7EV, +1.0EV, +1.3EV, +1.7EV, +2.0EV, -0.3EV, -0.7EV, -1.0EV, -1.3EV, -1.7EV, -2.0EV. · Polaroid i1036 Digital Camera User Guide www.

polaroid.com 33 · *White Balance* The White Balance function allows you to adjust the camera setting according to the white light when recording still images and movies. · As you move through each selection, you can see the preview on the LCD display. Icon Item Auto Daylight Cloudy Tungsten Flourescent 1 Flourescent 2 10M 0EV AWB ISO AUTO Auto AWB N Description The camera automatically adjusts the white balance. This should be used for most photographic scenes. AWB Ideally used for bright sunny conditions. Ideally used for cloudy conditions. Ideally used for indoor photos with tungsten or halogen lighting without a flash. Ideally used for indoor photos with reddish fluorescent lighting conditions. This is considered "warm" lighting. Ideally used for indoor photos with bluish fluorescent lighting conditions. This is considered "warm" lighting. Used when light source cannot be specified. Press the shutter button for the camera to automatically adjust the appropriate white balance setting according to the environment. Custom 34 Polaroid i1036 Digital Camera User Guide www.

polaroid.com · *ISO* The ISO function lets you adjust the ISO sensitivity in recording still images depending on the lighting levels of your surroundings. · · · Use a higher ISO setting in dim conditions and a lower ISO setting in brighter conditions. As you move through the selections, the preview on the LCD display changes. Available settings are: Auto, 50, 100, 200, 400, 800, 1600, 3200 (3M, 16:9 <2M>, VGA), 6400 (16:9 <2M>, VGA).

10M 0EV AWB ISO AUTO Auto ISO ISO ISO ISO ISO ISO AUTO 50 100 200 400 800 N NOTE: If the ImageStabilizer is enabled, ISO is automatically set to Auto and cannot be adjusted. To adjust ISO, disable Stabilizer first. · *Metering* The Metering function lets you select the area of the subject or frame by which the camera measures light to record still images or movies. · As you move through the selections, the preview on the LCD display changes. 10M 0EV AWB ISO AUTO Multi N Icon Multi Item Description The camera measures the exposure readings from multiple points in the subject area. Polaroid i1036 Digital Camera User Guide www.polaroid.com 35 Icon Item Center Spot Description The camera measures the average light from the entire frame but gives more importance to the values near the center. The camera selects the exposure value based on the center of your picture. · *Color Mode* The Color Mode function lets you record still images or movies and apply different colors or tones for a more artistic effect.

· As you move through the selections, the preview on the LCD display changes. Icon Item Normal 10M 0EV AWB ISO AUTO Normal N V S B W R G N Description The camera records normally. The camera captures the image with more contrast and N V S B W Vivid saturation emphasizing bold colors Images are captured in sepia tones. Images are captured in black and white. Captured image becomes reddish. Ideally used to record images like flowers and cars to make them more vivid. Captured image becomes greenish. Ideally used to record images like mountains and lawns to make them more vivid. Captured image becomes bluish. Ideally used to record images like the sky and the ocean, to make them look more vivid.

Sepia B&W R G B Vivid Red Vivid Green Vivid Blue 36 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Using the Record Menu MENU If you are in Record mode, you can access the Record menu simply by pressing the MENU button on your camera. @ @ @ @ To go to Record Menu: Set the camera to Record mode. @ @ 1.

@ @ Use the or DISP keys to move through the menu selections. 3. To select an item, press . 4. @ @ 1.

From the Record Menu, press select Record Mode. to Record Mode Drive Mode AEB AF Area AF Lamp Sharpness 2. @ @ 3. Press the SET button to save and apply changes. @ @ Auto Item Description The simplest way to shoot basic images. Settings are adjusted automatically. @ @ @ @ See "Using Aperture Priority Mode" on page 44. @ @ @ @ @ @ @ This feature is used to emphasize wide scenic views. This feature enhances the red hue for capturing sunset images.

@ @ @ @ This feature is used to capture images with night scenery background.

This feature slows shutter speed to capture fireworks explosions. This feature is used for snow scenes. This feature captures still images in high speed movements. This feature is used for wedding or indoor party settings. This feature is used to capture warm candle light effects. @ @ @ @ This feature is used to capture images of food. @ @ This feature enhances the edges of captured images. @ @ @ @ When smiles are detected, it continuously captures the image. @ @ This feature captures a image temporarily as a reference. @ @ This feature uses face tracking to auto detect faces to capture portraits photos without the help of others.

When more than two faces are detected, AF is automatically activated. The camera starts a count down and captures a picture in two seconds. This mode is used to record movie clips. This mode is used to record audio clips. Blink Detection Pre-composition Love Portrait Camcorder Voice Recorder After selecting the scene mode, the selected mode, except Voice Rec, will be added to the forefront in MyMode of Function Menu.

See "Using the Function Menu" on page 31. Using Smile Capture Mode The Smile Capture mode uses smile tracking to automatically capture images. This feature is most useful in capturing different angles and smiles of moving people. When capturing an image with more than one person, the camera detects the smile of the closest person in the center of the screen. 40 Polaroid i1036 Digital Camera User Guide www.

polaroid.com To activate Smile Capture 1. Select from the Scene Mode submenu. 2. Focus the camera on the subject to capture.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/2645384)

[I1036 user guide](http://yourpdfguides.com/dref/2645384)

<http://yourpdfguides.com/dref/2645384>

3. The smile capture icon blinks every second and the white focus frame turns green to denote camera activity. 4. When a smile is detected, the camera will automatically take a shot of the image. The camera displays a white frame when a face is detected.

307 10M NOTE: When capturing an image with several faces, face tracking function may take up more time tracking faces for the first time. Using Intelligent Scene Mode With the Intelligent Scene Mode, the camera automatically detects the shooting conditions and switches to the appropriate scene and settings when aiming on a subject. This feature is most useful for novice users to capture great images even without basic knowledge of photography. Intelligent scene icon. After the camera detects the shooting conditions, this icon changes to show the detected scene mode. 307 10M Face tracking is automatically enabled.

Polaroid i1036 Digital Camera User Guide www.polaroid.com 41 To activate Intelligent Scene 1. Select from the Scene Mode submenu.

The camera displays a solid white 2. Focus the camera on the subject to capture. frame when a face is detected. 3. The camera detects the shooting conditions 307 and switches to the appropriate scene mode.

4. Press the shutter button halfway down to allow the camera to focus on the subject. The frame turns green to indicate focus is set. 5. Press the shutter button to take the shot.

10M The table below shows the modes supported by Intelligent scene: Icon. Intelligent Scene Modes Portrait Landscape Description This mode is set when a face is detected. This mode is set when: · There is no face detected. · The focus distance is more than 1.5 meters. · The EV setting is greater than 11 or 10.5.

NOTE: When Intelligent Scene function is enabled, icons will be displayed even in the Guideline, or No Display modes are enabled when the shutter button is pressed halfway down. Sunset Macro This mode is automatically set when sunset lighting is detected. This mode is set when: · There is no face detected · The focus distance is within the macro range.

This mode can only be detected when you half press the shutter button. This mode is set when a face is detected with an EV setting greater than 2.5. This mode is set when a face is detected with an EV setting greater than 2.5. Blacklight Backlight Portrait 42 Polaroid i1036 Digital Camera User Guide

www.polaroid.com Icon. Intelligent Scene Modes Night Scene Description This mode is set when: · There is no face detected. · The focus distance is more than 1.

5 meters. · The EV setting is lower than 5 or 4.5. This mode is set when a face is detected with an EV setting lower than 5 or 4.5.

Night Portrait Using Blink Detection Mode The Blink Detection mode tracks faces and determines when a captured image has subjects with closed eyes. After shooting, when the camera detects that the subject has blinked, a menu selection appears to ask the user whether to save the image or not. This feature saves time in managing photos to be stored or deleted. To activate Blink Detection 1. Select from the Scene Mode submenu.

307 10M Face tracking is automatically enabled. Detected faces are framed. 2. Press the shutter button halfway down to allow the camera to focus on the subject. The frame turns green to indicate focus is set. 3. Press the shutter button to capture the image. The image is automatically saved unless the camera detects that the subject Polaroid i1036 Digital Camera User Guide www.polaroid.com Save image Cancel 43 has blinked.

In this case, the screen on the right is displayed. 4. Select Save Image to save or Cancel to discard. · Using Aperture Priority Mode With Aperture Priority mode, users can adjust the aperture value and the camera automatically sets the shutter speed to match the brightness. To activate Aperture Priority 307 10M

1. Select from the Scene Mode submenu. 2. Press SET button to enter the adjust mode. 3. Use the or DISP keys to select the aperture value options.

4. Press the shutter button to capture the image. F 3.0 SET : Adjust Displays the aperture value · Using Shutter Priority Mode With Shutter Priority mode, users can adjust the shutter speed and the camera automatically sets the aperture value to match the brightness. To activate Shutter Priority 10M 307 1.

Select from the Scene Mode submenu. 2. Press SET button to enter the adjust mode. 3. Use the or keys to select the shutter speed options.

4. Press the shutter button to capture the image. SET : Adjust 1/ 30 Displays the shutter speed value 44 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Using Manual Exposure Mode With Manual Exposure mode, users can manually adjust the shutter speed and the aperture value. To activate Manual Exposure 1. Select from the Scene Mode submenu. 2. Press SET button to enter the adjust mode. 3.

Use the or keys to select the shutter speed options or use the or DISP keys to select the aperture value options. 4. use the or DISP keys to increase or decrease the aperture or shutter speed values. 307 10M F 3.0 SET : Adjust 1/ 30 Displays the aperture and shutter speed value 5. Use the SET button to switch between aperture and shutter speed adjustment and vice versa. 6. Press the shutter button to capture the image. NOTE: When you press the shutter button halfway down, the difference between the correct and selected exposure is displayed in red. Polaroid i1036 Digital Camera User Guide www.

polaroid.com 45 · Setting the Drive Mode Your camera features a Self-timer and Burst which can be set in the Drive mode function in the Record Menu. The Self-timer allows you to take photos after a pre-defined delay. While burst lets you take consecutive shots. This function is only available in recording still images.

The Drive mode setting is automatically set to off when you turn off the camera. Record Mode Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF To set the Drive Mode 1. From the Record menu, select Drive Mode. 2. Use the or DISP keys to go through the selection.

3. Press the SET button to save and apply changes. Record Modese. 10 10 Drive Mode sec. 22 AEB x2 Double AF Area Burst AF Lamp Off OFF Sharpness OFF OFF The table below shows the available Drive mode settings. Icon Item 10 Sec Self-timer Description Sets a 10-second delay to capture image after pressing the shutter button. Sets a 2-second delay to capture image after pressing the shutter button. Performs delay and capture twice: · Performs a 10-second delay, then captures the image. · Performs another 2-second delay then captures the image again. Performs continuous shooting when the shutter button is 10 2 2 Sec Self-timer x2 Double Self-timer Burst Off pressed and held down.

Stops shooting when the shutter button is released. Captures an image without time delay. 46 Polaroid i1036 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](http://yourpdfguides.com/dref/2645384)
<http://yourpdfguides.com/dref/2645384>

polaroid.com · Setting the AEB AEB stands for Automatic Exposure Bracketing. This feature captures the same image with 3 different exposure settings. · As you move through the selection, the preview on the LCD display changes. To set AEB 1. From the Record menu, select AEB. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Record Mode Drive Mode AEB ON On AF Area OFF Off AF Lamp Sharpness OFF OFF · Setting the AF Area AF stands for Automatic Focus. This feature determines the area on which the camera focuses. To set AF Area 1. From the Record menu, select AF Area. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Record Mode Drive Mode AEB AF Area Wide AF Lamp Center Sharpness OFF OFF The table below shows the available AF area settings. Icon Item Wide Center Description The camera automatically selects focus area within the wide frame. The focus area is fixed on the center. Polaroid i1036 Digital Camera User Guide www.polaroid.com 47 · Setting the AF Lamp The AF Lamp function allows you to record images even in low light conditions. If AF Lamp is set to Auto, the AF lamp located in the front of the camera, see "Front View" on page 12, emits an red light by pressing the shutter button halfway down allowing the camera to set the focus easily. To set AF Lamp 1. From the Record menu, select AF Lamp. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Record Mode Drive Mode AEB AF Area Auto AF Lamp OFF Off Sharpness OFF OFF · Setting Sharpness To set Sharpness This function allows you to enhance or soften finer details of your photos. 1. From the Record menu, select Sharpness. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Record Mode Drive Mode AEB High AF Area Normal AF Lamp Low Sharpness OFF OFF The table below shows the available AF area settings. Icon High Normal Low Item Sharpens the image. Normal sharpness. Softens the image. Description 48 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Setting Saturation The Saturation function lets you adjust the color saturation in your photos. Use a higher saturation setting for rich colors and a lower saturation setting for more natural tones. To set Saturation 1. From the Record menu, select Saturation. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. SaturationHigh Contrast Normal Digital Zoom Low Date Stamp Auto Review OFF OFF The table below shows the available Saturation settings. Icon High Normal Low Item Enhances saturation. Normal saturation is applied. Reduces saturation. Description · Setting Contrast To set Contrast This function allows you to adjust the contrast of your photos. 1. From the Record menu, select Contrast. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Saturation Contrast High Digital Zoom Normal Date Stamp Low Auto Review OFF OFF Polaroid i1036 Digital Camera User Guide www.polaroid.com 49 · Setting the Digital Zoom This feature controls the digital zoom mode of your camera. Your camera enlarges an image using the optical zoom first. When the zoom scale exceeds 5x, the camera uses digital zoom. To set Digital Zoom Zoom. NOTE: Using digital zoom may have an effect on the image quality of you picture. 1. From the Record menu, select Digital 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply AF 307 changes. Saturation Contrast Digital Zoom Intelligent Zoom Date Stamp Standard Zoom Auto Review OFF Off OFF OFF The table below shows the available Saturation settings. Icon Item Intelligent Zoom Standard Zoom Off Description Enlarges the image digitally with almost no distortion. This feature is available for still images only. Enlarges all image sizes up to a maximum of 5x in playback, but the image quality deteriorates. Uses the optical zoom only. · Setting the Date Stamp NOTE: · Digital Zoom is not available in Smile Capture, Video, and Voice Recording modes. · The maximum Intellect zoom scale varies depending on the image type and resolution. The Date Stamp function allows you to add the recorded date and time they were taken on your photos. The recorded date and time are based on your camera's clock settings. 50 Polaroid i1036 Digital Camera User Guide www.polaroid.com Once date and time are stamped on a photo, they can no longer be edited or deleted. Limitations of Date Stamp functions are as follows: · Available for still images only. · May slow down AEB/ continuous Saturation shooting when Date Stamp is enabled in Contrast /AEB/ Burst mode. OFF Digital Zoom Date · If Date Stamp is enabled, digital zoom is Date Stamp Date & Time automatically turned off. OFF Auto Review OFF Off · In vertical or rotated images, the date and time on your photos still appear horizontally. To set Date Stamp 1. From the Record menu, select Date Stamp. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Saturation Contrast Digital Zoom Date Stamp Auto Review OFF OFF · Setting the Auto Review The Auto Review function lets you view the captured image right after shooting it. If Auto review is On, the camera will display the captured image for 1 second on the LCD display. Saturation Contrast Digital Zoom Date Stamp Auto Review OFF OFF To set Auto Review 1. From the Record menu, select Auto Review. 2. Use the or DISP keys to go through the selection. 3. Press the SET button to save and apply changes. Polaroid i1036 Digital Camera User Guide www.polaroid.com Saturation Contrast Digital Zoom Date Stamp ON On Auto Review OFF Off OFF OFF 51 · Recording Movies You can record movies with the camera, the available recording time depends on the capacity of the memory card. Videos can be recorded until the maximum memory capacity has been reached. However the length of a single video may be limited depending on the camera model. 1. From the Record mode menu, select Movie. 2. Focus your camera on the subject that you want to take. 3. Press the Shutter button to start recording. 4. Use the control to zoom in and zoom out an image. 5. To stop recording, press the Shutter button. NOTE: · Sound cannot be recorded while pressing the control. · When the maximum capacity for a single video has been reached, simply press the shutter button again to continue recording. · Digital zoom is not available in movie recording. · Power save is not available in movie recording or pause recording. · The camera will automatically stop recording when the memory capacity is full.



[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](http://yourpdfguides.com/dref/2645384)
<http://yourpdfguides.com/dref/2645384>

Record Mode Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF OFF Setting Movie Size The Movie Size function icon appears only in Movie Mode.

Use this function to adjust the resolution and quality of movie clips.

To set the Movie Size: 1. In the Movie mode press the FUNC key. 2. Press the DISP button to select the resolution. 640 2.

Use the or to select your movie's AWB High Quality resolution. 16:9 640 320 N 3. Press the SET button to confirm your choice. 52 Polaroid i1036 Digital Camera User Guide www.polaroid.com

The table below shows the available size and corresponding image quality settings. Icon. Frame Size 720 x 400 640 X 480 320 X 240 640 X 480 HDTV High Quality Normal YouTube Mode Description To set other movie mode settings, please refer to "Using the Function Menu" on page 31. YouTube Mode

YouTube Mode allows you to record movies with predefined video settings to easily upload to the YouTube website. YouTube supports two file upload standards: · Single File Uploader. The maximum movie file size is up to 100 MB. · YouTube Uploader. The maximum movie file size is up to 1 GB. Most uploaded movie length ranges within 5 minutes, although you can upload a maximum movie length of 10 minutes. Therefore when you record using the YouTube mode, the following standards are followed: · Recorded movies are set to YouTube standard resolution of 640 X 480.

· Recording automatically stops when the file reaches 100 MB. Recorded movies in the YouTube mode are stored following the DCF rule, however movies are saved in a specific folder named "_UTUBE". For more details, please refer to "Folder Structure" on page 84. Polaroid i1036 Digital Camera User Guide www.polaroid.com 53 · To record a YouTube movie, select from the Movie Size function. Available recording time for a YouTube movie is up to 10 minutes. ·

Recording Voices 1. From the Record mode menu, select Voice. The Voice Recording screen layout is displayed on the LCD display.

3. Press the Shutter button to start recording. 4. Press the Shutter button to stop recording. 0:00:16 NOTE: Voice recording will automatically stop when the maximum memory capacity is full.

54 Polaroid i1036 Digital Camera User Guide www.polaroid.com 6 Playback View images, videos and audio clips through your camera's Playback mode. · Viewing in Single Navigation The Single navigation mode displays the images one by one on the LCD display. To view images/videos/audio clips, follow the steps below.

1. Press the Play button to set or turn on the camera to Playback mode. 2. The LCD screen displays an image. To understand the icons and other information on the screen, please see "Playback Mode Screen Layout" on page 23. Still Image 27/27 10M Movie 27/27 SET : Audio Clip 27/27 SET : SET : 2009/01/01 01:57 2009/01/01 01:57 2009/01/01 01:57 3. Touch or to view next/previous image/video/voice recording. 4. To play a video or a voice recording, touch the key. See "Playing Movies" on page 57 and "Playing Voice Recording" on page 58 for more details.

· Viewing Thumbnails 1. Press the W button twice to view 9-image thumbnails. 2. Touch or to view next/previous page. 3. Touch the SET button to select the image and view it normally. Polaroid i1036 Digital Camera User Guide www.polaroid.com 55 2009/01/01 01:57 2009/01/01 01:57 2009/01/01 01:57 Scroll bar. If scroll bars appear, it indicates that the screen can be scrolled.

Display Thumbnail view Thumbnail icons Icon. When you view the thumbnails, some images may contain icons. These icons indicate the type of file or recording. Type Voice Memo Movie Locked File Voice Record File Error Description Indicates that a voice memo is attached to the image. Indicates a recorded movie.

The displayed image is the first frame of the movie clip. Indicates that the image has been locked. Locked files cannot be edited or deleted. Indicates a voice recording file. Indicates an error file.

· Zooming Images The zoom view function works with still images only. · In normal view, press the T button · · 56 repeatedly until the desired zoom view. The 4 arrows on the LCD display indicate that the image is zoomed in. You can zoom view an image of up to 12X. x2.0 Polaroid i1036 Digital Camera User Guide www.polaroid.com · · Use the navigation controls to view the zoomed image. Press the Play button to close zoom view. NOTE: For 320 x 240 resolution images, you can only zoom in up to 6X.

· Playing Movies 1. 2. 3. 4. Set the camera to Playback mode. Use the navigation controls to scroll through the saved images. A movie clip has a movie icon displayed on screen. See picture on the left. Press the key to play the movie. During playback, press the or keys to fast forward or rewind the movie. The camera supports forward and rewind speed of up to 4x. During playback, use the to control volume. Press the T button to increase volume. Press the W button to decrease volume. Press the key to pause playback.

Press the key again to resume. When paused, the play info will remain on screen except WT . 27/27 SET : 2009/01/01 01:57 5. 6. 0:00:16 / 0:00:20 WT 7. 8. NOTE: · The play info, except the WT icon, will be displayed when the movie is paused, during REW/FF or frame by frame modes. · Volume cannot be adjusted when paused or during REW/FF modes. Polaroid i1036 Digital Camera User Guide 57 www.polaroid.com To view the movie frame by frame (forward or backward), press the key to pause playback, then press the or keys. Press the DISP key to stop the playback. The LCD display displays the movie frame image in Single navigation mode. · To capture screenshot image from a movie clip 1. 2.

3. During playback of movie, press the key to pause playback on your desired movie frame to capture. Press the Shutter button to capture screenshot. The camera will automatically stop playback. The LCD display displays the captured image in Single navigation mode. Capture photo 0:00:16 / 0:00:20 · Playing Voice Recording 1. 2. NOTE: This feature does not function when the memory card is full or the folder cannot be created. The icon does not appear on the screen either. Put the camera into Playback mode.

Use the navigation controls to scroll through the saved images. When viewing a voice recording file, the LCD display displays the screen layout of Audio clips. See picture on the right.. Press the recording.

key to play the voice 0:00:16 / 0:00:20 WT 3. 4. During playback, use the decrease volume. to control volume. The volume icon appears on the screen. Press the T button to increase volume. Press the W button to 5. 6. Press the key to pause playback. Press the key again to resume. WT When paused, the play info will remain on screen except in Single navigation mode. Single navigation mode. .



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/2645384)

[I1036 user guide](http://yourpdfguides.com/dref/2645384)

<http://yourpdfguides.com/dref/2645384>

Press the DISP key to stop the playback. The LCD display displays the image NOTE: Volume cannot be adjusted during pause or REW/FF modes.

created. 58 Polaroid i1036 Digital Camera User Guide www.polaroid.com · Playing Voice Memo Voice memo is recorded and attached separately to a captured image. See "Voice Memo" on page 67 on how to record voice memo. 1. Set the camera to Playback mode. 2. Use the navigation controls to scroll through the saved images. An image file with voice memo has a voice memo icon located on the top center of the LCD display.

See picture on the right. Press the recording. 4. During playback, use the decrease volume. 5.

6. Press the key to pause playback. Press the key again to resume. WT 27/27 10M SET : 3. key to play the voice ISO 0EV 400 F 3.

0 1/30 2009/01/01 01:57 to control volume. The volume icon appears on the screen. Press the T button to increase volume. Press the W button to When paused, the play info will remain on screen except in Single navigation mode. Single navigation mode. · Press the DISP key to stop the playback. The LCD display displays the image NOTE: Volume cannot be adjusted when you pause the voice memo. · Deleting an Image/Video/Audio · There are two ways to delete an image/video/audio: Using the Delete button, or Using Playback Menu Delete settings. See "Deleting Files" on page 61.

Using the Delete Button FUNC Use the Delete button on your camera to delete or mark an image video audio clip for deletion. 1. Set the camera to Playback mode. Polaroid i1036 Digital Camera User Guide www.polaroid.com 59 2. View images/videos/audio clips in Single navigation mode. 3. Use the or key to scroll the display. 4.

When the desired image/video/audio clip is displayed on the LCD display, press the Delete button. 5. A confirmation selection appears on screen. 6. Select Delete.

Delete Cancel 7. Press the SET button to delete. 8. The next image is displayed on the LCD display. To delete another file, use the or DISP keys to scroll through the images/videos/audio clips.

Then, repeat steps 4 to 7. 9. To close the Delete function and go back to viewing in single navigation mode, select Cancel. · Setting Playback Menu The Playback menu allows you to edit images, delete files, records voice memo, and setup other playback settings. To go to Playback Menu: 1. Set the camera to Playback mode. 2. Press MENU to launch the Playback Menu. 3. Use the or DISP keys to go through the selection.

4. To select a menu, press or the SET button. Slide Show Delete Protect Red-eye Correction Voice Memo Photo Edit 5. Change the submenu settings using the 4-way navigation control. 6. Press the SET button to save and apply settings. · Setting Slideshow 60 The Slideshow function allows you to view all stored photos/videos in still Polaroid i1036 Digital Camera User Guide www.polaroid.com image format in a continuous sequence. To view slideshow: Slide Show 1.

From the Playback menu, select Slideshow. The Slideshow menu appears. 2. Set the slideshow settings. 3.

Select Start, then press the SET button to start the slideshow. Interval Transition Repeat Select Start Cancel 1 sec. Horizontal Yes OK 4. During slideshow, press the SET button to pause slideshow. 5.

Use the or DISP keys to move through the options. Select whether to Continue or Exit the slideshow. 6. Press the SET button to apply selected option. To view slideshow: 1. From the Slideshow menu, use the or DISP keys to move through the selections. 2. Select Interval setting. Press the or keys to adjust.

Choose among the available interval settings: 1 sec.

3 sec., 5 sec., and 10 sec. 3. Select Transition setting. Press the or keys to adjust. Choose among the available transition settings: · Horizontal · Shrink · Fade · Random 4. Select Repeat setting. Press the or keys to adjust. Available settings are: Yes, No.

· Deleting Files The Delete function lets you remove unwanted files in the internal memory Polaroid i1036 Digital Camera User Guide www.polaroid.com 61 or on the memory card. Protected files cannot be erased, to delete, unprotect the file first. See "Protecting/Unprotecting Files" on page 64.

To delete a photo/video/audio clip: 1. From the Playback menu, select Delete. 2. The Delete submenu is displayed on the LCD display. Select available settings: · Single.

Select one file to delete. · Voice Only. Delete only the attached voice Slide Show memo, the image is retained in the Delete Single memory. Protect Voice Only · Multi. Select multiple files to delete at the Red-eye Correction Multi same time. Voice All Memo · All. Delete all files. Photo Edit To delete a single file: 1. Select Single in the Delete submenu, the images are displayed on the LCD display in single navigation mode. 2.

Use the or keys to scroll the display. 3. When the desired image/video/audio clip is displayed on the LCD display, select Delete. 4. Press the SET button to delete. Delete Cancel 5. The next image is displayed on the LCD display. To delete another file, use the or keys to scroll through the images/videos/audio clips. Repeat steps 3 to 7. 6.

To close the Delete function and go back Playback menu, select Cancel. 62 Polaroid i1036 Digital Camera User Guide www.polaroid.com To delete attached voice memo: 1. Set the camera to Playback mode.

2. View images/videos/audio clips in Single navigation mode. 3. Use the or keys to scroll until the desired image with voice memo is displayed on the screen. 4.

Press MENU to launch the Playback Menu. 5. Use the or DISP keys to move through the Playback menu selections then select Delete. 6. From the Delete submenu, select Voice only. 7. A confirmation selection appears, select Delete. 8. Press the SET button to delete the attached voice memo and go back to Playback mode. NOTE: The Voice Only submenu is disabled if the current image displayed, at the time you access the Delete menu, does not have any attached voice memo.

To delete multiple files: 1. Select Multi in the Delete submenu, the images are displayed in thumbnail view on the LCD display. 2. Use the navigation control to move through the files. 3. When the desired image/video/audio clip is highlighted, press the SET button to mark image/ video/audio clip for deletion. 4.

Repeat step 3 until all desired images for deletion are marked. 5. Press the MENU button.

A confirmation selection appears. 6. Select Yes to confirm. 7. Press the SET button to delete marked files.

Polaroid i1036 Digital Camera User Guide www.polaroid.com Select Next Delete selected files ? Yes Cancel 63 To delete all files: 1. Select All in the Delete submenu. A confirmation message appears.

2. Select Yes. 3. Press the SET button to delete all files. Delete all files? Yes Cancel · Protecting/Unprotecting Files The Protect function lets you lock a file to protect it from being modified or accidentally erased.

[You're reading an excerpt. Click here to read official POLAROID I1036 user guide](#)



<http://yourpdfguides.com/dref/2645384>