



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID I1037. You'll find the answers to all your questions on the POLAROID I1037 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID I1037**  
**User guide POLAROID I1037**  
**Operating instructions POLAROID I1037**  
**Instructions for use POLAROID I1037**  
**Instruction manual POLAROID I1037**



10.0 Megapixel Digital Camera  
i1037

User's Manual



**Questions?  
Need Some Help?**  
This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID I1037 user guide](http://yourpdfguides.com/dref/1313118)  
<http://yourpdfguides.com/dref/1313118>

**Manual abstract:**

*0 Megapixel Digital Camera i1037 User's Manual Questions? @@2. 3. 4. 5. 6. 7. 8. 9. @@@@6 - Camera Package Contents ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*... 7 · Attaching the Wrist Strap ..*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 8 · Installing the Batteries .*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*8 · Using Your Batteries.....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.... 9 · Checking the Battery Level.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*.. 10 · Turning the Camera On and Off ...*

.....  
.....

.....  
.....  
.....  
.....

... 10 2 Camera Settings..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 11 · Checking Camera Status .

.....  
.....  
.....  
.....  
.....  
.....  
.....

... 11 · Capture Modes .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

... 11 · Playback Mode ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 15 · Camera Modes ...

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

*. 16 · Capture Modes .....*

.....  
.....  
.....  
.....  
.....

*..... 17 · How to Navigate Menus .....*

.....  
.....  
.....  
.....  
.....

*..... 18 · Setup Menu .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 19 · Adjusting the Sounds .....*

.....  
.....  
.....  
.....  
.....

*... 20 · Selecting Auto Review Period ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.. 21 · Power Saving Settings .....

.....  
.....  
.....

.....  
.....  
.....

..... 22 · Setting the Date and Time .....

.....  
.....

.....  
.....  
.....

.....  
.. 23 · Setting the Display Language ...

.....  
.....

.....  
.....  
.....

.....  
.....

24 · File No. Reset Setting ....

.....

.....  
.....  
.....

.....  
.....  
.....

. 25 · Choosing a Startup Image .....

.....  
.....

.....  
.....  
.....

..... 26 · Formatting the Internal Memory .

.....  
.....

.....

.....  
.....  
.....

..... 28 · *Selecting the Battery Type* .

.....  
.....  
.....

.....  
.....  
.....  
.....

.. 29 · *Resetting to Default Settings* ...

.....

.....  
.....  
.....  
.....

.....  
.....  
.....

. 30 · *Turning the Information Display On/Off*.....

.....  
.....  
.....  
.....

.. 31 3 *Taking Pictures* ...

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 33 · *Taking Pictures in Normal Mode* .

.....  
.....  
.....

.....  
.....  
.....  
.....

33 · *Taking Pictures in Macro Mode* .....

.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....

..... 44 · Zoom Feature .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.... 44 Polaroid i1037 Digital Camera User Guide 3 www.polaroid.com 9 10. Zoom out / Thumbnail button 11. Playback mode button 12. Power / Auto Focus LED 13.

Macro / VLeft button 14. Stop / Down button 15. Menu button 16. Zoom in button 17. Wrist strap holder 18.

Play / Pause / Up button 19. Flash / Right button 20. Set / Display button 21. Mode / Scene button 22. SD card door 23.

Tripod mount 24. Battery 1 0 1 1 12 13 14 15 menu scene 16 17 18 19 20 21 22 23 24 2 Polaroid i1037 Digital Camera User Guide www.polaroid.com . . . . .

. . . . . Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting the Image Size and Quality .....

.....  
.....  
.....  
.....

46 Light Metering .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

... 47 White Balance .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 48 the ISO ...

.....  
.....  
.....  
.....  
.....



.....  
.....  
.....  
.....

*49 Exposure Compensation.....*

.....  
.....  
.....  
.....  
.....

*. 50 the AEB ....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 51 the Highlight .....*

.....  
.....  
.....  
.....  
.....  
.....

*... 51 the Sharpness ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 52 the Photo Effect. ....*

.....  
.....  
.....  
.....  
.....  
.....

*.. 53 Date/Time, Display On/Off ...*

.....  
.....

.....  
.....  
.....

..... *54 Camera Shake Warning h Feature .*

.....  
.....  
.....

.....  
.....  
.....

..... *55 Face Tracking ....*

.....  
.....  
.....

.....  
.....  
.....

..... *56 Smile Capture ....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *57 Photo Frame....*

.....  
.....  
.....

.....  
.....  
.....

..... *58 AF Lamp ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 60 · About DPOF .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 84 8 Using the SD (Secure Digital) Card .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 86 · Using the SD Card .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

. 86 · Formatting a SD card .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 89 · Copying Pictures, Video and Audio Clips to Memory Card .....

.....  
.....

..... 90 9 Installing the Software onto a Computer.

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 91 · Installing the Software.....

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 91 · *Software Included with Your Camera* ....

.....  
.....  
.....

.....  
.....  
.....

..... 93 · *Computer System Requirements* .

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 94 · *Fast and Easy YouTube™ Upload* .

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 95 10 *Transferring Pictures and Video Clips to a Computer* .

.....  
.....  
.....  
.....

... 96 · *Before Transferring Files* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

... 96 · *Connecting to Your Computer* .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 96 · *Transferring Pictures and Video Clips to a Computer* ...

.....  
.....  
.....  
.... 97 11 Troubleshooting Problems .  
.....

.....  
.....  
.....

.....  
.....  
.....

99 12 Getting Help .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 102 · Polaroid Online Services...

.....  
.....  
.....

.....  
.....  
.....

..... 102 · Software Help ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

102 13 Appendix .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. · Technical specifications .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. · Uninstalling Polaroid i1037 Driver (PC only) ...*

.....  
.....

.....  
.....  
.....

*..... · Camera Default Settings .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... · Tips, Your Safety & Maintenance .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*. · Regulatory Information .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 103 103 105 106 108 108 4 Recording Movie Clips...*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

*61 · Recording Movie Clips .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*... 61 · Setting the Movie Size..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 61 · Setting the You Tube Mode...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.... 62.5 Recording Audio Clips .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.. 63 · Voice REC Clip .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*63 · Recording a Voice Memo for the Desired Image .....*

.....





.... 68 · Reviewing Pictures and Video Clip Files in Thumbnail .

.....  
.....

.... 69 · Running a Slide Show on the LCD screen .

.....  
.....

.....  
.....  
.....

.. 69 · Playing a Video Clip on LCD Screen.....

.....  
.....  
.....

.....  
.....  
.....

..... 71 · Playing Audio Clips ..

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....

. 71 · Playing a Voice Memo ....

.....

.....  
.....  
.....

.....  
.....  
.....

72 · Protecting/Unprotecting Pictures, Movie and Audio Clips .....

.....  
.....

..... 73 · Deleting Pictures, Video and Audio Clips ....

.....  
.....  
.....

.... 74 · Viewing Pictures and Video Clips on a TV .

.....  
.....

.....  
.....  
.....

75 7 Print Settings .....

77 · About PictBridge .....

.. 77 · Resetting to Default Settings .....

..... 83 4 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.

com 5 1 Getting Started Thank you for selecting the new Polaroid i1037 digital camera for your imaging needs. The i1037 comes equipped with a powerful 10.0 Megapixels CCD sensor, 2.7-inch bright color TFT LCD, high quality optics and many manual settings and options. Outstanding features that your i1037 digital camera has: · · · · A high quality glass lens system for exposures from 6.3 inches to infinity including 3 times optical and 4 times digital zoom modes. Built-in flash with five modes (Auto, Red-eye, Always On, Slow Sync and Flash Off). Free to edit your images and print your pictures by DPOF. Large 2.7 inch LCD screen for easier image preview and review.

Convenient multiple shooting modes for more accurate reproduction of pictures. · Camera Package Contents Quick Start Guide Guide de Démarrage rapide Schnellanleitung Guida Rapida Guía Rápida de Inicio Guia de Início Rápido i1037 Quick Start Guide Polaroid i1037 Camera Driver (PC) ArcSoft MediaImpre Remaining Pictures Digital Zoom Factor Optical & Digital Zoom Bar Self-timer Continuous Pictures 2 00:01:30 8 7 6 2EV 50 --56 F2.8 ~ F5.2 ---- 1/2000 sec ~ 8 sec , , , , , AUTO --48 --No. 1 2 3 4 5 6 Movie Mode Movie Size Focus Mark White Balance Light Metering Internal Memory SD Card 7 8 9 10 Battery Power Level Remaining Recording Time Optical & Digital Zoom Bar Macro Mode , , 00:01:30 IN 3 4 5 OFF, 50 51 100 Description Icon Ref. Page 58 , , , 200 , 400 , 800 , 1600 , AUTO 49 47 55 , ,Share 59 ---- , IN ---- , 10 --44 44 , 10 AUTO, , , , , , 48 47 ----10 --44 35 9999 X 1.0 .... .. X 4.0 , 43 43 12 Polaroid i1037 Digital Camera User Guide www.

polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 13 Audio Mode 1 · Playback Mode 00:09:12 IN 4 3 2 v 5 5/150 320 8 6/150 IN 9 7/150 IN 1 2 10M 7 6 IN +2.0EV F2.8 1/30 2008/01/01 18:59 4 :Play 2008/01/01 18:59 :Play 2008/01/01 18:59 3 No. 1 No. 1 2 Description Audio mode Internal Memory SD Card 3 4 Battery Power Level Remaining Recording Time , , IN Description Resolution DPOF Recording info Date & Time Playback mode Internal Memory IN Icon 10M Ref. Page ----- Icon Ref. Page 60 ----10 --- 2 3 4 5 6 7 8 9 00:09:12 SD Card Battery Power Level Protect File Number / Total Number 7/160 , , 10 69 --- 14 Polaroid i1037 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313118)

[I1037 user guide](http://yourpdfguides.com/dref/1313118)

<http://yourpdfguides.com/dref/1313118>

polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 15 · Camera Modes The camera has two working modes, Capture mode and Playback mode. Pressing the PLAYBACK button switches between the Capture mode and Playback mode.  
menu scene · Capture Modes The camera has three modes for recording: still images, video clips and audio clips. Selecting these three modes as follows: 1. Press the button to set the camera to capture mode. 2. Press the 1 button to access the scene mode palette.  
3. Press setting. 4. Press the choice. button to select the desired button to confirm your SELECT OK PROGRAM Capture Mode In this mode, you can record still images, video and audio clips. This mode allows you to select the image and video settings according to the shooting environment. For more details, refer to "Taking Pictures" on page 33, "Recording Movie Clips" on page 61 and "Recording Audio Clips" on page 63. Playback Mode This mode allows the review, rotation, protection or deletion of pictures and video clips from the camera. You can add a voice memo to a picture. For more details, please refer to "Managing Pictures and Video Clips" on page 65.

No. 1 2 Description Still Image Mode Video Mode Audio Mode Icon Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. 3 16 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 17 · How to Navigate Menus Menus are used to select capture and play settings, as well as other camera settings like the Date/Time and Auto Power Off.

· Setup Menu You can change the basic settings of the camera in Capture mode and Playback mode. 1. Press the 2. Press the 3. Press the menu scene menu button to choose (Setup). or button to enter the setup menu. menu scene 4. Press the 1. Press the menu button to enter a menu bar and press it again to exit. 2. Press the and buttons to scroll left and right through the menu bar. 3. Press the and buttons to scroll up and down through menu options. 4. Press the button to enter a submenu or confirm your choice. Menu button 10M 3:2 16:9 8M 5M menu button to exit the setup menu. Menu button 10M 7M SETUP MENU Sounds Auto Review WB 1/3 Resolution ISO 3 Sec. 3 Min. Enter Setup Power Save Date & Time Language Select English Exit Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. 18 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 19 · Adjusting the Sounds You can set the start-up, shutter and beep sounds in the Setup mode. Setup Menu 1/3 · Selecting Auto Review Period When the auto review feature is activated, the picture just taken will be shown on the LCD screen for a certain period. Setup Menu 1/3 2.

(Sounds) is the current selection. or button. Sounds Auto Review Power Save 3 sec 1 min 1. Access the setup menu. 2. Press the ). 3. Press the 4. Press the setting. 5.

Press OFF 1/3/5 Seconds or button to select or or button. button to select the desired ( Auto Review Sounds Auto Review Power Save Date & Time Language Select Setup Menu Sounds Auto Review Power Save Date & Time English Exit 1/3 Off 1 Sec. 3 Sec. 5 Sec. 3 sec. 1 min 3. Press the Date & Time Language English Exit 4. "Shutter" is the current selection. 5. Press the 6.

Press the setting. 7. Press the or or to select the desired item. button to select the desired Select Sounds Shutter START-UP Beep Volume Select On 1 On OK button. Language Select OK button. The auto review feature is not activated. The picture just taken will be shown on the LCD screen for a certain period. (Video) mode. Shutter You can turn the shutter sound on or off in the Setup mode. When the shutter sound is turned on, the camera will beep when you press the shutter button.

You can set the start-up sound in the Setup mode. When the startup sound is turned on, the camera will beep when you power on the camera. You can turn the beep sound on or off in the Setup mode. When the beep sound is turned on, the camera will beep when you press the buttons. Adjusting the volume of the shutter sound, start-up sound, beep and playback sound.

Start-up NOTE: This setting is also available in Beep Volume 20 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 21 · Power Saving Settings The camera performs the following power save operation to conserve Setup Menu 1/3 battery power.

Sounds · Setting the Date and Time 1. Access the setup menu. 2. Press or button to select or button. (Date & time). Setup Menu Sounds Auto Review Power Save 3 sec 1 min 1/3 1. Access the setup menu. 2. Press the or button to select (Power Save). or button.

3. Press the 4. Press or to select the desired setting. 5. Press the button. Auto Review Power Save Date & Time Language Select Setup Menu Sounds Auto Review Power Save Date & Time Language Select 3 sec. 1 min English Exit 1/3 1 Min. 3 Min. 5 Min. 3.

Press the 4. Press the or button to select a field, such year, month, day, hour, minute, and date format. 5. Press or button to adjust the value in the field and select the date format. 6.

Press the NOTE: Date & Time Language Select Date & Time 2009 / 01 / 01 18:59 YY/MM/DD English Exit OK 1/3/5 MIN NOTE: The camera is designed to switch off automatically to save battery life after the specified period of inactivity. button. Select OK This setting is not active in the following situation: · Recording movie clips or audio files · Playing movie clips or audio files · Playing slideshow · Connecting the camera to a computer or printer with the USB cable · If the batteries are removed for about two days, the time setting will be lost. · This setting is also available in (Video) and (Playback) modes. Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. 22 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 23 · Setting the Display Language Under this setting, you can select the language you prefer for the LCD screen. 1. Access the setup menu.

Setup Menu 1/3 · File No. Reset Setting Setting the file numbers in series for all pictures taken on the internal memory or a memory card avoids file name duplication when images are downloaded to a computer. 1. Access the setup menu. 2. Press the (Language). 3. Press the 4. Press the setting. 5.

Press or or button to select Sounds Auto Review Power Save Date & Time Language English Exit 1/3 English Español Deutsch Français Italiano OK 3 sec.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313118)

[I1037 user guide](http://yourpdfguides.com/dref/1313118)

<http://yourpdfguides.com/dref/1313118>

1 min. 2. Press the 3. Press the 4.

Press the or or or to select button. ICON (File No.). button. button to select the desired Select Setup Menu Sounds Auto Review Power Save Date & Time button to select the desired setting.

button. Language Select Setup Menu File No. TV Out USB Start-up Image Format Select 2/3 Series NTSC Computer Setup Menu File No. TV Out USB Start-up Image 2/3 Series Reset No Exit Format Select OK SERIES RESET The file number of a newly-captured picture will continue from the last number used. The picture file number starts from 0001 Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). 5. Press the button.

24 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 25 · Choosing a Startup Image A start-up animation image appears on the LCD screen for a few seconds when the camera is turned on. You can choose a recorded image in your camera as your own startup image: 1. Press the button to set the camera to Playback mode. 2. Press the image. 3.

Press the 4. Press the Image). or menu 10. Access the setup menu. Setup Menu 2/3 Series NTSC Computer 11.

Press the Image). 12. Press the 13. Press the picture. or button to select (Start-up File No.

TV Out USB or or button. button to select the desired Start-up Image Format Select No Exit 5/150 10M IN button to select a desired button. button to select (Start-up +2.0EV F2.8 1/30 2008/01/01 18:59 14. Press button. The image that you choose will stored in directory as a startup image. 15. Press the menu Start-up Image or Start-up Image button to exit the menu. Off System My image Select OK 5.

Press the button. A hint window will appear on the left bottom corner of the LCD. Select OK NOTE: The startup image will not be deleted even if the original image is deleted or memory is formatted. 6. Press the your choice. 7. Press the or button to confirm or give up 5/150 10M IN button to apply the choice. Set this? Yes 8. Press the button to set the camera to Capture mode. 9.

Press the menu +2.0EV F2.8 1/30 2008/01/01 18:59 Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com).

com. button. Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 26 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 27 · Formatting the Internal Memory 1. Access the setup menu. 2. Press or to select or or button. Formatting the internal memory deletes all data stored in it. Setup Menu File No. 2/3 Series NTSC Computer · Selecting the Battery Type It is VERY important that the correct battery type be selected.

To ensure the camera displays the battery level correctly, set the type to match the batteries used. Setup Menu 3/3 No NOTE: (Format).

TV Out USB Start-up Image 3. Press the 4. Press the setting. 5. Press the Format Select No Exit 1. Access the setup menu. 2. Press or to select or button. (Battery Type). Battery Type Reset All Alkaline button to select the desired Setup Menu File No.

2/3 Yes No TV Out USB Start-up Image Format 3. Press the 4. Press or t 5. Press the Select Setup Menu Battery Type 3/3 Exit button. Alkaline NiMH Lithium Oxyride to select the type you want.

button. Reset All Select OK NOTE: · Data deleted by a format operation is not recoverable. Make sure you do not have any useful data currently stored in the internal memory before you format it. · Formatting the internal memory destroys all the pictures, even those are protected. · With a memory card inserted, the above operation would format the inserted memory card only.

The internal memory will not be formatted. (Video) and (Playback) modes. · This setting is also available in Select OK 28 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 29 · Resetting to Default Settings You can easily change all the settings you made back to the camera default setting by the following steps. Please refer to "Camera Default Settings" on page 106 for more details. 1. Access the setup menu.

2. Press or to select or button. (Reset All). Setup Menu Battery Type Reset All 3/3 Alkaline No · Turning the Information Display On/Off Press the button each time switches the LCD screen to the next display mode in the following mode. menu scene 3. Press the 4. Press or Still Image Mode Select Setup Menu Exit 3/3 Yes No +0.7EV +0.7EV AUTO 2 1 IN 2 11 IN 2 10M 2 10M Press Press Press to select "YES". button.

Battery Type Reset All +0.7EV +0.7EV 5. Press the Press Select OK NOTE: The following settings do not change with this procedure: · Date & Time setting · Language setting · TV out setting · Battery Type About Crossing Lines The crossing lines on the LCD helps check and lock the location of your subject when you frame it on the LCD screen. 30 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

polaroid.com Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 31 Video Mode 00:01:30 IN 3 Taking Pictures Before you take pictures, please read this note first: Press NOTE: Never remove the batteries while a picture is being saved. Doing so will prevent the current picture from being saved and may corrupt other pictures already stored on the camera's internal memory or a memory card.

Playback Mode 5/150 10M 10M · Taking Pictures in Normal Mode 5/150 You can take pictures at approximately 2.6 feet to infinity (80 cm to infinity). IN Press IN Press 2008/01/01 18:59 2008/01/01 18:59 +2.0EV F2.8 1/30 NOTE: Most settings are saved by the camera when the power is turned off so that the same setting is automatically available when the power is turned on again. Make sure you verify your settings when turning the camera on again. Press NOTE: · You can not change the LCD status in the following situation: · Recording video clips or audio files · Playing video clips or audio files · Playing the slideshow · Viewing in thumbnail · Trimming a still image 1. Set the camera to the Still Image mode. 2. Frame your subject using the LCD screen.

3. Press the Shutter button halfway to set the exposure and focus. The camera automatically detects the subject. The camera highlights the focus mark in green and the Auto Focus LED remains continuously on, indicating the camera's focus is locked on the subject. (When the camera's focus mark is red and the green Auto Focus LED blinks, the subject is not in focus.) Release the shutter button, recompose the scene and press the Shutter button halfway to reset the focus.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313118)

[I1037 user guide](http://yourpdfguides.com/dref/1313118)

<http://yourpdfguides.com/dref/1313118>

32 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 33 · Taking Pictures in Macro Mode 1 10M IN Use this mode to capture subjects close to the lens: Focus mark Wide Angle: 0.5 ~ 3.3 ft (10 cm ~ 1.0 m) Telephoto: 1.3 ~ 3.

3 ft (40 cm ~ 1.0 m) 1. Set the camera to Still Image mode. 2. Press the button and the icon appears on the LCD screen. 3. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. 10M IN menu scene AUTO +0.7EV F2.8 1/30 Auto Focus LED Aperture value Shutter speed NOTE: · P (Still Image) mode is the capture mode by default. · The LCD screen will show you the aperture value and shutter speed at which you take the picture. · If the shutter speed is slow your image may become blurred, the shake may appear on the LCD screen. Should you see the shake warning icon warning, the use of a tripod is recommended, enable the camera stabilizer feature or change the flash mode to "Always On"..

Refer to page 55. Macro 1 AUTO 4. Hold the camera steady and slowly press the shutter button down to take your image. +0.7EV Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). 34 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com).

com Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 35 · Taking Pictures in Different Scene Shooting Modes Select a mode that is suitable to your shooting conditions: 1. Set the camera to Still Image mode. 2.

Press the scene button to show the scene shooting mode screen. 3. Press the or , trrt button to select the desired setting. 4. Press the button. SELECT OK PROGRAM Display Option Program Movie Audio REC Q Mode Portrait Landscape Sunset Backlight Smile Capture Children Night Scene Fireworks Snow Sports Party Candlelight Description All settings can be changed in this mode For recording movie clips For recording audio Allows beginners to take pictures easily. Blurring the background to focus on the subject Used for the wide scenic views Enhance the red hue for recording sunset images Shooting the image of backlight object by changing metering Used for locating smiles in your pictures (see page 57) Take a still image to capture moving children Shooting the subject while keeping the background night scenery Slow shutter speed to take fireworks exploding. Used for the beach or snow scenes. Used to take still pictures in high speed motions. Used for the wedding or indoor parties. To capture the warmth effects of candle light. Use to take portrait pictures when the background is darker. Enhance the tone of skin so that the facial skin appears smooth. Can take pictures with effects as smooth as silk. Increased color level makes food more appetizing 5.

Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Night Portrait Soft Skin Soft Flowing Water Food 36 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com).

com 37 Display Option Building Text Auction Aperture Priority Shutter Priority Manual Exposure Photo Stitch Blink Detection Description Enhance the edges of the subject Enhance the black & white contrast Records small-size images that are perfect for auction notices. The camera automatically adjusts an aperture value to match the brightness. The camera automatically adjusts the shutter speed to match the brightness. This feature allows the user to adjust shutter speed and aperture value to correctly expose your images Used for taking panoramic pictures Used for detecting whether the subjects' eyes are open · Using the Q Mode The Q mode provides a simplified camera interface. Larger icons and fewer controls make it easier to take pictures anytime, especially for the beginners and first time digital camera users.

9999 10M You can only use the following basic settings in the Q mode. Flash: Auto / Red eye / Always on / Slow sync / Off Button Macro: Off / On SET/ DISP: OSD On / Guide Line / OSD Off Resolution: 10M / 3:2 / 16:9 / 8M / 5M / 3M / VGA Menu Drive Mode: Off / 2 sec. / 10 sec. / Double / Burst Face Tracking: Off / On Photo Frame: Off Beep: Off / On Auto Review: Off / 1sec. / 3 sec. / 5 sec. NOTE: · When you first power on the camera after you purchased it, the camera will be in Q mode. Follow the operation guides on page 17 or 36 to set the camera to other capture modes. · When you power on the camera after resetting to default settings, the camera will be in Q mode. Follow the operation guides on page 30 to reset to default settings. 38 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 39 · Setting Flash Mode Flash Range: For Normal mode: Wide Angle: 2.

6 ft ~ 8.0 ft ( 40 cm ~ 2.5 m ) Telephoto: 2.6 ft ~ 5.0 ft ( 40 cm ~ 1.2 m ) For Macro mode: Wide Angle: 0.5 ft~ 3.3 ft (0.15 m ~ 1.0 m) Telephoto: 1.3 ft ~ 3.3 ft (0.4 m ~ 1.0 m) 1. Set the camera to Still Image mode.

2. Press the button to cycle through the flash settings and select the one you need. The icon (according to the flash setting you selected) will appear on the LCD screen. 1 10M IN Display Option Auto Red-eye Reduction Always On Description The flash fires automatically as needed. Use this setting to take most pictures.

The flash fires a few times before taking your picture to reduce the red-eye phenomenon. The flash fires for every picture. Use this setting in high-contrast situations to provide fill-light. Use it indoors in low light or you see the shake warning. The flash fires regardless of the surrounding brightness. In low light conditions, slow shutter speed provides better lighting of the background that is out of range of the flash. The flash does not fire. Use this setting for outdoor pictures or where flash is prohibited or may be distracting. Also use when shooting toward a reflective surface, such as a window or mirror. If you do not have enough light when using this setting, your pictures will be too dark.

A S Slow Sync Off AUTO +0.7EV NOTE: · Flash modes are only used in still image shooting. · Never touch or block the flash with your fingers. · The flash charging time may increase when the battery is low. Flash The camera has five flash modes (default setting is Auto Flash). Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows or you see the shake warning. 40 Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Polaroid i1037 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com).

com 41 Using the Aperture Priority Using the aperture-priority mode, you select an aperture and the camera chooses an appropriate shutter speed to match the brightness.



[You're reading an excerpt. Click here to read official POLAROID I1037 user guide](http://yourpdfguides.com/dref/1313118)  
<http://yourpdfguides.com/dref/1313118>



The main purpose of using aperture-priority mode is to control the Depth of Field. A higher aperture value brings the background in focus. Selecting a lower aperture value allows you to soften the background. · Setting Self-timer Your camera is designed with a self timer function which will allow you to take pictures with a countdown of 2 or 10 seconds.

1. Press the button to set the camera to Still Image mode. 2. Press the menu button to enter menu bar. 3.

Press the Mode), or button to choose (Drive Off 2 sec 10 sec Double Burst Drive Mode Using the Shutter Priority menu scene Using the shutter-priority mode, you select a shutter speed and the camera chooses an appropriate aperture value to match the brightness. The main purpose of using the shutter-priority mode is to have a faster shutter speed to freeze the action of fast-moving subjects or to have a slower shutter speed to blur moving subjects in order to create a sense of motion. Faster shutter speeds allow you to take a sharp picture of a moving subject while slower speeds create a trail effect and allow you to shoot without a flash in dark areas. 4. Press the or buttons to scroll up and down through menu options. 5. Press the button. Display Off 2 Using the Manual Exposure Option Single shot 2-SEC 10-SEC Double Burst Record a single image Description Take a picture after a count down of 2 seconds Take a picture after a count down of 10 seconds Take two pictures in a shot after a count down of 10 seconds Press and hold the shutter button to take pictures in quick succession Using the manual exposure mode, you can set both aperture and shutter speed, and, therefore, you have complete control over the exposure system, including exposure compensation. Press the shutter button halfway, the difference between the standard exposure and the selected exposure appears in red.

10 6. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. NOTE: · This feature is only available in Still Image mode. · Place the camera on a flat surface or use a tripod when using the self-timer function. Polaroid i1037 Digital Camera User Guide 43 www.polaroid.com 42 Polaroid i1037 Digital Camera User Guide www.polaroid.com · Taking Continuous Pictures Continuous pictures mode allows you to take pictures continuously until release the shutter button.

1. Follow the selection steps 1~4 on page 43. 2. Select and press the button. 3.

Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. NOTE: · The flash is automatically disabled in the (Continuous) mode. Turn Digital Zoom On/Off 1. Set the camera to Still Image mode.

2. Press the menu button. 3. Press or button to select ICON (Digital Zoom). 4. Press or button to select the desired setting. 5. Press the button. Off On Digital Zoom 9999 10M IN AUTO +2.0EV To Zoom In and Out 1.

Set the camera to Still Image mode. 2. Press the to zoom in the subject, or press the button to return to original zoom status. While you press the or buttons, a red square will show on the zoom status bar as illustrated. The white square in the bar indicates the zoom status. "T" stands for "Tele" and "W" stands for "Wide". Keep the button pressed, and the camera switches from optical zoom to digital zoom when it reaches the maximum optical zoom. 3. Now you can take pictures and review them under the zoom setting you just made. The zoom setting will remain after pictures are taken.

If you want to take a normal size picture, please use the button. Zoom Button (Thumbnail) Zoom Button (Digital zoom) Optical Zoom Digital Zoom Red Square · Zoom Feature There are two types of zoom in this camera: optical zoom and digital zoom. Optical zoom alters the focal distance, and its factor range is 1X to 3X. Digital zoom is activated after you reach the maximum optical zoom (3X). It enlarges the part of the image at the centre of the image screen.

Digital zoom factor range is 1X to 4X. These zoom features let you zoom in the central area of an image and photograph only the enlarged portion of the picture. NOTE: · Using the digital zoom may cause a decrease in image quality. 44 Polaroid i1037 Digital Camera User Guide www.polaroid.com 10M x3.0 1 IN Digital zoom status AUTO +0.7EV Polaroid i1037 Digital Camera User Guide www.polaroid.com 45 · Setting the Image Size and Quality Picture resolution refers to the number of pixels in a digital picture. Picture quality depends on the JPEG file compression that the camera applies when the picture is taken. Higher resolution and less compression make better quality which occupies more memory space. Smaller size pictures with normal quality are easier to email while larger size with fine quality are better for printing. Resolution setting 1. Set the camera to Still Image mode.

2. Press the menu · Setting Light Metering Use the light metering setting to ensure that the proper amount of light enters into the camera lens. 1. Set the camera to Still Image mode. 2. Press the menu button. button to select button to select the Center Multi Spot Metering WB 3. Press the or (Metering). 10M 3:2 16:9 8M 5M ISO button. button to select button to select the desired 10M 7M 3.

Press the or (Resolution). 4. Press the setting. 5. Press the Quality setting and 4.

Press the and desired setting. WB Resolution ISO 5. Press the Option button. Description button. Light is measured from the entire shooting screen, but gives more importance to the values near the center.

Selects an exposure based on readings from multiple points in the subject area. Super Fine Fine Normal Quality WB 1. Set the camera to Still Image mode. 2. Press the 3. Press the 4. Press the setting. 5. Press the 46 menu Selects an exposure based on a single reading taken from the center of your picture. button.

button to select (Quality). ISO NOTE: This setting is also available in (Video) mode. or and button to select the desired button. Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 47 · Setting White Balance Selecting the right type of white balance can help to make the color of a subject appear more natural under the type of lighting that is available. 1. Set the camera to Still Image mode.

2. Press the 3. Press the Balance). menu · Setting the ISO button. button to select WB or (White Auto Daylight Cloudy Tungsten Fluor\_H White Balance This function enables you to change the camera's sensitivity to light by selecting the different ISO values.

ISO is a measure of how quickly your camera reacts to light. The higher the ISO value, the less light the camera needs to make an exposure, allowing the same exposure to be achieved with higher shutter speeds or smaller apertures. In a digital camera, higher ISO value allows higher shutter speed, at the expense of mottled or grain appearing in the final picture.



[You're reading an excerpt. Click here to read official POLAROID I1037 user guide](http://yourpdfguides.com/dref/1313118)  
<http://yourpdfguides.com/dref/1313118>





<http://yourpdfguides.com/dref/1313118>



1. YouTube supports two file upload standards: · Single File Uploader. The maximum movie file size is up to 100 MB. · YouTube Uploader. The maximum movie file size is up to 1 GB. Most uploaded movie length ranges within 5 minutes, although you can upload a maximum movie length of 10 minutes. NOTE: · The voices are recorded from the microphone of the camera.

Be careful to avoid touching the microphone while recording. · The camera will stop recording automatically when the memory capacity has been reached. · Recording a Voice Memo for the Desired Image 1. Set the camera to the Playback mode. 5/150 10M IN 2. Therefore when you record using the YouTube mode, the following standards are followed: · Recorded movies are set to YouTube standard resolution of 640 X 480. · Recording automatically stops when the file reaches 100 MB. 2. Press the or button to select the desired image where you want to add a voice memo. 3.

Press the 4. Press the menu NOTE: · Using VLC software to play videos of the MAC may lead to display issues. We recommend using the QT player for video playback. · To record a YouTube movie, select from the Movie Size function. Polaroid i1037 Digital Camera User Guide 62 www.polaroid.com button. button to select "Voice +2.0EV F2.8 1/30 2008/01/01 18:59 or Polaroid i1037 Digital Camera User Guide www.polaroid.com 63 Memo". Voice Memo 6 Managing Pictures and Video Clips NOTE: The camera automatically saves the image as a new file after rotating, resizing and adding a voice memo to it. Make sure there is sufficient memory before editing an image. 5. Press 6. Press the 7. Press the button. button to start recording. button again to stop recording.

Select OK · Reviewing Pictures IN 5/150 10M 5/150 10M NOTE: · The voice memo cannot be added to a video clip or a protected image. · You can only delete the voice memo by deleting the image. · A voice memo may not exceed 30 seconds. 1. Set the camera to 2. Use the taken. Playback mode. +2.0EV F2.8 1/30 IN REC voice? Start +2.

0EV F2.8 1/30 or buttons to view the pictures 2008/01/01 18:59 2008/01/01 18:59 00:00 10M 5/150 IN · Magnifying & Trimming the Displayed Picture 1. Set the camera to Playback mode. 5.0x REC voice? Stop +2.

0EV F2.8 1/30 2008/01/01 18:59 2. Use the 3. Press or buttons to select a picture. SET: to magnify the select picture.

4. Press the or , or button to move around the magnified picture. button to view the picture in the 5. Press the original size. Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. 6. Press the trimming.

button to set the image 7. Press the button again to trim the selected image and save it as a new one. Polaroid i1037 Digital Camera User Guide www.polaroid.com 65 64 Polaroid i1037 Digital Camera User Guide www.polaroid.com · Rotating the Displayed Picture The currently displayed picture can be rotated for a better review angle on the LCD screen. 1. Set the camera to 2. Press the 3.

Press the 4. Press the menu · Setting the Photo Edit 1. Set the camera to 2. Press the menu PLAYBACK mode. Photo Edit button.

button to select Select OK PLAYBACK mode. button. button to select (ROTATE). 3. Press the or (Photo Edit).

4. Press the or button. button to select the Photo Edit button. 5. Press the or desired setting. 6. Press the B&W Sepia Negative Mosaic 5. Press the or button to select "Rotate" to rotate the image and select "Save" to save the rotated image. 6. Select " " to return without rotating.

Rotate Rotate button. Select OK Option Red Eye Removal B&W Description Remove subject's red eyes from the images Convert image to black & white Recorded image will be stored in a sepia tone Opposite what was in the original image Add mosaic tiles to the images The images becomes reddish The images becomes greenish The images becomes bluish Rotate Save Sepia OK Select OK Select Negative Mosaic Red Green Blue NOTE: · The rotated image will be saved and the original file will be deleted. NOTE: · The edited image will be saved as a new file and the original file will be replaced by the new one. 66 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 67 · Changing the Image

Size Resizing a large size image to a smaller one helps to share with families and friends. 1. Set the camera to 2.

Press the 3. Press the (RESIZE). 4. Press the menu · Reviewing Pictures and Video Clip Files in Thumbnail You can view up to 9 picture and video clip files at a time on the LCD screen by using the thumbnail function. 1.

Set the camera to the Playback mode. PLAYBACK mode. Resize button. button to select or 2. Press the button and up to 9 thumbnail files appear on the LCD screen.

3. Press the or thumbnail file. 4. Press the or full screen. , or button to select a Full screen button. button to select the Select OK Resize 5. Press the or desired setting. 6. Press the 6M 4M 2M VGA button to view the file in button. · Running a Slide Show on the LCD screen OK NOTE: · The resized image will be saved as a new file name.

· Only a large size image can be resized to a smaller one. Select The slide show function lets you view all the pictures and video clip files stored in the current memory in sequence on the LCD screen. 1. Set the camera to the 2. Press the 3. Press the SHOW". 4. Press the menu Playback mode. Slide Show button. button to select button.

Slide Show 3 sec Yes or "SLIDE Select OK Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. Setting Slide Show Interval Time 5.

ICON is the current selection. Start 68 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com

Select OK 69 · Playing a Video Clip on LCD Screen 6. Press the or button to select the interval period for each file to display. Setting Slide Show Effect 7. Press the 8. Press the display. button to select ICON. or to select the animation effect for each file to 1. Set the camera to 2. Press the 3. Press the 4.

Press the 5. Press the or Playback mode. buttons to select the desired video clip. button to start playing the video clip. button again to pause. menu or button to stop the video clip. 00:01:30 IN Setting Repeat On/Off ICON. 9. Press the button to select 10. Press the or to select the desired setting.

Running a Slide Show 11. Press the 12. Pressing the 13. Pressing the menu :Play PLAY 00:01:30 2008/01/01 18:59 WT button to start a slide show.



[You're reading an excerpt. Click here to read official POLAROID I1037 user guide](http://yourpdfguides.com/dref/1313118)  
<http://yourpdfguides.com/dref/1313118>

button pauses the slide show.

stops the slide show. · Playing Audio Clips 1. Set the camera to the 2. Press the 3. Press the 4.

Press the 5. Press the or Playback mode. buttons to select the desired audio clip. button to start playing the audio clip. button again to pause. menu The slide show will keep running as long as there is power supply. NOTE: This function is not available for the video clips and voice recording. or button to stop playing. 70 Polaroid i1037 Digital Camera User Guide www.polaroid.

com Polaroid i1037 Digital Camera User Guide www.polaroid.com 71 7/150 IN PLAY 00:00:13 · Protecting/Unprotecting Pictures, Movie and Audio Clips 1. Set the camera to the 2. Press menu Playback mode. Protect button. or button to select button. or "PROTECT". Single Lock all Unlock all :Play 2008/01/01 18:59 WT 3. Press the 4.

Press the · Playing a Voice Memo 1. Set the camera to the Playback mode. Select OK 5. Press the 6. Press the SINGLE LOCK ALL button to select the desired setting.

2. Press the or buttons to select the desired image that has the voice memo recorded. 3. Press the 4. Press the 5.

Press the button to start playing the voice memo. button again to pause. menu button. Protect the selected picture, video or audio clip. Protect all of the pictures, video and audio clips in the current memory. or button to stop the video clip. UNLOCK ALL Remove protection from all protected pictures, video and audio clips in the current memory. Protect Single Picture, Movie or Audio Clip or button to select the picture, 5. Press the video or audio clip you want to protect. 5/150 IN 5/150 10M PLAY 00:00:13 IN :Play +2.

0EV F2.8 1/30 2008/01/01 18:59 10M WT 6. Press the button. Protect? 7. Press the or and protect it . button to select another one Lock 2008/01/01 18:59 72 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 73 Protect All pictures, Movie and Audio Clips 5.

Press the 6. Press the button. button. 10M 5/150 IN Deleting a Single Picture, Movie or Audio Clip or button to select the picture, 6. Press the video or audio clip you want to delete.

7. Press the button. button to delete a single file. Delete Single All Lock all? Yes 2008/01/01 18:59 Select OK Remove Protection from All Pictures, Movie and Audio Clips 5/150 NOTE: You can also press the IN 5. Press the 6.

Press the button. button. 10M 5/150 Deleting All Pictures, Video and Audio Clips 6. Press the button. 10M IN Unlock all? Yes Delete? Yes 2008/01/01 18:59 NOTE: appears on the LCD screen when you review the protected files. · The icon · Protected files cannot be deleted. Remove protection before deleting. · Formatting the internal memory or a SD card deletes all files, including the protected files. SINGLE ALL Delete a selected unprotected option. Delete all the unprotected files in the current memory.

2008/01/01 18:59 NOTE: · Protected files cannot be deleted. Remove protection before deleting. · All deleted pictures and video clips cannot be recovered. · Deleting Pictures, Movie and Audio Clips 1. Set the camera to the Playback mode. 2. Press the 3. Press the 4. Press the setting. 5.

Press the 74 menu Delete · Viewing Pictures and Movie Clips on a TV button. button to select (DELETE). Select OK or or To set the video output system: The video output signal (NTSC or PAL) can be switched to accommodate different signal systems. For example, NTSC for U.S.

A., Canada, Taiwan, Japan, etc. and PAL for Europe, Asia (excluding Taiwan), etc. You can change the video output system according to the following steps: button to select the desired button. Polaroid i1037 Digital Camera User Guide www.

polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 75 1. Access the setup menu. 2. Press the Out). 3. Press the 4. Press the setting.

5. Press the 6. Press the menu Setup Menu File No. 2/3 Series NTSC Computer 7 Print Settings Printing Procedures 1. Preparing the camera and the printer. Camera Printer Be sure battery level is full before printing. Refer to the user guide that comes with your printer and make preparations (paper, ink cassette, cartridge, etc.) as required. or or button to select button. (TV TV Out USB Start-up Image Format Select No EXIT button to select the desired Setup Menu 2/3 NTSC PAL button.

button to exit the menu. File No. TV Out USB Start-up Image Format Select Turn on the camera and the printer. OK 2. Connecting the camera to the printer Refer to "Camera / Printer Connection" on page 78 for details.

3. Select print settings Use the camera's function and navigation buttons to select the print settings. Refer to page 79 for details. 4. Printing Press the button to start printing.

Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. 76 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 77 Cancelling Printing Press the button to cancel printing the print job. The printer will stop printing and eject the paper.

Printing Errors If for some reason an error occurs during or before printing, press menu button to exit and reconfigure printing settings. menu CANCELLING? 1. Plug the labelled end of the USB cable into the socket marked on your printer. Location of USB socket will vary from printer to printer. 2.

Plug the other end of the USB cable into the USB port on your camera. 3. Press the or to select "Printer". Pictbridge Menu Print Image CONNECTING.. ... 1/2 Standard Single Auto Auto Auto Quality Layout Paper Size Select SELECT OPERATING ERROR USB Computer Printer NOTE: · Please refer to the printer's user guide for the solutions.

Printing may resume once the problem is solved. NOTE: · "CONNECTING" displays on the LCD screen, indicating a proper connection to the printer.

Camera / Printer Connection Connecting with the USB Cable. USB port Selecting Print images 1. Access the PictBridge menu.

2. Press the or button to select the desired setting. 3. Press the button. The following options are available. SINGLE Setup Menu Print Image Quality Layout Paper Size Select 1/2 SINGLE ALL OK Print the selected image in the camera's internal memory or a memory card according to specified settings. Print all images in the camera's internal memory or a memory card according to the specified settings. 79 To Printer ALL 78 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.

polaroid.com NOTE: · Print settings are configured for images only. Make sure there are no video clips or other file besides images in the memory before printing. · Not all printers will support all these print options.



[You're reading an excerpt. Click here to read official POLAROID I1037 user guide](#)



Please refer to the printer user guide for options available. Selecting Print Layout 1. Access the PictBridge menu. 2. Press the or desired setting. 3. Press the button to select the Pictbridge Menu 1/2 Auto Full 1 2 4 OK Print Image Quality hIf you choose single image, press the or button to select a desired or button to set the number of copies.

image, and press the 10M button. 5/150 IN PictBridge Menu 5/150 5/150 10M Press 30 Press PictBridge Menu Setup IN The following layout settings are available: AUTO, 1,2,3,4...250, FULL Layout Paper Size Select PictBridge Menu Setup 2008/01/01 18:59 Select OK 2008/01/01 18:59 NOTE: The value for number of copies is : 1 to 30.

AUTO Print settings differ according to the printer model. Full Print a full-size picture on the selected paper. 1,2...

250 Specify the number of printed images on a page. Selecting Paper Size 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button. The following paper size are available: AUTO, Postcard, L, 2L, Card Size, 100X150mm, 4"X6", 8"X10", Letter, 11"X17", A0-A9, B0-B9, Roll(L), Roll(2L), Roll (4"), Roll (A4) AUTO Selecting Print Quality 1. Access the PictBridge menu. 2.

Press the or button to select the desired setting. 3. Press the button. The following quality settings are available: AUTO, FINE, NORMAL, DRAFT AUTO 80 Pictbridge Menu Print Image Quality Layout Paper Size Select OK 1/2 Auto Fine Normal Draft Pictbridge Menu Print Image Quality Layout Paper Size Select 1/2 Auto Postcard L 2L 4" x 6" OK Print settings differ according to the printer model. Print settings differ according to the printer model. Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 81 Selecting Paper Type 1.

Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button.

The following paper type are available: AUTO, PHOTO, PLAIN, F PHOTO AUTO Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Plain Photo Fast Photo Setting the File Name On / Off 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3 Press the button.

AUTO ON OFF Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Off On Select OK Select OK Print settings differ according to the printer model. · Resetting to Default Settings Print settings differ according to the printer model. Add the file name to the printed image. Print without the file name. Setting the Date Stamp On / Off 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button.

AUTO ON OFF Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Off On NOTE: Choosing the "RESET" setting in PictBridge menu returns all print settings to the default value. More details, refer to "Resetting to Default Setting" on page 30. Selecting Print format 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button. STANDARD INDEX DPOF Pictbridge Menu Print Image Quality Layout Paper Size Select 1/2 Standard Index Dpof Select OK Print settings differ according to the printer model. Add the date stamp to the printed image.

Print without the date stamp. OK Print settings differ according to the printer model. Print pictures as a thumbnail image. Print settings by DPOF format. Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. 82 Polaroid i1037 Digital Camera User Guide www.polaroid.com Polaroid i1037 Digital Camera User Guide www.polaroid.com 83 · About DPOF DPOF stands for "Digital Print Order Format", which is a format for recording on a memory card or other medium which digital camera images should be printed and how many copies of the image should be printed. Then you can print on a DPOF-compatible printer or at a professional print service from the memory card in accordance with the file name and number of copies settings recorded on the card. With this camera, you should always select images by viewing them on the LCD screen. Do not specify images by file name without viewing the file contents. setting. SINGLE The selected picture in a memory card will be printed out up to 30 copies. ALL All pictures in a memory card will be printed out up to 30 copies for each picture. RESET Returns to the normal playback mode.

button. 7. Press the 8. Press the 9. Press the 10. Press the 11. Press the or or scene menu DPOF Select OK DPOF All button to select the picture you Reset Single want to print out. button to select the number of print copies. Select OK button to set the Date Stamp on/off. button to complete the setting.

5/150 10M IMPORTANT! DPOF print settings can be configured for images on a memory card only, not for images in the camera's built-in memory. 12. Power off the camera. 13. Remove the memory card from the camera and insert it into the printer's card slot (as illustrated).

SCN 01 Setting the DPOF: 1. Insert an SD card into the camera. 2. Turn on the camera. 3.

Set the camera to the Playback mode. 4. Press the menu button. 5. Press the or button to select DPOF. 6. Press the or button to select the desired 84 Polaroid i1037 Digital Camera User Guide www.polaroid.com Date stamp on Location of the card slot may vary from printer to printer model. NOTE: Make sure you turn off the camera before inserting or removing a memory card.

14. Press the Print button on the printer to start printing. Polaroid i1037 Digital Camera User Guide www.polaroid.com 85 8 Using the SD (Secure Digital) Card · Using the SD Card Your camera comes with built-in flash memory for storing pictures and video clips. You can expand the memory using a Polaroid SD card (not included - up to 8GB). The camera senses whether a memory card is inserted, and automatically saves pictures and video clips accordingly. Note that you cannot save pictures or video clips to the built-in flash memory while a memory card is installed in the camera. Memory card precautions: 1. Use only a SD memory card with this camera.

2. Electrostatic charge, electrical noise, and other phenomena can cause data corruption or even loss. Always make sure that you always back up important data on other media (MO disc, computer hard drive, etc.). 3.

If a memory card starts to behave abnormally, you can restore normal operation by formatting it. However, we recommend that you always take along with more than one memory card whenever using the camera far away from your home or office. 4. We recommend that you format a memory card when using it for the first time, or whenever the card you are using seems to be the cause of abnormal pictures. Remember to format a memory card if it was used in another digital camera or other devices.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313118)

[I1037 user guide](http://yourpdfguides.com/dref/1313118)

<http://yourpdfguides.com/dref/1313118>