



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID I737. You'll find the answers to all your questions on the POLAROID I737 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID I737**  
**User guide POLAROID I737**  
**Operating instructions POLAROID I737**  
**Instructions for use POLAROID I737**  
**Instruction manual POLAROID I737**



7.0 Megapixel Digital Camera  
i737

User's Manual



**Questions?  
Need Some Help?**

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](http://yourpdfguides.com/dref/442522)

<http://yourpdfguides.com/dref/442522>

**Manual abstract:**

0 Megapixel Digital Camera i737 User's Manual Questions? @@2. 3. 4. 5. 6. 7. 8. @@Zoom out / Thumbnail button 10. Playback mode button 11. Power / Auto Focus LED 12.

Macro / Left button 13. Stop / Down button 14. Delete button 15. Wrist strap holder 16. Zoom in button 17. Menu button 18. Play / Pause / Up button 19. Flash / Right button 20. Set / Display button 21. Mode button 22.

Tripod mount 23. @@@@2 Table of Contents.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

3 1 Getting Started .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 6 · Camera Package Contents ..

.....

.....

.....

.....

.....

.....

.....

.....

..... 7 · Attaching the Wrist Strap ..

.....

.....

.....

.....

.....

.....

.....

.....

..... @@@@10 2 Camera Settings.

.....

.....

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

..... 11 · *Checking Camera Status* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

11 · *Capture Modes* .....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 11 · *Playback Mode* .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

... 15 · *Camera Modes* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 16 · *Capture Modes* ...

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

*. 17 · How to Navigate Menus .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 18 · Setup Menu .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 19 · Adjusting the Sounds .*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 20 · Selecting Auto Review Period .*

.....  
.....  
.....  
.....  
.....

*... 21 · Power Saving Settings ..*

.....  
.....  
.....  
.....  
.....  
.....



.....  
... 29 · Resetting to Default Settings ..

.....  
.....

.....  
.....  
.....

.....  
.....

.. 30 · Turning the Information Display On/Off..

.....  
.....  
.....  
.....

..... 31 3 Taking Pictures ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 33 · Taking Pictures in Normal Mode .....

.....  
.....  
.....  
.....  
.....  
.....

..... 33 · Taking Pictures in Macro Mode ....

.....  
.....  
.....  
.....  
.....

..... 35 · Taking Pictures in Different Scene Shooting Modes ..

.....  
.....  
.....

.....  
.. 36 · Using the Q Mode ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

.. 38 · *Setting Flash Mode* .....

.....  
.....  
.....  
.....  
.....

.... 39 · *Setting ASM Mode* .

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 41 · *Setting Self-timer* ...

.....  
.....  
.....  
.....  
.....

..... 43 · *Taking Continuous Pictures* ..

.....  
.....  
.....  
.....  
.....  
.....

..... 44 · *Zoom Feature* .....

.....  
.....  
.....  
.....  
.....

..... 46 Light Metering .

.. 47 White Balance ...

..... 48 the ISO ....

.... 49 Exposure Compensation.

50 the AEB .....





.....  
.....  
.....  
.....  
.....  
.....

*56 Smile Capture .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 57 Photo Stitch .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 59 Blink Detection ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 60 Photo Frame.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 61 4 Recording Video Clips ...*

.....  
.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*62 · Recording Video Clips .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*.... 62 · Setting the Video Size .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 63 5 Recording Audio Clips ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*. 64 · Recording a Audio Clip ....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 64 · Recording a Voice Memo for the Desired Image ..*

.....  
.....  
.....  
.....

*..... 65 6 Managing Pictures and Video Clips ...*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

..... 66 · *Reviewing Pictures ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 66 · *Magnifying & Trimming the Displayed Picture .....*

.....  
.....  
.....  
.....

..... 66 · *Rotating the Displayed Picture ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 67 · *Changing the Image Effect .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 68 · *Changing the Image Size ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 69 · *Reviewing Pictures and Video Clip Files in Thumbnail ...*

.....  
.....  
.....

..... 70 · *Running a Slide Show on the LCD screen ...*

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
... 78 · About PictBridge ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 78 · Resetting to Default Settings .....

.....  
.....  
.....  
.....  
.....  
.....

..... 85 4 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · About DPOF .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 86 8 Using the SD (Secure Digital) Card ..

.....  
.....  
.....  
.....  
.....  
.....

..... 89 · Using the SD Card ..

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 89 · *Formatting a SD card ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 93 · *Copying Pictures, Video and Audio Clips to Memory Card ...*

.....  
.....

..... 93 9 *Installing the Software onto a Computer.....*

.....  
.....  
.....

..... 94 · *Installing the Software..*

.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 94 · *Software Included with Your Camera ...*

.....  
.....  
.....  
.....  
.....

..... 96 · *Computer System Requirements .....*

.....  
.....  
.....  
.....  
.....  
.....

..... 97 10 *Transferring Pictures and Video Clips to a Computer .....*

.....  
.....  
.....

..... 98 · *Before Transferring Files .*

.....  
.....  
.....

.....  
.....  
.....  
.....

98 · *Connecting to Your Computer* .....

.....  
.....  
.....  
.....

... 98 · *Transferring Pictures and Video Clips to a Computer* .....

.....  
.....  
.....  
.....

..... 99 11 *Troubleshooting Problems* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... 101 12 *Getting Help* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 104 · *Polaroid Online Services*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 104 · *ArcSoft Software Help* .....

.....  
.....  
.....  
.....







You can turn the beep sound on or off in the Setup mode. When the beep sound is turned on, the camera will beep when you press the buttons. Adjusting the volume of the shutter sound, start-up sound, beep and playback sound. Start-up Beep Volume 0 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Selecting Auto Review Period When the auto review feature is activated, the picture just taken will be shown on the LCD screen for a certain period. 1. Access the setup menu. 2.

Press the Review ). 3. Press the or or button to select button. button to select the ( Auto Setup Menu Sounds Auto Review Power Save Date & Time Language Select Setup Menu English Exit 1/3 Off 3 Sec. 5 Sec. 3 sec. 1 min 1/3 4. Press the or desired setting. 5. Press OFF 3 SEC/5 SEC button.

Sounds Auto Review Power Save Date & Time Language Select OK The auto review feature is not activated. The picture just taken will be shown on the LCD screen for a certain period. (Video) mode. NOTE: This setting is also available in Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 1 · Power Saving Settings The camera performs the following power save operation to conserve battery power. Setup Menu 1/3 1. Access the setup menu. 2. Press the or button to select (Power Save).

3. Press the or button. 4. Press or to select the desired setting. 5.

Press the button. Sounds Auto Review Power Save Date & Time Language Select Setup Menu Sounds Auto Review Power Save Date & Time Language Select OK 1/3 1 Min. 3 Min. 5 Min. 3 sec.

1 min English Exit 1/3/5 MIN The camera is designed to switch off automatically to save battery life after the specified period of inactivity. (Video) and (Playback) modes. NOTE: This setting is also available in Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Setting the Date and Time 1. Access the setup menu.

2. Press Time). 3. Press the or or button to select button. (Date & Setup Menu Sounds Auto Review Power Save Date & Time Language English Exit 3 sec 1 min 1/3 4. Press the or button to select a field, such year, month, day, hour, minute, and date format. 5. Press or button to adjust the value in the field and select the date format. Select Date & Time 2008 / 01 / 01 18:59 YY/MM/DD Select OK 6. Press the NOTE: button.

· If the batteries are removed for about two days, the time setting will be lost. · This setting is also available in (Video) and (Playback) modes. Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 3 · Setting the Display Language Under this setting, you can select the language you prefer for the LCD screen.

1. Access the setup menu. Setup Menu Sounds 1/3 2. Press the (Language). 3.

Press the or or button to select Auto Review Power Save Date & Time Language 3 sec. 1 min. English Exit 1/3 English Español Deutsch Français Italiano OK button. button to select the Select Setup Menu Sounds 4. Press the or desired setting. 5. Press button. Auto Review Power Save Date & Time Language Select Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com).

com. 4 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · File No. Reset Setting Setting the file numbers in series for all pictures taken on the internal memory or a memory card avoids file name duplication when images are downloaded to a computer. 1. Access the setup menu. 2. Press the 3. Press the 4.

Press the or or or to select button. button to select the desired setting. ICON (File No.). Setup Menu File No.

TV Out USB Start-up Image Format Select 2/3 Series NTSC Computer Setup Menu File No. TV Out USB Start-up Image 2/3 Series Reset No Exit Format Select OK SERIES RESET The file number of a newly-captured picture will continue from the last number used. The picture file number starts from 0001 5. Press the button. Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

5 · Choosing a Startup Image A start-up animation image appears on the LCD screen for a few seconds when the camera is turned on. You can choose a recorded image in your camera as your own startup image: 1. Press the button to set the camera to Playback mode. 2. Press the image. 3. Press the 4. Press the up Image). or button to select a desired 5/150 7M IN +2.

0EV F2.8 1/30 2008/01/01 18:59 button. or button to select (Start- Start-up Image 5. Press the button. A hint window will appear on the left bottom corner of the LCD. 6. Press the or button to confirm or Select OK give up your choice. 7. Press the button to apply the choice. 5/150 7M IN Set this? Yes 8.

Press the button to set the camera to Capture mode. 9. Press the button. +2.0EV F2.

8 1/30 2008/01/01 18:59 6 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 10. Access the setup menu. 11.

Press the or (Start-up Image). 12. Press the or button to select Setup Menu File No. TV Out USB 2/3 Series NTSC Computer button. button to select the Start-up Image Format No Exit 13. Press the or desired picture. Select 14. Press button. The image that you choose will stored in directory as a startup image. 15.

Press the button to exit the menu. Start-up Image Off System My image Select OK NOTE: The startup image will not be deleted even if the original image is deleted or memory is formatted. Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 7 · Formatting the Internal Memory 1. Access the setup menu.

2. Press 3. Press the or or to select button. Formatting the internal memory deletes all data stored in it. Setup Menu File No.

2/3 Series NTSC Computer (Format). TV Out USB Start-up Image Format Select No Exit 4. Press the or desired setting. 5. Press the button. button to select the Setup Menu File No. TV Out USB Start-up Image Format 2/3 Yes No Select OK NOTE: · Data deleted by a format operation is not recoverable. Make sure you do not have any useful data currently stored in the internal memory before you format it. · Formatting the internal memory destroys all the pictures, even those are protected. · With a memory card inserted, the above operation would format the inserted memory card only. The internal memory will not be formatted. · This setting is also available in (Video) and (Playback) modes. 8 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Selecting the Battery Type It is VERY important that the correct battery type be selected.

To ensure the camera displays the battery level correctly, set the type to match the batteries used.



[You're reading an excerpt. Click here to read official POLAROID i737 user guide](#)

<http://yourpdfguides.com/dref/442522>

1. Access the setup menu. 2. Press Type). 3. Press the 4. Press want. 5. Press the or to select (Battery Setup Menu Battery Type Reset All 3/3 Alkaline No NOTE: or or button.

to select the type you Select Setup Menu Battery Type Reset All 3/3 Exit Alkaline NiMH Lithium Oxyride button. Select OK Polaroid i737 Digital Camera User Guide www.polaroid.com 9 · Resetting to Default Settings You can easily change all the settings you made back to the camera default setting by the following steps. Please refer to "Camera Default Settings" on page 103 for more details.

1. Access the setup menu. 2. Press 3. Press the 4.

Press 5. Press the or or or to select button. to select "YES". button. Select Setup Menu Battery Type Reset All 3/3 Alkaline No (Reset All). Select Setup Menu Battery Type Reset All Exit 3/3 Yes No OK NOTE: The following settings do not change with this procedure: · Date & Time setting · Language setting · TV out setting 30 Polaroid i737 Digital Camera User Guide www.polaroid.com · Turning the Information Display On/Off Press the button each time switches the LCD screen to the next display mode in the following mode. Still Image Mode 2 1 IN 2 11 IN 2 7M 2 7M Press Press Press AUTO +0.7EV +0.

7EV +0.7EV +0.7EV Press About Crossing Lines The crossing lines on the LCD helps check and lock the location of your subject when you frame it on the LCD screen. Polaroid i737 Digital Camera User Guide www.polaroid.com 31 Video Mode 00:01:30 IN Press Playback Mode 5/150 7M 5/150 Press 7M IN IN Press 2008/01/01 18:59 2008/01/01 18:59 +2.0EV F2.8 1/30 Press NOTE: · You can not change the LCD status in the following situation: · Recording video clips or audio files · Playing video clips or audio files · Playing the slideshow · Viewing in thumbnail · Trimming a still image 3 Polaroid i737 Digital Camera User Guide www.polaroid.com 3 Taking Pictures Before you take pictures, please read this note first: NOTE: Never remove the batteries while a picture is being saved.

Doing so will prevent the current picture from being saved and may corrupt other pictures already stored on the camera's internal memory or a memory card. · Taking Pictures in Normal Mode You can take pictures at approximately 2.6 feet to infinity (80 cm to infinity). NOTE: Most settings are saved by the camera when the power is turned off so that the same setting is automatically available when the power is turned on again. Make sure you verify your settings when turning the camera on again.

1. Set the camera to the Still Image mode. 2. Frame your subject using the LCD screen. 3.

Press the Shutter button halfway to set the exposure and focus. The camera automatically detects the subject. The camera highlights the focus mark in green and the Auto Focus LED remains continuously on, indicating the camera focus is locked on the subject. (When the camera's focus mark are in red and the Auto Focus LED blinks, the subject is not in focus. Release the Shutter button, recompose the scene and press the Shutter button halfway to reset the focus.) 1 7M IN Focus mark AUTO +0.7EV F2.8 1/30 Auto Focus LED Aperture value Shutter speed Polaroid i737 Digital Camera User Guide www.polaroid.com 33 NOTE: · (Still Image) mode is the capture mode by default.

· The LCD screen will show you the aperture value and shutter speed at you take the picture. · If the shutter speed is slow your image may become blurred, the warning icon may appear on the LCD screen. Should you see the warning, the use of a tripod is recommended or enable the camera stabilizer feature. Refer to page 53. which shake shake shake 4. Hold the camera steady and slowly press the shutter button down to take your image. Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com.

34 Polaroid i737 Digital Camera User Guide www.polaroid.com · Taking Pictures in Macro Mode Use this mode to capture subjects close to the lens: Wide Angle: 0.5 ~ 3.3 ft (15 cm ~ 1.

0 m) Telephoto: 1.3 ~ 3.3 ft (40 cm ~ 1.0 m) 1. Set the camera to Still Image mode.

2. Press the button and the icon appears on the LCD screen. 3. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. Macro 1 7M IN AUTO +0.7EV Polaroid i737 Digital Camera User Guide www.polaroid.com 35 · Taking Pictures in Different Scene Shooting Modes Select a mode that is suitable to your shooting conditions: 1. Set the camera to Still Image mode.

2. Press the button to show the scene shooting mode screen. 3. Press the , , or select the desired setting. 4. Press the button. button to SELECT OK PROGRAM PROGRAM 5. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. SELECT OK Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. 36 Polaroid i737 Digital Camera User Guide www.polaroid.

com Display Option Program Video Audio REC Q Mode Portrait Landscape Sunset Backlight Smile Capture Children Night Scene Fireworks Snow Food Building Text Photo Stitch Blink Detection Description All settings can be changed in this mode For recording movie clips For recording audio Allows beginners to take pictures easily. Blurring the background to focus on the subject Used for the wide scenic views Enhance the red hue for recording sunset images Shooting the image of backlight object by changing metering Used for locating smiles in your pictures (see page 57) Take a still image to capture moving children Shooting the subject while keeping the background night scenery Slow shutter speed to take fireworks exploding. Used for the beach or snow scenes. Increased color level makes food more appetizing Enhance the edges of the subject Enhance the black & white contrast Used for taking panoramic pictures Used for detecting whether the subjects' eyes are open Polaroid i737 Digital Camera User Guide www.polaroid.

com 37 · Using the Q Mode The Q mode provides a simplified camera interface. Larger icons and fewer controls make it easier to take pictures anytime, especially for the beginners and first time digital camera users. 9999 7M You can only use the following basic settings in the Q mode. Flash: Auto / Red eye / Always on / Slow sync / Off Button Macro: Off / On SET/ DISP: OSD On / Guide Line / OSD Off Resolution: 7M / 3:2 / 16:9 / 5M / 3M / 1M / VGA Menu Drive Mode: Off / 2 sec. / 10 sec. / Double / Burst Stabilizer: Off / On Face Tracking: Off / On Photo Frame: Off / On Beep: Off / On Auto Review: Off / 3 sec. / 5 sec. NOTE: · When you first power on the camera after you purchased it, the camera will be in Q mode.



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](http://yourpdfguides.com/dref/442522)  
<http://yourpdfguides.com/dref/442522>

Follow the operation guides on page 17 or 36 to set the camera to other capture modes. · When you power on the camera after resetting to default settings, the camera will be in Q mode.

Follow the operation guides on page 30 to reset to default settings. 38 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Setting Flash Mode  
Flash Range: For Normal mode: Wide Angle: 2.6 ft ~ 8.0 ft ( 0.8 m ~ 2.5 m ) Telephoto: 2.6 ft ~ 5.0 ft ( 0.8 m ~ 1.5 m ) For Macro mode: Wide Angle: 0.33 ft~ 2.6 ft (0.10 m ~ 0.8 m) Telephoto: 1.3 ft ~ 2.6 ft (0.4 m ~ 0.8 m) 1.

Set the camera to Still Image mode. 2. Press the button to cycle through the flash settings and select the one you need. The icon (according to the flash setting you selected) will appear on the LCD screen. 1 7M IN AUTO Flash +0.7EV The camera has five flash modes (default setting is Auto Flash). Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows or you see the shake warning. Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 39 Display Option Auto Red-eye Reduction Always On Description The flash fires automatically as needed.

Use this setting to take most pictures. The flash fires a few times before taking your picture to reduce the red-eye phenomenon. The flash fires for every picture. Use this setting in high-contrast situations to provide fill-light. Use it indoors in low light or you see the shake warning. The flash fires regardless of the surrounding brightness. In low light conditions, slow shutter speed provides better lighting of the background that is out of range of the flash. The flash does not fire. Use this setting for outdoor pictures or where flash is prohibited or may be distracting. Also use when shooting toward a reflective surface, such as a window or mirror.

If you do not have enough light when using this setting, your pictures will be too dark. A S Slow Sync Off NOTE: · Flash modes are only used in still image shooting. · Never touch or block the flash with your fingers. 40 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Setting ASM Mode Your camera is designed with a manual setting feature which allows you to take pictures with aperture priority, shutter priority or manual exposure mode according to different capture requirements. 1. Set the camera to (Program) mode. PROGRAM 2. Press the ASM button to select the ASM mode.

3. To exit the ASM Mode, press the button to show the scene shooting mode screen. 4. Press the , , select (Program). 5. Press the button. ASM Mode NOTE: · ASM Mode can be only used in SELECT OK or button to camera to the (Program) mode. How to set the (Program) mode, please see page 33. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com).

Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 41 Using the Aperture Priority Using the aperture-priority mode, you select an aperture and the camera chooses an appropriate shutter speed to match the brightness. The main purpose of using aperture-priority mode is to control the Depth of Field. A higher aperture value brings the background in focus. Selecting a lower aperture value allows you to soften the background. Using the Shutter Priority Using the shutter-priority mode, you select a shutter speed and the camera chooses an appropriate aperture value to match the brightness. The main purpose of using the shutter-priority mode is to have a faster shutter speed to freeze the action of fast-moving subjects or to have a slower shutter speed to blur moving subjects in order to create a sense of motion.

Faster shutter speeds allow you to take a sharp picture of a moving subject while slower speeds create a trail effect and allow you to shoot without a flash in dark areas. Using the Manual Exposure Using the manual exposure mode, you can set both aperture and shutter speed, and, therefore, you have complete control over the exposure system, including exposure compensation. Press the shutter button halfway, the difference between the standard exposure and the selected exposure appears in red. 4 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Setting Self-timer Your camera is designed with a self timer function which will allow you to take pictures with a count down of 2 or 10 seconds. 1.

Press the button to set the camera to Still Image mode. 2. Press the button to enter menu bar. 3. Press the or (Drive Mode). button to choose Off 2 sec 10 sec Double Burst Drive Mode 4. Press the and buttons to scroll up and down through menu options. 5. Press the button. Display Off 2 Option Single shot 2-SEC 10-SEC Double Burst Record a single image Description Take a picture after a count down of 2 seconds Take a picture after a count down of 10 seconds Take two pictures in a shot after a count down of 10 seconds Press and hold the shutter button to take four pictures in quick succession 10 6. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. NOTE: · This feature is only available in Still Image mode.

· Place the camera on a flat surface or use a tripod when using the self-timer function. Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 43 · Taking Continuous Pictures Continuous pictures mode allows you to take pictures continuously until release the shutter button. 1. Follow the selection steps 1~4 on page 43. 2. Select and press the button. 3. Capture procedures are the same as for taking a picture in the normal capture mode. See page 33. NOTE: · The flash is automatically disabled in the (Continuous) mode. 9999 7M IN AUTO +2.0EV · Zoom Feature There are two types of zoom in this camera: optical zoom and digital zoom. Optical zoom alters the focal distance, and its factor range is 1X to 3X.

Digital zoom is activated after you reach the maximum optical zoom (3X). It enlarges the part of the image at the centre of the image screen. Digital zoom factor range is 1X to 4X. These zoom features let you zoom in the central area of an image and photograph only the enlarged portion of the picture. NOTE: · Using the digital zoom may cause a decrease in image quality.

44 Polaroid i737 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Turn Digital Zoom On/Off 1. Set the camera to Still Image mode. 2. Press the button. Off On Digital Zoom 3. Press or button to select ICON (Digital Zoom). 4. Press or button to select the desired setting.

5. Press the button. To Zoom In and Out 1. Set the camera to Still Image mode. 2. @@@@The white square in the bar indicates the zoom status. @@@@3. @@@@The zoom setting will remain after pictures are taken. @@@@Resolution setting 1. Set the camera to Still Image mode. 2. Press the button. button to select button to select the 7M 3:2 16:9 7M 3. Press the or (Resolution). 5M 3M Resolution WB 4.



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](http://yourpdfguides.com/dref/442522)  
<http://yourpdfguides.com/dref/442522>



Press the and desired setting. 5. Press the **Quality** setting button. ISO 1. Set the camera to Still Image mode.  
2. Press the 3. Press the button. @@Press the and desired setting. 5. @@1. Set the camera to Still Image mode. 2. Press the button. button to select button to select the Center Multi Spot Metering WB 3.

Press the or (Metering). ISO 4. Press the and desired setting. 5. Press the **Option** button. Description Light is measured from the entire shooting screen, but gives more importance to the values near the center. @@@@1. Set the camera to Still Image mode. 2. Press the 3.

Press the **Balance**). button. @@Press the and desired setting. 5. @@Use this for most picture taking scenes.

@@Corrects the green hue of fluorescent lighting. @@@@ISO is a measure of how quickly your camera reacts to light. @@@@1. Set the camera to Still Image mode. 2.

Press the 3. Press the 4. Press the 5. Press the **AUTO 50/100/200/400 /800/1600** button. or button to select "ISO". and button. @@@@1. Set the camera to Still Image mode. 2. Press the 3.

Press the "Exposure". button. or button to select 0EV Exposure WB ISO 4. Press the and desired setting. 5. @@@@1. Set the camera to Still Image mode. 2. Press the 3. Press the button.

or button to select (AEB). Off On AEB 4. Press the and desired setting. 5. @@1.

Set the camera to Still Image mode. 2. Press the button. button to select button to select the Off 3. Press the or (Highlight).

Highlight 4. Press the and desired setting. 5. @@1. Set the camera to Still Image mode. 2. Press the button. @@Press the or (Sharpness). 4. Press the and desired setting.

5. @@But noise may occur in the recording image. The edges of the image are sharp, This is suitable for printing. Soften the edge of the picture, creating a "soft focus" effect 5 Polaroid i737 Digital Camera User Guide www.polaroid.com · Setting the Photo Effect. This setting allows control over the color tones and moods of a picture. 1. Set the camera to Still Image mode. 2.

Press the 3. Press the (Effect). 4. Press the 5. Press the **Option Off B&W Sepia Negative Mosaic Red Green Blue** button.

or button to select and button. Description No effect is added to the image Convert image to black & white Recorded image will be stored in a sepia tone Opposite what was in the original image Add mosaic tiles to the images The images becomes reddish The images becomes greenish The images becomes bluish Off B&W Sepia Negative Red Effect button to select the desired setting. NOTE: · This setting is available in Still Image and Playback modes. · The

mosaic effect only can be set in Playback mode. Polaroid i737 Digital Camera User Guide www.

polaroid.com 53 · Setting Date/Time, Display On/Off 1. Set the camera to Still Image mode. 2. Press the 3. Press or Stamp). button. button to select (Date Date and time can be displayed on the picture by the following steps: Off Date Date & Time Date Stamp 4. Press and desired setting. Option Off Date Date & Time button to select the Description Do not add the recorded date & time to printed images Only add the recorded date to printed images Add the recorded date & time to printed images Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. 54 Polaroid i737 Digital Camera User Guide www.polaroid.com · Setting Camera Shake Warning Stabilizer Feature With more sensitivity and faster shutter speeds to brighten up your pictures, this feature helps prevent blurry images caused by hand and camera shake or subject movement. 1. Set the camera to Still Image mode. 2. Press the 3.

Press or button. button to select (Stabilizer). Off On Stabilizer 4. Press and desired setting. button to select the Polaroid i737 Digital Camera User Guide www.

polaroid.com 55 · Setting Face Tracking When this feature is on, the camera uses auto digital zoom technology to retract and extract the zoom lens to lock the main subject in the picture and follow their movements. 1. Set the camera to Still Image mode. 2.

Press the 3. Press or Tracking). button. button to select (Face Off On Face Tracking 4. Press and desired setting. button to select the NOTE: · The camera uses the single AF window to automatically set the focus. When the shutter button is pressed halfway, the camera starts focusing until it "locks" onto your subject. When in focus, the focus frame will turn green. If your subject is not in focus, the focus frame will turn red. Release the shutter button and press the shutter button halfway down again until it turns green.

Press the shutter button all the way down to take you picture. · Face tracking is powered by Arcsoft. · In some photographic scenes, the face tracking function may not be available. 56 Polaroid i737 Digital Camera User Guide www.polaroid.com · Setting Smile Capture This Feature is based on "Face Tracking".

When you use smile capture, you need to set the face tracking feature on first. 1. Set the camera to Still Image mode. 2.

Press the button to show the scene shooting mode screen. 3. Press the , , or select (Smile Capture). 4. Press the button.

SELECT OK Smile Capture button to 5. Frame your subject using the LCD screen. 6. The Camera auto detects faces that are close to the center of the screen and displays the AF frames (up to 5 frames). 7.

Fully press the shutter button to start the smile capture feature. Polaroid i737 Digital Camera User Guide www.polaroid.com 57 8. The camera will search for smiles on faces and main AF frames will turn green when detected. 9. When all detected faces smile, the camera will take the pictures without you having to press the shutter button again. NOTE: · There is a 15 second time-out to detect the smiles. If no smile is detected after 15 seconds, the camera will not take photos. Should this happen, you must press the shutter button and press it again to capture smiles in your image.

· In Smile Capture mode, it will take 6 continues shots. · The following functions are not available in Smile Capture mode: · Drive Mode · Photo Effect: Negative, Blue, Green · Highlight · Photo frame 58 Polaroid i737 Digital Camera User Guide www.polaroid.com · Setting Photo Stitch Use Photo Stitch to make your panoramic pictures or combine different PROGRAM scenes into one picture. 1. Set the camera to Still Image mode. 2. Press the button to show the scene shooting mode screen. 3. Press the , (Photo Stitch).

4. @@Press the shutter button to take the first picture. 6. @@7. Repeat step 6.

8. @@@@ · The sequence may contain max. 3 images. @@@@1. Set the camera to Still Image mode.

2. Press the button to show the scene shooting mode screen. 3. Press the , , (Blink Detection). 4. Press the button. or button to select SELECT OK PROGRAM Blink Detection 5. Camera detects the subject's eyes.



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](#)



If blink detected, red rectangles will show around the eyes. 6.

Press the shutter button to take photos. @ @ 1. Set the camera to Still Image mode. 2. Press the 3. Press or Frame). button. button to select (Photo Off Photo Frame 4. @ @ Pirate Frame. @ @ @ @ The Power / Auto Focus LED button blinks and the remaining time that can be recorded will decrease in seconds while recording.

1. Set the camera to Video mode . (See page 17) 00:01:30 IN NOTE: The icon will appear on the LCD screen, indicating the Video mode is activated. 2. Frame your subject using the LCD screen.

3. Press the Shutter button to start recording. 4. Press the Shutter button again to stop recording, or recording stops when the current memory is full. 5. Press the or button to zoom in or out the subject. NOTE: · Digital zoom feature is not available in (Video) mode. · Sound cannot be recorded while pressing the zoom button. 6 Polaroid i737 Digital Camera User Guide www.polaroid.com · Setting the Video Size 1. Set the camera to 2. Press the 3. Press the 4. Press the 5.

Press the 6. Press the or button. button to select button. and button. (MOVIE SIZE). (Video mode). 16:9 640 320 160 Movie Size WB button to select the desired setting. NOTE: 16:9 is suitable for viewing on TV. is the default value, suitable for viewing on TV. is suitable for viewing on PC.

Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i737 Digital Camera User Guide www.

polaroid.com 63 5 Recording Audio Clips · Recording a Audio Clip 1. Set the camera to (Audio mode). (See page 17) 2. Press the Shutter button completely down to start recording.

3. Press the Shutter button again to stop recording or recording stops when the current memory is full. 00:09:12 IN REC 00:02:20 64 Polaroid i737 Digital Camera User Guide www.polaroid.com · Recording a Voice Memo for the Desired Image 1. Set the camera to the Playback mode. 5/150 7M IN 2. Press the or button to select the desired image where you want to add a voice memo. 3. Press the 4.

Press the Memo". 5. Press 6. Press the 7. Press the button. or button to select "Voice +2.0EV F2.8 1/30 2008/01/01 18:59 Voice Memo button. Select OK button to start recording. 7M 5/150 IN button again to stop recording.

REC voice? Start +2.0EV F2.8 1/30 2008/01/01 18:59 00:00 7M 5/150 IN REC voice? Stop +2.0EV F2.8 1/30 2008/01/01 18:59 NOTE: · The voice memo cannot be added to a video clip or a protected image.

· You can only delete the voice memo by deleting the image. · A voice memo may not exceed 30 seconds. Polaroid i737 Digital Camera User Guide www.polaroid.com 65 6 Managing Pictures and Video Clips NOTE: The camera automatically saves the image as a new file after rotating, resizing and adding a voice memo to it.

Make sure there is sufficient memory before editing an image. · Reviewing Pictures 1. Set the camera to 2. Use the taken. and Playback mode. buttons to view the pictures 5/150 7M IN 2008/01/01 18:59 +2.0EV F2.8 1/30 · Magnifying & Trimming the Displayed Picture 5.0x 1. Set the camera to 2.

Use the 3. Press and Playback mode. buttons to select a picture. SET: to magnify the select picture. button to move 4. Press the , , or around the magnified picture. 5. Press the original size. 6. Press the button to view the picture in the button to set the image trimming.

7. Press the button again to trim the selected image and save it as a new one. 66 Polaroid i737 Digital Camera User Guide www.polaroid.com · Rotating the Displayed Picture The currently displayed picture can be rotated for a better review angle on the LCD screen.

1. Set the camera to 2. Press the 3. Press the 4. Press the PLAYBACK mode.

button. or button to select (ROTATE). button. 5. Press the or button to select "Rotate" to rotate the image and select "Save" to save the rotated image. 6. Select " " to return without rotating. Rotate Rotate Rotate Save Select OK Select OK NOTE: · The rotated image will be saved and the original file will be deleted. Polaroid i737 Digital Camera User Guide www.polaroid.

com 67 · Setting the Photo Edit 1. Set the camera to 2. Press the button. PLAYBACK mode. Photo Edit 3. Press the or button to select (Photo Edit). 4. Press the button. 5. Press the or button to select the desired setting.

6. Press the button. Select OK Photo Edit B&W Sepia Negative Select OK Option Dynamic Lighting Red Eye Removal B&W Sepia Negative Mosaic Red Green Blue Description Enhance the color and contrast automatically Remove subject's red eyes from the images Convert image to black & white Recorded image will be stored in a sepia tone Opposite what was in the original image Add mosaic tiles to the images The images becomes reddish The images becomes greenish The images becomes bluish NOTE: · The edited image will be saved as a new file and the original file will be replaced by the new one. 68 Polaroid i737 Digital Camera User Guide www.polaroid.

com · Changing the Image Size Resizing a large size image to a smaller one helps to share with families and friends. Resize 1. Set the camera to PLAYBACK mode. 2. Press the 3.

Press the (RESIZE). 4. Press the button. or button to select Select OK button. 5M 3M 1M VGA Resize 5. Press the or button to select the desired setting. 6. Press the button. NOTE: · The resized image will be saved as a new file name. · Only a large size image can be resized to a smaller one.

Select OK Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i737 Digital Camera User Guide www.polaroid.com 69 · Reviewing Pictures and Video Clip Files in Thumbnail You can view up to 9 picture and video clip files at a time on the LCD screen by using the thumbnail function. 1. Set the camera to the Playback mode. 2.

Press the button and up to 9 thumbnail files appear on the LCD screen. 3. Press the , a thumbnail file. 4. Press the or full screen.

, or button to select Full screen button to view the file in · Running a Slide Show on the LCD screen The slide show function lets you view all the pictures and video clip files stored in the current memory in sequence on the LCD screen. 1. Set the camera to the 2. Press the 3. Press the SHOW".

4. Press the button. button. or button to select "SLIDE Select OK Playback mode. Slide Show 70 Polaroid i737 Digital Camera User Guide www.polaroid.com Setting Slide Show Interval Time 5. ICON is the current selection. 6. Press the or button to select the interval period for each file to display.

Setting Slide Show Effect 7. Press the 8. Press the display. or button to select ICON. Select Slide Show 3sec Yes Start OK to select the animation effect effect for each file to Setting Repeat On/Off 9.

[You're reading an excerpt. Click here to read official POLAROID](#)





[I737 user guide](#)

<http://yourpdfguides.com/dref/442522>

Press the button to select 10. Press the or ICON. to select the desired setting. Running a Slide Show 11. Press the button to start a slide show. 12. Pressing the button pauses the slide show. 13. Pressing the stops the slide show. The slide show will keep running as long as there is power supply. NOTE: This function is not available for the video clips and voice recording. Polaroid i737 Digital Camera User Guide www.polaroid.com 71 · Playing a Video Clip on LCD Screen 1. Set the camera to 2.

Press the 3. Press the 4. Press the 5. Press the and Playback mode. buttons to select the desired video clip. button to start playing the video clip. button again to pause. or button to stop the video clip. 00:01:30 IN PLAY 00:01:30 :Play 2008/01/01 18:59 WT · Playing Audio Clips 1. Set the camera to the Playback mode.

2. Press the 3. Press the 4. Press the 5. Press the and buttons to select the desired audio clip. button to start playing the audio clip. button again to pause. or button to stop playing. 7/150 IN PLAY 00:00:13 :Play 2008/01/01 18:59 WT 7 Polaroid i737 Digital Camera User Guide www.polaroid.com · Playing a Voice Memo 1. Set the camera to the Playback mode. 2. Press the and buttons to select the desired image that has the voice memo recorded. 3.

Press the 4. Press the 5. Press the button to start playing the voice memo. button again to pause. or button to stop the video clip. 5/150 7M PLAY 00:00:13 IN :Play +2.0EV F2.8 1/30 2008/01/01 18:59 WT Polaroid i737 Digital Camera User Guide www.polaroid.com 73 · Protecting/Unprotecting Pictures, Video and Audio Clips 1. Set the camera to the Playback mode. 2. Press 3. Press the 4. Press the 5.

Press the 6. Press the SINGLE LOCK ALL button. or button to select button. or button. Protect the selected picture, video or audio clip. Protect all of the pictures, video and audio clips in the current memory. "PROTECT". Single Lock all Unlock all Protect Select OK button to select the desired setting. UNLOCK ALL Remove protection from all protected pictures, video and audio clips in the current memory. Protect Single Picture, Video or Audio Clip 5. Press the or button to select the picture, video or audio clip you want to protect. 6. Press the button. Protect? 5/150 7M IN 7. Press the or and protect it . button to select another one Lock 2008/01/01 18:59 74 Polaroid i737 Digital Camera User Guide www.polaroid.com Protect All pictures, Video and Audio Clips 5. Press the 6. Press the button.

button. 7M 5/150 IN Lock all? Yes 2008/01/0118:59 Remove Protection from All Pictures, Video and Audio Clips 5. Press the 6. Press the button. button. 5/150 7M IN Unlock all? Yes 2008/01/0118:59 NOTE: · The icon appears on the LCD screen when you review the protected files. · Protected files cannot be deleted. Remove protection before deleting. · Formatting the internal memory or a SD card deletes all files, including the protected files. Polaroid i737 Digital Camera User Guide www.

polaroid.com 75 · Deleting Pictures, Video and Audio Clips 1. Set the camera to the Playback mode. Delete 2. Press the 3. Press the 4. Press the or button. button to select and button. Delete (DELETE). Select OK button to select the desired setting.

5. Press the Deleting a Single Picture, Video or Audio Clip 6. Press the or button to select the picture. video or audio clip you want to delete. 7. Press the button. button to delete a single file. Single All Select OK NOTE: You can also press the 5/150 Deleting All Pictures, Video and Audio Clips 6. Press the SINGLE ALL button. 7M IN Delete? Yes Delete a selected unprotected option.

Delete all the unprotected files in the current memory. 2008/01/0118:59 NOTE: · Protected files cannot be deleted. Remove protection before deleting. · All deleted pictures and video clips cannot be recovered. 76 Polaroid i737 Digital Camera User Guide www.polaroid.com · Viewing Pictures and Video Clips on a TV To set the video output system: The video output signal (NTSC or PAL) can be switched to accommodate different signal systems. For example, NTSC for U.S.A.

, Canada, Taiwan, Japan, etc. and PAL for Europe, Asia (excluding Taiwan), etc. You can change the video output system according to the following steps: Setup Menu 2/3 Series NTSC Computer 1. Access the setup menu. 2. Press the Out). 3. Press the or or button to select button. button to select the (TV File No. TV Out USB Start-up Image Format Select No EXIT 4.

Press the or desired setting. 5. Press the 6. Press the button. Setup Menu File No. TV Out USB Start-up Image 2/3 NTSC PAL button to exit the menu. Format Select OK Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com.

Polaroid i737 Digital Camera User Guide www.polaroid.com 77 7 Print Settings · About PictBridge PictBridge is a new industry standard that allows you to print images directly from a PictBridge enable digital still camera to a PictBridge compatible printer without using a photo editing software or a computer. Printing Procedures 1. Preparing the camera and the printer. Camera Printer Be sure battery level is full before printing. Refer to the user guide that comes with your printer and make preparations (paper, ink cassette, cartridge, etc.) as required. Turn on the camera and the printer. 2.

Selecting PictBridge mode Access the setup menu to enable the USB port. Refer to page 79 for details. 3. Connecting the camera to the printer Refer to "Camera / Printer Connection" on page 80 for details. 4. Select print settings Use the camera's function and navigation buttons to select the print settings. Refer to page 81 for details. 5. Printing Press the button to start printing. 78 Polaroid i737 Digital Camera User Guide www.

polaroid.com Cancelling Printing Press the button to cancel printing the print job. The printer will stop printing and eject the paper. Printing Errors If for some reason an error occurs during or before printing, press button to exit and reconfigure printing settings. CANCELLING? OPERATING ERROR NOTE: · Please refer to the printer's user guide for the solutions.

Printing may resume once the problem is solved. Selecting PictBridge Mode 1. Turn on the camera. 2. Access the setup menu. 3. Press the "USB". 4. Press the button. or button to select Setup Menu File No. TV Out USB Start-up. Image Format Select 2/3 Computer Printer OK 5. Press the or button to select "PRINTER". 6. Press the button to confirm your choice and press the to exit.

Polaroid i737 Digital Camera User Guide www.polaroid.com 79 Camera / Printer Connection Connecting with the USB Cable. USB port To Printer 1. Plug the labelled end of the USB cable into the socket marked on your printer.



[You're reading an excerpt. Click here to read official POLAROID i737 user guide](http://yourpdfguides.com/dref/442522)  
<http://yourpdfguides.com/dref/442522>

Location of USB socket will vary from printer to printer. 2. Plug the other end of the USB cable into the USB port on your camera. Pictbridge Menu 1/2 Print Image CONNECTING..

.... Standard Single Auto Auto Auto Quality Layout Paper Size Select SELECT NOTE: · "CONNECTING" displays on the LCD screen, indicating a proper connection to the printer.

· Do not connect the USB cable with the camera and printer until Printer mode is enabled. 80 Polaroid i737 Digital Camera User Guide www.polaroid.com Selecting Print images 1. Access the PictBridge menu.

2. Press the or button to select the desired setting. 3. Press the button. The following options are available. Setup Menu Print Image Quality Layout Paper Size Select 1/2 SINGLE ALL OK SINGLE Print the selected image in the camera's internal memory or a memory card according to specified settings. Print all images in the camera's internal memory or a memory card according to the specified settings. ALL NOTE: · Print settings are configured for images only. Make sure there are no video clips or other file besides images in the memory before printing, · Not all printers will support all these print options. Please refer to the printer user guide for options available.

Polaroid i737 Digital Camera User Guide www.polaroid.com 81 If you choose single image, press the image, and press the or or button to select a desired button to set the number of copies. 5/150 7M IN PictBridge Menu 5/150 7M 5/150 Press 30 Press PictBridge Menu Setup IN PictBridge Menu Setup 2008/01/01 18:59 Select OK 2008/01/01 18:59 NOTE: The value for number of copies is : 1 to 30. Selecting Print Quality 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button.

The following quality settings are available: AUTO, FINE, NORMAL, DRAFT AUTO Pictbridge Menu Print Image Quality Layout Paper Size Select OK 1/2 Auto Fine Normal Draft Print settings differ according to the printer model. 8 Polaroid i737 Digital Camera User Guide www.polaroid.com Selecting Print Layout 1. Access the PictBridge menu.

2. Press the or button to select the desired setting. 3. Press the button. The following layout settings are available: AUTO, 1,2,3,4.

.250, FULL Pictbridge Menu Print Image Quality Layout Paper Size Select 1/2 Auto Full 1 2 4 OK AUTO Print settings differ according to the printer model. Full Print a full-size picture on the selected paper. 1,2...250 Specify the number of printed images on a page. Selecting Paper Size 1. Access the PictBridge menu.

2. Press the or button to select the desired setting. 3. Press the button. The following paper size are available: AUTO, Postcard, L, 2L, Card Size, 100X150mm, 4"X6", 8"X10", Letter, 11"X17", A0~A9, B0~B9, Roll(L), Roll(2L), Roll (4"), Roll (A4) AUTO Print Image Quality Layout Paper Size Select Pictbridge Menu 1/2 Auto Postcard L 2L 4" x 6" OK Print settings differ according to the printer model. Polaroid i737 Digital Camera User Guide www.polaroid.com 83 Selecting Paper Type 1. Access the PictBridge menu. 2.

Press the or button to select the desired setting. 3. Press the button. The following paper type are available: AUTO, PHOTO, PLAIN, F PHOTO AUTO Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Plain Photo Fast Photo Select OK Print settings differ according to the printer model. Setting the Date Stamp On / Off 1.

Access the PictBridge menu. 2. Press the or button to select the desired setting. 3. Press the button.

AUTO ON OFF Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Off On Select OK Print settings differ according to the printer model. Add the date stamp to the printed image. Print without the date stamp. Pictbridge Menu Paper Type Date File No Reset 2/2 Auto Off On Setting the File Name On / Off 1.

Access the PictBridge menu. 2. Press the or button to select the desired setting. 3 Press the button. AUTO ON OFF 84 Select OK Print settings differ according to the printer model. Add the file name to the printed image.

Print without the file name. Polaroid i737 Digital Camera User Guide www.polaroid.com · Resetting to Default Settings NOTE: Choosing the "RESET" setting in PictBridge menu returns all print settings to the default value. More details, refer to "Resetting to Default Setting" on page 30. Selecting Print format 1. Access the PictBridge menu. 2. Press the or button to select the desired setting. 3.

Press the button. STANDARD INDEX DPOF Pictbridge Menu Print Image Quality Layout Paper Size Select 1/2 Standard Index Dpof OK Print settings differ according to the printer model. Print pictures as a thumbnail image. Print settings by DPOF format. Need help with your digital camera? Call our customer service help number.

Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i737 Digital Camera User Guide www.polaroid.com 85 · About DPOF DPOF stands for "Digital Print Order Format", which is a format for recording on a memory card or other medium which digital camera images should be printed and how many copies of the image should be printed. Then you can print on a DPOF-compatible printer or at a professional print service from the memory card in accordance with the file name and number of copies settings recorded on the card. With this camera, you should always select images by viewing them on the LCD screen. Do not specify images by file name without viewing the file contents. IMPORTANT! DPOF print settings can be configured for images on a memory card only, not for images in the camera's built-in memory. 86 Polaroid i737 Digital Camera User Guide www.polaroid.com Setting the DPOF: 1. Insert an SD card into the camera. 2.

Turn on the camera. 3. Set the camera to the Playback mode. 4. Press the button. 5. Press the or button to select DPOF. 6. Press the or button to select the desired setting. DPOF Select OK DPOF Single All Reset Select OK SINGLE ALL RESET The selected picture in a memory card will be printed out up to 30 copies.

All pictures in a memory card will be printed out up to 30 copies for each picture. Returns to the normal playback mode. button. or button to select the picture you SCN 6. Press the 7.

Press the 8. Press the 5/150 7M 01 want to print out. or button to select the number of print copies. Date stamp on Polaroid i737 Digital Camera User Guide www.polaroid.com 87 9. Press the 10. Press the button to set the Date Stamp on/off. button to complete the setting. 11. Power off the camera. 12. Remove the memory card from the camera and insert it into the printer's card slot (as illustrated). Location of the card slot may vary from printer to printer model. NOTE: Make sure you turn off the camera before inserting or removing a memory card.



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](#)



13. Press the Print button on the printer to start printing. 88 Polaroid i737 Digital Camera User Guide www.polaroid.com 8 Using the SD (Secure Digital) Card · Using the SD Card Your camera comes with built-in flash memory for storing pictures and video clips. You can expand the memory using a Polaroid SD card (not included - up to 2GB). The camera senses whether a memory card is inserted, and automatically saves pictures and video clips accordingly. Note that you cannot save pictures or video clips to the built-in flash memory while a memory card is installed in the camera. See pages 107 to 110 for storage capacities. Memory card precautions: 1.

Use only a SD memory card with this camera. 2. Electrostatic charge, electrical noise, and other phenomena can cause data corruption or even loss. Always make sure that you always back up important data on other media (MO disc, computer hard drive, etc.).

3. If a memory card starts to behave abnormally, you can restore normal operation by formatting it. However, we recommend that you always take along with more than one memory card whenever using the camera far away from your home or office. 4. We recommend that you format a memory card when using it for the first time, or whenever the card you are using seems to be the cause of abnormal pictures.

Remember to format a memory card if it was used in another digital camera or other devices. Polaroid i737 Digital Camera User Guide www.polaroid.com 89 **IMPORTANT!** · Make sure you turn off the camera before inserting or removing a memory card. · Be sure to orient the card correctly when inserting it. Never try to force a memory card into the slot when you feel resistance. · SD memory cards have a write protection switch that you can use to protect files from accidental deletion. However, you must remove the write protection whenever you want to record new files onto it, format it, or delete its files. · Files contained in the SD card recorded by other cameras may conflict with the i737 camera, and valuable data in your existing SD card may be distorted or lost when the card is inserted in the i737 camera. We strongly recommend the user to use a NEW or formatted Polaroid SD card (not included) for the i737 camera.

The manufacturer is not liable for losing or corrupting any valuable data or files in your SD card due to improper operation. Inserting a SD card 1. Turn off the camera. 2. Open the Battery/SD card door by pushing it outwards as illustrated. 3. Insert the SD card and ensure the card is inserted the correct position as illustrated. 4. Close the Battery/SD card door by pressing it downwards and then slide it back to lock. 1 3 a b b The icon will appear on the LCD screen when a SD card is inserted into the camera.

90 Polaroid i737 Digital Camera User Guide www.polaroid.com Removing the SD card To remove the SD card, turn off your camera and open the Battery/SD card door. Gently push the SD card inwards and then release it. The SD card will eject out of the SD card slot.

1 a b **IMPORTANT!** · Never insert any other object into the camera's SD card slot. Doing so creates the risk of damage to the camera and card. · Should water or any foreign objects ever get into the card slot, immediately turn off the camera, remove the battery or disconnect the AC adapter, and contact your dealer or the nearest service provider. · Never remove a card from the camera while the camera is powered on. Doing so can cause the picture or video recording operation to fail, and even damage the memory card.

Need help with your digital camera? Call our customer service help number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid i737 Digital Camera User Guide www.polaroid.com 91 · Formatting a SD card Formatting a memory card erases all data stored on it, including the protected ones. Removing the SD card during formatting may damage the card. 1. Insert an SD card into the camera.

Setup Menu 2/3 2. Turn on the camera. 3. Access the setup menu. 4. Press the 5. Press the or button. button to select the button to select (Format). File No. TV Out USB Start-up Image Format Select No Exit Series NTSC Computer Setup Menu File No.

TV Out USB Start-up Image Format 2/3 Yes No 6. Press the or desired option. 7. Press the button. Select OK **IMPORTANT!** · SD cards formatted in another camera, computer or other devices may not work properly.

It is recommended to format SD cards with your i737 camera. · Note that data deleted by formatting operation cannot be recovered. Make sure you do not have any useful data currently stored on a memory card before you format it. 9 Polaroid i737 Digital Camera User Guide www.polaroid.com · Copying Pictures, Video and Audio Clips to Memory Card This setting allows you to copy pictures, video and audio clips stored in the internal memory to a memory card. Copy to Card 1. Insert an SD card into the camera. 2. Turn on the camera. 3. Set the camera to the Playback mode. 4. Press the button. Select OK Copy to Card 5.

Press the or button to select ICON (Copy To Card). 6. Press the or button to select the desired setting. 7. Press the button. SINGLE ALL Copy Single File 8. Press the or button to select a picture, video or audio file. 9. Press the button. Copy All Files Single All Select OK Copy a selected image or video clip. Copy all the files in the current memory. 5/150 7M IN Copy? 8. Press the button. Yes 2008/01/01 18:59 **NOTE:** With a memory card inserted into the camera, the card memory has a higher priority over the internal memory. The selected picture or video clip can be only copied from internal memory to the memory card.

Polaroid i737 Digital Camera User Guide www.polaroid.com 93 9 Installing the Software onto a Computer · Installing the Software For Windows® Users: **PC IMPORTANT!** · Please backup all the necessary data before any driver and software installation. · The CD-ROM is tested and recommended to use under English Windows OS. · Please restart the computer after installing the software. · If you don't know how to perform the software installation, please read the "ReadMe" file in the CD first. **IMPORTANT!** (For Windows® 98SE) Windows® 98SE needs to install your digital camera Driver for Mass Storage function. After the installation, please restart the Windows before connecting the camera to the PC. **IMPORTANT!** (For Windows® Me, 2000, XP & Vista) Directly plug-in the camera to transfer and play the pictures and video clips. No need to install the driver. **IMPORTANT!** To experience higher performance in graphics and sound when you're watching video clips on your PC, it is recommended to install the DirectX ver. 9.0 or above. It can be downloaded from <http://www.microsoft.com/directx>.

com/directx. 94 Polaroid i737 Digital Camera User Guide www.polaroid.com 1. Before you begin, close all other software applications open on your computer.



[You're reading an excerpt. Click here to read official POLAROID I737 user guide](http://yourpdfguides.com/dref/442522)  
<http://yourpdfguides.com/dref/442522>