



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID IDF-0750. You'll find the answers to all your questions on the POLAROID IDF-0750 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID IDF-0750
User guide POLAROID IDF-0750
Operating instructions POLAROID IDF-0750
Instructions for use POLAROID IDF-0750
Instruction manual POLAROID IDF-0750

Digital Photo Picture Frame



Operation
Manual



20070309



[You're reading an excerpt. Click here to read official POLAROID IDF-0750 user guide](http://yourpdfguides.com/dref/1313046)
<http://yourpdfguides.com/dref/1313046>

Manual abstract:

on your purchase of a Polaroid 7" LCD Digital Photo Picture Frame. Please read carefully and follow all warnings and instructions in this User's Manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the Digital Photo Picture Frame. Also, remember to keep this User's Manual in a Important: Save the original box and all packing material for future shipping needs. **IMPORTANT PRODUCT SAFETY INSTRUCTIONS** Proper Handling of the Digital Photo Picture Frame Always handle the Digital Photo Picture Frame with care. Avoid touching the LCD screen as natural skin oils are often difficult to remove. Always position the Digital Photo Picture Frame on a stable and level surface.

Unstable surfaces can cause the Digital Photo Picture Frame to topple and fall, resulting in possible damage or injury. Avoid exposing the Digital Photo Picture Frame to direct sunlight or high temperatures, which can damage or shorten its useful life. Do not place the unit near heat sources such as radiators, heat registers, or other appliances that generate heat.

Orient the Digital Picture Frame away from direct sunlight to reduce glare. Overloading wall outlets, circuits, or extension cords can result in overheating, fire, or electric shock. Use only grounded or polarized outlets. Power Cord Protection Minimize wear on the power supply cord. The power supply cord should be routed away from foot traffic and contact with other objects.

Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged. Ventilation Slots and openings on the Digital Photo Picture Frame are provided for ventilation purposes.

To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. Keep the Digital Photo Picture Frame a minimum of four (4) inches away from any wall to assure sufficient airflow and ventilation. Increased temperatures may cause fire or device failure. To assure proper ventilation, do not block the openings by placing the Digital Photo Picture Frame on a bed, sofa, rug or other similar surface. Do not place it in a built-in installation, such as a bookcase or enclosed rack, unless proper ventilation is provided. Other Notices and Precautions Caution: Never remove the plastic casing. There are no user serviceable parts inside. The Digital Photo Picture Frame contains high voltage parts. You may be seriously injured if you touch them. Do not attempt repairs yourself.

The warranty does not cover repairs or attempted repairs by anyone not authorized by Authorize Dealer. Refer all servicing and repairs to qualified service personnel. If the Frame begins to emit smoke, an abnormal noise, or a strange odor, immediately turn it off and unplug the power cord. Contact the Authorize Dealer Service Center. If the Digital Photo Picture Frame will not be used for an extended period of time, unplug the power cord. Cleaning the Digital Picture Frame

· MAKE SURE THE DIGITAL PHOTO PICTURE FRAME IS TURNED OFF · NEVER SPRAY OR POUR LIQUID DIRECTLY ONTO THE SCREEN OR PLASTIC CASING To Clean the Screen: 1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles. 2. If it still is not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner on a clean, soft, lint-free cloth to clean the screen.

To Clean the Plastic Casing: 1. Use a soft, dry cloth. 2.

3. Or press the EXIT button to back to the "Select Card" page. 8.

9. Press the EXIT button to exit. 9. Press the EXIT button to zoom out the picture to original size. 10. Description and Function of Operation Every picture will be displayed one by one in turn in slide show mode, most four pictures on screen one time Display images in their original aspect ratio Optimize the picture to fill the whole space Select style of transition Slide Show Speed Select speed of slide show Slide Show Shuffle Start Slide Show Set Favorite Reset Settings Picture display order is random in slide show mode Unit will go into slide show mode Set favorite pictures as Slide Show Restore settings to default values Language Multiple languages Auto Slide Set The Slide Show will start automatically after the selected time.

Note: If a card is inserted into the Digital Picture Frame, selecting "Start Slide Show" will run a Slide Show of images contained in the memory card. If you select some favorite pictures through "Set Favorite" option, the Slide Show will display your favorite pictures. Control Buttons Functions OSD Functions Note: To enter the OSD, hold the EXIT button down for one second. To exit, simply press the EXIT button. Button << / II >> EXIT Command Up Select Down Exit OSD Menu Viewing Pictures Individually Button << / II >> EXIT Command Previous Picture Zoom in the Select Picture Next Picture Press once to zoom out the picture to original size or hold down for one second to enter OSD Menu Select Mode Page / Select Card Page Button << / II >> EXIT Command Left Select Right Back to "Select Card" Page Demo Slide Show Some demo pictures have been loaded into the digital picture frame.

These pictures can be viewed without inserting any memory cards. Power on the digital picture frame, wait for a while, the demo slide show will run automatically. Advanced Operations: USB Connection to a Digital Camera Using a USB cable (not included) and the USB port on the side of your Digital Photo Picture Frame, you have the ability to play stored images from the memory card or flash memory of your digital camera. This is especially helpful when using a digital camera that only uses flash memory. 1. Connect the AC adapter to the Digital Photo Picture Frame and slide the Power Switch on. 2. Once the Digital Photo Picture Frame has recognized your digital camera, you will be able to view all of the pictures on the memory card in the camera. If the camera doesn't have a memory card installed or doesn't use a memory card, you will view the camera's internal flash memory. Changing Picture Frames Additional frames may not be included.

Changing picture frames is easy as 1-2-3: 1. Locate the latch on the side of the back cover. Press it gently to release the back cover from the frame. 2. Lift the back cover and gently pull it from the two holding slots on the other side of the frame.

3. To reattach a new frame, simply hold the back cover at a slight angle, then insert the two wedges on the other side of the back cover into the matching holding slots of the frame. Why will it not play all images? The Digital Photo Picture Frame may not read all images. What should I do? Second, ensure that the memory card is inserted all the way into the correct slot.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313046)

[IDF-0750 user guide](http://yourpdfguides.com/dref/1313046)

<http://yourpdfguides.com/dref/1313046>

Third, press the EXIT button until you reach the "Select Card" page.

If the memory card is properly inserted into the slot, that memory card icon will be highlighted. Note: Some digital cameras save images into non-standard formats. Please refer to your camera's operating manual for specifics. Q: Why do some pictures load faster than others? A: Higher resolution pictures load slower. Using a lower resolution when taking pictures will speed up loading time. Technical Specifications Product: Resolution: Input Formats: 7" LCD Screen Digital Photo Picture Frame 480 X 234 pixels Secure Digital™, Multi Media Card™, Compact Flash™, Memory Stick™, Memory Stick PRO™, Memory Stick Duo™, Memory Stick PRO Duo™ "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA. For service, support and warranty information, visit www.polaroid.com.



[You're reading an excerpt. Click here to read official POLAROID IDF-0750 user guide](http://www.polaroid.com)
<http://yourpdfguides.com/dref/1313046>