



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID IDF-1020. You'll find the answers to all your questions on the POLAROID IDF-1020 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID IDF-1020
User guide POLAROID IDF-1020
Operating instructions POLAROID IDF-1020
Instructions for use POLAROID IDF-1020
Instruction manual POLAROID IDF-1020

Digital Photo Picture Frame



Operation Manual



20070221



[You're reading an excerpt. Click here to read official POLAROID IDF-1020 user guide](http://yourpdfguides.com/dref/1222037)
<http://yourpdfguides.com/dref/1222037>

Manual abstract:

Also, remember to keep this User's Manual in a convenient location for future reference. Important: Save the original box and all packing material for future shipping needs. Installing a flash media card 1. Find the slot that fits your flash media card. 2. Insert the card in the correct slot. 3. To remove the card, simply push it in slightly until it springs back out. Remove. Press & Hold Function: When you press and hold a button for 3 seconds or more it activates an additional function.

Play/pause (when viewing photos) Press Play/pause Press & Hold Enters "Menu" from any mode. @@@@2. Remove old battery and dispose of correctly. 3. Insert new battery taking note of correct polarity (+/-).

4. Replace cover. Caution: 1. Only use a 3V CR2025 battery. 2.

Dispose of used batteries according to local ordinance regulations. @@SETUP button Press to open menu for changing settings. CARD SELECTION button Press to choose a different memory card. MUSIC button Press to go to and display music files. PHOTO button Press to go to and display photo files.

@@@@@@@2. @@3. Turn the power switch to "ON". As a default the first file of the card will be displayed first. @@Press the "MUSIC" key to enter the music database.

Use the arrow keys to select a music file. 2. Press the SLIDESHOW key. 3. @@4. Turn the power switch to "ON". As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type. WEEE: This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health.

Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of product, please go to www.polaroid.com and click on "Company" or call the customer service number for your country listed in the instruction manual.

@@.



[You're reading an excerpt. Click here to read official POLAROID IDF-1020 user guide](http://yourpdfguides.com/dref/1222037)

<http://yourpdfguides.com/dref/1222037>