




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID MGM-03510K. You'll find the answers to all your questions on the POLAROID MGM-03510K in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID MGM-03510K
User guide POLAROID MGM-03510K
Operating instructions POLAROID MGM-03510K
Instructions for use POLAROID MGM-03510K
Instruction manual POLAROID MGM-03510K

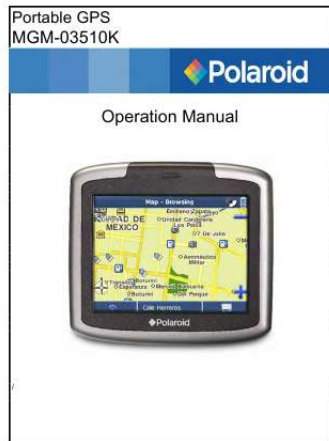

20070413



[You're reading an excerpt. Click here to read official POLAROID MGM-03510K user guide](http://yourpdfguides.com/dref/1312999)
<http://yourpdfguides.com/dref/1312999>

Manual abstract:

GPS WARNING · Failure to avoid the following potentially hazardous situations may result in injury or property damage. · The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving. · Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This product should not be used to determine ground proximity for aircraft navigation. General ····· Keep away from extremely hot, cold or humid conditions. Do not allow the device to get wet. Avoid shocks or vibrations. Do not open your device.

Any attempts to open this device will void the warranty. Wipe the touch screen only with a lint-free cloth, slightly dampened, while the device is switched off. Do not place objects on top of the device. Working Conditions · Do not charge the device in extremely hot or cold conditions. 2 ····· If the red LED is flashing, please recharge the device immediately.

Please use the car charger when possible during in-car use. Please only use the supplied USB cable. Please do not use other chargers or adaptors, as these may damage your device. Only use the supplied MMCX equipment to connect to an external antenna. Do not operate this device in extremely hot or cold conditions.

Design Information ··· Do not remove the SD/MMC card while using the photo viewer or music functions. If you need to format the SD/MMC card, please specify the FAT file system. Please only use images of an acceptable format with the photo viewer. During charging, the LED will be orange until charging is complete, at which time it will change to green. If the charger is removed and connected again, the LED will remain orange for approximately 30 minutes before changing to green. The music player supports mp3, wav and wma formats. ····· The music player supports mp3, wav and wma formats. Do not operate this device while you are driving. Before first use, please charge this device for at least 8 hours. For the best possible initial GPS fix, please be outdoors, in an open space, with a clear sky.

Do not store this device in extremely hot or cold conditions. Before first use, please make sure that the hardware reset switch is in the correct position. Leave in this position from then on. To switch the device on, press the power button for 3 seconds. To switch off, hold the power button for 3 seconds. Do not use this device in damp, wet or rainy conditions. The navigation information offered by this device is for reference only. We cannot guarantee that the information on this device will always be 100% accurate, so you should watch the road for indications or dangers in the same way as usual. Please use common sense and drive carefully. 3 Contents Contents: Important safety instructions.

.....

.....

.....

.....

. 2 Contents

.....

.....

.....

.....

.....

.....

.....

.....

.. 4 Features ...

.....

.....

.....

.....

.....

.....

.....

.....

... 7 About the GPS

.....

.....

.....

.....

.....

.....

.....

.....

.....7 Package contents.....

.....

.....

.....

.....

.....

.....

.....

.....

..7 Overview ...

.....

.....

.....

.....

.....

.....

.....

.....

.. 8 Front ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

8 Back.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...8 Top.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

9 Bottom.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
9 Left and Right Sides

.....
.....

.....
.....
.....
.....

.....
..9 Section One: Initial Setup...

.....
.....

.....
.....

... 10 Power Up..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....10 Screen Calibration...

.....
.....
.....

.....
.....
.....
.....

.....10 Set the Time/Date.

.....
.....
.....

.....
.....
.....
.....

.....
..10 Inserting an SD/MMC Card ...

.....
.....

.....
.....

.....
.....

..11 Connecting to a Computer

.....
.....
.....

..... 12 Establishing GPS-PC connection

.....
.....
.....

.12 Charging the GPS

.....
.....

.....
.....
.....

.....
.....
.....

13 Battery Indicators

.....
.....
.....

.....
.....
.....

...13 LED indicators

.....
.....
.....

.....
.....
.....

.13 Using the AC Adaptor

.....
.....
.....

.....
.....
.....

.....13 Car Installation ..

.....
.....
.....

.....
.....
.....

. 14 Using the Suction Cup

.....
.....
.....

.14 Unit Basics....

.....
.....
.....

. 18 Using the Touch Screen ...

.....
.....
.....

18 Main menu screen

.....
.....
.....

.18 Navigation....

.....
.....
.....

.....20 Accessing the Navigation Function ..

.....
.....
.....

....20 Music Player

.....
.....
.....
.....
.....

....21 Accessing the Music Player .

.....
.....
.....
.....
.....

.21 Music Player Screen Definitions

.....
.....
.....

.22 Using the Music Player....

.....
.....
.....
.....
.....

.....23 Playing music...

.....
.....
.....

.....
.....
.....

.....
.....

.23 Adjusting the volume....

.....
.....
.....
.....

....23 Changing the order of tracks.

.....
.....
.....
.....
.....

23 Repeating tracks

.....
.....
.....
.....
.....
.....

....23 Creating a playlist

.....
.....

.....
.....
.....
.....
.....

.....24 Using the Photo Viewer ..

.....
.....
.....

.....
.....
.....
.....

...25 4 Viewing photos

.....
.....
.....

.....
.....
.....
.....

.....26 Slideshows.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...27 Settings

.....
.....
.....
.....

.....
.....
.....

..... 28 Accessing the Setup Screen ..

.....
.....
.....
.....

....28 Setting the Time/Date .

.....
.....
.....

.....
.....
.....
.....

.....
...29 Adjusting Volume ..

.....
.....

.....
.....
.....

.....
.....

...30 Screen options..

.....
.....
.....
.....

.....
.....
.....

.....30 Choosing your on-screen language..

.....
.....
.....
.....

...31 System Information.....

.....
.....
.....
.....
.....
.....
.....

.....31 Resetting the GPS

.....
.....
.....

.....
.....
.....

... 32 Performing a Soft Reset

.....
.....
.....
.....

.....
.....

..32 Performing a Hard Reset ...

.....
.....
.....
.....

.....

32 Troubleshooting

.....
.....

.....
.....
.....
.....

. 33 Section Two: Navigation.....

.....
.....
.....

..... 34 Section Two: Navigation.

.....
.....
.....

.....
.....

.. 35 Icons..

.....

.....
.....
.....
.....

.....
.....
.....
.....

...35 Introduction ..

.....
.....

.....
.....
.....
.....

. 36 Key features....

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....36 Getting started.....

.....
.....
.....
.....

.....
.....

.... 37 Choosing a language.

.....

.....
.....
.....
.....

.....
.....
...37 Set time zone ..

.....
.....
.....
.....

.....
.....
.....
.....

37 Safety Warning Message.....

.....
.....
.....

.....
.....
.....

...37 GPS connection

.....
.....
.....
.....

.....
.....
.....
.....

38 Main elements.....

.....
.....
.....

.....
.....
.....

..... 39 Main menu

.....
.....
.....
.....

.....
.....
.....
.....

.39 Map

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....40 Tracking mode and browsing mode .

.....
.....
.....

.....40 Navigation screen .

.....
.....

.....
.....
.....
.....

.....
.....

.....41 Main features ..

.....
.....
.....
.....
.....

..... 43 Choosing and finding locations .

.....
.....

.....
.....
.....

.....43 Search for an address.....

.....
.....
.....
.....

.....
.....
.....

.43 Searching for and choosing POIs

.....
.....
.....

.....46 Choosing a location on the map .

.....
.....
.....
.....

.....49 Favorites .

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....*49 Navigating*.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....*52 Browse the map during navigation*.....

.....

.....

.....

.....

.....*53 Menu options* ..

.....

.....

.....

.....

.....

.....

.....

.....

.....*53 Planning a route* ..

.....

.....

.....

.....

.....

.....

.....

.....

.....*54 Settings*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....*57 General settings*.....

.....
.....
.....
.....

.....
.....
.....
.....

.57 Map settings.....

.....
.....
.....

.....
.....
.....
.....

..58 Route options...

.....
.....

.....
.....
.....
.....

.....
.....
.....

.61 Volume

.....
.....
.....
.....

.....
.....
.....
.....

62 5 Route recording

.....
.....

.....
.....
.....
.....

.....
.....

..62 Frequently asked questions...

.....

.....
.....

.... 63 Index .

.....

.....
.....

.....
.....
.....
.....
.....
..... 64 Copyright and license notes .
.....
.....
.....
.....
.....

66 6 Features About the GPS The GPS is not only a portable GPS navigation system which can be used in or out of the car, it is also a music player with a built-in speaker (can still be used with earphones if you prefer) and photo viewer. Package contents Please check that you have the following items.

Packaging should be saved for future use. GPS unit Car mount kit Car charger AC charger USB cable GPS quickstart guide GPS warranty Note: Accessories are subject to change without prior notice. 7 Overview Front 1 1. Power LED Back 1 1. Speaker 8 Top 1 1. Power Button Bottom 1 2 1.

Hardware reset switch 2. Soft reset button Left and Right Sides 1 2 3 1.

Headphone jack 2. Mini USB port/DC in 3. SD/MMC card slot 9 Section One: Initial Setup Power Up To switch the GPS on for the first time, slide the hardware reset switch left to the "ON" position. NOTE: After switching your device on for the first time, you should not use the hardware reset switch again unless you want to do a hardware reset. See "Resetting the Device" on page 34 for more information.

Instead, use the power button on the top of the device. Screen Calibration When you switch the device on for the first time, you will have to calibrate the screen. Follow the simple on-screen instructions on page 32. Set the Time/Date You may wish to set the time before you first use the device. For information on setting the time and date, see "Setting the Time/Date" on page 30.

For more information on other setup options, see "Settings" on page 29. 10 Inserting an SD/MMC Card Any music tracks or photos that you may transfer from your computer are stored on the SD/MMC card. To insert the SD/MMC card, make sure it is aligned correctly, and then push it into the SD/MMC slot on the right-hand side of the device until you hear an audible signal to say that it has been correctly inserted.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1312999)

[MGM-03510K user guide](http://yourpdfguides.com/dref/1312999)

<http://yourpdfguides.com/dref/1312999>

NOTE: Should you ever need to remove the SD After the application loads, the main Navigator menu will appear. For more information regarding the Navigator functions see Section Two starting on page 35. 20 Music Player This section tells you how to use the music player included on the GPS. Accessing the Music Player Switch the unit on and tap Music in the Main Menu screen. The music player screen will appear in the display. NOTE: Music must be loaded to the SD memory card from your computer. See "Connecting to a Computer" on page 12 for more information.

NOTE: The following file formats can be played on the Music Player: MP3, WMA, WAV. 21 Music Player Screen Definitions Minimize Information Exit 22 Using the Music Player Playing music To play or pause music, tap the Play/Pause button. To skip to the next track, tap the Skip forward button. To go to the beginning of the current track or skip back to the previous track, tap the Skip back button. Adjusting the volume To adjust the volume, press the Volume +/- buttons. Changing the order of tracks To choose between playing tracks in random or sequential order, tap the Shuffle button. The current order is indicated in the top right-hand side of the screen (Play mode). Repeating tracks To choose between repeating tracks or not, tap the Repeat button. The current mode is indicated in the top right-hand side of the screen. 23 Creating a playlist Tap the Browse button .

The following screen will now appear in the display NOTE: By default, all music tracks on SD/MMC cards are added to the playlist. To change which track is highlighted, tap the up/down arrow keys or tap the track on the touch screen. To remove ALL tracks from the play list, press the Remove all tracks button .

You will be asked to confirm this operation. To remove only the currently highlighted track, press the Remove track button.

To add tracks, press the Add track button, then navigate to the track(s) you would like to add. When you have finished editing the playlist, tap the OK button. For more information, tap the I button. To exit the Music Player, tap the x button. 24 Using the Photo Viewer Switch the unit on and tap Photo in the Main Menu screen.

The Photo Viewer screen will now appear in the display: NOTE: Unrecognized files or folders will be appear with question marks (?). 25 Viewing photos You can view either individual photos or slideshows on your GPS. If you cannot immediately see the photo thumbnails you are looking for, but see folders, tap the folders to access their contents. You can also tap Scroll up folders or photos. or Scroll down to search up or down the list of NOTE: To move up one level while browsing for photos, tap Once you tap on a thumbnail, you will see a screen similar to the following: Zoom in or out (you can also use the zoom in or out key) View photo at default rotation View photo at 90° (clockwise or counterclockwise) rotation View next or previous photo Exit screen 26 Slideshows From the Photo Viewer screen, press the Slideshow button to start a slideshow. To stop the slideshow, click anywhere on the screen. NOTE: Photos must be loaded to the SD memory card from your computer. See "Connecting to a Computer" on page 12 for more information. NOTE: The following file formats can be viewed on your device: BMP, GIF (Still images), JPEG, PNG. NOTE: If you are using the zoom function, you may not be able to view all of the images at the same time.

To see the missing parts of the image, tap on the photo and drag it any direction. Or, exit the zoom function to see the image in its entirety. NOTE: For more information, tap the information button. NOTE: To exit the photo viewer, tap the exit button. 27 Settings Accessing the Setup Screen To access the settings features on your device: Switch the unit on and tap Setup in the Main Menu screen. The Setup screen will now appear in the display. From this screen you can access: Audio Setting Adjust the volume. Screen Setting Calibrate touch screen, adjust brightness & idle time. Time/Date Set the time/date. Language Select the default language.

System Info View system information. 28 Setting the Time/Date Choose Time/Date from the Setup screen. Changing the Time/Date 1. 2. 3.

4. Tap Time/Date Tap the time or date field you wish to change. Tap the up/down arrows to adjust up/down. When you're finished with adjustments, tap OK. Changing the Time Zone: 1.

2. 3. 4. Tap Time Zone Tap on a region Tap on a city Tap OK 29 Adjusting Volume Choose Audio Setting from the Setup screen. Tap +/- to adjust volume. When you're finished, tap the OK button. Screen options Choose Screen Setting from the Setup screen. Tap +/- to adjust backlight. Tap the right/left arrows to adjust idle time (the amount of time the GPS will wait before going to sleep when not used). Press "Calibrate" to calibrate the screen, then follow the onscreen directions.

30 Choosing your on-screen language Choose Language from the Setup screen. Scroll up or down to find the language you wish to use. Tap the language you wish to use, then tap the OK button. System Information Choose System Info from the Setup screen. This screen gives you valuable information about your GPS. Tap the return button to exit this screen. 31 Resetting the GPS If your device ever stops responding to your commands, you may need to reset it. There are two reset options: a soft reset and a hard reset. Always try the soft reset first, as this simply restarts the device and clears the memory. Performing a Soft Reset Use a pen or similar object to press the soft reset button on bottom of GPS.

Performing a Hard Reset If a soft reset does not correct the problem, perform a hard reset. A hard reset will delete settings and reset the GPS. To perform a hard reset, move the hardware reset switch to the right and then back to the left. 32 Troubleshooting Problem Unit will not switch on Possible Reason Battery is dead Solution Make sure the battery is properly charged. See "Charging the GPS" on page 13 and 14 for more information.

Unfold the antenna and make sure it's parallel with the ground, i.e., in a horizontal position. Use an external antenna (not included). Use an external antenna (not included).

Format card using FAT file system. Perform a soft reset, or if necessary, a hard reset. See "Resetting the GPS" on page 34 for more information. Make sure all music is MP3, WMA or WAV format. Make sure the track plays correctly on your computer. Increase the volume. Bad reception The folding antenna is closed or in the wrong position Car windows are tinted, blocking GPS reception Signal is weak in this area Card has not yet been formatted correctly Unit is in need of a reset Bad reception Bad reception New memory card doesn't work Screen is froze, or unit is behaving strangely I cannot play music on the unit I cannot play music on the unit My music appears to be playing, but I can't hear it My music appears to be playing, but I can't hear it My music appears to be playing, but I can't hear it the unit Music may be the wrong format Music track(s) may be corrupt Volume is set too low Music track Make sure all music is MP3, WMA or WAV format.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1312999)

[MGM-03510K user guide](http://yourpdfguides.com/dref/1312999)

<http://yourpdfguides.com/dref/1312999>

Listen through the earphones or disconnect them to hear sound from the speakers. When earphones are plugged in, the speakers are automatically muted 33 I cannot see my photos I cannot see my photos The touch screen doesn't react correctly to my finger taps Images may be in the wrong format Image file(s) may be corrupt The touch screen may need to be recalibrated Makes sure your images are JPG or BMP format. Make sure the image can viewed correctly on your computer.

Recalibrate the screen. See "Screen Options" on page 30. 34 Section Two: Navigation Icons The following icons are used throughout the application: Icon Name Menu icon Back icon Navigation icon GPS icon Search icon Confirmation icon Cancel icon Function Open a menu containing various options. Go back to the previous screen. Start navigation. Availability/strength of GPS signal. Open a search screen. Apply settings. Select/deselect all. Cancel route calculation.

35 Introduction We hope that you enjoy using your new GPS Navigation system. This manual is designed to help you get the most out of your system. This navigation system leads you straight to your destination, whether you are traveling by car or on foot. You can navigate and plan your route with an easy-to-use and intuitive interface, plan your trip to suit your personal preferences and interests and find and save (Bookmark) interesting destinations before you begin your trip. Key features Accurate navigational guidance with spoken word commands anywhere Real pedestrian mode through parks and open spaces Trip planning Look-ahead search function Earth browsing zoom from satellite view to street level view Unique night mode for easy night viewing State of the art guidance engine 36 Getting started Please make sure that the battery in your device is fully charged.

@@@ @@@@ However, you must set the time zone. @@@@ @@@@ @@@@ @@@@ On the left-hand panel there are three large buttons. @@@@ You can rename, sort or delete them. @@@@ @@@@ @@@@ @@@@ To zoom in or out, press the + or - icons. @@@@ @@@@ The GPS position icon identifies your current 41 position.

The red arrow indicates the direction of your next turn. The upcoming turn or maneuver is always shown in the upper left corner together with the distance to it. When you approach a turn, there will be a voice command at the appropriate time. On the left side, additional information is displayed, such as current / estimated arrival time and the distance to your destination. For one-way streets, the allowed direction of travel is indicated by a red arrow. For more information about navigation see page 52. 42 Main features This chapter describes the functions of your Personal Navigation Device in detail. On the following pages you will learn how to - Find and choose locations (see page 43) - Navigate to your destination (see page 52) - Use the route planner (see page 54) - Configure the application (see page 57) Choosing and finding locations This section describes the different ways of finding and choosing locations. You can search for an address, browse Point Of Interest (POI) directories and city guides, choose locations on the map and choose one of your favorites such as your home and work addresses, your bookmarks and recently visited locations. Search for an address Use the address search function to find an address.

Just enter information about the desired destination, select an entry from the results list and then use the address found for different purposes, such as showing it on a map, planning a route or navigating to it. · In the main menu, press Destination Press Address 43 The Find Address window will be displayed: · Begin by tapping or touching the City text box. How to search Your Personal Navigation Device offers a convenient, interactive look-ahead search function to prevent misspelling. Only keys that lead to a search result can be pressed all others are locked! · Enter the first character. You will see that some keys on the keypad turn grey. You can only select keys that are not grey: 44 · OR · Enter the second character. Keep on entering characters until you have narrowed down the search to only one result. Press the Search icon (magnifying glass). Choose the appropriate entry from the list. Again, some keys will turn grey, depending on your choice.

A result list will be displayed. Switch between letter and number mode by pressing 123 or ABC. Switch between upper case and lower case by pressing ^. If at any point you want to go back and delete characters, press the backspace button <- on the screen. To add a space, press the space bar _ . If you need to enter an apostrophe (') use the space key instead. Search for the city · · · To select a city, press City. Search for the city as described above. Choose the appropriate town/city from the list. A result list will be displayed.

You will return to the Find Address screen, and the City field is populated with the name of the chosen town/city. Search for the street · · To select a street, press Street. Search for the street as described above. A result list will be displayed. 45 · Choose the appropriate street from the list. You will return to the Find Address screen, which now contains the data previously entered. You may also enter the number. Navigate to the address found Once you have narrowed down your search to a unique address, you can start navigation. Press the Menu icon to access further options: · · · To navigate to the location, press Navigate (see page 52) To use the location for planning a route, press Via (see page 54) To save the location as a bookmark, press Save. To show the location on the map, press On Map Searching for and choosing POIs The POI finder allows you to quickly find points of interest like gas stations and restaurants in a database of millions of POIs.

These places can be nearby to your current position (the 46 default) or at any other location. · In the main menu, press Destination. Press POI Search. The POI Search screen will be displayed: Note that the text in the white 'Where?' box is your current location. To search for a POI in another location, touch the 'Where?' button. Choosing a POI · · · Select the desired POI category Select a subcategory (if applicable) To return to the previous category, press the Back icon Select a POI by clicking on it A menu with subcategories will be shown A list of POIs will be shown · 47 A menu with a set of actions will be displayed: · · · To navigate to the location, press Navigate (see page 52) To use the location for planning a route, press Via (see page 54) To save the location as a bookmark, press Save.



[You're reading an excerpt. Click here to read official POLAROID
MGM-03510K user guide
http://yourpdfguides.com/dref/1312999](http://yourpdfguides.com/dref/1312999)

To show the location on the map, press On Map If detailed information is available about a particular POI, you can view it by pressing the Description icon To set a starting point other than your current location, press Where?. Enter a new location by one of the methods shown and POIs near that point will be displayed. Searching for a POI · To enter a search keyword, press the Search icon 48 · Enter the search keyword (at least three characters), and press the Confirmation icon Select a POI by clicking on it A list of POIs will be shown · A menu with a set of actions will be displayed as described above. Choosing a location on the map An easy way to choose a location is to select it on the map.

Browse your surroundings and choose any street or location to set it as your destination. · · · In the main menu, press Destination In the main menu, press Map Point the cursor at any place on the map. The name of the selected location/street will be shown in the info box Press the Menu icon · From the following menu you can choose to be guided to the address, use it for route planning, show it on the map, etc. (see page 52) Favorites You may use your frequently used or favorite destinations for guidance. You can choose among your bookmarks, recently visited locations, previously saved trips (see page 54) and presets (e. g., your home or place of work). · · In the main menu, press Destination In the main menu, press Favorites 49 The Favorites menu will be displayed on the screen: Bookmarks The bookmarks list contains the destinations you have saved as favorites (from the guides, by choosing them on a map, etc.). This means that you do not need to perform repeated searches for those destinations.

· Press Bookmarks The bookmark list will be displayed on the screen: Use the up and down arrows to scroll up and down in the list. 50 · · · · · Select an item by clicking on it To navigate to the location, press Navigate (see page 52) To use the location for planning a route, press Via (see page 54) To sort the list of location alphabetically, press Sort To show the location on the map, press On Map To delete the selected location, press Delete selected To edit the location, press Rename To delete all locations, press Delete all A menu with a set of actions will be displayed: All user information such as settings, bookmarks and recently visited locations are stored on the memory card and not on the device. Recent Pressing Recent opens a list of recently visited or looked-up destinations. · Press Recent The list of recent places will be displayed on the screen. Use the up and down arrows to scroll up and down in the list. · Select an item by clicking on it A menu with a set of actions will be displayed as described above. Trips · To access your previously saved trips, i.e., routes, press Trips (see page 54) Presets You can save your home and street addresses as presets for 51 quick access. · · · · · Press Presets Press My Home To navigate to the location, press Navigate (see page 52) To edit the location, press Rename To delete the location, press Delete selected To show the location on the map, press On Map To use the location for planning a route, press Via (see page 54) To delete all locations, press Delete all A menu with a set of actions will be displayed: If no home address has been set, you are prompted to set one.

You can choose it by searching for an address, through your current GPS position or by choosing a recently visited location. Proceed similarly with your work address. Navigating The powerful navigation capabilities of your Personal Navigation Device guide you along the shortest or quickest route from A to B with voice commands and in 3D. This section describes the navigation feature. See page 49 for information about choosing elements on the map. See page 43 for information about finding and choosing addresses, POIs and locations inside a guide. · Choose a location through Destination, and press Navigate in the respective menu Your route is calculated, and the navigation screen is called 52 up (see page 41) Browse the map during navigation You can browse the map even while navigating. However, navigation will not be interrupted you will be still guided through voice commands. Press the Back icon to switch to on-screen navigation. Menu options · To open a set of navigation options during navigation, press the Menu icon: Here you will find the following items: Alt. route With this option, you can choose to block the calculated route for a given distance (e.g., 0.5 mile) and force an alternate route. Simply tap on the icon which shows the desired distance to block.

Your route will be recalculated, and the previous route will be discarded for the given distance. List of waypoints Opens the list of the waypoints (turns) along your route. Save Save your present position as a bookmark. 53 Volume Alter the volume of the voice commands. Search You can redirect your route by choosing a point of interest (POI), e.

g., a gas station Settings Change the settings of your Personal Navigation Device as described on page 57. Planning a route This section describes the route planning feature. This feature allows you to plan your route in advance, choosing multiple stopovers along your journey. See page 49 for information about choosing elements on the map. See page 43 for information about finding and choosing addresses, POIs and locations inside a guide. · · Choose a location on the map or use the Destination function, and press VIA in the respective menu. The Destination List will be displayed: 54 The location will be added to the Destination List. · To add another stopover, press the + icon. The Choose stopover: screen is called up.

You may choose stopovers like your home or work addresses, a bookmark, a point of interest, a recent location, or you can search for an address or pinpoint a destination on the map. Once you have added stopovers (with the + icon) and returned to the Destination List, you have several options: 55 · · Use the + icon to choose additional stopovers. To change the order of the stopovers, select a stopover and then use the up and down arrows to move it up/down in the list. Use the Trash icon to delete a selected stopover. · Once you have chosen your route, you have several options. You can access these options by pressing the Menu icon (bottom right-hand corner of the screen). · · · To simulate the planned route, press Simulate To start guidance, press Start Navi. The display will switch to the navigation map To calculate the route, press Routing. The Route Summary will be displayed.



[You're reading an excerpt. Click here to read official POLAROID](#)

[MGM-03510K user guide](#)

<http://yourpdfguides.com/dref/1312999>

Tap on one of the items in the Route Summary to display the Waylist.

Tap again to show the map view. To save the route as a favorite trip, press Save as (see page 51) · 56 Settings You can configure your Personal Navigation Device to suit your needs. When it comes to navigating, you can, for example, choose to avoid or allow toll roads or ferries or select your mode of transportation, like a fast or slow car, a scooter or even your own feet. @ @ @ @ @ @ @ @ All available maps on the memory card will be listed. Choose the desired region by simply tapping on its name.

To toggle between 2D and 3D modes, press the corresponding icon To maintain the way ahead in an 'up' or 'North' position, press Track Up. To keep the map oriented to the north, press North Up. . . . 59 · To select which and how many icons will be shown on the map, press Info Layers: · Check the boxes of any category you want to have displayed on the map. Uncheck those that should be hidden. Note that this will NOT affect any searches that you perform. To apply your settings, press the Confirmation icon To return to the previous screen, press the arrow · · 60 Route options · Choose Route Options to change the route options The window with the route settings will be displayed: · To switch between the modes, just touch the icons. These will toggle so you can quickly see the activated settings. You can choose among the following options: mode of transportation (fast car, slow car, motorbike, pedestrian, etc.), fastest or shortest route, allow or avoid toll roads, highways, and ferries. You can also choose the distance unit (miles/kilometers). Once you have chosen your settings, press the Confirmation icon to return to the main menu. Mode of transportation Overview Fast Assumes fast driving on highways Slow Assumes slower driving on highways Bike Takes into account bike paths and restricts highways where bikes are prohibited Pedestrian Provides true pedestrian routing including access to one-way streets and pedestrian zones, where possible 61 Volume · To change the volume of voice commands, press Volume Route recording The route recording function enables you to record your routes. You may save your traces and import them in any kind of NMEA program. This allows you to document your trips. · To do so, tap the display during navigation and press Record.

To return to the navigation screen, press the Back icon. Your route will be stored until you press the button again. · 62 Frequently asked questions I can't find an address. Please make sure you have correctly spelled your entry. If you do not know how an address is spelled, simply enter the parts of the address about which you are certain e.g. "Brook" for Brooklyn in New York. Then browse the results list and look for the address. Also make sure that the city in which you are looking for an address is correct. Sometimes the official postal address differs from the address you are looking for.

In that case, search for a known address nearby and browse the map. I am experiencing problems getting GPS fix. If you have problems getting a satellite fix with GPS (you can see how many satellites are being received on the main menu at the bottom left), please make sure you are outside and the GPS antenna has good 'visibility' to the open sky. Where can I get technical support? In the US call, 1-866-289-5168. In Mexico, please contact 01-800-400-2443.

Where can I get software updates? www.polaroid.com 63 Index 2 2D/3D, 59 Ferries Avoid/allow, 61 G GPS, 38 A Address Set as destination, 43 Alternative route Enforce, 53 I Info box, 49 Info Layers, 60 B Block route, 53 Bookmarks Memory Card, 51 Set as destination, 50 Browsing mode, 41 L Look-ahead search, 44 M Main menu, 43 Favorites, 49 Settings, 57 Map, 40, 58, 59 Browsing mode, 41 Choose as destination, 49 Compass icon, 41 Zoom slider, 41 Map Options, 57, 58 Memory Card Save bookmarks, 51 Motorways Avoid/allow, 61 My Home Set as destination, 52 C Choose destination Recent locations, 51 Close application, 41 Compass Adjust orientation, 41 D Day mode, 59 Delete Stopover, 56 Destination Address, 43 Bookmarks, 50 Look-ahead search, 44 Map, 49 My Home, 52 POI, 47 Destination List Route planning, 54 N Navigate Command, 46, 48, 51 Navigation, 52 Navigation screen, 41 Night mode, 59 E Exit application, 41 O On Map Command, 46 F Favorites Main menu, 49 P Pedestrian, 61 POI 64 Redirect route, 54 Set as destination, 47 R Recent location Set as destination, 51 Route, 61 Route planning, 54 Choose stopover:., 55 Route Summary, 56 Simulate, 56 Waylist, 56 Pedestrians, 61 Route, 61 Toll roads, 61 Simulate Route, 56 Stopover Choose for route planning, 55 Delete, 56 Summary Route planning, 56 T Toll roads Avoid/allow, 61 S Satellite connection, 38 Save Command, 46, 48 Search POI, 54 Settings 2D/3D mode, 59 change volume, 62 Day/night mode, 59 Ferries, 61 Info Layers, 60 Main menu, 57 Map Options, 57, 58 Maps, 58, 59 Motorways, 61 V Via Command, 46, 48, 51, 52 Volume change, 62 W Waylist Route planning, 56 Z Zoom slider, 41 65 Copyright and license notes WEEE: This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately.

As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to www.polaroid.com and click on "Company" or call the customer service number for your country listed in the instruction manual. Copyright for this manual: © Nokia gate5 GmbH, 2007. All rights reserved. Portions of the software are copyright © 1996-2002 The FreeType Project (www.freetype.org). All rights reserved.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA. For service, support and warranty information, visit www.polaroid.com. 66 .



[You're reading an excerpt. Click here to read official POLAROID
MGM-03510K user guide](http://yourpdfguides.com/dref/1312999)

<http://yourpdfguides.com/dref/1312999>