




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID ONE 600 CLASSIC. You'll find the answers to all your questions on the POLAROID ONE 600 CLASSIC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual POLAROID ONE 600 CLASSIC  
User guide POLAROID ONE 600 CLASSIC  
Operating instructions POLAROID ONE 600 CLASSIC  
Instructions for use POLAROID ONE 600 CLASSIC  
Instruction manual POLAROID ONE 600 CLASSIC

**Polaroid** one600 classic

## 1 Opening and Closing the Camera

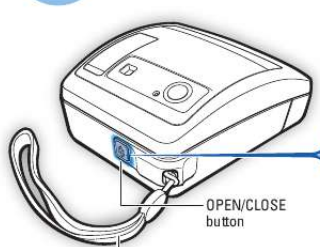



**To open the camera**



Hold camera as shown. Press the OPEN/CLOSE button. The camera opens automatically.


**To close the camera**




Hold camera as shown. Press and hold the OPEN/CLOSE button.

Press down on the camera as shown to close camera.

**To attach the handstrap**




Push small loop through strap hole.



Pull wide end of strap through small loop.

**DO NOT force the camera open or closed. Damage to the camera may occur.**



Polaroid One 600 | Classic Instructions Page 1 of 5



[You're reading an excerpt. Click here to read official POLAROID ONE 600 CLASSIC user guide](http://yourpdfguides.com/dref/3866467)  
<http://yourpdfguides.com/dref/3866467>

**Manual abstract:**

The camera opens automatically. To close the camera 2 1 23 OPEN/CLOSE button Handstrap To attach the handstrap Push small loop through strap hole. Pull wide end of strap through small loop. Hold camera as shown. Press and hold the OPEN/ CLOSE button Press down on the camera as shown to close camera. DO NOT force the camera open or closed. Damage to the camera may occur. Polaroid One 600 \ Classic Instructions Page 1 of 5 Loading and Unloading the Film 1 To load film 2 Press the film door release button to open the film door. 3 Hold film by the edges and insert the film pack as shown. Film cover Film door release button Use Polaroid film Close the film door. Film cover ejects automatically. The film counter shows 10. To unload empty film pack The film counter shows 0 when the film pack is empty. DO NOT touch the film cover. Hold film by the edges as shown. DO NOT remove the tab. Use this tab to remove empty film pack. 1 2 Tab The film pack contains a battery that powers the camera. Press the film door release button to open the film door. Pull the tab to remove the empty film pack. Polaroid One 600 \ Classic Instructions Page 2 of 5 Taking Pictures To take pictures 3 - 10 ft 3 ft+ Frame your subject in the viewfinder. Press the shutter button. The picture automatically ejects from the front of the camera. For indoor pictures, stand between 3 feet to 10 feet from the subject. The flash range is 10 feet. For outdoor pictures, stand at least 3 feet from your subject. @@@@To clean developer rollers dampen clean cloth with tap water. Open film door and thoroughly clean rollers. @@@@The warranty period is determined by the date of camera purchase. To verify the warranty period, keep the receipt as proof of purchase. @@This warranty does not apply to damage caused by accident, misuse or tampering with the camera, and a charge will be made for such repairs. This warranty excludes all consequential damages, except in jurisdictions not allowing such exclusions or limitations. Warranty may vary according to applicable local law. Caution This camera is battery operated. Closely supervise children when camera is operated by them or used in their presence. To avoid electrical shock, camera should not be exposed to or immersed in water or other fluids, disassembled or operated if dropped or damaged. .



[You're reading an excerpt. Click here to read official POLAROID ONE 600 CLASSIC user guide](http://yourpdfguides.com/dref/3866467)  
<http://yourpdfguides.com/dref/3866467>