



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID T1031. You'll find the answers to all your questions on the POLAROID T1031 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID T1031**  
**User guide POLAROID T1031**  
**Operating instructions POLAROID T1031**  
**Instructions for use POLAROID T1031**  
**Instruction manual POLAROID T1031**



10.0 Megapixel Digital Camera  
t1031

User's Manual



**Questions?  
Need Some Help?**

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID T1031 user guide](http://yourpdfguides.com/dref/1313130)

<http://yourpdfguides.com/dref/1313130>

**Manual abstract:**

*0 Megapixel Digital Camera t1031 User's Manual Questions? @@@@ @@@@.....*

.....  
.....  
.....

*.....19 · Charging the Battery ..*

.....  
.....  
.....

.....  
.....  
.....

*20 · Turning the Power On and Off . ....*

.....  
.....

.....  
.....  
.....

*.....21 · Initial Settings ..*

.....  
.....  
.....

.....  
.....  
.....

*.....21 Setting the Language .*

.....  
.....  
.....

.....  
.....  
.....

*.....21 Setting the Date & Time ..*

.....  
.....  
.....

.....  
.....  
.....

*.....21 · Modes .*

.....  
.....  
.....

.....  
.....  
.....



.....  
.....

.....  
.....  
.....

.....  
.....

*..32 · Setting the Zoom Control ...*

.....  
.....  
.....  
.....

.....

*..32 · Using Flash ...*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....33 · Using Macro ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....34 · Using the Function Menu .*

.....  
.....  
.....  
.....  
.....

*....35 My Mode .....*

.....  
.....  
.....  
.....  
.....

.....  
.....

*....35 Resolution .*

.....

.....  
.....  
.....

.....  
.....  
.....

*...36 Quality .....*

.....  
.....

.....  
.....  
.....

.....  
.....

*..36 EV Compensation .....*

.....  
.....  
.....

.....  
.....

*.....37 White Balance .....*

.....  
.....  
.....

.....  
.....  
.....

*..37 ISO .....*

.....  
.....

.....  
.....  
.....

.....  
.....

*.....38 Metering .....*

.....  
.....  
.....

.....

.....  
.....  
.....

.....  
.....  
*..38 Color Mode ...*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*....39 · Using the Record Menu .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..40 Record Menu .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..40 Setting the Scene Mode .....*

.....  
.....  
.....

.....  
.....  
.....

*.....41 Selecting the Smile Detection Mode ....*

.....  
.....  
.....  
.....

*....44 Selecting the Blink Detection Mode .....*

.....  
.....  
.....

*....44 Selecting the Photo Stitch Mode .*

.....  
.....

.....  
.....  
.....

.....44 Setting the Drive Mode ...

.....  
.....  
.....  
.....

.....  
.....  
.....

...45 Setting the AEB .....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....46 Setting the AF Area .

.....  
.....  
.....  
.....

.....  
.....  
.....

.....47 Setting the AF Lamp .

.....  
.....  
.....  
.....

.....  
.....  
.....

.....47 Setting Sharpness ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.48 Setting Saturation .....

.....  
.....  
.....

.....  
.....  
.....  
.....

...48 Setting Contrast .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....49 Setting the Digital Zoom ..

.....  
.....  
.....

.....  
.....  
.....  
.....

..49 Setting the Date Stamp .....

.....  
.....  
.....

.....  
.....  
.....

.....50 Setting Auto Review ...

.....  
.....  
.....  
.....

.....  
.....  
.....

.....51 · Recording Movies .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

...52 Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 3 Setting the Movie Size .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.52 YouTube Mode .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....53 · Recording Voices. ..

.....



.....  
.....  
.....  
.....  
.....

*...54 6 Playback ..*

.....  
.....  
.....  
.....  
.....

*55 · Viewing in Single Navigation .....*

.....  
.....  
.....  
.....  
.....

*..55 · Viewing thumbnails .....*

.....  
.....  
.....  
.....  
.....

*.....56 · Zooming images .....*

.....  
.....  
.....  
.....  
.....

*...57 · Playing Movies ..*

.....  
.....  
.....  
.....  
.....

*...57 To capture screenshot image from a movie clip .....*

.....  
.....

*58 · Playing Voice Recording .....*

.....  
.....  
.....  
.....

*...58 · Playing Voice Memo ..*

.....  
.....  
.....  
.....

*59 · Deleting an Image/Video/Audio .....*

.....  
.....  
.....  
.....

*..59 Using the Delete Button .....*

.....  
.....  
.....

*.....59 · Playback Menu ....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....60 Slideshow ....*

.....  
.....  
.....  
.....  
.....  
.....

*61 Delete .....*

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*62 Protect .....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*.....64 Red Eye Correction ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
*.....66 Voice Memo ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
*.....67 Photo Edit .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*..68 Z-Lighting .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....69 Rotate .....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....70 Trim .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....71 Resize ...

.....

.....  
.....  
.....

.....  
.....  
.....

.....72 Startup Image ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....73 DPOF .....

.....

.....  
.....  
.....

.....  
.....  
.....

.....73 *PictBridge* ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.75 7 *Using the Setup Menu* .....

.....  
.....  
.....

.....  
.....  
.....

....76 · *Setting Sounds* .....

.....  
.....  
.....

.....  
.....  
.....

...77 · *Setting Power Save* .....

.....  
.....  
.....

.....  
.....  
.....

.....78 · *Setting Date & Time* ...

.....  
.....  
.....

.....  
.....  
.....

.....78 · *Setting Language* .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*79 · Setting File Numbering .....*

.....  
.....  
.....  
.....

.....  
.....

*79 · Setting TV Out.....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....79 · Setting LCD Brightness ....*

.....  
.....  
.....

.....  
.....  
.....

*....80 · Setting Memory Kit .....*

.....  
.....  
.....

.....  
.....  
.....

*.....80 Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Reset All .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..80 8 Installing the Software onto a Computer ...*

.....  
.....  
.....

.....  
.....  
.....

*.....81 · Software Included with Your Camera .....*

.....  
.....  
.....

.....81 · Installing the Software .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

....82 · Uninstalling Polaroid t1031 Camera Driver .....

.....  
.....  
.....

.....82 8 Making Connections ...

.....  
.....  
.....  
.....  
.....  
.....

...81 · Connecting the Camera to a TV ..

.....  
.....  
.....  
.....  
.....

.....81 · Connecting the Camera a PC .

.....  
.....  
.....  
.....  
.....

....82 · Connecting the Camera to a Printer .

.....  
.....  
.....  
.....  
.....

82 9 Making Connections .....

.....  
.....  
.....  
.....  
.....  
.....

.....84 · Connecting the Camera to a TV ....

.....  
.....  
.....  
.....





.....  
.....  
.....  
.....  
.....88 12 Getting Help .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....89 · Polaroid Online Services .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....89 · ArcSoft Software Help ...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....89 12 Specifications ...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....90 Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 1 Preface · About this Manual This manual is designed to assist you in using your new digital camera. All information presented is as accurate as possible but is subject to change without notice. Copyright This manual contains proprietary information protected by copyright.

All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer. © Copyright 2008 Federal Communications Commission (FCC) Compliance This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not CD-ROM drive · Stereo speakers For Macintosh · Power Mac G3 or later · Mac OS X 10.3 - 10.5 · Memory: 256 MB or above · HDD space: 500 MB or above · USB port and CD-ROM drive · Stereo speakers Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

com · Main Features · 10 mega pixels resolution · Up to 3x optical zoom and 5x digital zoom · 1/2.3 inch CCD image sensor · 3 inch color LTPS LCD monitor · 32MB internal flash memory with optional external SD/SDHC card · Supports up to 4GB of SD card, and up to 8GB of SDHC card · Sleek metallic finish · Easy-to-use button interface · DCF, DPOF, PictBridge compatibility · Slideshow feature to review your pictures and movies · A/V output to view your pictures and movies on your TV · USB port to transfer photos and movies to your PC Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com).

10 Polaroid t1031 Digital Camera User Guide www.polaroid.com · Package Contents Please check the contents of your camera package. It should contain:  
3X ICAL ZOOM LE OPT F= 6.3 5.

-18.9mm F=3.1- Digital camera 6 NS Li-ion battery Battery charger Wrist strap USB cable Quick Guide Start Power cord Us er Ma na u l CD-ROM Quick  
Start Guide User Manual (optional) User Manual Camera pouch (optional) AV cable (optional) Polaroid t1031 Digital Camera User Guide  
www.polaroid.com 11 · Camera Views Front View Flash Self-timer LED / AF Assist Lamp L ZOOM TICA LE OP NS 3X Zoom Lens F= 6.35.6 18.9mm  
F=3.1- Microphone Back View Zoom buttons LCD screen Menu button Function / Delete button Play button SET button / 4-way navigation control Top View  
Stabilizer button Power button Power button LED indicator 1 Polaroid t1031 Digital Camera User Guide www.polaroid.

com Bottom View USB / TV Out Battery/ SD card compartment Speaker Tripod screw hole Left View Strap ring Polaroid t1031 Digital Camera User Guide  
www.polaroid.com 13 · Camera Buttons Button Power Stabilizer Shutter Play Zoom Menu Function/ Delete Your camera is equipped with different buttons  
for ease of use. Description Press to turn on/off the power. The stabilizer sets the optional ISO value according to light levels to compensate for camera  
shake. Press to set stabilizer on/off. Press to capture an image or start/stop recording video or audio clip. If the camera is turned off, press the play button to  
turn on camera in Playback mode. If the camera is turned on, press to toggle camera to Playback or Record mode. Press the zoom buttons to change zoom  
focus.



[You're reading an excerpt. Click here to read official POLAROID  
T1031 user guide  
http://yourpdfguides.com/dref/1313130](http://yourpdfguides.com/dref/1313130)

Press to enter or exit the Setup Menu. In Record mode, press to enter function menu. In Playback mode, press to delete an image, video or audio clip. · Navigation Control The 4-way Navigation Control and the SET button allows you to access the various menus available from the On Screen Display (OSD).

You can configure a wide range of settings to ensure maximum results from your photos and videos.

Further functions of these buttons are as follows: UP button Macro button SET button Flash button Down button 1 Polaroid t1031 Digital Camera User Guide www.polaroid.com Button SET Usage 1. Confirm a selection when using the OSD menus. 2.

In Record and Playback mode, press to change LCD screen display to show OSD icons and guide lines. 1. In Record mode, press to scroll through the flash mode options. (Auto, Anti Red-eye, Fill, Slow Sync and Off) 2. In Playback mode, press to view the next image, video or audio clip. 3. In Playback Video mode: · Press to fast forward video playback · Press again to continue normal playback 4. In Menu, press to enter the submenu or to navigate through the menu selections. 1. In Record mode, press to turn on/off Macro.

2. In Playback mode, press to view the previous image, video or audio clip. 3. In Playback Video mode: · Press to retrack video playback · Press again to continue normal playback 4. In Menu, press to exit a submenu or to navigate through the menu selections. 1. In Menu, press to navigate through the menu and submenu selections. 2. In Playback Video/Audio mode, press to Start/Pause video or audio playback. 1.

In Menu, press to navigate through the menu and submenu selections. 2. In Playback Video/Audio mode, press to Stop video or audio playback Flash/ Right Macro/ Left Up Down · Notifications Your camera gives feedback to users in two ways: · LED Indicators · Operation Sound Polaroid t1031 Digital Camera

User Guide www.polaroid.com 1 Led Indicators Your camera is equipped with 2 LED indicators: · Operation Lamp, located on top of your camera. See "Top View" on page 12 to locate the Operation Lamp, and · Self-timer Lamp, located in the front of the camera. See "Front View" on page 12 to locate the Self-timer Lamp. LED Off Green (steady) Green (fast blinking) Green (slow blinking) Operation Lamp Amber (steady) Amber (very fast blinking) Amber (fast blinking) Amber (slow blinking) Off Self-timer LED Red (fast blinking) Red (slow blinking) LED Status Power Off · Power On. Ready to take pictures / record / playback.

Camera busy or deleting / copying images / recording / data transfer is in progress. Playing slideshow or recording voice movie. Power saving (sleep mode). In Record mode, flash is charging or AF error. In Playback mode, self-timer countdown error. Battery low or card error. Error message: card locked, file / folder error, no memory card, copy / format error. Self-timer off. Self timer countdown is set between 0 to 3 seconds. Self-timer countdown is set between 3 to 10 seconds.

or Camera Status 1 Polaroid t1031 Digital Camera User Guide www.polaroid.com Operation Sound Buzzer Two beeps Three beeps Continuous beep Shutter sound Your camera is equipped with a buzzer for operation sound. Camera Status Denotes the start of an operation like recording and printing. Also beeps when using menu and set properties. Denotes low battery and other warning and error message like memory full and card error. Beeps every second for countdown if self-timer is set between 3 to 10 seconds. Beeps every half second if self-timer is set between 0 to 3 seconds. Beep goes off after the countdown.

The shutter is pressed to record an image.

A startup sound can be set when you power on your camera in the sound setting menu. See "Setting Sounds" on page 77. · Camera Memory Internal memory Your camera is equipped with 32MB of internal memory. Users can store images up to 10MB. If there is no memory card inserted in the memory card slot, all images, videos and audio clips recorded are automatically stored in the internal memory.

External storage Your camera supports SD cards of up to 4GB in size. It also supports SDHC cards with a maximum capacity of 8GB. If there is a storage card inserted in the memory slot, the camera automatically saves all images, videos and audio clips in the external storage card. The icon indicates the camera is using SD card. Polaroid t1031 Digital Camera User Guide www.

polaroid.com 1 3 Getting Started · Attaching the Wrist Strap Follow these instructions to attach the wrist strap to your camera to facilitate easy carrying: 1.

Insert the short loop of the strap in the strap eyelet. 2. Thread the larger loop of the strap through the short loop and pull tight to attach the strap to the camera. · Inserting the Battery Follow these instructions to insert the Li-ion battery into the battery compartment. Please read "Battery Information" on page 8 before inserting/removing batteries. 1. Open the battery compartment at the bottom of the camera. 2.

Insert the battery into the compartment with the terminal facing inside the camera and the battery indent next to the compartment door. 1 Polaroid t1031 Digital Camera User Guide www.polaroid.com 3. Close the battery compartment. · Inserting an SD/SDHC Memory Card Expand your camera's storage by using SD or SDHC memory cards. Your camera supports SD cards of up to 4GB and SDHC cards of up to 8GB in size. Follow these instructions to insert the SD/SDHC card. 1. Make sure the power is off before inserting a SD/SDHC memory card.

2. Open the battery compartment at the bottom of the camera. 3. Insert the SD/SDHC card into the memory card slot with the metallic part facing the front side of the camera. 4.

Push the SD/SDHC card into the memory slot until it clicks into place. Polaroid t1031 Digital Camera User Guide www.polaroid.com 1 LO C K 5. Close the battery compartment.

NOTE: To remove the SD/MMC card, gently push the card until it pops out. Pull out the the card carefully. M B · Charging the Battery The battery that is included in the package is not charged. You need to charge the battery before using the camera. 1. Insert the battery into the battery charger as shown. 2. Connect the power cord to the battery charger. 3. Plug the power cord to the main outlet.

The battery charging time is 2 hours. 0 Polaroid t1031 Digital Camera User Guide www.polaroid.com Battery icon on the LCD monitor indicates the battery level. See "LCD Monitor Layout" on page 24. · Turning the Power On and Off section There are two ways to turn on the camera: Press the Power button. The start up image displays briefly and the startup sound plays if enabled. The zoom lens extends and the camera is turned on in Record mode. · Press the Play button. The camera is turned on in Playback mode.

The zoom lens is not extended. To turn off the camera, press the Power button.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313130)

[T1031 user guide](http://yourpdfguides.com/dref/1313130)

<http://yourpdfguides.com/dref/1313130>

See "Modes" on page 23 to know more about Record and Playback mode. · Initial Settings When you turn on your camera for the first time, you will be asked to do the initial settings of your camera. When you turn the Power button on, the Language Menu is displayed on the LCD screen for you to setup the display language.

Setting the Language 1. Press , , or to move through the selection 2. Select a language, then press SET to apply. Setting the Date & Time 1. Press or to move through the selection 2.

Press or keys to change the value for the date and time. 3. Press SET to apply. Polaroid t1031 Digital Camera User Guide www.polaroid.com 1 4. If necessary, press to close the menu. Now, you are ready to start taking photos and videos. NOTE: or changes the values continuously. · Holding down the · If the batteries are removed for more than 48 hours, the Date & Time will have to be re-set.

Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid t1031 Digital Camera User Guide www.polaroid.com · Modes Your camera has two modes: Record mode · Set to Record mode to capture images and record videos and audio clips. · Record mode can be further set to mode options like auto, movie and scene selection modes. See "Selecting the Record mode options" below. Playback mode · Set your camera to Playback mode to view and edit captured images and playback videos and audio clips.

You can also attach voice memo to images in this mode. When you turn on your camera using the Power button, the camera is automatically set to Record mode. Switching between Record mode and Playback Mode In Record mode, press the Play button to switch to Playback mode. In Playback mode, press the Play button to back to Record mode. Selecting the Record mode options section Maximize the quality and ease of use of your camera by using the different mode options.

The mode options allow you to capture images with preset settings according to scene conditions. 1. Set the camera to Record mode. Record Mode 2. Press button to launch Record Mode.

OFF Drive Mode OFF AEB 3. Press to enter Record Mode submenu. AF Area 4. Select a mode. AF Lamp 5. Press the SET button to apply selected mode. Sharpness NOTE: · For more information, see "Using the Record Menu" on page 27. · Use the 4-way navigation control to move through the menu selections. Polaroid t1031 Digital Camera User Guide www.polaroid.

com 3 4 Using the LCD Monitor The high resolution 3" LCD monitor shows all important information regarding camera settings as well as the visual image of your photo or video. The display on the LCD monitor is called the On Screen Display or OSD. · LCD Monitor Layout The following illustrations show the LCD monitor layout and icon descriptions. Record Mode Screen Layout 1 2 3 4 5 27 26 25 24 23 22 21 0.0EV F 3. 1/30 / 307 6 7 8 9 10 11 12 AUTO 20 19 18 No. 1 2 3 4 Flash Self-timer / Burst Zoom indicator Item Record Mode 17 16 15 14 13 Description Indicates the current mode. Indicates flash settings. Indicates drive mode settings. Displays zoom.

Polaroid t1031 Digital Camera User Guide www.polaroid.com No. 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 Battery Item Shots remaining Storage media Date stamp Stabilizer Saturation Contrast Histogram ISO Focus area Shake warning Shutter speed Aperture value Exposure AEB Macro Face tracking White balance Metering Sharpness Quality Resolution AF lamp Description Indicates the remaining shots available. Indicates battery level.

Indicates current storage media in use. Indicates date stamp is enabled. Indicates stabilizer function is enabled. Displays saturation settings. Displays contrast settings.

Graphic display of ISO settings. Displays ISO settings. Use to frame subject to capture. Indicates that the camera is shaking. Displays shutter speed settings. Displays aperture settings. Displays exposure settings. Displays AEB settings. Indicates macro is enabled. Indicates face tracking is enabled.

Displays white balance settings. Displays metering settings. Displays sharpness settings. Displays quality settings. Displays resolution settings. Displays AF lamp is enabled. Polaroid t1031 Digital Camera User Guide www.polaroid.com Playback Mode Screen Layout The Playback mode display varies depending on the type of image being viewed. Playback mode display of still images: 1 2 3 4 27/27 10 9 5 6 AUTO 0.

0EV :PLAY F 3. 0 6/09/2008 7 1:57 8 No. 1 2. 3 4 5 6 7 8 9 10 Playback mode Protect Voice memo Item Ref. Page Indicates playback mode.

Indicates file is protected. Indicates voice memo is attached. Indicates the file number over the total number of files in the storage card. Indicates battery level. Indicates used storage memory.

Displays recording information of the file. Indicates the button to press on the camera to play a movie or audio file. Indicates the file is marked for printing.

Displays the resolution settings. File no. / Total no. Battery Storage media Recording information Button intro DPOF Resolution Polaroid t1031 Digital Camera User Guide www.polaroid.com Playback mode of videos: 1 2 3 4 27/27 9 5 6 13 12 :PLAY 00:00:01 WT 10 6/09/2008 1:57 7 11 8 No. 1 2 3 4 5 6 7 8 9 10 11 Item Playback mode Protect Movie clip File no.

/ Total no. Battery Storage media Recording information Button intro Video size Played time Key indicator Playing status Description Indicates playback mode. Indicates the file is protected. Indicates the file is a movie. Indicates the file number over the total number of files in the storage card. Indicates battery level. Indicates used storage memory. Displays recording information of the file. Indicates the button to press on the camera to play a movie or audio file. Indicates video size Indicates played time.

Indicates the buttons to press on the camera to apply the functions. Displays playing status. Indicates volume settings. 12 Volume Polaroid t1031 Digital Camera User Guide www.polaroid.

com Playback mode of audio clips: 1 2 3 27/27 4 5 11 10 :PLAY 00:00:01 WT 8 6/09/2008 1:57 6 9 7 No. 1 2 3 Item Playback mode Protect File no. / Total no. Description Indicates playback mode. Indicates the file is protected.

Indicates the file number over the total number of files in the storage card. Indicates battery level. Indicates used storage memory. Displays recording information of the file. Indicates the button to press on the camera to play a movie or audio file. Indicates played time. Indicates the buttons to press on the camera to apply the functions. Displays playing status. Indicates volume settings. 4 5 6 7 8 9 10 11 Battery Storage media Recording information Button intro Played time Key indicator Playing status Volume Polaroid t1031 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID T1031 user guide](http://yourpdfguides.com/dref/1313130)

<http://yourpdfguides.com/dref/1313130>

polaroid.com · Changing the LCD Monitor Display The type of information displayed on the LCD screen can be changed using the SET button. Press the SET button repeatedly to change the LCD display from one type to another. In Record Mode, the LCD display can be changed into any of the following: 307 307 0.0EV AUTO OSD on Full OSD on Guide lines on NOTE: · OSD off The OSD information may vary depending on the record mode type. Use the "Guide lines" to properly set image for capture. Polaroid t1031 Digital Camera User Guide www.polaroid.com In Playback mode, the LCD display can be changed into any of the following: 27/27 OSD on Full OSD on OSD off NOTE: LCD display cannot be changed in the following situations: · Manual exposure mode · Recording movie or audio clips · Playing movie or audio clips · Playing slideshow Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. 30 Polaroid t1031 Digital Camera User Guide www.polaroid.com 5 Recording Photos, Videos and Voices · Taking Photos section Now that you are familiar with your camera, you are now ready to take your photos.

Taking photos with your camera is very simple. 1. Turn on the camera by pressing the Power button. 2. Frame the shot using the focus bracket on the LCD monitor.

See illustration on the right. 0.0EV AUTO 307 3. Half press the Shutter button. The camera automatically adjusts the focus and exposure. When the camera is ready to take the photo, the frame bracket turns green, the shutter speed and aperture value are displayed. 4. Fully press the Shutter button to capture image. When the shake warning icon appears, hold the camera steadily, with your arms at your side or use a tripod to stabilize the camera to prevent blurred images. Polaroid t1031 Digital Camera User Guide www.

polaroid.com 31 · Using the Stabilizer The Stabilizer function prevents blurred images caused by shaking. This function is only available if ISO is set to Auto. See "ISO" on page 28 on how to adjust the ISO settings. To activate Stabilizer Press the Stabilizer button on top of your camera to enable/disable stabilizer. If Stabilizer is enabled, the stabilizer icon is displayed on the LCD monitor. 307 Stabilizer button Stabilizer on. · Setting the Zoom Control Your camera features up to 3x optical zoom and up to 5x of digital zoom. 1. Press the Zoom buttons to zoom in or zoom out an image.

2. The zoom indicator appears on the LCD onitor. Press to zoom in. Press to zoom out. Zoom buttons To adjust the zoom: 1.

Press the T button to optically zoom in to the maximum until it stops. 2. Release the button. 3 Polaroid t1031 Digital Camera User Guide www.polaroid.com 3. Press the T button again to switch to digital zoom automatically. Zooming continues. x5.0 307 Optical zoom Digital zoom x5.0 307 0.0EV AUTO 0.0EV AUTO NOTE: · Digital zoom is not activated in recording movies. · Using Flash When taking pictures in difficult lighting conditions, use the Flash to get correct exposure. This function cannot be activated in recording movies or continuous shooting.

To activate Flash: · Press the Flash/Right button on your camera repeatedly until your desired flash mode is displayed on the LCD monitor. Flash button Polaroid t1031 Digital Camera User Guide www.polaroid.com 33 Your camera is equipped with five flash modes: Auto flash. The flash fires automatically whenever extra lighting is needed. Red-eye reduction. The flash fires twice to reduce the red-eye effect. Forced on. The flash fires whenever you press the shutter button regardless of lighting conditions. Slow sync.

The flash fires with a slow shutter speed. Forced off. The flash is turned off. Auto flash is enabled. 307 · Using Macro Macro mode is designed for close-up photography.

If Macro is enabled, you can capture the detail and sharpness of a very close image by fixed focus. To activate macro: · Press the Macro/Left button of your camera to enable/disable macro. If macro is enabled, the macro icon is displayed on the LCD monitor. macro enabled Macro button 307 3 Polaroid t1031 Digital Camera User Guide www.polaroid.

com · Using the Function Menu The Function Menu is used to adjust capture settings in Record Mode. It contains My Mode, Resolution, Quality, EV Compensation, White Balance, ISO, Metering, and Color Mode. NOTE: · Press the FUNC button of your camera to launch the Function Menu. · Press the FUNC button again to close the menu. · · The Menu bar displays the current status of your camera settings. Only the available functions for the settings are shown as icon on the menu bar. The available options for each item on the menu bar are shown in the Menu bar Menu options. Use the or to move through the menu selections then press the SET button to save and apply changes. 10M 0.0EV AWB ISO AUTO Program N My Mode The My Mode function displays the 6 most recent modes used in order.

When you move through the different modes in the menu options, the items on the menu bar changes synchronously to the corresponding available settings. Menu options 10M 0.0EV AWB ISO AUTO Program N Polaroid t1031 Digital Camera User Guide www.polaroid.com 3 Resolution The Resolution function is used to set the resolution before you capture the image. Changing the resolution affects the number of images that can be stored in your memory card. The higher the resolution, the more memory space is required. 10M 0.0EV AWB ISO AUTO 10M 10M 3:2 16:9 8M 5M N The table below shows the resolution values for still images. Icon 10M 3:2 16:9 8M Pixel Size 3672 x 2748 3672 x 2448 3672 x 2064 3264 x 2448 Print Size Suggestion A2 Size A2 Size HDTV A3 Size Icon 5M 3M 16:9 Pixel Size 2595 x 1944 2048 x 1536 1920 x 1080 640 x 480 Print Size Suggestion A4 Size 4" x 6" HDTV E-mail VGA Quality The Quality function lets you adjust the quality settings of your photos before you capture them.

The quality determines the amount of compression applied to your photos. More compression results in a more detailed image. However, the higher the quality, the more memory space is required in your memory card. The available settings for still images are as follows: Super fine, Fine, and Normal. 3 10M 0.

0EV AWB ISO AUTO Fine N Polaroid t1031 Digital Camera User Guide www.polaroid.com EV Compensation EV stands for Exposure Value. In difficult lighting condition, the auto exposure function of your camera may be misled into giving the wrong readings. The EV Compensation function allows you to adjust the exposure value and correctly expose your images.

Available for still images only. · 10M 0.0EV AWB ISO AUTO 0.



[You're reading an excerpt. Click here to read official POLAROID T1031 user guide](http://yourpdfguides.com/dref/1313130)  
<http://yourpdfguides.com/dref/1313130>

0EV N To adjust EV settings, press the or keys to increase/ decrease the value. As you adjust the settings, the LCD monitor synchronously displays the image applying the EV settings. Press the SET button to save and apply changes. The available settings are" 0EV(Default), +2.0EV, +1.7EV, +1.3EV, +1.

0EV, +.7EV, +.3EV, -2.0EV, -1.7EV, -1.3EV, -1.0EV, -.7EV, and -.3EV. · White Balance The White Balance function allows you to adjust the camera setting according to the white light when recording still images and movies.

· As you move through the selection, you can see the preview on the LCD screen. 10M 0.0EV AWB ISO AUTO Auto AWB N Polaroid t1031 Digital Camera User Guide www.polaroid.com 3 Icon AWB Item Auto (Default) Daylight Cloudy Tungsten Flourescent 1 Flourescent 2 Custom Description The camera automatically adjusts the white balance.

Ideally used for bright sunny conditions. Ideally used for cloudy conditions. Ideally used for indoor photos with tungsten or halogen lighting without a flash.

Ideally used for indoor photos with flourescent lighting conditions. Ideally used for indoor photos with flourescent lighting conditions.

Used when light source cannot be specified. ISO The ISO function lets you adjust the ISO sensitivity in recording still images depending on the lighting levels of your surroundings. · Use a higher ISO setting in dim conditions and a lower ISO setting in brighter conditions. · As you move through the selection, you 0.0EV can see the preview on the LCD screen. AWB 10M · Available settings are: Auto, 50, 100, 200, 400, 800, 1600, and 3200. ISO AUTO 800 ISO 800 ISO ISO 1600 3200 N Metering The Metering function lets you select the area of the subject or frame by which the camera measures light to record still images or movies. · As you move through the selection, you can see the preview on the LCD screen. 10M 0.0EV AWB ISO AUTO Multi N 3 Polaroid t1031 Digital Camera User Guide www.

polaroid.com Icon Multi Center Spot Item Description The camera measures the exposure readings from multiple points in the subject area. The camera measures the average light from the entire frame but gives more importance to the values near the center. The camera selects the exposure value based on the center of your picture. Color Mode The Color Mode function lets you record still images or movies and apply different colors or tones for a more artistic effect. · As you move through the selection, you can see the preview on the LCD screen. 10M 0.0EV AWB ISO AUTO Normal N V S B W R N Icon N V S B W R Item Normal Vivid Sepia B&W Vivid Red Vivid Green Vivid Blue Description The camera records normally. The camera captures the image with more contrast and saturation emphasizing on the bold colors. Images are captured in sepia tones.

Images are captured in black and white. Captured image becomes reddish. Ideally used to record images like flowers and cars to make them more vivid.

Captured image becomes greenish. Ideally used to record images like mountains and lawns to make them more vivid.

Captured image becomes bluish. Ideally used to record images like the sky and the ocean, to make them look more vivid. G B Polaroid t1031 Digital Camera User Guide www.polaroid.com 3 · Using the Record Menu If you are in Record mode, you can access the Record menu simply by pressing the MENU button on your camera.

When the menu is displayed, use the 4-way navigation control and the SET button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again. Record Menu The Record menu allows you to change modes, and setup other capture settings. To go to Record Menu: 1. Set the camera to Record mode. See "Switching between Record mode and Record Mode Playback Mode" on page 23. OFF Drive Mode 2. Press to launch the Record Menu. 3. Use the or keys to move through the menu selections.

4. To select an item, press . 5. Change the submenu settings using the 4-way navigation control. 6. Press the SET button to save and apply settings. AEB AF Area AF Lamp Sharpness OFF 0 Polaroid t1031 Digital Camera User Guide www.polaroid.com Setting the Scene Mode Setting the Scene mode allows you to capture images with preset settings according to the scenes or environment. 1.

From the Record Menu, press select Record Mode. to Record Mode Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF 2. Use the navigation controls to move through the selection. 3. Press the SET button to save and apply changes.

The table below shows the available scene mode settings. Auto Select OK Polaroid t1031 Digital Camera User Guide www.polaroid.com 1 Icon Auto Item Description The simplest way to shoot basic images. Settings are adjusted automatically.

The camera automatically adjusts suitable shooting settings like shutter speed and aperture values The camera automatically adjusts an aperture value to match the brightness. The camera automatically adjusts the shutter speed to match the brightness. This feature allows the user to adjust shutter speed and aperture value to correctly expose your images The camera blurs the background to focus on the subject. This feature is used to emphasize wide scenic views. This feature enhances the red hue for recording sunset images. This feature is used to capture the image of a backlight object by changing the metering. This feature uses face tracking to auto detect faces to capture. When faces are detected, it takes six continuous shots. This feature is used to capture still images of moving kids. This feature is used to capture images with night scenery background.

This feature slows shutter speed to capture fireworks explosions. This feature is used for beach and snow scenes This feature captures still images in high speed motions. Photo Stitch Program Aperture Priority Shutter Priority Manual Exposure Portrait Landscape Sunset Backlight Smile Capture Kids Night Scene Fireworks Snow Sports Polaroid t1031 Digital Camera User Guide www.polaroid.com Icon Party Item Description This feature is used for wedding or indoor party settings. This feature is used to capture warm candle light effects. This feature is used to capture portrait pictures with night or dark background. This feature enhances skin tone thus facial skin appears smooth. This feature enhances smooth effects like water or silk. This feature is used to capture food images.

The increased saturation in this mode makes the captured image more enticing. This feature enhances the edges of captured images. This feature enhances the black and white contrast normally used when capturing text images Pictures taken in Auction mode are automatically saved under a specific folder named "\_AUCT". See "Folder Structure" on page 59 for more information. Used for taking panoramic pictures Used for detecting whether the subjects' eyes are open This mode is used to record movie clips.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313130)

[T1031 user guide](http://yourpdfguides.com/dref/1313130)

<http://yourpdfguides.com/dref/1313130>

This mode is used to record audio clips. Candlelight Night Portrait Soft Skin Soft Flowing Water oto itch Food Building Text Auction Photo Stitch Blink Detection Movie Voice REC After selecting the scene mode, the selected mode, except Voice Rec, will be added to the forefront in MyMode of Function Menu. See "Using the Function Menu" on page 35. Polaroid t1031 Digital Camera User Guide www.polaroid.com

3 Selecting the Smile Detection Mode This feature is based on "Face Tracking". When you use smile capture, you need to set the face tracking feature on first. Enter to the scene mode, Use the navigation controls to select "Smile Capture" item and press SET button to confirm. Selecting the Blink Detection Mode NO MORE CLOSED EYES IN YOUR PICTURES. This feature allows the camera to detect when your subjects' eyes are open. The camera will only take the pictures when the subjects' eyes are open. If you have taken blinked pictures, there will be a red frame on the subjects' faces. When you playback the pictures, there will be an exclamation mark and a triangle to indicate you have blinked pictures. Enter to the scene mode, Use the navigation controls to select "Blink Detect" item and press SET button to confirm. Selecting the Photo Stitch Mode This feature is used for shooting scenery.

Use Photo Stitch to make your panoramic pictures or combine different scenes into one picture. Enter to the scene mode, Use the navigation controls to select "Photo Stitch " item and press SET button to confirm. Polaroid t1031 Digital Camera User Guide www.polaroid.com Setting the Drive Mode Your camera features a Self-timer and Burst which can be set in the Drive mode function in the Record Menu. The Self-timer allows you to take photos after a pre-defined delay. While burst lets you take consecutive shots. This function is only available in recording still images. The Drive mode setting is automatically set to off when you turn off the camera. To set the Drive Mode 1.

From the Record Menu, select Drive Mode. 2. Use the or keys to go through the selection. 3. Press the SET button to save and apply changes. The table below shows the available Drive mode settings. Record Mode Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF Record Modese. 10 10 Drive Mode 2 2 sec. AEB x2 Double AF Area Burst AF Lamp Off OFF Sharpness OFF OFF Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. Polaroid t1031 Digital Camera User Guide www.polaroid.com Icon Item 10 Sec Self-timer 2 Sec Self-timer Description Sets a 10-second delay to capture image after pressing the shutter button. Sets a 2-second delay to capture image after pressing the shutter button. Performs delay and capture twice: · Performs a 10-second delay, then captures the image. @@Performs continuous shooting when the shutter button is pressed. Stops shooting when the shutter button is released. @@@@Available settings are: [On] and [Off].

To set AEB 1. From the Record menu, select AEB. 2. Use the or keys to go through the selection. 3. @@This feature determines the area on which the camera focuses. To set AF Area 1. From the Record Menu, select AF Area. 2. Use the or selection. 3. Press the SET button to save and apply changes. @@The camera automatically selects focus area within the wide frame. @@@@Available settings are: [Auto] and [Off]. To set AF Lamp 1.

From the Record Menu, select AF Lamp. 2. Use the or keys to go through the selection. 3. @@To set Sharpness 1. From the Record Menu, select Sharpness. 2. Use the or keys to go through the Record Mode selection. OFF Drive Mode OFF 3. Press the SET button to save and apply AEB High AF Area changes. @@Normal sharpness. Softens the image. @@@@To set Saturation 1. From the Record Menu, select Saturation. Saturation High 2.

Use the or keys to go through the Contrast Normal selection. OFF Digital Zoom Low Date Stamp 3. Press the SET button to save and apply OFF Auto Review changes. @@@@To set Contrast 1. From the Record Menu, select Contrast. 2. Use the or keys to go through the Saturation selection. Contrast High 3. Press the SET button to save and apply Digital Zoom Normal changes. @@Normal contrast.

@@Your camera enlarges an image using the optical zoom first. @@From the Record Menu, select Digital Zoom. 2. Use the or keys to go through the selection. 3. Press the SET button to save and apply changes. @@@@Limitations of Date Stamp functions are as follows: · Available for still images only. · May slowdown AEB/ continuous shooting when Date Stamp is enabled in /AEB/ Burst mode. · If Date Stamp is enabled, digital zoom is automatically turned off. · In vertical or rotated images, the date and time on your photos still appear horizontally.

0 Polaroid t1031 Digital Camera User Guide www.polaroid.com To set Date Stamp 1. From the Record men, select Date Stamp. 2. Use the or keys to go through the selection. 3. Press the SET button to save and apply changes. Available settings are as follows: · · Date Date & Time Off Saturation Contrast Digital Zoom Date Date Stamp Date & Time Auto Review OFF Off OFF Saturation Contrast Digital Zoom Date Stamp Auto Review OFF OFF OFF Setting Auto Review The Auto Review function lets you view the captured image right after shooting it. If Auto review is On, the camera will display the captured image for 1 second on the LCD monitor.

Available settings are: On, Off. To set Auto Review 1. From the Record menu, select Auto Review. 2. Use the or keys to go through the selection. 3. Press the SET button to save and apply changes. Polaroid t1031 Digital Camera User Guide www.polaroid.com Saturation Contrast Digital Zoom Date Stamp Auto Review OFF OFF Saturation Contrast Digital Zoom Date Stamp ON On Auto Review OFF Off OFF OFF 1 · Recording Movies 1.

From the Record mode menu, select Movie. 2. Focus your camera on the subject that you want to take. 3. Press the Shutter button to start recording. 4. Use the control to zoom in and zoom out an image. 5. To pause recording, press the key. 6.

To continue recording, press the key again. 7. To stop recording, press the Shutter button. Record Mode Drive Mode AEB AF Area AF Lamp Sharpness OFF OFF OFF 00:00:02 NOTE: control. · Sound cannot be recorded while pressing the · Digital zoom is not available in movie recording. · The camera will automatically stop recording when the memory capacity is full. Setting the Movie Size The Movie Size function icon appears only in Movie Mode. Use this function to adjust the resolution and quality of movie clips. The table below shows the available size and corresponding image quality settings. 640 AWB 16:9 N 640 320 Polaroid t1031 Digital Camera User Guide www.

polaroid.com Icon Frame Size 3672 x 2064 640 X 480 320 x 240 (Default) 640 x 480 HDTV High Quality Normal For YouTube Image Quality To set other movie mode settings, please refer to "Using the Function Menu" on page 35.



[You're reading an excerpt. Click here to read official POLAROID T1031 user guide](http://yourpdfguides.com/dref/1313130)  
<http://yourpdfguides.com/dref/1313130>

**YouTube Mode** The YouTube Mode allows you to record movies with predefined video settings for easy upload to the YouTube website. YouTube supports two file upload standards: · Single File Uploader. The maximum movie file size is up to 100 MB. · YouTube Uploader. The maximum movie file size is up to 1 GB. Most uploaded movie length ranges within 5 minutes, although you can upload a maximum movie length of 10 minutes. Therefore when you record using the YouTube mode, the following standards are followed: · Recorded movies are set to YouTube standard resolution of 640 X 480. · Recording automatically stops when the file reaches 100 MB.

Recorded movies in the YouTube mode are stored following the DCF rule, however movies are saved in a specific folder named "\_UTUBE". For more details, please refer to "Folder Structure" on page 59. · To record a YouTube movie, select from the Movie Size function. Available recording time for a YouTube movie is up to 10 minutes. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Recording Voices 1. From the Record mode menu, select Voice. The Voice Recording screen layout is displayed on the LCD monitor. 2. Press the Shutter button to start recording. 3. Press the Shutter button again to stop recording. 00:00:02 NOTE: Voice recording will automatically stop when the maximum memory capacity is full. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Playback View images, videos and audio clips through your camera's Playback mode. · Viewing in Single Navigation The Single navigation mode displays the images one by one on the LCD monitor. To view images/videos/audio clips, follow the steps below. 1. Press the Play mode. button to set or turn on the camera to Playback 2. The LCD monitor displays an image. To understand the icons and other information on the screen, please see "Playback Mode Screen Layout" on page 26. Still Image 27/27 Movie 27/27 Audio Clip 27/27 :PLAY 6/09/2008 1:57 :PLAY 6/09/2008 1:57 3. Use the or keys to view next/previous image/video/audio.

4. To play a movie or audio clip, press the key. See "Playing Movies" on page 57 and "Playing Voice Recording" on page 58 for more details. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Viewing thumbnails 1. Press the W button to view 9-image thumbnails. 2. Use the navigation buttons to move through the items. 3. Press the SET button to select the image and view it normally. Scroll bar. If scroll bars appear, it indicates that the screen can be scrolled. Select Thumbnail icons When you view the thumbnails, some images may contain icons. These icons indicate the type of file or recording. Thumbnail view Icon Type Voice Memo Movie Locked File Voice Record File Error Description Indicates that a voice memo is attached to the image. Indicates a recorded movie. The image displayed is the first frame of the movie clip Indicates that the image has been locked. Locked files cannot be edited or deleted. Indicates a voice recording file.

Indicates an error file. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Zooming images The zoom view function works with still images only. · In normal view, press the T button repeatedly until the desired zoom view. · The 4 arrows on the LCD monitor indicate that the image is zoomed in. · You can zoom view an image of up to 12X. 2.0x · Press the SET button to close zoom view. · Playing Movies 27/27 :PLAY 1.

Set the camera to Playback mode. 2. Use the navigation controls to scroll through the saved images. A movie clip has a movie icon displayed on screen. See picture on the left.

3. Press the key to play the movie. 4. During playback, press the or keys to fast forward or rewind the movie. 5.

During playback, use the to control volume. Press the T button to increase volume. Press the W button to decrease volume. 6. Press the key to pause playback. Press the key again to resume. 7. Press the key to stop the playback. The LCD monitor displays the movie frame image in Single navigation mode. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Capturing Screenshot 00:00:01 WT To capture screenshot image from a movie clip 1. During playback of movie, press the key to pause playback on your desired movie frame to capture. 2. Press the Shutter button to capture screenshot. 3. The camera will automatically stop playback. The LCD monitor displays the captured image in Single navigation mode. SHUTTER 00:00:05 WT NOTE: This feature does not function when memory card is full or the folder cannot be created. The icon does not appear on screen either.

· Playing Voice Recording 1. Set the camera to Playback mode. 2. Use the navigation controls to scroll through the saved images. When viewing a voice recording file, the LCD monitor displays the screen layout of Audio clips.

See picture on the right. 3. Press the key to play the voice recording. 00:00:01 WT 4. During playback, use the to control volume.

The volume icon appears on the screen. Press the T button to increase volume. Press the W button to decrease volume. 5. Press the key to pause playback. Press the key again to resume. 6. Press the key to stop the playback. The LCD monitor displays the image in Single navigation mode. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

· Playing Voice Memo Voice memo is separately recorded and attached to a captured image. See "Voice Memo" on page 67 on how to record voice memo. 1. Set the camera to Playback mode. 2. Use the navigation controls to scroll through the saved images. An image file with voice 27/27 memo has a voice memo icon located on the top center of the LCD monitor. See picture on the right. 3.

Press the key to play the voice F 3.0 0.0EV 1/30 recording. AUTO :PLAY 6/09/2008 1:57 4. During playback, use the to control volume.

Press the T button to increase volume. Press the W button to decrease volume. 5. Press the key to pause playback. Press the key again to resume.

6. Press the key to stop the playback. The LCD monitor displays the image in Single navigation mode. · Deleting an Image/Video/Audio There are two ways to delete an image/video/audio: · Using the Delete button, or · Using Playback Menu Delete settings. See "Delete" on page 62. Using the Delete Button Use the Delete button on your camera to delete or mark an image/ video/audio clip for deletion. 1. Set the camera to Playback mode. 2. View images/videos/audio clips in Single navigation mode.

3. Use the or keys to scroll the display. 4. When the desired image/video/audio clip is displayed on the LCD monitor, press the Delete button. Polaroid t1031 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)



**You're reading an excerpt. Click here to read official POLAROID T1031 user guide**

<http://yourpdfguides.com/dref/1313130>



polaroid.com 5. A confirmation screen. 6. Select Delete.

selection appears on 7. Press the SET button to delete. Delete Cancel 8. The next image is displayed on the LCD monitor. To delete another file, use the or 4 to 7.

to scroll through the images/videos/audio clips. Then, repeat steps 9. To close the Delete function and go back to viewing in single navigation mode, select Cancel. NOTE: Locked files cannot be deleted at any time. When you try to delete a locked file, the camera displays "File Locked" message on the LCD monitor.

· Playback Menu The Playback menu allows you to edit images, records voice memo, and setup playback settings. To go to Playback Menu: 1. Set the camera to Playback mode by pressing the Play button. NOTE: To exit the Menu at any time, press the Menu button. 2. Press to launch the Playback Menu. 3. Use the or keys to move through the menu selections. 4. To select a menu, press or the SET button.

Slide Show Delete Protect Red-eye Correction Voice Memo Photo Edit 5. Change the submenu settings using the 4-way navigation control. 6. Press the SET button to save and apply settings. 0 Polaroid t1031 Digital Camera User Guide www.polaroid.com Slideshow The Slideshow function allows you to view all stored photos/videos in still image format in a continuous sequence. To view slideshow: 1. From the Playback menu, select Slideshow. The Slideshow menu appears.

2. Set the slideshow settings. 3. Select Start, then press the SET button to start the slideshow. 4.

During slideshow, press the SET button to pause slideshow. Slide Show Start Cancel 1 sec. Horizontal On Interval Transition Repeat Select OK 5. Use the or keys to move through the options. Select whether to Continue or Exit the slideshow.

6. Press the SET button to apply selected option. To change slideshow settings: 1. From the Slideshow menu, use the or selections. 2. Select Interval setting. Press the or keys to move through the keys to adjust. Choose among the available interval settings: 1 sec., 3 sec., 5 sec.

, and 10 sec. 3. Select Transition setting. Press the or the available transition settings: · Horizontal · Shrink · Fade · Vertical · Random 4. Select Repeat setting. Press the or keys to adjust. Available settings are: On, Off. Polaroid t1031 Digital Camera User Guide www.polaroid.com 1 Delete The Delete function lets you remove unwanted files in the internal memory or on the memory card.

To delete a photo/video/audio clip: 1. From the Playback menu, select Delete. 2. The Delete submenu is displayed on the LCD monitor. Select available settings: Slide Show Delete Single Protect Multi Red-eye Correction All Voice Memo Photo Edit · Single.

Select one file to delete. · Multi. Select multiple files to delete at the same time. · All. Delete all files.

To delete a single file: 1. Select Single in the Delete submenu, the images are displayed on the LCD monitor in single navigation mode. 2. Use the or keys to scroll the display. 3. When the desired image/video/audio clip is displayed on the LCD monitor, select Delete. 4. Press the SET button to delete. Delete Cancel 5. The next image is displayed on the LCD monitor.

To delete another file, use the or to scroll through the images/videos/audio clips. Repeat steps 3 to 7. 6. To close the Delete function and go back Playback menu, select Cancel. Polaroid t1031 Digital Camera User Guide www.polaroid.com To delete multiple files: 1. Select Multi in the Delete submenu, the images are displayed in thumbnail view on the LCD monitor. 2. Use the navigation control to move through the files.

3. When the desired image/video/audio clip is highlighted, press the SET button to mark image/ video/audio clip for deletion. 4. Repeat step 3 until all desired images for deletion are marked. 5.

Press the MENU button. A confirmation selection appears. 6. Select Yes to confirm. 7.

Press the SET button to delete marked files. To delete all files: 1. Select All in the Delete submenu. A confirmation message appears. 2. Select Delete. 3. Press the SET button to delete all files. Delete Cancel Yes Cancel Select Next delete all file s Polaroid t1031 Digital Camera User Guide www.polaroid.

com 3 Protect The Protect function lets you lock a photo or video to protect it from being modified or accidentally erased. A protected file has a lock icon when viewed on Playback mode. To protect files: 1. From the Playback menu, select Protect. 2. The Protect submenu is displayed on the LCD monitor. Select available settings: · Single. Select one file to lock. · Multi. Select multiple files from the thumbnail view to lock.

· Lock All. Lock all files · Unlock All. Unlock all files. To protect/unprotect a single file: 1. Select Single in the Protect submenu, the images are displayed on the LCD monitor in single navigation mode.

2. Use the or Slide Show Delete Single Protect Multi Red-eye Correction Lock all Voice Memo Unlock all Photo Edit keys to scroll the display. 3. When the desired file is displayed on the LCD monitor, select Lock/Unlock. 4.

Press the SET button to protect/unprotect the file and go back to Playback mode. Lock Exit Polaroid t1031 Digital Camera User Guide www.polaroid.com To protect/unprotect multiple files: 1. Select Multi in the Protect submenu, the images are displayed in thumbnail view on the LCD monitor. 2. Use the navigation control to move through the files. 3. When the desired file is highlighted, press the SET button to mark/unmark the file clip for protection. 4.

Repeat step 3 until all desired files to protect are marked. 5. Press the MENU button. A confirmation selection appears. 6. Select Yes. Select Next Yes Cancel 7. Press the SET button to lock files and go back to Playback mode. To protect all files: 1. Select Lock all in the Protect submenu.

A confirmation message appears. 2. Select Delete. 3. Press the SET button to delete all files.

To unlock all files: 1. Select Unlock all in the Protect submenu. A confirmation message appears. 2. Select Yes.

3. Press the SET button to unlock all protected files. Polaroid t1031 Digital Camera User Guide www.polaroid.com Yes Cancel Yes Cancel lock all file s unlock all file Red Eye Correction The Red Eye Correction function is used to reduce red eye in captured images. This function is only available for still images. Red eye correction can be applied to an image several times, but the quality may gradually deteriorate. To activate Red Eye Correction: 1. Set the camera to Playback mode. 2.

Press the image. or Slide Show Delete Protect Red-eye Correction Voice Memo Photo Edit keys to scroll and select an 3. Press the MENU button to launch the Playback menu. 4. Select Red Eye Correction. 5. Select Start. 6. Press the SET button to start correction. Steps 5 and 6 Red-eye Correction Step 7 Red-eye Correction Start Cancel Overwrite Save As Cancel 7.

After completing Red eye correction, a menu selection appears. Select whether to: · Overwrite.



[You're reading an excerpt. Click here to read official POLAROID T1031 user guide](#)



Save and replace the old file with the new one. · Save As. Save the new file as a new one.

· Cancel. Cancel red eye correction. 8. Press the SET button to save/cancel changes. Polaroid t1031 Digital Camera User Guide www.polaroid.com Voice Memo The Voice Memo function allows you to record and attach a voice memo to a saved image. You can record a maximum of 30 seconds of Voice memo per image. This function is only available in still images. To record voice memo: 1. Set the camera to Playback mode. 2. Press the or keys to scroll and select an image to attach voice memo to. 3. Press the MENU button to launch the Playback menu. 4.

Select Voice Memo. 5. Select Start, then press the SET button to start recording. Time left (n seconds) for recording. Slide Show Delete Protect Red-eye Correction Voice Memo Photo Edit 30 Start Cancel 6. Select Stop, then press the SET button to stop recording. NOTE: When you record voice memo to an image with an existing voice memo, the old recording is automatically changed to the new one. Polaroid t1031 Digital Camera User Guide www.polaroid.com Photo Edit The Photo Edit function lets you edit still images to apply different colors or tones for a more artistic effect. Edited photos in this function is saved as a new file. To activate Photo Edit: 1. Set the camera to Playback mode. 2. Press the or keys to scroll and select an image to edit.

3. Press the MENU button to launch the Playback menu. 4. Select Photo Edit. The Photo Edit submenu appears. Photo Edit Slide Show Delete Protect Red-eye Correction Voice Memo Photo Edit Normal N V S BW R 5. Press the or keys to scroll and select an option. As you move through the selection, the preview on the LCD monitor changes synchronously. The following table shows the available settings. Icon N S BW Neg. Item Normal Sepia B&W Negative Mosaic Description No effect is added to the image. Image is saved with a sepia tone. Image is saved in black and white. Image appears to be the opposite of the original image. Image is saved with mosaic tiles.

Image is saved with reddish tint. Image is saved with greenish tint. Image is saved with bluish tint. Polaroid t1031 Digital Camera User Guide www.polaroid.com R G B Vivid Red Vivid Green Vivid Blue 6. Press the SET button to save the new file. Z-Lighting The Z-Lighting function allows you to manually adjust the exposure to compensate for inadequate lighting conditions. This function is only applicable for still images. The edited image is saved as a new file.

To adjust Z-Lighting: 1. Set the camera to Playback mode. or keys to scroll and select an 2. Press the image to adjust lighting. Z-Lighting Rotate Trim Resize Startup Image DPOF 3.

Press the MENU button to launch the Playback menu. 4. Select Z-Lighting. The appears on the screen. Z-Lighting menu 0. OEV Z-Lighting 5. Press the or keys to increase/ decrease the value. As you adjust the settings, the LCD monitor synchronously displays the image applying the new settings. · The available settings are: 0.0, 1.0, 2.0, 3.0, and 4.0. 6.

Press the SET button to save and apply changes. Polaroid t1031 Digital Camera User Guide www.polaroid.com Rotate The Rotate function lets you change the orientation of a saved photo. This function is only available for still images. Rotated images are saved as a new file. To Rotate an image: 1. Set the camera to Playback mode. 2. Press the or keys to scroll and select an image to rotate.

3. Press the MENU button to launch the Playback menu. 4. Select Rotate. 5.

Select Yes and press the SET button to rotate image. The preview on the LCD monitor changes synchronously. Rotate Rotate Yes Cancel Yes Cancel Normal orientation of image Image rotated at 90° clockwise. 6. Repeat step 5 until desired orientation is achieved.

7. Select Cancel and press the SET button to close Rotation function. NOTE: Each time you press the SET button to rotate image, the image is rotated at 90° clockwise. 0 Polaroid t1031 Digital Camera User Guide www.polaroid.com Trim The Trim function allows you to trim an image to another image size. This function is only available for still images. To trim an image: 1. Set the camera to Playback mode. 2.

Use the or keys to scroll and select an image to trim. 3. Press the MENU button to launch the Playback menu. 4. Select Trim. The Trim screen layout is displayed on the LCD monitor. 5. Use the control to change size. Current image size. Display area.

Shows the approximate location of the displayed area. SET: 5M Z-Lighting Rotate Trim Resize Startup Image DPOF Enlarged image. 4-way indicator. 6. Use the navigation controls to move the image.

7. Press the SET button to apply changes. A menu selection appears. 8. Select whether to: Trim Overwrite Save As Cancel · Overwrite.

Save and replace the old file with the new one. · Save As. Save the new file as a new one. · Cancel. Cancel resize. 9. Press the SET button to save/cancel changes. Polaroid t1031 Digital Camera User Guide www.polaroid.com 1 Resize The Resize function allows you to change the image resolution of large images to smaller ones.

This function is only available for still images. To resize an image: 1. Set the camera to Playback mode. 2. Use the or image to resize. keys to scroll and select an Z-Lighting Rotate 8M Trim 5M Resize 3M Startup Image VGA DPOF 3. Press the MENU button to launch the Playback menu. 4. Select Resize. The Resize submenu is displayed on the LCD monitor.

5. Select size among: 8M, 5M, 3M, and VGA. Available size settings may vary depending on original image size. Unavailable settings appear as gray icons in Resize submenu. 6.

After selecting size, a menu selection appears. Select whether to: · Overwrite. Save and replace the old file with the new one. · Save As. Save the new file as a new one.

· Cancel. Cancel resize. 7. Press the SET button to save/cancel changes. Overwrite Save As Cancel NOTE: Resize function is not available for photos with image size set to VGA. Polaroid t1031 Digital Camera User Guide www.polaroid.com Startup Image The Startup Image function allows you to setup a startup image when you turn on your camera. 1. Press the MENU button to launch the Playback menu.

2. Select Startup Image. The menu selection appears. 3. Select options: · · System. Use camera default image. My Photo. Use the or keys to scroll and select desired image. Off. Disable the startup image.

SYSTEM My Photo Off 4. Press the SET button to apply changes. DPOF The Digital Print Order Format (DPOF) function allows you to mark image in your memory card for printing and allows you to specify the number of copies that you want to print at a later date. When all images to be printed are marked, take the memory card to a digital printing service, or use a DPOF compatible printer. To set DPOF: 1.

Press the MENU button to launch the Playback menu. 2. Select DPOF. The submenu appears. Available settings are as follows: Polaroid t1031 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID  
T1031 user guide](http://yourpdfguides.com/dref/1313130)  
<http://yourpdfguides.com/dref/1313130>