



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID T1235. You'll find the answers to all your questions on the POLAROID T1235 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID T1235**  
**User guide POLAROID T1235**  
**Operating instructions POLAROID T1235**  
**Instructions for use POLAROID T1235**  
**Instruction manual POLAROID T1235**



## 12.0 Megapixel Digital Camera t1235

### User Guide



#### Questions? Need Some Help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

DIGITAL QUALITY, POLAROID SIMPLICITY™



[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](http://yourpdfguides.com/dref/2645394)

<http://yourpdfguides.com/dref/2645394>

**Manual abstract:**

*0 Megapixel Digital Camera t1235 User Guide Questions? @@@@7 Declaration of Conformity .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 8 Trademark Recognition ....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 8 · Safety and Handling Precautions ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 8 Camera Information ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 8 Battery Information .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 9 2 Introduction .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..10 · Camera Features .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 10 · Package Contents ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 11 · Camera Views.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*12 · Camera Buttons .....*

.....  
.....  
.....  
.....  
.....  
.....

*.... 13 · Notifications .....*

.....  
.....



.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....15 3 Getting Started...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....16 · Attaching the Wrist Strap .....*

.....  
.....  
.....  
.....  
.....  
.....

*... 16 · Inserting the Battery..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*16 · Inserting an SD/SDHC Memory Card .. .....*

.....  
.....  
.....  
.....  
.....

*17 · Charging the Battery .....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

..... 19 · *Turning the Power On and Off* . ...

.....  
.....  
.....

.....  
.....  
.....

..... 20 · *Initial Settings* ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 20 *Setting the Language* .....

.....  
.....  
.....

.....  
.....  
.....

...20 *Setting the Date & Time* .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..20 2 *Polaroid t1035 Digital Camera User Guide* [www.polaroid.com](http://www.polaroid.com) · *Modes*.

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 22 Record mode ..

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

... 22 Playback mode .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

22 Switching between Record mode and Playback Mode .....

.....

..... 22 Selecting the Record mode options .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 23 4 Using the LCD Screen .....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....24 · LCD Screen Layout .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 24 Record Mode Screen Layout...

.....

.....  
.....  
.....  
.....

.....  
.....  
*... 24 Playback Mode Screen Layout ..*  
.....

.....  
.....  
.....  
.....

.....  
.....  
*. 25 Changing the LCD Screen Display ....*  
.....

.....  
.....  
.....  
.....

.....  
.....  
*..... 29 · Using Quick-Set Bar...*  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 30 Snapshot Mode .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 31 Camcorder Mode ....*  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 32 Voice Recorder Mode .....*  
.....

.....



.....  
.....

.....  
.....  
.....

.....  
.....

*. 33 Playback Mode ....*

.....  
.....  
.....

.....  
.....  
.....

*..... 34 5 Recording Photos, Videos and Voices ..*

.....  
.....

.....  
.....

*.....35 · Taking Photos .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*..... 35 · Using the Image Stabilizer .....*

.....  
.....  
.....

.....  
.....  
.....

*... 36 · Setting the Zoom Control .....*

.....  
.....

.....  
.....  
.....

.....  
.. 36 · Setting Scene Mode ....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 37 Using Intelligent Scene Mode ..

.....  
.....  
.....

.....  
.....  
.....

..... 40 Using Smile Detection Mode ...

.....  
.....  
.....

.....  
.....  
.....

..... 41 Using Blink Detection Mode ...

.....  
.....  
.....

.....  
.....  
.....

..... 42 Selecting the Photo Stitch Mode ..

.....  
.....  
.....

.....  
.....  
.....

.. 43 · Using Flash .....

.....  
.....  
.....

.....  
.....  
.....

.....

.....  
.....  
.....  
.. 44 - Setting Snapshot Menu .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 45 Resolution .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

45 Quality .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 46 ISO .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

46 Metering .....

.....  
.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 51 EV Compensation .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 51 Polaroid t1235 Digital Camera User Guide www.  
polaroid.com 3 Photo Frame ....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 52 Sharpness...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 52 Saturation ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

..... 52 Contrast ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 53 Date Stamp .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 53 Focus Mode ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 54 Drive Mode.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

54 AF Lamp .....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 55 · Recording Movies .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 55 Camera Setting to Record Movies .....*

.....  
.....  
.....  
.....

*.... 56 Setting Movie Size .*

.....  
.....  
.....  
.....

*..... 56 YouTube Mode .*

.....  
.....  
.....  
.....

*.... 57 Setting Frame Rate .*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

.... 58 Setting White Balance .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

58 Setting Quality .....

.....

.....  
.....  
.....

.....  
.....  
.....

..... 58 Setting Focus Mode ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 58 Setting Effect .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

. 59 - Recording Voices. ...

.....

.....  
.....  
.....

.....  
.....  
.....



.....  
..... *59 6 Playback ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*60 · Viewing in Single Navigation.....*

.....  
.....  
.....  
.....  
.....  
.....

*..... 60 · Viewing Slideshow .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 60 · Viewing in Drag & Play Mode .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 61 · Viewing Thumbnails ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 61 · Zooming images .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 62 · *Trimming an Image* ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 63 · *Playing Movies* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

63 · *Playing Voice Recording*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. 64 · *Playing Voice Memo* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 64 · *Using My Drawing* ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

..... *65 Using My Drawing Toolbar ..*

.....  
.....  
.....  
.....  
.....

*.. 66 · Adding a Memo dialog to an Image ...*

.....  
.....  
.....  
.....  
.....

*..... 66 · Rotating Images....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*67 · Adding Photo Frame .....*

.....  
.....  
.....  
.....  
.....

*.. 67 · Setting D-Lighting ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 68 4 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Setting DPOF .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 69 To set DPOF on a single file ..

.....

.....

.....

.....

.....

.....

.....

.....

.....  
69 To set DPOF on multiple files .....

.....

.....

.....

.....

.....

.....

.....  
69 To set DPOF on all files .....

.....

.....

.....

.....

.....

.....

.....

.....

..... 70 To set DPOF off .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....  
70 · Protecting/Unprotecting Files .....

.....

.....

.....

.....  
.....  
.....

.....  
*... 70 To protect a file ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 71 To protect multiple files .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.... 71 To protect all files .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 71 To unprotect files .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 71 - Deleting Files .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
... 72 To delete a file ..  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
72 To delete a voice memo .....

.....  
.....

.....  
.....  
.....

.....  
.....  
... 72 To delete multiple files ..

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 72 To delete all files ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
... 73 · Setting Playback Menu ..

.....  
.....  
.....  
.....

.....  
.....  
.....

73 To go to Playback Menu .....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 73 Resize ..

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 73 Voice Memo .

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 74 Red Eye Correction .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 75 Effect .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

76 7 Using the Setup Menu .....

.....  
.....  
.....  
.....  
.....  
.....

...77 · Setting Memory Kit .....

.....  
.....  
.....  
.....  
.....

..... information presented is as accurate as possible but is subject to change without notice.

*Copyright This manual contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer. © Copyright 2008 Federal Communications Commission (FCC) Compliance This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · · · · Reorient or relocate the receiving antenna. Increase the distance between the equipment and the receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.*

*Consult the dealer or an experienced radio/TV technician for help. 7 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Warning: A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to radio and television reception. Use only shielded cable to connect I/O devices to this equipment.*

*Any changes or modifications not expressly approved by the manufacturer may void your warranty and service agreement. Declaration of Conformity This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions: · This device may not cause harmful interference. · This device must accept any interference received, including interference that may cause undesired operation. Trademark Recognition Windows 98/2000/ME/XP are registered trademarks of Microsoft Corporation in the United States and/or other countries.*

*Windows is an abbreviated term referring to the Microsoft Windows Operation System. All other companies or product names are trademarks or registered trademarks of their respective companies. · Safety and Handling Precautions Camera Information · · · · · 8 Do not take apart or attempt to service the camera yourself. Do not expose the camera to moisture, or extreme temperatures. Allow the camera to warm up when moving from cold to warm temperatures. Do not touch the camera lens. Do not expose the lens to direct sunlight for extended periods. Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the product. Wipe the product with a slightly damp soft cloth. Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)*

*Battery Information · · · · · Turn off the camera before installing or removing the battery. Use only the provided batteries or type of battery and charger that came with your camera. Using other types of battery or charger may damage the equipment and invalidate the warranty. When using Li-ion battery in this product, ensure that they are inserted correctly. Inserting the battery upside down can cause damage to the product and possibly cause an explosion.*



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/2645394)

[T1235 user guide](http://yourpdfguides.com/dref/2645394)

<http://yourpdfguides.com/dref/2645394>



When the camera is used for an extended period of time, it is normal for the camera body to feel warm. Download all pictures and remove the battery from the camera if you are going to store the camera for a long period of time. The type of battery and the battery power level may cause the lens to be stuck up. Ensure you use the correct battery type and use a fully charged battery.

Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

9 2 Introduction Congratulations on the purchase of your new Polaroid digital camera. This manual provides step-by-step instructions on how to use your camera, and is intended for your reference only. · Camera Features ······ 12 mega pixels resolution Up to 3x optical zoom and 5x digital zoom 1/2.3 inch CCD image sensor 3 inch color touch screen LCD monitor 32MB internal flash memory with optional external SD/SDHC card Supports up to 4GB of SD card, and up to 16GB of SDHC card Sleek metallic finish Easy-to-use button interface DCF, DPOF, PictBridge compatibility Slideshow feature to review your pictures and movies A/V output to view your pictures and movies on your TV USB port to transfer photos and movies to your PC Need help with your digital camera? Call our toll-free customer service number.

Look for the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). 10 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) · Package Contents Please check the contents of your camera package. It should contain: ola r oi d 3 x Zoo m L P s en t1235 Digital Camera Li-ion battery Battery charger Wrist strap USB cable Power cord Quick Start Guide t1035 CD-ROM Quick start guide AV cable Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 11 · Camera Views Shutter button Image Stabilizer button Power button Self-timer LED/AF Assist Lamp ola r oi d 3 x Zoo m L Flash P s en Zoom lens t1235 Microphone Operation LED Zoom buttons Wrist strap retainer Play button Display button LCD touchscreen Speaker Tripod socket USB/TV-out Port Battery/SD card door 12 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

com · Camera Buttons Button Power Image Stabilizer Shutter Your camera is equipped with different buttons for ease of use. Description Press to turn on/off the power. The image stabilizer sets the optimal ISO value according to light levels to compensate for camera shake. Press to set stabilizer on/off. Press to capture an image or start/stop recording a video or audio clip. If the camera is turned off, press and hold for 0.3 seconds to turn on camera in Playback mode. If the camera is turned on, press to toggle camera to Playback or Record mode. / Press the zoom buttons to change zoom focus. Press to change LCD screen display to show OSD icons and guide lines.

Playback Zoom Display DISP · Notifications Your camera gives feedback to users in two ways: · LED Indicators · Operation Sound Led Indicators Your camera is equipped with 2 LED indicators: ola r oi d 3 x Zoo m L Operation LED Self-timer LED /AF Assist Lamp P s en Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 13 Operation LED LED Status Off Green (steady) Green (fast blinking) Green (slow blinking) Amber (steady) Amber (very fast blinking) Amber (fast blinking) Amber (slow blinking) Power Off. Power On. Ready to take pictures / record / playback. Camera busy or deleting / copying images / recording / data transfer is in progress. Data transfer is in progress. Power saving (sleep mode). In Record mode, flash is charging or AF error. In Playback mode, self-timer countdown error.

Battery low or card error. Error message: card locked, file / folder error, no memory card, copy / format error. Camera Status Self-timer LED LED Status Off Red (fast blinking) Red (slow blinking) Self-timer off. Self timer countdown is set between 3 to 10 seconds. Self-timer countdown is set between 0 to 3 seconds. Camera Status 14 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) Operation Sound Your camera is equipped with a speaker to provide feedback to you. Buzzer One beep Two beeps Three beeps Camera Status Denotes the start of an operation like recording and printing. Also beeps when using menu and setting properties.

Denotes completion of an operation. Denotes low battery and other warning or error message like mem-ory full or card error. Beeps every second for countdown if self-timer is set between 3 to 10 seconds. Beeps every half second if self-timer is set between 0 to 3 seconds. Beep goes off when self timer is complete. The shutter is pressed to record an image. Continuous beep Shutter sound · Camera Memory Internal memory Your camera is equipped with 32MB of internal memory. Users can store images up to 10MB. If there is no memory card inserted in the memory card slot, all images, videos and audio clips recorded are automatically stored in the internal memory. External storage Your camera supports SD cards of up to 4GB in size.

It also supports SDHC card with a maximum capacity of 16GB. If there is a storage card inserted in the memory slot, the camera automatically saves all images, videos and audio clips in the external storage card. NOTE: · Not all cards may be compatible with your camera. When purchasing a card, please check the card's specifications and take the camera with you. Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

15 3 Getting Started · Attaching the Wrist Strap 1 2 · Inserting the Battery Follow these instructions to insert the Li-ion battery into the battery compartment. Please read "Battery Information" on page 9 before inserting/ removing the battery. 1. Slide the locking tab on the battery/SD card door in the direction of the arrow and flip the door open.

16 Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com) 2. Insert the battery into the compartment as shown with the terminals and the battery indent facing next to the battery/ SD card door. 3. Flip the door back into place as shown in the illustration and slide the locking tab in the direction of the arrow. · Inserting an SD/SDHC Memory Card Expand your camera's storage by using SD or SDHC memory cards. Your camera supports SD cards of up to 4GB and SDHC cards of up to 16GB in size. Polaroid t1235 Digital Camera User Guide [www.polaroid.com](http://www.polaroid.com)

com 17 Follow these instructions to insert the SD/SDHC card. 1. Make sure the power is off before inserting a SD/SDHC memory card. 2. Slide the locking tab on the battery/SD card door in the direction of the arrow and flip the door open. 3. Insert the SD/SDHC card into the memory card slot label side up.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/2645394)

[T1235 user guide](http://yourpdfguides.com/dref/2645394)

<http://yourpdfguides.com/dref/2645394>

4. Push the SD/SDHC card into the memory slot until it clicks into place. 5.

Flip the door back into place as shown in the illustration and slide the locking tab in the direction of the arrow. 18 Polaroid t1235 Digital Camera User Guide www.polaroid.com To remove the SD/SDHC card, gently push the card inward with your finger and release it. Pull out the card carefully.

· Charging the Battery The battery that comes along with your camera is not charged. You need to charge the battery before using the camera. 1. Insert the battery into the battery charger as shown. 2.

Connect the power cord to the battery charger. 3. Plug the power cord to the main outlet. The battery charging time is about 2 hours. The charger LED is in orange, indicating the charging in progress. The charger LED turns green when battery is fully charged. Polaroid t1235 Digital Camera User Guide www.polaroid.com 19 · Turning the Power On and Off There are two ways to turn on the camera: · Press and hold the Power button. The start up image displays briefly and the startup sound plays if enabled.

The zoom lens extends and the camera is turned on in the Record mode. Press and hold the Playback button. The camera is turned on in Playback mode. The zoom lens is not extended. Power button ola r oi d 3 x Zoo m L P s en · Playback button To turn off the camera, press the Power button. See "Modes" on page 22 to know more about Record and Playback mode. · Initial Settings When you turn on your camera for the first time, you will be asked to set the Language and Date. Setting the Language 1. Touch or to move through the selection. 2.

Touch to select your language. Setting the Date & Time 1. Touch the screen to move through date and time. 2. Touch or to change the value of date and time. 3. Touch SET to apply. 20 Polaroid t1235 Digital Camera User Guide www.polaroid.com Now, you are ready to start taking photos and videos.

NOTE: · Holding down or changes the values continuously. · If the battery is removed for more than 48 hours, the Date & Time will have to be reset. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. Polaroid t1235 Digital Camera User Guide www.polaroid.com 21 · Modes Your camera has two modes: Record mode · Set to the Record mode to capture still images, record videos and audio clips. · The Record mode has other setting.

For instance: · Snapshot mode. Use this mode to capture still images. Other scene modes can be selected in Snapshot mode. · Camcorder mode. Use this mode to record video. · Voice Recorder mode. Use this mode to record voice clips. See "Selecting the Record mode options" on page 23. Playback mode · Set your camera to Playback mode to view and edit captured images and playback videos and audio clips. You can also attach voice memo to still images in this mode. When you turn on your camera using the Power button, you are automatically in the Record mode. Switching between Record mode and Playback Mode Press the Playback button to switch between Record and Playback modes. 22 Polaroid t1235 Digital Camera User Guide www.polaroid.com Selecting the Record mode options section Maximize the quality and ease of use of your camera by using the different mode options.

The mode options allow you to capture images with preset settings according to scene conditions. 1. Set the camera to Record mode. 2. Touch to launch Quick-Set Bar.

A AF 1 12M ISO AUTO 3. Touch to launch Scene Mode submenu. 4. Touch to select scene. 5. Touch to close menu. NOTE: Scene mode icon may vary depending on the current mode. For more information, see "Setting Snapshot Menu" on page 45. Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.

polaroid.com. Polaroid t1235 Digital Camera User Guide www.polaroid.com 23 4 Using the LCD Screen The high resolution 3" touch screen LCD screen shows important information regarding your cameras' settings as well as the visual image of your photo or video. The display on the LCD screen is called the On Screen Display or OSD. · LCD Screen Layout The following illustrations shows the LCD screen layout and icon descriptions. Record Mode Screen Layout 1 2 3 4 2 5 6 7 8 12M 307 9 10 72 11 0.0EV 3200 17 No. 1 2 3 Item Record Mode Flash Focus Mode 12 16 15 14 13 Description Indicates the current record mode settings.

Indicates flash settings. Indicates focus mode settings. 24 Polaroid t1235 Digital Camera User Guide www.polaroid.com No.

4 5 6 7 8 9 10 11 12 13 14 15 16 17 Item Self-timer / Burst Image Stabilizer Zoom indicator Shots available Resolution Quality Focus frame Exposure Quick-Set Bar ISO White Balance Metering Histogram Battery Description Indicates drive mode settings. Indicates Stabilizer function is on. Displays zoom. Indicates the remaining shots available. Displays resolution settings.

Displays quality settings. Use to frame subject to capture. Displays exposure settings. Touch to activate Quick-Set Bar. Displays ISO settings. Displays white balance settings. Displays metering settings. Graphic display of ISO settings. Indicates battery level. Playback Mode Screen Layout The Playback mode display varies depending on the type of file being viewed.

Polaroid t1235 Digital Camera User Guide www.polaroid.com 25 Playback mode display of still images: 1 2 27/27 10 9 8 F 3.0 1/30 0.0EV 3200 3 7 No. 1 2. 3 4 5 6 7 8 9 10 Battery File no. / Total no. Recording information Quick-Set Bar Next Slideshow Previous Voice memo DPOF Protect Item 6 5 4 Description Indicates battery level..

Indicates the file number over the total number of files in the memory. Displays recording information of the file. Touch to activate Quick-Set Bar. Touch to display next file. Touch to start slideshow.

Touch to display previous file. Indicates voice memo is attached. Indicates the file is marked for printing. Indicates the file is protected. 26 Polaroid t1235 Digital Camera User Guide www.

polaroid.com Playback mode of videos: 1 2 27/27 8 3 12 11 9 00:00:53/00:01:11 7 6 5 4 10 No. 1 2 3 4 5 6 7 8 9 10 11 12 Battery Item Description Indicates the battery level. Indicates the file number over the total number of files in the storage card. Indicates the file is a movie. Touch to activate Quick-Set Bar. Touch to display next file. Touch to activate slideshow. Touch to display previous file. Indicates the file is protected.

Adjusts and displays volume level. Touch buttons to play / pause / stop / fast forward / rewind movie. Displays playing status. Indicates played time. File no. / Total no. Movie clip Quick-Set Bar Next Slideshow Previous Protect Volume Playback buttons Playing status Played time Polaroid t1235 Digital Camera User Guide www.



[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](http://yourpdfguides.com/dref/2645394)

<http://yourpdfguides.com/dref/2645394>

polaroid.com 27 Playback mode of audio clips: 1 2 27/27 8 3 12 11 9 00:00:53/00:01:11 7 6 5 4 10 No. 1 2 3 4 5 6 7 8 9 10 11 12 Battery Item Description  
Indicates the battery level.

Indicates the file number over the total number of files in the storage card. Indicates the file is an audio file Touch to activate Quick-Set Bar. Touch to display next file. Disabled slideshow icon. Available only in image/ video playback mode.

Touch to display previous file. Indicates the file is protected. Adjusts and displays volume level. Touch buttons to play / pause / stop / fast forward / rewind audio playback. Displays playing status.

Indicates played time. File no. / Total no. Voice memo Quick-Set Bar Next Slideshow Previous Protect Volume Playback buttons Playing status Played time

28 Polaroid t1235 Digital Camera User Guide www.polaroid.com Changing the LCD Screen Display The type of information displayed on the LCD screen can be changed using the Display DISP button. Press the Display button repeatedly to change the LCD display from one type to another. In Record Mode, the LCD display can be changed into any of the following: 307 12M 307 12M 0.0EV 3200 OSD on Full OSD on Guide lines on OSD off NOTE: · The OSD information may vary depending on the record mode type. · Use the "Guide lines" to properly align your image for capture.

Polaroid t1235 Digital Camera User Guide www.polaroid.com 29 In Playback mode, the LCD display can be changed into any of the following: 27/27 27/27 F 3.0 1/30 0.0EV 3200 OSD on Full OSD on OSD off NOTE: LCD display cannot be changed for the following situations: · Recording movie or audio clips · Playing movie or audio clips · Playing slideshow · Using Quick-Set Bar The Quick-Set Bar acts as a shortcut menu to adjust basic settings in Record and Playback Mode. The menu icons show the current settings for each function. The icons vary depending on the selected mode and its settings. Touch Touch to launch Quick-Set Bar. to close Quick-Set Bar. 307 12M Quick-Set Bar icon 30 Polaroid t1235 Digital Camera User Guide www.polaroid.com Snapshot Mode 1 2 3 4 5 A AF 1 10M ISO AUTO 6 The Quick-Set Bar in Snapshot mode contains nine menu options, three of which are user-defined. Availability of some menu functions vary depending on the scene mode selected. Unavailable functions or functions with preset settings appear as grayed out icons. 7 No.

1 2 3 4 5 6 Menu Item Scene Mode Flash Focus Mode Drive Mode Main Menu Hot Key Description Touch to select scene mode. Touch to change flash settings. Touch to change focus mode settings. Touch to change drive mode settings. Touch to go to Snapshot and Settings Menu.

Touch to change settings of selected function. The three hot keys can be changed by the user. See "Setting Hot Key" on page 81. Touch to close Quick-Set Bar.

7 Close Polaroid t1235 Digital Camera User Guide www.polaroid.com 31 To enter the function submenu, touch the corresponding icon. For example, to access Flash mode submenu, touch Flash mode icon, the submenu options pop up. See illustration on the right. To select option, touch the desired setting icon.

Touch to exit submenu. A AF 1 10M ISO AUTO Camcorder Mode 1 2 3 4 5 6 40 6 AF 7 8 9 AWB The Quick-Set Bar in Camcorder mode contains 9 menu options. You can easily set basic video settings using the menu options here. Functions with preset settings appear as grayed out icons. To activate the function submenu, touch the function icon. To access other camcorder settings, touch the Main menu icon. N 32 Polaroid t1235 Digital Camera User Guide www.polaroid.com No. 1 2 3 4 5 6 7 8 9 Menu Item Scene Mode Movie Size Frame Rate White Balance Main Menu Quality Drive Mode Effect Close Description Touch to select scene mode.

Touch to change size settings. Touch to change frame rate settings. Touch to adjust white balance. Touch to go to Camcorder and Settings Menu. Touch to change quality settings.

Touch to change drive mode settings. Touch to add effects. Touch to close Quick-Set Bar. Voice Recorder Mode 1 The Quick-Set Bar in Voice Recorder mode contains three menu options. To access the settings menu, touch the Main Menu icon.

No. Menu Item Scene Mode Main Menu Close Description Touch to select scene mode. Touch to go to Settings Menu. Touch to close Quick-Set Bar. 2 3 1 2 3 Polaroid t1235 Digital Camera User Guide www.polaroid.com 33 Playback Mode 1 2 3 4 5 6 7 8 9 10 The Quick-Set Bar in Playback mode contains 10 menu options. Unavailable functions or functions with preset settings appear as grayed out icons. To activate the function submenu, touch the function icon. To access other playback settings, touch the Main Menu icon.

Menu Item Effect Rotate D-Lighting Protect Main Menu Add Memo Photo Frame DPOF Delete Close Description Touch to add effects to image. Touch to rotate image. Touch to adjust D-lighting settings. Touch to lock image. Touch to go to Main Menu. Touch to add a memo dialog to the image. Touch to add photo frame to image. Touch to mark image for printing. Touch to delete image. Touch to close Quick-Set Bar.

No. 1 2 3 4 5 6 7 8 9 10 Need help with your digital camera? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com.

34 Polaroid t1235 Digital Camera User Guide www.polaroid.com 5 Recording Photos, Videos and Voices · Taking Photos Now that you are familiar with your camera, you are now ready to take your photos. Taking photos with your camera is very simple. 1. Turn on the camera by pressing the Power button. 2. Frame your shot using the focus frame on the LCD screen. 3. Press the shutter button halfway down. The camera automatically adjusts the focus and exposure. When the camera is ready to take the photo, the focus frame turns green, the shutter speed and aperture value are displayed. (When the focus frame is in red and the operation LED blinks, the subject is not in focus. Release the shutter button, recompose the scene and press the shutter button halfway to reset the focus.) 4.

Continue pressing the shutter button all the way down to capture your image. When the shake warning icon appears, hold the camera steadily, with your arms at your side or use a tripod to stabilize the camera to prevent a blurry image. You may need to turn on the camera's flash to get a better picture. Polaroid t1235 Digital Camera User Guide www.polaroid.com 35 307 12M F 3.0 1/30 3200 · Using the Image Stabilizer The Image Stabilizer function prevents blurred images caused by shaking. This function is only available if ISO is set to Auto. See "ISO" on page 47 on how to adjust the ISO settings. To activate Stabilizer · Press the Stabilizer button on top of your camera to enable/disable the stabilizer.

Image Stabilizer button · Setting the Zoom Control Your camera features up to 3x optical zoom and up to 5x of digital zoom.



[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](http://yourpdfguides.com/dref/2645394)  
<http://yourpdfguides.com/dref/2645394>

Optical zoom is achieved by mechanically adjusting the lens while digital zoom is activated through the menu settings. Please refer to "Setting Digital Zoom" on page 79 on how to setup digital zoom. Press to zoom in. 1.

Press the Zoom buttons to zoom in or Press to zoom out. zoom out an image. 2. The zoom indicator appears on the Zoom buttons LCD screen. 3.

Keeping pressing the T button and the camera switches from optical zoom to digital zoom when it reaches the maximum optical zoom. 36 Polaroid t1235 Digital Camera User Guide www.polaroid.com 4. The zoom setting does not reset to wide angle after taking a picture. Use the W button to return to the wide angle setting if you want to take a normal size picture. 307 307 Optical zoom Digital zoom 0.0EV 3200 0.0EV 3200 · Setting Scene Mode Setting the Scene mode allows you to capture your images with preset settings according to the scene or environment. 1.

Touch > to launch Scene Mode submenu. 2. Touch to select a desired scene. NOTE: The Scene Mode icon may vary depending on the current settings. A AF 1 12M ISO AUTO Polaroid t1235 Digital Camera User Guide www.polaroid.com 37 The following table shows the available scene mode settings. Icon. Auto Program Intelligent Scene Item Description The simplest way to shoot basic images. Settings are adjusted automatically.

The camera automatically adjusts suitable shooting settings like shutter speed and aperture values. The camera detects the shooting conditions and automatically switches to the appropriate scene mode. The camera blurs the background to focus on the subject. This feature is used to emphasize wide scenic views. This feature enhances the red hue for capturing sunset images.

This feature is used to capture the image of a backlight object by changing the camera's metering. This feature is used to capture still images of moving kids.

This feature is used to capture images with night scenery background. This feature slows shutter speed to capture fireworks explosions. This feature is used for snow scenes.

This feature captures still images in high speed movements. Portrait Landscape Sunset Backlight Kids Night Scene Fireworks Snow Sports 38 Polaroid t1235 Digital Camera User Guide www.polaroid.com Icon. Party Item Description This feature is used for wedding or indoor party settings. This feature is used to capture warm candle light effects. This feature is used to capture portrait pictures with night or dark background. This feature enhances skin tone and facial skin appears smooth. This feature enhances smooth effects like water or silk. This feature is used to capture food images.

The increased saturation in this mode makes the captured image more enticing. This feature enhances the edges of captured images. This feature enhances the black and white contrast normally used when capturing text images. Pictures taken in Auction mode are automatically saved under a specific folder named "\_AUCTION". This feature uses smile tracking to automatically detect faces to capture. When smiles are detected, it continuously captures the image. Used for taking panoramic pictures This feature detects if the subject blinked an eye when the image is captured and gives the user an option whether to save it or not. This mode is used to record movie clips. This mode is used to record audio clips. Candlelight Night Portrait Soft Skin Soft Flowing Water Food Building Text Auction Smile Detection Photo Stitch Blink Detection Camcorder Voice Recorder Polaroid t1235 Digital Camera User Guide www.polaroid.com 39 Using Intelligent Scene Mode With the Intelligent Scene Mode, the camera automatically detects the shooting conditions and switches to the appropriate scene and settings when aiming on a subject. This feature is most useful for novice users to capture great images even without basic knowledge of photography. Intelligent scene icon. After the camera detects the shooting conditions, this icon changes to show the detected scene mode.

AF 307 12M To activate Intelligent Scene 1. Select from the Scene Mode submenu. 2. Focus the camera on the subject to capture. 3.

The camera detects the shooting conditions and switches to an appropriate scene mod Portrait Mode Icon AF 307 12M The camera displays a solid white frame when a face is detected. 4. Half press the shutter button to focus the subject. The frame turns green to indicate focus is set 5. Press the shutter button to take the shot The table below shows the modes supported by Intelligent scene: 40 Polaroid t1235 Digital Camera User Guide www.polaroid.com Icon. Intelligent Scene Modes Portrait Blacklight Landscape Description This mode is set when a face is detected. This mode is set when a face is detected with an EV setting greater than 2.5.

This mode is set when: · There is no face detected. · The focus distance is more than 1.5 meters. · The EV setting is greater than 11 or 10.5. This mode is set when: · There is no face detected · The focus distance is within the macro range. @@ This mode is set when: · There is no face detected. · The focus distance is more than 1.5 meters. @@@@ Select from the Scene Mode submenu.

2. Focus the camera on the subject to capture. A solid white frame appears when a face is detected. 3. Press the shutter button to start smile detection.

@@@@ The camera will automatically take a shot of the image. It will continuously take shots whenever a smile is detected. 5. To stop shooting, press the shutter button again. @@@@ Select from the Scene Mode submenu.

2. Half press the shutter button to focus the subject. @@ Press the shutter button to capture the image. @@ In this case, the screen on the right is displayed. 4. @@@@ 1. Select from Scene Mode submenu. 2. @@@@ 1. Touch > Flash mode icon.

2. @@@@ The flash is turned off. @@ The flash fires twice to reduce the red-eye effect when necessary. The flash fires twice to reduce the red-eye effect.

@@ Some menu functions may be disabled depending on current scene mode. 1. Touch 2. @@ 3. To select an item, touch the icon. 4.

@@ 5. Touch to exit submenu. Indicates current page no. / total no. @@ Changing the resolution affects the number of images that can be stored in your memory card.

The higher the resolution, the more memory space is required. 4000x3000 4000x2672 3264x2448 1/3 The table below shows the resolution values for still images. Icon 12M 3:2 8M 5M Pixel Size 4000 x 3000 4000 x 2672 3264 x 2448 2592 x 1944 3M Icon Pixel Size 2048 x 1536 1920 x 1080 640 x 480 16:9 VGA Polaroid t1235 Digital Camera User Guide www.polaroid.com 45 Quality The Quality function lets you adjust the quality settings of your photos before you capture them.

The quality determines the amount of compression applied to your photos. More compression results in a more detailed image. However, the higher the quality, the more memory space is required in your memory card. Available settings for still images are as follows: Super fine, Fine, and Normal.



[You're reading an excerpt. Click here to read official POLAROID](#)

[T1235 user guide](#)

<http://yourpdfguides.com/dref/2645394>

*Quality Superfine Fine Normal 1/1 ISO* The ISO function lets you adjust the ISO sensitivity in recording still images depending on the light level of your surroundings. · Use a higher ISO setting in dim conditions and a lower ISO setting in brighter conditions. Available settings are: Auto, 80, 100, 200, 400, 800, 1600, and 3200. ISO ISO AUTO ISO 80 ISO 100 Auto 80 100 1/3 · NOTE: Higher ISO speeds may increase image noise or grain in your pictures. To get better images, use as low as an ISO speed as possible. 46 Polaroid t1235 Digital Camera User Guide www.

*polaroid.com Metering* The Metering function lets you select the area of the subject or frame by which the camera measures light to record still images or movies. Metering Multi Center Spot 1/1 Icon. Item Multi Center Spot Description The camera measures the exposure readings from multiple points in the subject area. The camera measures the average light from the entire frame but gives more importance to the values near the center. The camera selects the exposure value based on the center of your picture. White Balance The White Balance function allows you to adjust the camera settings according to the type of lighting present when recording still images and movies. · When you touch a selection, you can see the preview on the LCD screen at the same time. White Balance AWB SET Polaroid t1235 Digital Camera User Guide www.polaroid.

com 47 · Touch SET to save and apply settings. Icon. Item Auto Daylight Cloudy Tungsten Fluorescent Custom Description The camera automatically adjusts the white balance. Ideally used for bright sunny conditions. Ideally used for cloudy conditions.

Ideally used for indoor photos with tungsten or halogen lighting without a flash. Ideally used for indoor photos with fluorescent lighting conditions. Used to measure the white balance manually. Used when light source cannot be specified. When user touches this icon, WB icon appears AWB WB White Balance

NOTE: In most picture taking conditions the use of the Auto setting is recommended to provide the correct color balance your image.

*Effect* The Effect function lets you record still images or movies and apply different colors or tones for a more artistic effect. · Touch a selection to view the effect on the LCD screen. · Touch SET to save and apply settings. Effect N V S BW R G B SET 48 Polaroid t1235 Digital Camera User Guide

www.polaroid.com Icon. N V Item Normal Vivid Sepia B&W Vivid Red Vivid Green Vivid Blue Description The camera records normally. The camera captures the image with more contrast and saturation emphasizing on the bold colors. Images are captured in sepia tones. Images are captured in black and white.

*Captured image becomes reddish.* Ideally used to record images like flowers and cars to make them more vivid. *Captured image becomes greenish.* Ideally used to record images like mountains and lawns to make them more vivid. *Captured image becomes bluish.* Ideally used to record images like the sky and the ocean, to make them look more vivid. AF Area Center Wide MF Manual 1/2 S BW R G B AF Area Automatic Focus (AF) determines the area on which the camera focuses. The table below shows the available AF area settings. Icon. Item Center Wide Manual Description The focus area is fixed on the center.

The camera automatically selects focus area within the wide frame. User manually determines the area of focus. Polaroid t1235 Digital Camera User Guide www.polaroid.com 49 Touch Shot Face Tracking User manually determines the area of focus and take a shot by touching the focus frame on the screen.

The camera automatically detects the position of a face and sets the focus. Using Manual and Touch Shot AF Area modes When you exit the menu after selecting manual or touch shot mode, a yellow focus frame appears on the LCD screen. AF 307 12M Yellow Focus Frame AF 307 1. Tap and hold the yellow focus frame to display the instruction frame. AF 307 12M Instruction Frame 2.

Drag the yellow focus frame within the instruction frame to manually choose 3. Capture the image. · In Manual mode, release your finger then press the shutter button to capture image. · In Touch Shot mode, release your finger, the camera automatically captures the image. After capturing the image, the yellow focus frame remains on the position where your finger released it. 50 Polaroid t1235 Digital Camera User Guide www.polaroid.com Flash Intensity

The Flash Intensity function allows users to adjust the intensity of flash to capture image with a brighter or dimmer lighting effect. The table below shows the available settings. Icon.

Item High Normal Low Description Captures image with brighter lighting. Normal lighting is applied. Captures image with dimmer lighting. EV Compensation In difficult lighting condition, the auto exposure function of your camera may be misled into giving the wrong readings. Exposure Value (EV) function allows you to adjust the exposure value and correctly expose your images. Available for still images only. · · · EV Compensation 0EV SET To adjust EV settings, touch and , drag or touch the slider bar to increase decrease the value. As you adjust the settings, the LCD screen synchronously displays the image applying the EV settings. Touch SET to save and apply changes. The available settings are: +2.

0EV, +1.7EV, +1.3EV, +1.0EV, +0.7EV, +0.

3EV, 0EV, -0.3EV, -0.7EV, -1.0EV, -1.3EV, -1.

7EV, and -2.0EV. Polaroid t1235 Digital Camera User Guide www.polaroid.com 51 Photo Frame The Photo Frame function allows users to capture image enclosed in a frame for added effects. To activate Photo Frame: · Touch On. · The LCD screen displays the frame. Touch the or to move through other frame selection. Press the shutter button to capture image with selected frame. · Sharpness This function allows you to enhance or soften finer details of your photos.

The table below shows the available Sharpness settings. Icon. Item High Normal Low Description Sharpens the image. Normal sharpness. Softens the image.

*Saturation* The Saturation function lets you adjust the color saturation in your photos. Use a higher saturation setting for rich colors and a lower saturation setting for more natural tones. 52 Polaroid t1235 Digital Camera User Guide www.polaroid.com The table below shows the available Saturation settings.

Icon. Item High Normal Low Description Enhances saturation. Normal saturation is applied. Reduces saturation. Contrast This function allows you to adjust the contrast of your photos.

The table below shows the available contrast settings. Icon. Item High Normal Low Description Enhances the contrast. Normal contrast. Reduces the contrast.

Date Stamp The Date Stamp function allows you to add the recorded date and time they were taken on your photos.



**You're reading an excerpt. Click here to read official POLAROID T1235 user guide**  
<http://yourpdfguides.com/dref/2645394>

The recorded date and time are based on your camera's clock settings. Once date and time are stamped on a photo, they can no longer be edited or deleted. Limitations of Date Stamp functions are as follows: · Available for still images only. · May slowdown AEB/ continuous shooting when Date Stamp is enabled in AEB/ Burst mode. · If Date Stamp is enabled, digital zoom is automatically turned off. · In vertical or rotated images, the date and time on your photos still appear horizontally. Available settings are: Date, Date & Time, Off. Polaroid t1235 Digital Camera User Guide www.polaroid.com

com 53 Focus Mode Icon. This function allows users to define the type of focus to capture image. The table below shows the available settings. Item Auto Focus Macro Description Camera automatically focuses on a specific object. Camera focuses on the detail and sharpness of a very close image. If Macro is enabled, the macro icon is displayed on the LCD screen. Camera focuses on every object. Camera focuses on distant objects. AF PF INF Pan Focus Infinity Drive Mode Your camera features a Self-timer and Burst which can be set in the Drive mode function. The Self-timer allows you to take photos after a pre-defined delay.

While burst lets you take consecutive shots. This function is only available in recording still images. The Drive mode setting is automatically set to off when you turn off the camera. The table below shows the available Drive mode settings. Icon.

Off 10 Sec Self-timer 2 Sec Self-timer Burst Item Description Captures an image without time delay. Sets a 10-second delay to capture image after pressing the shutter button. Sets a 2-second delay to capture image after pressing the shutter button. Performs continuous shooting when the shutter button is pressed. Stop shooting when the shutter button is released.

10 2 54 Polaroid t1235 Digital Camera User Guide www.polaroid.com AEB Automatic Exposure Bracketing (AEB) captures the same image with three different exposure settings: standard, under, and over exposure. Perform 12 continuous shooting when the shutter button is pressed. Speed Burst AF Lamp The AF Lamp function allows you to record images even in low light conditions. If AF Lamp is set to Auto, the AF lamp located in the front of the camera emits a red light by half pressing the shutter button allowing the camera to focus easily. Available settings are: [Auto] and [Off]. AF Lamp Auto Off 1/1 · Recording Movies You can record movies with the camera, the available recording time depends on the capacity of the memory card. Videos can be recorded until the maximum memory capacity has been reached. However the length of a single video may be limited depending on the camera model.

1. To select Camcorder mode, touch from Scene Mode menu. 2. Focus your camera on the subject that you want to take. 3. Press the Shutter button to start recording. 4. Use the control to zoom in and zoom out an image. 5. To stop recording, press the Shutter button.

Polaroid t1235 Digital Camera User Guide www.polaroid.com 55 00:10:00 NOTE: · Sound cannot be recorded while pressing the control. · When the maximum capacity for a single video has been reached, simply press the shutter button again to continue recording. · The camera will automatically stop recording when the memory capacity is full.

Camera Settings to Record Movies Use the Quick-Set Bar to change camera video settings. The Quick-Set Bar contains shortcuts to the following menu items: Movie Size, Quality, Frame Rate, Drive Mode, White Balance Effect, and Main Menu. Touch an icon to open the submenu. 640 AF AWB N Use the Camcorder Menu to change other settings like: Effect, Sharpness, Saturation, Contrast and Focus Mode. To access Camcorder menu, touch to open Main Menu from the .

Movie Size Quality Frame Rate White Balance 1/3 AWB Quick-Set Bar. Then touch Setting Movie Size The Movie Size function icon appears only in Movie Mode. Use this function to adjust the resolution and quality of movie clips. Illustration The table below shows the available size and corresponding image quality settings. 56 320 16:9 640 640 AWB N Polaroid t1235 Digital Camera User Guide www.polaroid.com Icon. Frame Size 640X 480 848 X 480 320 X 240 640 X 480 Description High Quality High Definition Picture Quality Normal YouTube Mode YouTube Mode YouTube Mode allows you to record movies with predefined video settings for easy upload to the YouTube website. YouTube supports two file upload standards: · Single File Uploader. The maximum movie file size is up to 100 MB.

· YouTube Uploader. The maximum movie file size is up to 1 GB. Most uploaded movie length ranges within 5 minutes, although you can upload a maximum movie length of 10 minutes. Therefore when you record using the YouTube mode, the following standards are followed: · Recorded movies are set to YouTube standard resolution of 640 X 480. · Recording automatically stops when the file reaches 100 MB. Recorded movies in the YouTube mode are stored following the DCF rule, however movies are saved in a specific folder named "\_UTUBE". For more details, please refer to "Folder Structure" on page 90. · To record a YouTube movie, select from the Movie Size function. Available recording time for a YouTube movie is up to 10 minutes. Polaroid t1235 Digital Camera User Guide www.polaroid.com

57 Setting Frame Rate Frame Rate function appears only in Camcorder mode. Use this function to specify the number of frames to capture per second (fps). The higher the frame rate value, the smoother the movie playback will be. To set frame rate, touch to activate QuickSet Bar.

Touch the frame rate icon, then select option. Available settings are: 15fps, and 30 640 640 30 AWB N 30fps. AWB Setting White Balance To set white balance, tap white balance screen. to activate Quick-Set Bar. Tap to display the Setting Quality The quality determines the amount of compression applied to the movie.

More compression results in a more detailed image. However, the higher the quality, the more memory space is required in your memory card. To set the quality, tap to activate Quick-Set Bar. Tap the quality icon, then select an option. Available settings are: Super fine, Fine, and Normal. 640 30 AF N AWB Setting Focus Mode 58 This function allows users to define the type of focus when recording movies. Polaroid t1235 Digital Camera User Guide www.polaroid.com To set focus mode, tap to activate Quick-Set Bar. Tap the focus mode icon, then select option.

The table below shows the available settings. Icon. Item Auto Focus Macro Description Camera automatically focuses on a specific object. Camera focuses on the detail and sharpness of a very close image. If Macro is enabled, the macro icon is displayed on the LCD screen. Camera focuses on every object.



[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](http://yourpdfguides.com/dref/2645394)  
<http://yourpdfguides.com/dref/2645394>

Camera focuses on distant objects. AF PF Pan Focus Infinity INF Setting Effect To set an effect, tap the effect screen. · Recording Voices to activate Quick-Set Bar. Tap N to display 1.

To select Voice Recording mode, touch from Scene Mode menu. The voice Recording Quick-Set Bar is displayed on the LCD screen. 1. Press the Shutter button to close the Quick-Set Bar and display the Ready to record screen. See picture on the right.

3. Touch 4. Touch 00:10:00 Ready to record 00:00:00 or press the Shutter button to start recording. or press the Shutter button to stop recording. NOTE: Voice recording will automatically stop when the maximum memory capacity is full.

Polaroid t1235 Digital Camera User Guide 59 www.polaroid.com 6 Playback View images, videos and audio clips through your camera's Playback mode. · Viewing in Single Navigation The Single navigation mode displays the images one by one on the LCD monitor. To view images/videos/audio clips, follow the steps below. 1. Press the Playback button to set or turn on the camera to Playback mode. 2. The LCD screen displays an image. To understand the icons and other information on the screen, please see "Playback Mode Screen Layout" on page 25.

Still Image 27/27 Movie 27/27 Audio Clip 27/27 3. Touch or to view next/previous image/video/voice recording. 4. To access Quick-Set Bar, touch . 5. To play a video or a voice recording, touch anywhere on the LCD screen. See "Playing Movies" on page 63 and "Playing Voice Recording" on page 64 for more details. · Viewing Slideshow The Slideshow function allows you to view all stored images/videos/voice recordings in still image format in a continuous sequence. To view slideshow, touch 60 . Polaroid t1235 Digital Camera User Guide www.polaroid.com

To stop slideshow, touch anywhere on the LCD screen. · Viewing in Drag & Play Mode 1. Press the W button to view files in Drag & Play mode. 2.

Touch and drag your finger to the left or right or touch or to change display to previous/next file. 3. Touch the image/video/voice recording to view/play it normally. · Viewing Thumbnails 1. From single navigation mode, press the W button twice to view 12-image thumbnails.

2. Touch or to view next/previous page. 3. Touch a thumbnail to view it normally. Thumbnail icons Icon. When you view the thumbnails, some images may contain icons. These icons indicate the type of file or recording. Type Voice Memo Description Indicates that a voice memo is attached to the image. Movie Indicates a recorded movie. The displayed image is the first frame of the movie clip.

Polaroid t1235 Digital Camera User Guide www.polaroid.com 61 Locked File Indicates that the image has been locked. Locked files cannot be edited or deleted. Indicates a voice recording file. Voice Record DPOF File Indicates the file is marked for printing. File Error Indicates an error file. · Zooming Images The zoom view function works with still images only. In normal view, press the T button to activate zoom function, see picture below. Shows zoom location 2.

0x You can view an image from 1x to 12x. To achieve your desired view, press the T button repeated to increase the zoom. Press the W button to decrease the zoom. You can also touch or to decrease/increase zoom. .

. To trim an image based on selected zoom view, touch To exit zoom function, touch 62 Polaroid t1235 Digital Camera User Guide www.polaroid.com · Trimming an Image The Trim function allows you to trim an image to another image size. This function is only available for still images.

1. View the image to trim. 2. Press the T button to activate zoom function. 3. 4. 5. Press the T/W button or touch view. or repeatedly for the desired image NOTE: Once an image is over written you cannot go back to the original image. Touch to trim image.

Confirm trim, select whether to: · Yes. Save changes to a new file. · No. Discard changes. · Overwrite. Save and apply changes to the current file. · Playing Movies 1. 2. 3. 4.

Select video to play. A video file has a video icon displayed on screen. Touch anywhere on the LCD screen to play video. During playback, touch anywhere on the LCD screen to display the video toolbar. During playback, use the to control volume.

Press the T/W button to increase/ decrease volume. Touch or or the slider bar to rewind or fast forward the movie. Touch Touch to pause playback. Touch to stop playback. The LCD 00:30/00:50 27/27 5.

6. 7. to resume playback. screen displays the movie frame image in Single navigation mode. Polaroid t1235 Digital Camera User Guide www.polaroid.com 63 · Playing Voice Recording 1. 2. 3. Select the voice recording file to play.

Touch anywhere on the LCD screen to play recording. During playback, use the buttons to control volume. Press the T/W button to increase/decrease volume. Touch Touch Touch or or the slide bar to rewind or fast forward the voice recording. 5. 6. to pause playback. Touch to stop playback. The LCD to resume playback. screen displays the movie frame image in Single navigation mode.

00:00:53/00:01:11 4. · Playing Voice Memo Voice memo is recorded and attached separately to a captured image. See "Voice Memo" on page 74 on how to record voice memo. 1. Select the image with voice memo.

An image file with voice memo has a voice 2. 27/27 memo icon located on the left side of the LCD screen. Touch the voice memo icon to play voice memo. 00:00:53/00:01: 3. During playback, use the to control volume.

Press the T/W button to increase/decrease volume. 4. Touch or or the slider bar 64 Polaroid t1235 Digital Camera User Guide www.polaroid.com to rewind or fast forward the voice recording. 5. Touch to pause playback. Touch to resume playback. 6. Touch to stop playback.

The LCD screen displays the movie frame image in Single navigation mode. · Using My Drawing My Drawing function lets you draw freely and add other graffiti on still images. This function is not available for images captured with VGA and 16:9 HD resolution. 1. 2. 3. 4. View image to add drawings to. Touch > . The My Drawing toolbar is displayed on the LCD screen.

Touch on an icon to use the function. For example, to draw freely on the image, touch the pen icon. Press Display button to hide the toolbar. 5. Start drawing on the image.

See picture on the right. 6. When done, press Display button to display the toolbar. 7. Touch to save changes.

8. Select whether to: · Yes. Save changes to a new file. · No. Discard changes. · Overwrite. Save and apply changes to the current file. Save As Yes No Overwrite? Polaroid t1235 Digital Camera User Guide www.polaroid.com 65 Using My Drawing Toolbar Icon.

Description The toolbar icons may vary depending on the current function selected. Icon Description Touch to select color. Touch to undo/redo last operation.

[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](#)



<http://yourpdfguides.com/dref/2645394>



Touch to reset all operations. Touch to save changes. Touch to exit My Drawing function. Touch to draw freely on the photo. Touch to stamp symbols on the photo. Touch to erase drawings on the photo. Touch to select pen stroke.

Touch to select stamp stroke. · Adding a Memo Dialog to an Image The Add Memo function lets you add a memo dialog to a still image. This function is not available for images captured with VGA and 16:9 HD resolutions. 1. View the image to add memo dialog to.

2. Touch > . The My Drawing toolbar is displayed on the LCD screen. 3. Touch to use add memo function.

Touch to select dialog stroke. 4. Press Display button to hide the toolbar. 5. Touch on the LCD screen position to add memo dialog. 6. When done, press Display button to display the toolbar. Polaroid t1235 Digital Camera User Guide www.polaroid.com 66 7.

Touch to save changes. 8. Select whether to: · Yes. Save changes to a new file. · No. Discard changes. · Overwrite. Save and apply changes to the current file.

Save As Yes No Overwrite? · Rotating Images The Rotate function lets you change the orientation of a saved photo. This function is only available for still images.

Rotated images are saved as the current file. 1. View the image to rotate. 2. Touch > .

3. Touch or to rotate image 90° counterclockwise / clockwise. Touch the icons repeatedly until desired orientation is achieved. The preview on the LCD screen changes at the same time. 4.

Touch SET to apply and save changes. SET · Adding Photo Frame For a more artistic effect, you can frame your still images using the Photo Frame function.

This function is for still images only. However, photo frame is not available for images captured in 16:9 HD resolutions. 1. View the image you want to add photo frame to. 2. Touch > . The framed image is displayed on the LCD screen. 3.

Touch or to move through the photo frame selections. Polaroid t1235 Digital Camera User Guide www.polaroid.com SET 67 4. Touch SET to add selected photo frame. 5. Select whether to: · Save As. Save image as a new file. · No. Discard changes.

· Overwrite. Save and apply changes to the current file Save As Yes No Overwrite · Setting D-Lighting The D-Lighting function allows you to manually adjust the exposure to compensate for inadequate lighting conditions. This function is only applicable for still images. The edited image can be saved as a new file.

1.

View the file to adjust lighting. 2. Touch > . 3. Touch or the slider bar to increase/ decrease the value.

As you adjust the settings, the LCD screen synchronously displays the image apply the new settings. · Available settings are: 0.0, 1.0, 2.0, 3.0, and 4.0. 4.

Touch SET to continue. 5.

Select whether to: · Yes. Save as another file. · No. Discard changes. · Overwrite. Save and apply changes to the current file. D-Lighting 0.0 SET Save As Yes

No Overwrite? 68 Polaroid t1235 Digital Camera User Guide www.polaroid.com · Setting DPOF The Digital Print Order Format (DPOF) function allows you to mark still images in your memory card for printing and allows you to specify the number of copies that you want to print at a later date.

When all images to be printed are marked, take the memory card to a digital printing service, or use a DPOF compatible printer. To set DPOF on a single file

1. View image/video/voice recording you want to set DPOF on the LCD screen. 2. Touch > .

3. To set DPOF on currently viewed file, touch Yes. 4. Set the number of copies and date stamp on/off. Touch the up/down keys to change settings.

5. Touch SET to save settings. Set DPOF? Yes No Select All DPOF Setting Copies 01 Date Yes To set DPOF on multiple files 1. Touch > . 2. Touch Select.

The LCD screen displays files in thumbnail view. 3. Touch a thumbnail to mark file for printing. The DPOF icon appears on the thumbnail.

4. Touch DPOF to continue. 5. Select Yes to confirm. SET DPOF Polaroid t1235 Digital Camera User Guide www.polaroid.com 69 6. Set the number of copies and date stamp on/ off. 7. Touch SET to save settings.

Set DPOF? Yes To set DPOF on all files Touch > . Touch All. Confirm to set DPOF on all files. Set the number of copies and date stamp on/ off. 5.

Touch SET to save settings. 1. 2. 3. 4.

No Set DPOF to all? Yes No To set DPOF off Files marked for printing can be set off following the same procedures above. NOTE: · If the camera is in thumbnail mode, touching > displays protect multiple files interface. · You can specify up to 30 copies for DPOF. If you specify 0 copies, the DPOF setting of that image is automatically disabled. · Protecting/Unprotecting Files The Protect function lets you lock a file to protect it from being modified or accidentally erased. A protected file has a lock icon when viewed on Playback mode. NOTE: If the camera is in thumbnail mode, touching files interface. 70 > displays protect multiple Polaroid t1235 Digital Camera User Guide www.polaroid.com To protect a file 1.

View image/video/voice recording you want to protect on the LCD screen. 2. Touch > . See picture on the right. 3. To protect currently viewed file, touch Yes.

Protect this file? Yes No Select All To protect multiple files 1. Touch > . 2. Touch Select.

The LCD screen displays files in thumbnail view. 3. Touch a thumbnail to mark file for protection. The protect icon appears on the thumbnail. 4.

Touch Protect to protect marked files. 5. Select Yes to confirm protect. Prot. To protect all files 1.

Touch > . 2. Touch All. 3. Confirm to protect all files. Protect selected? Yes No To unprotect files Protected files can be unlocked following the same procedure above. Touching > displays an unprotected confirmation message. See pictures on the right. Unprotect this file? Yes No Select All Polaroid t1235 Digital Camera User Guide www.polaroid.

com 71 · Deleting Files The Delete function lets you remove unwanted files in the internal memory or on the memory card. NOTE: Protected files can not be deleted. Make sure the file is not protected before proceeding. To unprotect a file, see "To unprotect files" on page 71. If the camera is in thumbnail mode, touching > displays delete multiple interface. Delete this file? Yes Voice only Select All To delete a file 1. View image/video/voice recording file you want to delete on the LCD screen. 2. Touch > . See picture on the right.

3. To delete currently viewed file, touch Yes. To delete a voice memo 1. View the image file with voice memo attached on the LCD screen. 2.

Touch > . 3. To delete the voice memo only, touch Voice only. Voice only icon is enabled only when viewed image has a voice memo attached. To delete multiple files 1.

Touch > . 2. Touch Select. The LCD screen displays files in thumbnail view. 3. Touch a thumbnail to mark file for deletion. The recycle bin icon appears on the thumbnail. 4. Touch Delete to delete marked files.



[You're reading an excerpt. Click here to read official POLAROID T1235 user guide](#)

