



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID TLU-02041B. You'll find the answers to all your questions on the POLAROID TLU-02041B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID TLU-02041B**  
**User guide POLAROID TLU-02041B**  
**Operating instructions POLAROID TLU-02041B**  
**Instructions for use POLAROID TLU-02041B**  
**Instruction manual POLAROID TLU-02041B**

HD-Ready Widescreen LCD TV with Digital Tuner



Your TV may look different from the one pictured above.

**Questions? Need some help?**

This manual should help you understand your new product. If you have questions, call our free-phone number found on the insert with this icon:



Or visit [www.polaroid.com](http://www.polaroid.com).



[You're reading an excerpt. Click here to read official POLAROID TLU-02041B user guide](http://yourpdfguides.com/dref/1312836)  
<http://yourpdfguides.com/dref/1312836>

**Manual abstract:**

Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions. For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com). This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to [www.polaroid.com](http://www.polaroid.com)

and click on "Company" or call the customer service number for your country listed in the instruction manual. This TV incorporates High-Definition Multimedia Interface (HDMI) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. Warnings and Precautions To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment. Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

This symbol is intended to alert the user to avoid the risk of electric shock. This equipment must not be disassembled by anyone except qualified service personnel. **WARNING** This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance. **ENGLISH CAUTION** To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture. **TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).**

**NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Important Safety Instructions This symbol indicates caution points.

This symbol indicates actions that should not be done. This symbol indicates actions that must be performed. Do not place the equipment on any uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself. Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care.

Quick stops, excessive force, and uneven surfaces may cause the equipment and cart/stand to overturn. Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment. If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet. Always operate this equipment from the type of power source indicated on the rear of the serial/model information label. Never overload wall outlets and extensions. **1 Warnings and Precautions Use and handle the power cord with care. Do not place any heavy objects on the AC power cord. Do not pull the AC power cord.**

Do not handle the AC power cord with wet hands. Do not touch the power cord and antenna cable during lightning. Remove the plug from the wall outlet if the equipment will not be used for a long period of time. Do not place, use or handle this equipment near water. Never expose the equipment to liquid, rain, or moisture.

Seek advice if any liquid is spilt into the equipment. Do not expose the equipment to extreme temperature or to direct sunlight, as the equipment may overheat and suffer damage. Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat. Do not attempt to service the equipment yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards and may void your warranty.

Refer service to qualified personnel. Do not place or drop any other objects on top. Do not insert anything into the ventilation holes of your equipment. Inserting any metal or flammable objects may result in fire or electric shock. Do not place the equipment on uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself. Always place the equipment on the floor or on a surface that is sturdy, level, stable and strong enough to support the weight of the equipment. Do not block any ventilating openings. Leave an open space around the equipment. Never place the equipment : on a bed, sofa, rug, or any other similar surfaces; too close to drapes/curtains/walls, in a bookcase, built-in cabinet, or any other similar places that may cause poor ventilation.

Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Always remove the power cord from the outlet before cleaning the equipment. Never use liquid or aerosol cleaners on the equipment. Clean only with a soft dry cloth. Only use attachments/accessories specified by the manufacturer. **2 Warnings and Precautions Outdoor Antenna Safety Instructions** If an outdoor antenna is connected, follow the precautions below: **ENGLISH** An outdoor antenna should not be located in any area where it could come in contact with overhead power lines, or any other electric light or power circuits. When installing an outdoor antenna system, extreme caution should be taken to prevent contact with power lines.

Direct contact with power lines may be fatal and should be avoided at all costs.

Antenna lead-in wire Ground clamps Antenna discharge unit Electric service equipment Grounding conductors Ground clamps Power service grounding  
**EXAMPLE OF OUTDOOR ANTENNA GROUNDING 3 CONTENTS Warnings and Precautions Important Safety Instructions .....**

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... **1 Antenna Safety Instructions ...**

.....

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 3 Chapter 1 INTRODUCING THE LCD TV Key Features ....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 5 Cleaning Your LCD TV ...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

... 5 Package Contents .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

. 6 Setting Your LCD TV...

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *7 Your LCD TV* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

..... *9 Your Remote Control* .....

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *11 Chapter 2 INSTALLING THE LCD TV Connecting a TV Cable or an Antenna* .....

.....  
.....  
.....

.....  
.....  
.....

..... *13 Connecting an A/V Device with Composite Connector* .....

.....  
.....  
.....

.....  
.....



.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 27 Chapter 3 USING THE FEATURES Operating the Menu .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*28 Customizing the Picture Settings .....*

.....  
.....  
.....  
.....  
.....  
.....

*30 Customizing the AUDIO Settings .....*

.....  
.....  
.....  
.....  
.....  
.....

*32 Customizing the OSD SETUP Settings .....*

.....  
.....  
.....  
.....  
.....  
.....

*..33 Customizing the TV Settings .....*

.....  
.....  
.....  
.....  
.....  
.....

.....  
.....34 Customizing the VGA Settings ..

.....  
.....  
.....  
.....  
.....  
.....  
.....

..36 Chapter 4 USING THE DTV FEATURES Operating the Menu .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

38 Customizing the Channel List Settings.....

.....  
.....  
.....  
.....  
.....  
.....  
.....

...40 Customizing the Configuration Settings .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

....42 Customizing the Parental Control Settings .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

.44 Using the DTV OSD Settings .....

.....  
.....  
.....  
.....





+ - 11 Chapter 2 Installing the LCD TV 17 CH LIST INPUT Pressing INPUT displays the source list, use to select the video equipment connected to the video inputs of your LCD TV TV AV S-VIDEO SCART YPbPr DTV HDMI VGA SUBTITLE GUIDE ATV/DTV SLEEP 18 CH. EXIT MENU Exits the OSD menu.

Displays the OSD menu on the screen. Cycles through OSD options and selects individual menu items. OK confirms option settings.

Displays information on the LCD TV screen such as input source, channel, program title. Selects picture mode: Movie/Vivid/Sport/ Game/User Press the appropriate colour for direct access to the colour page. VOL. INPUT 19 20 19 21 17 18 20 INFO P.MODE OK INFO 21 22 23 22 P.

MODE 23 Effective range: The remote can control the LCD TV from up to 5m away, if pointed directly at the receiver. 12 Chapter 2 Installing the LCD TV Chapter 2 Installing the LCD TV ENGLISH Refer to the owner's manual of any external equipment to be connected. When connecting any external equipment,

do not connect any AC power cords to wall outlets until all other connections are completed. Connecting a TV Cable or an Antenna Antenna Connection The antenna requirements for good color TV reception are more important than those for a black & white TV reception. For this reason, a good quality outdoor antenna is strongly recommended. The following is a brief explanation of the type of connection that is provided with the various antenna systems. A 75-ohm system is generally a round cable (not included) with IECtype connector that can easily be attached to a terminal without tools. IEC-type connector 75-ohm coaxial cable (round) A 300-ohm system is a flat twin-lead cable (not included) that can be attached to a 75-ohm terminal through a 300-75-ohm adapter (not included). 300-ohm twin-lead cable (flat) 13 Chapter 2 Installing the LCD TV Use one of the following two diagrams when connecting an outdoor antenna. A:

Shows how to use a VHF/UHF combination outdoor antenna.

B: Shows how to use a separate VHF and/or UHF outdoor antenna. A. Combination VHF/UHF antenna VHF/UHF Antenna 300/75-ohm adapter (not included) VHF/UHF Antenna 300-ohm twinlead cable 75-ohm coaxial cable B. @@@@terminal. Some cable TV companies offer premium pay channels. @@@@1. @@@@Press MENU to exit APS. @@Use the buttons to select the YES. @@@@ (The list cannot be created if interrupted) ENGLISH 530. @@@@3.

Use the buttons to select the YES.



[You're reading an excerpt. Click here to read official POLAROID](#)

[TLU-02041B user guide](#)

<http://yourpdfguides.com/dref/1312836>

@@Press the EXIT button at any time to interrupt the tuning process. (The list cannot be created if interrupted) 530. 0 MHz CH 0 Exit 2 DTV Mode: Press the INPUT button on the remote to display the Source List. Use the buttons to select DTV, and press the OK button.

TV AV S-VIDEO SCART YPbPr DTV HDMI VGA 18 Chapter 2 Installing the LCD TV 1. Press the MENU button on the remote control to display the Main menu, and use the to select the DTV Services. ENGLISH C DTV Services Channel List Configuration Parental EPG Select Exit 2. Press the button to select Configuration and press the OK button to display the Configuration menu: Configuration Channel Installation User Settings System Parameters Signal Information 3. Press on the remote control to move the light bar to Channel Installation and press the OK button to display the Channel Installation menu: Channel Installation Channel Installation(auto) Channel Installation (manual) New Detected Channels 4.

Press on the remote control to move the light bar to Channel Installation (auto) and press the OK button. 5. Press buttons to select New from the Installation type. The Auto Channel Installation automatically creates a list of receivable channels. Full scan channels installation TV Services: SZTVM03 SZTVM02 SZTVM01 3 radio services: Ch 52:722MHz-OFFSET:None-BAND:8MHz Scanning in progress Signal quality 19 Chapter 2 Installing the LCD TV Connecting an A/V Device with Composite Connector Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R GAME CONSOLE VIDEO OUT AUDIO Cable L R DVD PLAYER AV Cable Use a composite cable to connect the external A/V device's composite video/audio jacks to the LCD TV's VIDEO IN jacks. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment. Press the button on the remote to turn on the LCD TV. To view the A/V device's with component input, press the INPUT button on the remote to select AV. Not all A/V devices have the ability to connect to a TV. Please check your A/V devices user guide for compatibility.

20 Chapter 2 Installing the LCD TV Connecting an A/V Device with S-Video Connector ENGLISH Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R GAME CONSOLE S-VIDEO OUT L AUDIO Cable R DVD PLAYER S-VIDEO Cable Use an audio cable to connect the external A/V device's audio output jacks to the LCD TV's audio inputs. Use a S-Video cable to connect the external A/V device's S-Video output jack to the LCD TV's S-Video IN input jack. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment. Press the button on the remote to turn on the LCD TV. To view the A/V device's with component input, press the INPUT button on the remote repeatedly to select S-VIDEO. 21 Chapter 2 Installing the LCD TV Connecting an A/V Device with Component (YPbPr) Connector Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN L AUDIO IN VHF/UHF IN R Pb Cb Pr Cr COMPONENT OUT GAME CONSOLE R AUDIO Cable L Pb/Cb Pb COMPONENT Cable Pr/Cr Pr DVD PLAYER Y Not all A/V device have the ability to connect to a TV. Please check your A/V device user guide for compatibility. Use a component cable to connect the external A/V device's component output jacks to the LCD TV's YPbPr IN input jacks. Use an audio cable to connect the external A/V device's component audio jacks to the LCD TV's audio input jacks. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

Press the button on the remote to turn on the LCD TV. To view the A/V device's with component input, press the INPUT button on the remote repeatedly to select YPbPr. The component video jacks on your A/V device are sometimes labeled YPbPr, or YCbCr. For an explanation of component video, see your A/V device's user guide. 22 Chapter 2 Installing the LCD TV Connecting an A/V Device with SCART Connector ENGLISH Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R DVD PLAYER SCART Cable Use a SCART cable to connect the external A/V device's SCART socket to the LCD TV's SCART IN jack.

Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment. Press the button on the remote to turn on the LCD TV. Press the INPUT button on the remote to select SCART. 23 Chapter 2 Installing the LCD TV Connecting an AV Device with HDMI Connector Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R HDMI Cable AV EQUIPMENT Use a HDMI cable to connect the AV equipment's HDMI output jack to the LCD TV's HDMI IN jacks. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

Press the button on the remote to turn on the LCD TV. Press the Input button on the remote to select HDMI. The HDMI connector provides both video and audio signals, it's not necessary to connect the audio cable. 24 Chapter 2 Installing the LCD TV Connecting an AV Device with DVI Connector ENGLISH Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R AUDIO Cable AUDIO L R DVI IN HDMI-to-DVI Cable AV EQUIPMENT Use a HDMI-to-DVI cable to connect the AV equipment's DVI output jack to the LCD TV's HDMI IN jacks. Use an audio cable to connect the AV equipment's audio output jacks to LCD TV's HDMI AUDIO jacks. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment. Press the button on the remote to turn on the LCD TV. Press the Input button on the remote to select HDMI. If the LCD TV is connected to AV equipment's DVI connector, you will need an HDMI-to-DVI cable or an HDMI adapter(not supplied) and an audio cable. 25 Chapter 2 Installing the LCD TV Connecting a PC Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R AUDIO Cable VGA Cable PC Use a D-SUB cable to connect the PC's D-SUB output jack to the LCD TV's VGA input jack.

Use an audio cable to connect the PC's audio output jacks to LCD TV's. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.



[You're reading an excerpt. Click here to read official POLAROID TLU-02041B user guide](http://yourpdfguides.com/dref/1312836)  
<http://yourpdfguides.com/dref/1312836>

Press the button on the remote to turn on the LCD TV. Press the INPUT button on the remote to select VGA. 26 Chapter 2 Installing the LCD TV Connecting an Audio Receiver or a Digital System For better sound quality, you may want to use a Home Theater/Stereo System. ENGLISH NOTE: If you have a Home Theater/Stereo System that you would like to use with your new Polaroid TV, we recommend that you do NOT use your TV's audio output for this connection. For the best sound quality, our product testing has shown that you should connect your Home Theater/ Stereo System directly to your A/V device. I.E. You should connect your Home Theater/Stereo System to your DVD player, Cable/Satellite box or other AV equipment.

Although not recommended, if you prefer to use the TV audio output to make this connection to your Home Stereo System, please follow the instructions below. Rear of TV HDMI IN Y Pb Pr L AUDIO IN R S-VIDEO VIDEO DIGITAL OUT PC VGA IN PC AUDIO IN SCART L AUDIO IN VHF/UHF IN R AUDIO Cable Audio Receiver Use an audio cable to connect the audio receiver's audio LINE IN jacks to LCD TV's DIGITAL OUT jacks. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment. Press the button on the remote to turn on the LCD TV. 27 Chapter 3 Using the OSD Features Chapter 3 USING The OSD FEATURES Operating the Menu Press the button to turn the LCD TV on.

@@Use the buttons to select your main menu option. PICTURE MENU: Allows you to make adjustments to your picture settings. If the signal source is AV/S-VIDEO/YPbPr/ SCART/HDMI, the Picture Menu appears as: If the signal source is TV/DTV, the Picture Menu appears as: Picture PIC Mode Brightness Contrast Tint Saturation Sharpness Scale Color Temp User 50 50 50 50 50 Full PIC Mode Brightness Contrast Tint Saturation Sharpness Scale Color Temp Picture User 50 50 50 50 50 Full Move Select Exit Move Select Exit If the signal source is VGA, the Picture Menu appears as: Picture Brightness Contrast Scale Color Temp 50 50 16 : 9 Move Select Exit 28 Chapter 3 Using the OSD Features AUDIO MENU: Allows you to customize the audio options and effects.

If the signal source is AV/S-VIDEO/YPbPr/HDMI/ SCART, the AUDIO Menu appears as: If the signal source is TV/DTV, the AUDIO Menu appears as: ENGLISH Audio Setup Sound Mode Volume Bass Treble Balance Mute User 50 50 50 50 Off Sound Mode Volume Bass Treble Balance Mute Audio Setup User 50 50 50 50 Off Move Select Exit Move Select Exit If the signal source is VGA, the AUDIO Menu appears as: Audio Setup Sound Mode Volume Bass Treble Balance Mute User 50 50 50 50 Off Move Select Exit OSD SETUP MENU: Allows you to set up a variety of features: Language, factory reset, sleep timer. If the signal source is AV/S-VIDEO/YPbPr/HDMI/ SCART, the OSD Setup Menu appears as: If the signal source is TV/DTV, the OSD Setup menu appears as: OSD Setup Language Time Out Transparency Sleep Timer Reset English 15 25 Off Language Time Out Transparency Sleep Timer Reset OSD Setup English 15 25 Off Move Select Exit Move Select Exit 29 Chapter 3 Using the OSD Features If the signal source is VGA, the OSD Setup Menu appears as: OSD Setup Language Time Out Transparency Sleep timer Reset English 15 25 Off Move Select Exit TV SETUP MENU: Allows you to edit and label channels.

If the signal source is TV, the TV Setup Menu appears as: If the signal source is DTV, the TV Setup Menu appears as: C TV Setup APS Fine Tune Add / Erase Channel Name Channel Swap Manual Search Channel Reset 3 0 Add 3 C DTV Services Channel List Configuration Parental EPG Move Select Exit Move Select Exit VGA SETUP MENU: Allows you to setup the system function in VGA mode. VGA Setup Auto Adjust H-Position V-Position Clock Phase 50 50 50 32 Move Select Exit Use the buttons to select an option of the sub-menu, and press the OK button. While in adjustment mode, and use the buttons to change the value of the item. Press the EXIT button to exit the menu. 30 Chapter 3 Using the OSD Features Customizing the Picture Settings ENGLISH Press the button to turn the LCD TV on. Press the MENU button on the remote control to display the Main menu, and use the buttons to select the Picture. Use the buttons to highlight an individual Picture option, use the buttons to change the setting, and press the MENU to exit the menu If the signal source is AV/S-VIDEO/YPbPr/ SCART/HDMI, the Picture Menu appears as: If the signal source is TV/DTV, the Picture Menu appears as: Picture PIC Mode Brightness Contrast Tint Saturation Sharpness Scale Color Temp User 50 50 50 50 50 Full PIC Mode Brightness Contrast Tint Saturation Sharpness Scale Color Temp Picture User 50 50 50 50 50 Full Move Select Exit Move Select Exit If the signal source is VGA, the Picture Menu appears as: Picture Brightness Contrast Scale Color Temp 50 50 16 : 9 Move Select Exit The Picture menu includes the following options: PIC Mode Contrast Brightness Tint Cycles among display types: Movie/Vivid/Sport/Game/User Controls the difference between the brightest and darkest regions of the picture. Controls the overall brightness of the picture. Controls the difference between the green and red regions of the picture. 31 Chapter 3 Using the OSD Features Saturation Sharpness Scale Controls the colour intensity.

Increase this setting to see crisp edges in the picture; decrease it for soft edges. Selects through Wide mode settings : In TV/AV/S-VIDEO/SCART mode: NORMAL /FULL/ZOOM1/ ZOOM2 In YPbPr/HDM mode, only 480i and 576i mode can be adjusted : NORMAL /FULL/ZOOM1/ZOOM2 In VGA/DVI mode,"Scale" function is not available Color Temp Adjusts color components independently to achieve a warm or cool effect: Cool/Warm/User Warm: Cool: User: Increases red tint Increases blue tint Allows the user to adjust red, green and blue color component levels independently. Picture Color Temp R-Gain G-Gain B-Gain User 50 50 50 32 Chapter 3 Using the OSD Features Customizing the AUDIO Settings ENGLISH Press the button to turn the LCD TV on. Press the MENU button on the remote control to display the Main menu, and use the buttons to select the AUDIO. Use the buttons to highlight an individual AUDIO option, use the buttons to change the setting, and press the MENU to exit the menu If the signal source is AV/S-VIDEO/YPbPr/HDMI/ SCART, the AUDIO Menu appears as: If the signal source is TV/DTV, the AUDIO Menu appears as: Audio Setup Sound Mode Volume Bass Treble Balance Mute User 50 50 50 50 Off Sound Mode Volume Bass Treble Balance Mute Audio Setup User 50 50 50 50 Off Move Select Exit Move Select Exit If the signal source is VGA, the AUDIO Menu appears as: Audio Setup Sound Mode Volume Bass Treble Balance Mute User 50 50 50 50 Off Move Select Exit The AUDIO Setup menu includes the following options: Sound Mode Volume Bass Treble Balance Mute Allows selection of an audio-enhancement technique from among the following options: Live/POP/Rock/User.



[You're reading an excerpt. Click here to read official POLAROID TLU-02041B user guide](http://yourpdfguides.com/dref/1312836)  
<http://yourpdfguides.com/dref/1312836>

Controls the volume. Controls the relative intensity of lower-pitched sounds. Controls the relative intensity of higher pitched sounds. Adjusts the relative volume of the speakers in a multiple speaker system. Allows you to mutes and restore your LCD TV sound.

33 Chapter 3 Using the OSD Features Customizing the OSD SETUP Settings Press the button to turn the LCD TV on. Press the MENU button on the remote control to display the Main menu, and use the buttons to select the OSD SETUP. Use the buttons to highlight an individual OSD SETUP option, use the buttons to change the setting, and press the MENU to exit the menu. If the signal source is AV/S-VIDEO/YPbPr/HDMI/ SCART, the OSD Setup Menu appears as: OSD Setup Language Time Out Transparency Sleep Timer Reset English 15 25 Off Language Time Out Transparency Sleep Timer Reset OSD Setup English 15 25 Off Move Select Exit Move Select Exit If the signal source is VGA, the OSD Setup Menu appears as: OSD Setup Language Time Out Transparency Sleep timer Reset English 15 25 Off Move Select Exit The OSD SETUP menu includes the following options: Language Time Out Transparency Sleep Timer Reset Selects to display all on-screen menus in your language of choice. Allows selection of the display time of the on-screen menu.

Controls the translucence of the OSD on-screen menus's background. Allows selection of the time that elapses before the TV shuts off automatically. Restores factory settings. 34 Chapter 3 Using the OSD Features Customizing the TV Settings ENGLISH Press the button to turn the LCD TV on. Press the MENU button on the remote control to display the Main menu, and use the buttons to select the TV Setup.

Use the buttons to highlight an individual TV Setup option, use the buttons to change the settings, and press the MENU exits the menu. If the signal source is TV, the TV Setup Menu appears as: If the signal source is DTV, the TV Setup Menu appears: For more information on DTV Services, please see the "Using the DTV Features" section. C TV Setup APS Fine Tune Add / Erase Channel Name Channel Swap Manual Search Channel Reset 3 0 Add 3 C DTV Services Channel List Configuration Parental EPG Move Select Exit Move Select Exit The TV Setup menu includes the following options: APS Press the OK button to display the Start APS menu: C Country APS TV Setup UK Press the buttons to select the country. Country: Allows you select the country: UK, Ireland, Denmark, Finland, Italy, Norway, Spain, Sweden, Luxemburg, France, Czech., Poland, Hungary, Austria, Germany, Switzerland, Belgium, Netherlands, other. Press the buttons to select APS,Then select "YES" to start auto search and auto sort process. 35 Chapter 3 Using the OSD Features Fine Tune Add/Erase Channel Name Allows adjustment for the fine tune level by hand if signal is too weak or picture is blurry. Allows addition/removal of channels on the channel list. Allows channel labels to be edited. Use the buttons to select the characters (maximum of 5 characters).

Allows you to change the TV station channel location. Allows you to choose the channels that you like. Allows you to restore default settings. Channel Swap Manual Search Channel Reset 36 Chapter 3 Using the OSD Features Customizing the VGA Settings ENGLISH Press the button to turn the LCD TV on. Press the MENU button on the remote control to display the Main menu, and use the buttons to select the VGA Setup. Use the buttons to highlight an individual VGA Setup option, use the buttons to change the setting, and press the MENU to exit the menu VGA Setup Auto Adjust H-Position V-Position Clock Phase 50 50 50 32 Move Select Exit The VGA Setup menu includes the following options: Auto Adjust H-Position V-Position Clock . Phase Controls the signal phase, which can improve focus clarity and image stability based on the VGA mode. @@Adjusts the position of the picture left and right in the window. Adjusts the position of the picture up and down in the window. @@Use the buttons to select DTV, and press the OK button.

@@@Press OK to appear a message to confirm that you want to lock the channel from the Favorite list. Delete a favorite list Press OK to appear a message to confirm that you want to delete all channels from the Favorite list. 41 Chapter 4 Using the DTV Features Customizing the Configuration Settings The Configuration feature allows you to add new channels, set audio or subtitle languages, set the time, and view system and signal information.

Configuration Channel Installation User Settings System Parameters Signal Information The Configuration menu includes the following options: Channel Installation Press the buttons to highlight the Channel Installation and press OK to display the menu: Channel Installation Channel Installation(auto) Channel Installation (manual) New Detected Channels Channel Installaion(auto): Use buttons to select "ADD", the new channels will be added in the channel list. Use buttons to select "NEW", the new channels will be replaced the previous channels in the channel list.

Channel Installaion(manual): Allows to create channels manually. New Detected Channels: Press OK to display the New Detected Channels menu, shows the channels that you add in the channels list recently. 42 Chapter 4 Using the DTV Features System Parameters Press the buttons to highlight the System Parameters and press OK to display the menu: System Parameters ENGLISH System Information Factory Reset System Upgrade System Information: Press OK to display the system information menu Factory Reset: Use to select "Yes" and press OK to restore factory Reset. System Upgrade: Press OK to upgrade system. Signal Information Press the buttons to highlight the Signal Information and press OK to display the menu.

Allows you to view the signal strength and quality of the channel. 43 Chapter 4 Using the DTV Features Customizing the Parental Control Settings The Parental Control feature allows you to set up the TV to block programs according the content and rating levels. Parental Control Parental Control Receiver lock Configuration Menu Channel lock Maturity level Disabled No No No None PIN code change The Parental Control menu includes the following options: Parental Control Press the buttons to select "Enabled", and press OK. Use the Parental Control function, must enter a four-digit pin code. The Factory pin code is 0000. Press the RED buttons to change your pin code. Receiver lock Press the buttons to select "Yes", allow to view the DTV program while TV is powered on and select the DTV source by entering the pin code. Press the buttons to select "Yes", allow to set up the Configuration menu by entering the pin code.



[You're reading an excerpt. Click here to read official POLAROID](#)

[TLU-02041B user guide](#)

<http://yourpdfguides.com/dref/1312836>

Press the buttons to select "Yes", allow to view the DTV Channel List by entering the pin code. Press the buttons to set up an age restriction for programmes, Any programme that exceeds the age restriction can only be watched by entering the pin code.

Configuration Menu Channel lock Maturity level 44 Chapter 4 Using the DTV Features Using the DTV OSD Settings PROGRAM INFORMATION ENGLISH Banner details After each channel change or after a press on the INFO button, a banner is displayed at the bottom of the screen for a few seconds, including service type (1), current list (2), channel number in the list (3), channel name (4), event name (5), current time (6), event duration bargraph with start and stop times (7) as well as specific icons relative to the service properties (8) (from left to right: maturity level, extended event information / Teletext presence / service locked / multitrack audio / scrambled program / Subtitle presence) and signal strength and quality indicators (9). EPG EPG (Electronic Programme Guide) menu is reached by pressing GUIDE button, quit by pressing GUIDE button again. Current program is highlighted. Use Channel Up/Down / buttons to change channels and view the other programmes on the selected channel. Press the Arrow up / Arrow down navigation buttons to scroll through and show programme content. There is a 7day EPG, you can see the other days channel list by using Left / right navigation arrow / buttons. 14:58 27/09/2005 REMINDER The short description of the highlighted channel is shown under the image window, and you can see the extended description by pressing the INFO or OK button and by pressing this button again you can close this window. Press the "RED" button to set a reminder from the program, press the "RED" button again to cancel the reminder. 14:58 27/09/2005 REMINDER 45 Specifications TROUBLESHOOTING Before consulting service personnel, check the following chart for a possible cause of problem and for a possible solution. TV will not turn on Make sure the power cord is plugged in, then press the button on the remote.

Make sure the AC switch on the rear of the TV is turned on. The batteries in the remote control may be exhausted. Replace the batteries. No picture, no sound Check the interface cable between TV and antenna/cable TV. Press the button on the remote.

Press the INPUT button on the remote repeatedly to select the connected video sources. Poor picture, sound OK Check the interface cable between TV and antenna/cable TV. Try another channel, the station may have broadcast difficulties. Adjust the Brightness/Contrast options in the VIDEO Menu. Picture OK, poor sound Sound may be muted.

Press the button on the remote. Press the VOL+ button to increase the volume. Check Audio Settings (see section entitled "Customizing the AUDIO Settings"). Audio noise Move any infrared equipment away from the TV. 46 Specifications SPECIFICATIONS MODEL LCD Panel Panel Size Brightness Contrast Ratio Max. Resolution Input Connector C-VIDEO/S-VIDEO/AUDIO IN(L/R) 20.1" TFT LCD 300 1000:1 1680 x 1050 1 ENGLISH YPbPr/AUDIO IN(L/R) 1 SCART PC VGA IN HDMI IN PC AUDIO IN DIGITAL OUT HEADPHONE VHF/UHF IN Power Source Power Consumption Dimension Weight 1 1 1 1 1 1 1 AC100~240V, 50/60HZ, 1.5A 60 W, Standby < 3 W 44.2w x 48.8h x 20.

2d cm 6.8kg 20070821 47 Questions? Need some help? Call our free-phone number found on the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com).



[You're reading an excerpt. Click here to read official POLAROID TLU-02041B user guide](#)  
<http://yourpdfguides.com/dref/1312836>