




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID TLU-03223B. You'll find the answers to all your questions on the POLAROID TLU-03223B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID TLU-03223B
User guide POLAROID TLU-03223B
Operating instructions POLAROID TLU-03223B
Instructions for use POLAROID TLU-03223B
Instruction manual POLAROID TLU-03223B

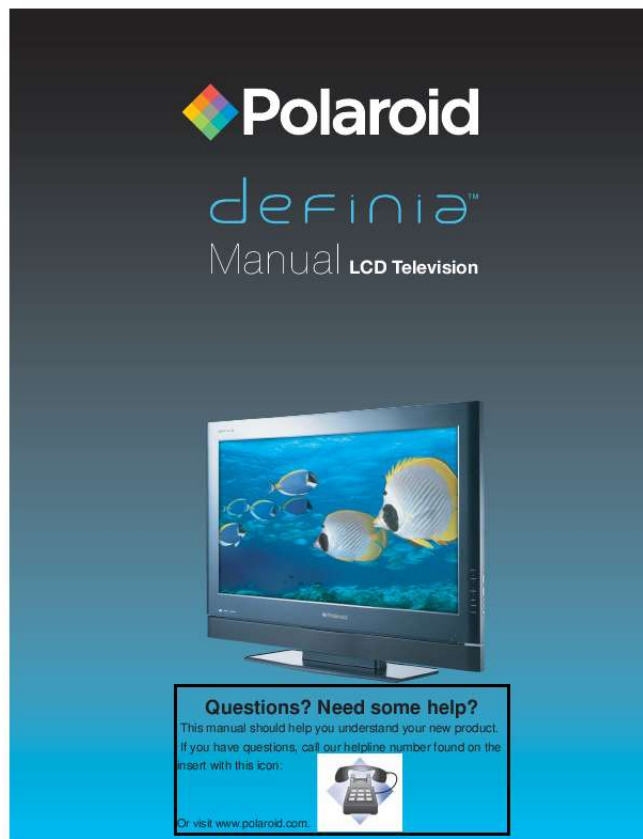

[You're reading an excerpt. Click here to read official POLAROID TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)
<http://yourpdfguides.com/dref/1312718>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 5 · Setting Up Your LCD TV

.....
.....
.....
.....

.....
.....
.....

.....7 How to Remove the TV Stand

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 7 How to Remove the Stereo Speakers

.....
.....
.....
.....

.....
.....
.....
.....

..... 8 How to Get Started

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

9 · Understanding Your LCD TV

.....
.....
.....
.....

..10 Front View of TV ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 10 Back View of TV.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...11 Your Remote Control ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... 18 Turning Your TV ON and OFF

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 18 How to Operate Your TV for the First Time

.....
.....
.....
.....
.....
.....
.....

.... 19 How to Operate the Main Menu

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 20 How to Customise Picture Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....

. 21 How to Customise Audio Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 22 How to Customise ARC- Aspect Ratio Control ..

.....

.....
.....
.....

..... 23 How to Use Picture-in-Picture (PIP) Functions

.....
.....
.....
.....

.. 24 How to Setup Analogue TV (ATV)

.....
.....
.....
.....

.....
.....
.....
.....

. 25 How to Manage Your Analogue Channels...

.....
.....
.....
.....

.....
.....
.....
.....

.. 26 How to Setup Digital TV (DTV) ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 27 How to Record Digital TV (DTV) Output

.....
.....
.....
.....

.....
.....
.....
.....

.... 28 How to Perform Channel Scan in Digital TV (DTV) Mode .

.....
.....
.....
.....
.....

29 How to Setup Additional DTV Features

.....
.....
.....

.....
.....
.....
.....

30 How to Setup "New Channel Alert" in DTV Mode

.....
.....

.....
.....
.....
.....

... 31 How to Use the DTV Information Banner

.....
.....
.....

.....
.....
.....
.....

32 How to Use the EPG (Electronic Programme Guide) in DTV Mode

.....
.....

.... 33 How to Manage Your Preferred Digital (DTV) Channels

.....
.....
.....

.....
.....

.. 34 How to Set Your Preferences in DTV Mode ...

.....

.....
.....
.....
.....

.....
.....
.....

35 How to Use Child Lock

.....
.....
.....
.....

.....
.....
.....
.....

..... 36 How to Use the On Timer Feature

.....
.....
.....
.....

.....
.....
.....
.....

.... 37 How to Use PC and SCART Connectivity Menu .

.....
.....
.....
.....

.....
.....
.....
.....

38 How to View Your TV's Information and Reset Settings

.....
.....
.....
.....

.....
.....
.....
.....

... 39 How to Use the TELETEXT Functions

.....
.....
.....
.....

.....
.....
.....
.....

..... 40 Specifications

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...42 Troubleshooting

.....
.....

.....
.....
.....
.....
.....
.....

.....44 WARNINGS AND PRECAUTIONS Definition of Symbols: To prevent any injuries, use the following safety precautions during the installation, use, and maintenance of this equipment. This equipment must not be disassembled by anyone other than a qualified service professional. ENGLISH WARNING CAUTION Avoid risk of electric shock.

Use caution. Use these important operation and maintenance instructions. Actions should never be performed. Actions must be performed as directed. Only use a cart or stand recommended by the manufacturer.

Do not expose this equipment to rain or moisture. Do not remove the TV's back cover. Tampering with the TV cover may void your warranty. Opening or removing the TV cover may expose you to dangerous voltage and other hazards. Refer servicing to qualified service professionals.

There are no user-serviceable parts inside the TV. Do not attempt to service the equipment yourself. Servicing by a qualified professional is required when the equipment has been damaged in any way. For example, if the power cord or plug is damaged, if liquid is spilled on the equipment, it is exposed to rain or moisture, objects fall on the equipment, or the TV does not operate normally. Damage may result from the improper use of controls, adjustments, or procedures. Proper procedures are explained in this user's manual. Only use attachments and accessories specified by the manufacturer. If wall-mounting your TV, be sure to use a VESA complaint wall-mounting kit. Always remove the power cord from the outlet before cleaning the equipment. Never use liquid or aerosol cleaners on the equipment.

Clean only with a soft dry cloth. Do not place the equipment on any uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury and/or serious damage to the equipment itself. Handle this equipment and stable cart or stand with care. When moving this equipment and stable cart or stand, quick stops, excessive force, and uneven surfaces may cause them to overturn or fall. Always place the equipment on the floor or on a stable, level surface that is strong enough to support the weight of the equipment. Use and handle the power cord with care. Unplug the equipment during lightning storms or when unused for long periods of time. Do not pull the AC power cord. Do not handle the power cord with wet hands.

Do not place any heavy objects on the power cord or the equipment itself. Do not touch the power cord and antenna cable during lightning. Do not allow power cord to be walked on or pinched particularly at the plugs, outlets, and TV inputs. Never handle this equipment near water or expose it to liquid, rain, or moisture. Do not place in direct sunlight because the heat may cause damage.

Do not expose equipment to extreme temperature or heat sources such as radiators, heaters, etc. Do not insert anything into the ventilation openings of your equipment. Inserting any metal or flammable objects may result to fire or electric shock. Do not block any ventilating openings. Leave an open space around the equipment.

Never place the equipment on or near fabric covered surfaces or rugs, in bookcases or built-in cabinets that may offer poor ventilation. 1 Introduction to Your LCD TV Polaroid. Add a little colour to your life. Since 1937, people have turned to Polaroid for their photography needs. Today, families look to Polaroid for consumer electronics that define the digital age: plasma and LCD TVs, portable and standard DVD players, digital cameras, personal media players, and so much more. And while our selection has changed, you will still receive the same friendly, helpful service that made Polaroid an icon. Congratulations on your new Polaroid TV purchase. To ensure your new TV provides you with years of enjoyment, please read this guide carefully. ©2007 by . All rights reserved.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation. Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions. For service, support and warranty information, visit www.polaroid.com. This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately.

As a consumer, you are responsible for ensuring that this product is disposed of properly.

To find out how to properly dispose of this product, please go to www.polaroid.com and click on "Company" or call the customer service number for your country listed in the instruction manual. This TV incorporates High-Definition Multimedia Interface (HDMI) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

2 Cleaning Your LCD TV There are no parts which can be serviced or cleaned inside the TV's cabinet. ENGLISH You can increase the life of your LCD display by taking the following precautions: · Before cleaning, always disconnect the power line and all connection cables. · Do not use any solvents, caustic or gaseous cleaning agents. · Clean the display with a soft, lint-free cloth. · Ensure that no water droplets remain on the screen.



[You're reading an excerpt. Click here to read official POLAROID TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)
<http://yourpdfguides.com/dref/1312718>

Water can cause permanent discolouration. Your LCD TV's Digital Tuner The UK is going Digital! Find out if you already have a digital signal or when your area will switch off the old signal by visiting: <http://www.digitaluk.co.uk/> Even if you don't have a digital signal yet, it will be coming to you soon. In the meantime, if you are having problems getting good reception, call our helpline customer service number. Look for the insert with the phone icon at the bottom of this page for the service number for your area. Questions about your TV's features? Call our helpline customer service number. Look for the insert with this icon: Or visit www.polaroid.com.

com. 3 Introduction to Your LCD TV Package Contents Your LCD TV package should have all of the following materials. LCD TV Remote Control and 2 AAA Batteries Component Video Cables (Red, Green, Blue) Composite A/V Cables (Yellow, Red, White) Documents AC Power Cord* . . . Quick Start Guide Worldwide Contact Insert Warranty Card User's Manual These items are all you need to set up and operate your LCD TV in its basic configuration. *Note: The Power Cord may differ depending on country. Make sure all of the above materials are included in the box. If you are missing any items, please contact the Polaroid customer service department using the Polaroid Contact insert. 4 Introduction to Your LCD TV Key Features Built-In Digital TV Tuner Digital Tuner gives you access to the latest broadcast technology that features digitally crisp picture and sound. The UK is going Digital! Find out if you already have a digital signal or when your area will switch off the old signal by visiting: <http://www.digitaluk.co.uk/>

Even if you don't have a digital signal yet, it will be coming to you soon. In the meantime, if you are having problems getting good reception, call our helpline customer service number. Look for the insert with the phone icon at the bottom of this page for the service number for your area. ENGLISH Improved Digital Teletext Services (MHEG-5) Bring faster access to on-screen interactive information & (not included) to mount your television. To reattach the speakers, follow these instructions in reverse.

Need help setting up your TV? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 8 Setting up Your LCD TV 1 2 3 How to Get Started Connect your aerial lead (not supplied) to your TV or use Component or Composite video cables with Composite audio cables to connect to your cable or satellite box.

Refer to the section entitled "Connecting your LCD TV" in this User's Manual for other methods for connecting your LCD TV. ENGLISH Connect the supplied AC power cord to the back of your LCD TV. Then connect the other end of the AC power cord to the wall outlet. Insert the two supplied AAA batteries into the remote control, using the instructions below. STEP 1 Slide the back cover down to open the battery compartment of the remote control. STEP 2 Insert two AAA batteries. Make sure to match the (+) and (-) ends of the batteries to the (+) and (-) ends indicated in the battery compartment. Slide the cover back into place. 4 Connect any other audio/video equipment to your LCD TV, using the instructions in the section entitled "Connecting Your LCD TV" in this User's Manual. Questions about your remote control? Call our helpline customer service number.

Look for the insert with this icon: Or visit www.polaroid.com. 9 Understanding Your LCD TV Front View of TV LED A blue indicator light comes on when the power is ON. A purple indicator light comes on when in the standby PC mode. A red indicator light comes on when in TV standby mode. When the TV power is completely turned off (using the Energy Efficient AC Power Switch), the indicator light will also turn off. EXIT/ARC (Aspect Ratio Control) Press to adjust the display mode (I.E. Panoramic, 16:9, Zoom, etc.

) In OSD menu, press to exit the OSD Menu. VOLUME +/- Press to adjust the volume up and down. In the OSD menu, press to select different main-menu items and change the values for items. AC Power Switch Turns main power ON and OFF. CHANNEL Change the channel up and down.

In the OSD menu, press to select a sub-menu item. MENU IR Infrared Receiver Press once to display the OSD (On-Screen Display) menu. Press again exit. SOURCE Press to choose from different input signal sources. Press to turn LCD TV On or to enter Standby.

TV Status OFF (AC Power Switch is OFF) Standby (Passive) Power ON (TV, Video, or PC Mode) Standby (Active--only available in PC mode) LED Indicator Light Status Off Red Blue Purple The TV Function Buttons control your TV's basic features. You can use these to adjust the onscreen display (OSD) items, like features in the main menu or sub-menu. To use more advanced features, you must use the remote control. NOTE: The Energy Efficient AC Power Switch allows you to conserve energy when the TV is not in use. Questions about your TV's features? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 10 Understanding Your LCD TV Back View of TV HDMI 1 & HDMI 2 Inputs Connect HD digital AV equipment with the HDMI connector. HDMI supports enhanced, high-definition video and two-channel digital audio.

AC Power Switch ENGLISH D-SUB (VGA) Input Connect to a Personal Computer, or other AV equipment with VGA. AC Power Cord Input PC AUDIO IN Connect to a Personal Computer, or other AV equipment using an Audio Cable. Provides audio for DSub (VGA) connection. Subwoofer Output Connect to a Subwoofer or Speaker System. DIGITAL AUDIO Output Connect to the DIGITAL AUDIO jack on the digital or standard 5.1 audio system. ANT IN Connect antenna cable to the ANT IN from antenna to receive standard or digital television. SCART 1 & SCART 2 Inputs Connect to the SCART output on external video equipment using a SCART cable. Common Interface Component Inputs Connect to a DVD player, Digital Set-Top-Box, or other A/V equipment with component (YPbPr) A/V inputs using green, blue, and red component cables. Use in conjunction with composite audio cables (red and white).

Common interface slot for future use with Pay-to-View Channels. S-VIDEO Input Connect to the SVIDEO and AUDIO (L/R) outputs on external video equipment. Use in conjunction with composite audio cables (red and white). Composite A/V Outputs Connect to the Composite VIDEO and AUDIO (L/R) inputs on AV equipment using the yellow, red, and white composite cables. Composite A/V Inputs Connect to the Composite VIDEO and AUDIO (L/R) outputs on external equipment video using the yellow, red, and white composite cables.

NOTE: Composite Audio Out (L/R): The level of audio output cannot be changed using the volume control on your display.



[You're reading an excerpt. Click here to read official POLAROID](#)

[TLU-03223B user guide](#)

<http://yourpdfguides.com/dref/1312718>

This connector should be used with an external audio amplifier that can be used to control the volume. 11 Understanding Your LCD TV Your Remote Control 1 Put the LCD TV in or out of Standby Mode 2 3 TELETEXT Press the button to show the TELETEXT Service Toggle between TEXT / MIX / PAT / OFF INDEX ATV (Analogue): Go to page 100 (TELETEXT reset) DTV (Digital): Display info when banner is on HOLD Press to stop auto TELETEXT page change INTERRUPT Switch to TV when waiting for required text page REVEAL Display hidden info (i.e. solutions for puzzle or quiz) EXPAND Enlarge the top 1/2 or bottom 1/2 of TELETEXT page TIME/SUB-PAGE Press to access to your desired sub-page RED/GREEN/YELLOW/BLUE ATV (Analogue): Display recording setting & user profile (Direct page access for Teletext) DTV (Digital): Function keys for DTV mode. 4 5 6 7 8 9 CH Change the channel up and down 0-9 Enter digits numerically VOL + and Increases and decreases volume on your TV RTN Return to previously viewed channel or source MUTE Press once to mute the audio Press again to restore the audio APC (Automatic Picture Control) Toggle between Normal / Cinema / Dynamic. Do not use any cleaners (porcelain, stainless steel, toilet, or oven cleaner etc.) on the remote control because it may result in damage to the remote control. 12 Understanding Your LCD TV Your Remote Control (Continued) 10 ARC (Aspect Ratio Control) In Video mode, toggle picture mode between Auto Image / Panoramic / 16:9 / 14:9 / 4:3 / Zoom In VGA (PC) mode, toggle picture mode between 16:9 / 4:3 OK In OSD menu, setup a function or enter a sub-menu In OSD menu (DTV or ATV), scroll through and access menu items. EXIT Press to exit the OSD menu or sub-menu MENU Display the On-Screen Display (OSD) menu or return to a layer of menu ENGLISH 11 12 13 14 15 16 17 18 SCART Switch to SCART1 / SCART2 / SCART2 S VIDEO TV Switch to Composite / S-VIDEO / Component Select either Analogue TV or Digital TV PC/HD Switch to VGA / HDMI 1/ HDMI 2 SLEEP SUB-TITLE GUIDE Select a time to automatically turn off your TV. Timer can be set 00 to 120 minutes in 10 minute intervals. ATV (Analogue): show information. DTV (digital): toggle SUB-TITLE On/Off SOUND ATV (Analogue): press to navigate DTV (digital): display 7 days EPG Select sound according to different TV broadcasts 19 PIP ON/OFF POSITION SIZE Enable or disable PIP viewing picture Toggle PIP mode between PIP / OFF Move PIP sub-picture position Toggle PIP sub-picture size: Small / Middle / Large Toggle A/V source between primary window & PIP sub-window. Select PIP input source: HDMI 1/ HDMI 2 / TV / DTV / SCART1 / SCART2 / SCART2 S / Composite / Component / S-VIDEO Audio/Video Swap SOURCE 13 Connecting Your LCD TV Connecting Your LCD TV to A/V Devices This TV offers many different options for connecting your A/V devices. Connecting your device to your TV using higher quality video connections will bring you a better viewing experience.

The bar below shows the best viewing options in sequence from best to basic. ANT IN: Antenna (Aerial) In NOTE: Not all cables are included. Questions about your connections or cables? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 14 Connecting Your LCD TV Connecting Your LCD TV to A/V Devices with HDMI We highly recommend you use the HDMI (High Definition Multimedia Interface) input whenever possible to receive an incredible High Definition picture. Please keep in mind, however, that not all A/V devices are capable of this type of connection. For the best viewing experience, connect your TV to an HD digital cable/ satellite box, HD DVD player and/ or other HD A/V device using the HDMI connection. Make sure your external A/V devices are set to output an HDMI signal.

Consult your A/V device's User's Manual for instructions on how to output an HDMI signal. ENGLISH HDMI CABLE NOTES: · HDMI cables are not included. · No audio cable is needed with an HDMI connection. · Either HDMI 1 or HDMI 2 can be used. Questions about your connections or cables? Call our toll-free customer service number.

Look for the insert with this icon: Or visit www.polaroid.com. 15 Connecting Your LCD TV Connecting Your LCD TV to PC with VGA (D-Sub) Connect a VGA cable to the D-SUB (VGA) input on the TV and the VGA output on a PC. To also receive sound, connect an audio cable to the PC AUDIO IN jack on the TV and AUDIO OUT jack on a PC.

NOTES: · VGA and PC-Audio cables are not included. Questions about your connections or cables? Call our toll-free customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 16 Connecting Your LCD TV Connecting Your LCD TV's Power Cord 1 2 Connect the power cord into the AC IN located in the back of the TV and the other end to the power outlet on the wall. ENGLISH Turn on the AC POWER SWITCH. When the TV is plugged in and the AC power switch is turned on, the indicator light on the front of the TV will turn red. AC Power Switch Power Cord (Power cord will vary depending on country) Questions about your connections or cables? Call our toll-free customer service number. @@The indicator light will turn blue.

@@@Make sure your TV is connected to an aerial (antenna) cable. @@Press the or button to select your Country and press OK. Press the or button to highlight Language** and press OK. Press the or button to select your preferred Language and press OK. @@@@@@Use the buttons on remote to move down to Sub-Menu items. @@With the power on, press MENU on the remote control. The OSD (On-Screen Display) Main Menu will appear. 2. Press or to select the main menu option. Press to enter the sub menu option.

3. Press or to select one sub-menu item. Press OK to select. 4. Press or to make adjustments.

Press OK to return to select. 5. Press MENU to return to the Main Menu. 6. @@@@Use the buttons to highlight your desired VIDEO option.

Press OK to enter the Sub-Menu. @@@@Control the overall brightness of the picture. Control the colour intensity of the picture. Increase this setting to sharpen the edges in the picture. Decrease this setting to soften the edges in the picture. @@Switch to Auto/ High/ Middle/ Low/ Off. @@@@Use the buttons to select AUDIO and press button. Use the buttons to highlight your desired AUDIO option. Press OK to enter the Sub-Menu. @@@@Switch to ON or OFF to enable or disable the AVC function.

Can be used to reduce unwanted volume increases during commercial breaks. Adjust the relative volume of the speakers with a multiple speaker system. Choose your preferred Audio Scenerio. The BASS and TREBLE can only be adjusted when EQUALIZER is set in INDIVIDUAL mode. Neutral: Movie: Music: Individual: Preset original sound Emphasizes live sound for movies Enhanced sound quality for music Customised sound mode BALANCE EQUALIZER BASS TREBLE Control the relative intensity of lower-pitched sounds.



[You're reading an excerpt. Click here to read official POLAROID](#)

[TLU-03223B user guide](#)

<http://yourpdfguides.com/dref/1312718>

Control the relative intensity of higher-pitched sounds 22 Using Your LCD TV How To Customise ARC - Aspect Ratio Control Press the ARC button to change to a different picture format on the screen. When connected to certain sources, some modes maybe unavailable. AUTO IMAGE In this mode, the TV can automatically select the best aspect ratio for the broadcast. ENGLISH 4:3 NORMAL Displays at 4:3 aspect ratio for traditional broadcasts for nonwidescreen viewing in the correct proportions. There will be black strips on both sides of the screen.

14:9 Display 14:9 broadcasts in the correct proportions. There will be black strips on both sides of the screen. 16:9 WIDE Display 16:9 broadcasts in the correct proportions. Can also expand the width of 4:3 broadcasts evenly to fill the 16:9 screen. There maybe black strips at the top and bottom or sides of the screen.

PANORAMIC Expand 4:3 broadcasts to fit the 16:9 screen by expanding the image at the edges of the screen. This creates less distortion at the centre of the screen. ZOOM Display broadcasts in letter box format in the correct proportions. The top and bottom of the images are slightly cropped. How To Customise APC - Automatic Picture Control Press the APC button on the remote control repeatedly to cycle through the APC settings.

The button toggles through the different screen brightness options Normal / Cinema / Dynamic. NORMAL CINEMA Select this mode in a normal environment Select this mode in a dark environment DYNAMIC Select this mode in a bright environment NOTE: In VGA (PC) sources, only the 16:9 and 4:3 formats will be available. 23 Using Your LCD TV How To Use Picture-in-Picture (PIP) Functions Use these buttons on the remote control to use the PIP functions.

ON/OFF POSITION SIZE SWAP VIDEO SWAP AUDIO Select a mode of the PIP mode. Press repeatedly to turn PIP ON or OFF. Move the sub-picture from corner to corner on the TV screen. Press repeatedly to change the POSITION. Select a size of the sub-picture: Small--Middle--Large. Press repeatedly to change the SIZE. Interchange the picture of main source and sub source.

Interchange the voice of main source and sub source. SOURCE Select a second source: HDMI / TV / DTV / SCART1 / SCART2 / SCART2 S / Composite / Component / S-VIDEO as the sub picture. NOTES: · The LCD TV has to be connected two AV sources at least, and then PIP function can be activated. · To change channels in PIP picture, please switch PIP picture to main picture. PIP Mode Table This table shows what types of sources can work in main picture and PIP picture. "Main" means main source and "Sub" means sub source. The symbol "O" means both main source and sub source can operate. NICAM/A2 (IGR) Broadcast Selection Depending on the particular program being broadcast, you can press the SOUND button to listen to different language sources.

Under different systems, broadcast function will show differently. Sound A Sound B Mono Stereo Send the primary broadcast language to the speakers Send the secondary broadcast language to the speakers Provides mono sound Provides stereo sound 24 Using Your LCD TV How to Setup Analogue TV (ATV) 1 2 3 4 5 6 With the power turned on, press the TV button to select ATV mode and enter Analogue TV mode.

Press the MENU button on the remote control to display the on-screen Main Menu. Use the or buttons to select Channel Options and press . Use the or buttons to highlight your desired option. Press OK to enter the Sub-Menu. ENGLISH The OSD screen will vary based on different functions.

Refer to the Message Bar to adjust your favourite settings. Press OK to confirm your setting. Press MENU to return to the previous menu, or press EXIT to exit the menu. Channel Options: MAIN MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION MAIN MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION MAIN MENU OPTION Automatic Program Search Country Start Channel Scan Return Channel Management Sort Delete Rename Add/Change Return Reset Search and store all available channels. Choose a county.

Start scanning all channels. Return to previous menu. Manage the channels to your own preferences. Set the channel order according to your preference. Delete the selected channel. Rename the selected channel. Add or fine tune a selected channel. Return to the previous menu. You can reset all settings to their original default settings, except the scanned channels. 25 Using Your LCD TV How to Manage Your Analogue Channels: Rename, Sort, Delete 1 2 3 4 5 6 7 With the power turned on, in ATV Analogue TV mode, press TV button to select ATV mode.

Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select "Channel Options" and press OK. Use the buttons to highlight Channel Management and press OK to enter the edit menu. Use the button to highlight Rename and press OK to enter the Channel Naming menu. In the Channel Naming menu, press or to select the programme that you want to rename and then press OK to edit the name. Press the button to enter the name display area (5 characters) and press or to choose the characters and then press OK to confirm. Press MENU to return to the Main Menu, or press EXIT to exit the menu. NOTE: To sort or delete, please select your preferred item in the sub-menu and follow above steps. 26 Using Your LCD TV How to Setup Digital TV (DTV) 1 2 3 4 5 6 With the power turned on, press TV button to select DTV mode. Press the MENU button on the remote control to display the on-screen Main Menu.

Use the buttons to select "Channel Options" and press . Use the buttons to highlight your desired option. Press OK to enter the sub-menu. ENGLISH The OSD screen will vary based on different functions. Refer to the Message Bar to adjust your favourite settings.

Press OK to confirm your setting. Press MENU to return to the previous menu, or press EXIT to exit the menu. Channel Options: MAIN MENU OPTION MAIN MENU OPTION SUB-MENU OPTION SUB-MENU OPTION SUB-MENU OPTION MAIN MENU OPTION MAIN MENU OPTION MAIN MENU OPTION DTV Output Recording Channel Scan Country Confirm Return Setup New Channel Alert Reset Record all available channels. Start scanning all channels. Choose a country.

Scan and erase old info. Return to the previous menu. Setup some DTV settings. Informs you of new channels becoming available. You can reset all settings to their original default settings, except the scanned channels. 27 Using Your LCD TV How to Record Digital TV (DTV) Output 1 2 3 4 With the power turned on, in DTV mode, press SOURCE button to choose desired source. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Channel Options and press . Use the buttons to highlight DTV Output Recording.* Press OK to enter the setting mode.

Press MENU to return to the previous menu, or press EXIT to exit the menu.



[You're reading an excerpt. Click here to read official POLAROID TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)
<http://yourpdfguides.com/dref/1312718>

**NOTE: To use DTV recording, a video recording device must be connected to the TV in advance. This feature locks a channel during recording for a set period of time. Only one channel may be recorded at a time. Have questions about your TV's menus? Call our helpline customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 28 Using Your LCD TV How to Perform Channel Scan in Digital TV (DTV) Mode 1 2 3 4 5 6 7 With the power turned on, press TV button to select DTV mode. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Channel Options and press . Use the buttons to highlight Channel Scan. Press OK to enter the sub-menu. Press to Country and press OK. Use the buttons to select your desired country and press OK.*

Press to highlight Confirm and press OK. If you want perform the DTV scan, press OK to start DTV scan. ENGLISH Press MENU to return to the previous menu, or press EXIT to exit the menu. *NOTE: A warning message will appear after you select "Confirm" in sub-menu. Your previous stored information will be substituted and erased.*

29 Using Your LCD TV How to Setup Additional DTV Features 1 2 3 4 With the power turned on, in DTV mode, press SOURCE button to choose desired source. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Channel Options and press . Use the buttons to highlight Setup. Press OK to enter the setting mode. Press MENU to return to the previous menu, or press EXIT to exit the menu. SETUP Options: Banner Display Time Subtitle Language Audio Language Signal Strength Software Update Adjust the display time of the banner. Switch to 3, 5, or 10 seconds. Choose your preferred subtitle language. Choose your preferred audio language.*

*Show the signal strength for the channel. Update the software. If an update is made, a message bar notifying you of the update will appear. *NOTE: The language selection for audio and subtitles is offered according to your local broadcasters. Language selection includes: English, Gaelic Welsh, French, German, Spanish, Italian, Finnish, Swedish, Dutch, Denmark and Norway. 30 Using Your LCD TV How to Setup "New Channel Alert" in DTV Mode 1 2 3 4 5 With the power turned on, in DTV mode, press SOURCE button to choose desired source. ENGLISH Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Channel Options and press . Use the buttons to highlight New Channel Alert. Press OK to enter the setting mode.*

Use the buttons to select ON or OFF in the message bar and press OK to confirm. Press MENU to return to the previous menu, or press EXIT to exit the menu. 31 Using Your LCD TV How to Use the DTV Information Banner 1 2 3 With the power turned on, in DTV mode, press SOURCE button to choose desired source. Use the CH / OK/ or buttons to display the banner. Once the banner appears on the screen, the following options will be available: · Use the buttons to highlight channel in the bar.

*Press OK to enter the setting mode. · Press the SUB-TITLE button to display the DTV SUBTITLE menu. · Press the button to display more detailed information about the selected channel. · Press the GREEN button to display the DTV Multi-Audio menu. · Press the YELLOW button to display the DTV Profile menu. · Press the RED button to display the MHEG5 menu. * *MHEG5 is only available in the UK. 1. Logical channel number 2. Channel name 3. Channel status 4. Current time 5. Event name 6. Now/Next status 7. Duration of event 8.*

Subtitle status 9. User profile 10. Encrypted channel indicator 11. MHEG indicator 12. Multi-audio indicator 13. Event information indicator 14. Subtitle indicator 15. Teletext indicator 32 Using Your LCD TV How to Use the EPG (Electronic Programme Guide) in DTV Mode EPG (Electronic Programme Guide) is only available with Digital TV. Users can research and view a list of current and future broadcast television programmes. 1 2 3 With the power turned on, in DTV mode, press TV button to select DTV source.

ENGLISH Press the GUIDE button on the remote control to display the EPG. When the EPG appears on the screen, the following options will be available: · Press the GUIDE button to display the user profile. · Use the or button to select service category. · Press the BLUE button to display the theme list. · Browse the 7-day EPG by using the numeric buttons (1-7) on the remote control.

33 Using Your LCD TV How to Manage Your Preferred Digital (DTV) Channels After completing Channel Scan, follow the steps below to use the DTV Guide: 1 2 3 4 5 Press GUIDE on the remote control once to enter the EPG DTV Guide (see picture 1 below). Press again to setup your preferred channels in DTV mode (see picture 2 below). Press the RED button on the remote control to display the User Profile for editing. The maximum number of User Profiles available is three users. Press the BLUE button on the remote control to rename or edit Users Profiles (see picture 3 below).

Press the GREEN button on the remote control to enter All Channels in the right side of the DTV guide. Use the buttons to select your favourite channels. There is no limitation to edit your preferred channel numbers in the right side of All Channels (see picture 4). Press the GREEN button on the remote control repeatedly to switch between User Profiles and All Channels. Press the YELLOW button on the remote control to delete items of User Profiles. PICTURE 1 PICTURE 2 PICTURE 3 PICTURE 4 34 Using Your LCD TV How to Set Your Preferences in DTV Mode 1 2 3 4 With the power turned on, in DTV mode, press SOURCE button to choose desired source. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Preferences and press . Use the buttons to highlight your desired option. Press OK to enter the sub-menu.

ENGLISH Press MENU to return to the previous menu, or press EXIT to exit the menu. OSD IN ATV/DTV MODE Preferences: OSD: Make adjustments for the OSD (On-Screen Display) OSD Sub-Menu Options: Language OSD Contrast OSD Brightness Transparency Return Select language for the OSD Adjust the OSD contrast Adjust the OSD brightness Adjust the OSD transparency Return to the previous menu Child Lock: Lock some channels for protective purposes. Change PIN: Create your own PIN. On Timer: Turn the TV ON or OFF automatically. Colour Mode: Adjust the colour of the picture. Normal Warm Cool User Colour is natural Colour has a reddish tint Colour has a bluish tint Customise the colour mode User Mode: Colour R Colour G Colour B Adjust the red ratio of the picture Adjust the green ratio of the picture Adjust the blue ratio of the picture 35 Using Your LCD TV How to Use Child Lock 1 2 3 4 5 6 With the power turned on, press SOURCE button to choose desired source.*



[You're reading an excerpt. Click here to read official POLAROID TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)

Press the MENU button on the remote control to display the on-screen Main Menu. Use the or button to select Preferences and press . Use the or buttons to highlight Child Lock. Press OK to enter the Child Lock menu.

Use the buttons to update the current status. Enter the PIN (Personal Identification Number) by using numeric buttons (0-9). Press MENU to return to the previous menu, or press EXIT to exit the menu. Setup your Child Lock preferences for the first time: Change PIN after setting up your Child Lock preferences:
NOTES: · The default PIN is "0000". Remember the new PIN code you enter because in order to create a new code, you must enter the code that you selected.
· Follow steps 1-5 (above) to remove the child lock permanently. · Child Lock is set or removed separately in each source. 36 Using Your LCD TV How to Use the Timer Features Sleep Timer Feature 1 2 1 2 3 4 5 6 With the power turned on, press the SLEEP button on your remote control. ENGLISH Select a time to automatically turn off your TV. Timer can be set 00 to 120 minutes in 10 minute intervals.

On Timer Feature With the power turned on, in DTV mode, press SOURCE button to choose desired source. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Preferences and press . Use the buttons to highlight On Timer. Press OK to enter the sub-menu. Press highlight TV on after. Press OK to set the timer. Enter the desired hours and minutes* by using the numeric buttons (0-9) and press OK. Press highlight Confirm. Press OK to confirm and the TV will turn ON automatically when the time elapsed.

MAIN MENU IN ATV MODE NOTE: · For example, if you want to set 10 minutes for TV on after, press numeric buttons "0010" on the remote. · If you do not do the "Confirm" in step 6, it is not completed. · The picture of Preferences in "ATV" is different from the one in DTV. Child Lock and Change PIN are only offered in ATV mode. 37 Using Your LCD TV How to Use PC and SCART Connectivity Menu 1 2 3 4 5 6 With the power turned on, press PC/HD button to select VGA mode. Press the MENU button on the remote control to display the on-screen Main Menu. Use the buttons to select Connectivity and press . Press the button to highlight PC. Press OK to enter the sub-menu. Use the buttons to highlight your desired option and press OK.

Use the buttons to make adjustments and press OK. Press MENU to return to the previous menu, or press EXIT to exit the menu. Connectivity: PC: The option of PC in the main menu of Connectivity only appears in VGA mode. Sub-Menu Options: Auto Image H Position V Position Phase Clock Return Automatically adjust picture Adjust the horizontal position of the picture Adjust the vertical position of the picture Adjust the picture phase Adjust the width of the picture Return to the main menu Main Menu (In any mode, except for VGA mode) Scart1 Output: Output SCART1 signal - TV / Composite / S-VIDEO / DTV Scart2 Output: Output SCART2 signal - TV / Composite / S-VIDEO / DTV Your current PC resolution and frequency appears, when PC is connected. To adjust the PC resolution, follow these steps: 1 2 Connect your PC and turn the power on.

Use buttons to highlight your desired option and press OK on the remote control. Notes: · "Wide mode selection" will appear in some specific PC resolutions of 1024x768, 1280x768, 1360x768, 640x350 & 720x400. · Auto mode is strongly recommended. 38 Using Your LCD TV How to View Your TV's Information and Reset Your Settings Information: 1 2 3 With the power turned on, in any mode, press SOURCE button to select desired source. ENGLISH Press the MENU button on the remote control to display the on-screen Main Menu.

Use the buttons to select Information. You can also use the SUB-TITLE button to select Information. Press OK, MENU, or EXIT to exit the menu. Information: Panel Res. Main Source Main Format Sub Source Sub Format Sound Mode APC Mode ARC Mode Display the TV's panel resolution Display the source of the main picture Main picture input format Display the source of the sub-picture Sub-picture input format Display the sound mode information Display the APC mode information Display the ARC mode infor Information Screen: Reset: You can reset all of your TV's settings to their original default settings, except scanned channels. Follow the instructions below to reset your settings. 1 2 3 With the power turned on, in any mode, press MENU button. Use the buttons to select Channel Options. Use buttons to highlight Reset and press OK when finished. Press EXIT to exit the menu.

Reset (In Analogue ATV mode) Reset (In Digital DTV mode) 39 Using Your LCD TV How to Use the TELETEXT Functions TELETEXT is an information service broadcast offered by some TV stations (depending on the country) which gives upto-the-minute information, news, weather, television programs, share prices, subtitles, and so on. This TV has 100 Teletext page number memories. TELETEXT Operation: 1 2 3 With the power turned on, in any mode, select a TV station on which TELETEXT is transmitted. Press the TELETEXT button on the remote control to display the TELETEXT screen. Display: Two page numbers, TV station name, date, and time are displayed on the screen's headline. The first page number indicates your selection and the second page number shows the current page being displayed. Press TELETEXT to toggle between the following text modes: TEXT/MIX/PAT/OFF. TEXT Mode MIX Mode PAT Mode (Picture & Text) TELETEXT Page Selection: 1 2 3 Enter the required TELETEXT page as a three-digit number. Display: The selected page number is displayed at the top left corner of the screen. The TELETEXT page counter searches until the selected page number is located.

The desired page is displayed on the screen. Use CH buttons or buttons to select the preceding or following page. Use RED/ GREEN/ YELLOW/ BLUE buttons on the remote control to perform Fastext movement. Display: Four subject-heading pages can be selected quickly by pressing the corresponding coloured buttons Red/ Green/ Yellow/ Blue on the remote control. 40 Using Your LCD TV How to Use the TELETEXT Functions TELETEXT Remote Control Functions: ENGLISH Press the INDEX button on the remote control to display the Index Page and the list of INDEX TELETEXT contents.

1 Press the REVEAL button once to display concealed information, such as solutions REVEAL 2 to riddles, puzzles, or a quiz. Press the REVEAL button again to conceal the revealed answer. 1 While watching a TV program with TELETEXT, press the TIME button. The current 2 TIME time information will be displayed on the screen. The time information will disappear after pressing the TIME button again.

SUB-PAGE: Press the TIME button to stop the running Teletext page and enter your sub-page number.



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1312718)

[TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)

<http://yourpdfguides.com/dref/1312718>

The TELETEXT page you selected may contain more information than what is displayed on the screen; the rest of the information will be displayed on a sub-page. @@@@HOLD 2 Press the HOLD button again to continue. @@1 Select required page number in TELETEXT mode. @@A small blue box displaying "???" will appear in the upper left corner. 3 When required text page is found, the required page number will appear in the blue box. INTERRUPT 4 Press the INTERRUPT button again to return to TELETEXT mode. 1 Press the EXPAND button to enlarge the top half of the page. 2 Press the EXPAND button again to enlarge the bottom half of the page. EXPAND 3 Press the EXPAND button again to return to the normal display.

Double the size of the text. NOTE: On-Screen Display (OSD) adjustments are not available in TELETEXT mode. 41 Specifications LCD Specifications Panel Size Brightness Contrast Ratio Resolution Inputs Composite A/V Component (YPbPr) S-Video with Audio VGA (D-Sub) with Audio HDMI with Audio Composite A/V Output RF Input SCART Input Power Source Power Consumption Dimensions & Weight (HxWxD) VESA wall-mount size LCD Specifications Panel Size Brightness Contrast Ratio Resolution Inputs Composite A/V Component (YPbPr) S-Video with Audio VGA (D-Sub) with Audio HDMI with Audio Composite A/V Output RF Input SCART Input Power Source Power Consumption Dimensions & Weight (HxWxD) VESA wall-mount size 32" (80 cm) 500 cd/m² 1200:1 1366 x 768 1 1 1 1 2 1 2 AC 100~240V, 50/60HZ <180W 651.5 x 828 x 240mm, 22kg 200 x 100 37" (94cm) 500 cd/m² 1000:1 1366 x 768 1 1 1 1 2 1 2 AC 100~240V, 50/60HZ <190W 722.5 x 947 x 240mm, 25kg 200 x 100 "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation. For service, support and warranty information, visit www.polaroid.com. 42 Specifications LCD Specifications Panel Size Brightness Contrast Ratio Resolution Inputs Composite A/V Component (YPbPr) S-Video with Audio VGA (D-Sub) with Audio HDMI with Audio Composite A/V Output RF Input SCART Input Power Source Power Consumption Dimensions & Weight (HxWxD) VESA wall-mount size 42" (106.68cm) 500 cd/m² 1500:1 1366 x 768 1 1 1 1 2 1 2 AC 100~240V, 50/60HZ <310W 816 x 1067 x 270mm, 36.

1kg 638 x 310 ENGLISH Have questions about your TV's specifications? Call our helpline customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 43 Troubleshooting There is no picture or sound.

Make sure the AC cord is connected Make sure AC Power Switch is turned on. Verify that there is a valid source signal. Make sure the correct input mode is selected. There is no picture from AV. Make sure the BRIGHTNESS is properly adjusted.

Make sure the video source is properly connected to desired source. Make sure the correct input mode is selected. The fluorescent lamp may have reached the end of its life. Contact an authorized service center. There is no sound. Make sure the volume is not set to minimum. Make sure the sound is not muted Make sure that headphones are not connected. There is no picture or sound, just noise. The source signal may be weak. Your provider may be experiencing difficulties.

Check your input connections. Picture is not clear. The source signal may be weak. The provider may be experiencing difficulties. Check input connections. Need help troubleshooting? Call our helpline customer service number. Look for the insert with this icon: Or visit www.polaroid.com. 44 Troubleshooting (Continued) Picture is light or improperly tinted.

Check the Hue, Saturation and Colour adjustments. Reset the TV to the factory default settings. ENGLISH The picture is too dark. Select a different APC mode. Check the Brightness of Picture Settings.

The fluorescent lamp may have reached the end of its life. Contact an authorized service center. Remote control does not work. Install new batteries. Make sure the remote sensor window isn't blocked.

Make sure the system is in the right mode (TV, PC/HD, VIDEO, SCART) There are stripes on the screen or colours fade. There may be interference from other appliances. (e.g. microwave ovens, mobile phones, etc.) There may be interference between the video source cable and the power cable. Make sure the power and video cables are not touching. Other Notes: Static or other external interference may cause the LCD TV to behave abnormally. If this occurs, unplug the power supply cord from the outlet and plug it in again. If the problems persist, disconnect the power from the wall and the back of the TV and consult a qualified technician.

45 Troubleshooting (Continued) The picture is not sharp. The signal source may be weak. The provider may be experiencing difficulties. Check input connections. Check the Sharpness of Picture Settings. The picture moves. The source signal may be weak. The provider may be experiencing difficulties. Check input connections. The picture is doubled or tripled.

The source signal may be weak. Check input connections. The picture is spotted. There may be interference from other appliances nearby or around the LCD TV. (e.

g. microwave ovens, mobile phones, etc.) 46 ENGLISH Questions? Need some help? Call our helpline number found on the insert with this icon: Or visit www.polaroid.com.

47 20071024 .



[You're reading an excerpt. Click here to read official POLAROID TLU-03223B user guide](http://yourpdfguides.com/dref/1312718)
<http://yourpdfguides.com/dref/1312718>