




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID TLX-04011C. You'll find the answers to all your questions on the POLAROID TLX-04011C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID TLX-04011C
User guide POLAROID TLX-04011C
Operating instructions POLAROID TLX-04011C
Instructions for use POLAROID TLX-04011C
Instruction manual POLAROID TLX-04011C



Simple Steps for Connecting Your LCD TV to A/V Devices

AV Devices include:


- VCRs • DVD players • Game consoles
- Cable, satellite, or set-top boxes

* Your A/V devices may not have all of the following connections.


Widescreen LCD Television
Quick Start Guide

Polaroid


BEST CONNECTION **HDMI**

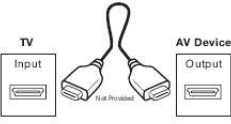


EXCELLENT CONNECTION **Component**

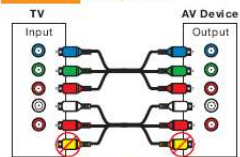


VERY GOOD CONNECTION **S-Video**

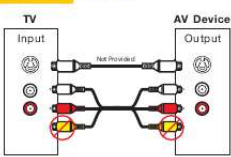


GOOD CONNECTION **Composite**

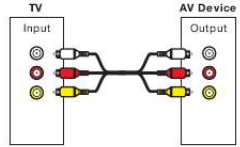

BASIC CONNECTION **RF Cable/Antenna**

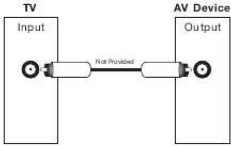

 Connect Power Cord and Install Batteries in Remote Control



Program Your TV

- Press **TV** (if you have universal remote control)
- Press **Power** on remote control
- Press **Input/Source**
- Select proper AV source
- Press **OK**
- Exit the Menu and start enjoying your new TV!

If you need assistance... Polaroid can help. Use the provided **Worldwide Support Contact sheet** to call our helpful technical support center for your area or visit www.polaroid.com.



[You're reading an excerpt. Click here to read official POLAROID TLX-04011C user guide](http://yourpdfguides.com/dref/1312974)
<http://yourpdfguides.com/dref/1312974>

Manual abstract:

*If you need assistance... Polaroid can help! Use the provided Worldwide Support Contact sheet to call our helpful technical support center for your area or visit www.polaroid.com. More Detail for Connecting Your LCD TV to A/V Devices A/V Devices include: · VCRs · DVD players · Game consoles · Cable, satellite, or set-top boxes * Your A/V devices may not have all of the following connections. CONTENTS POWER CORD COMPOSITE CABLES COMPONENT CABLES Widescreen LCD Television + + - Quick Start Guide - REMOTE CONTROL/ 2 AAA BATTERIES DOCUMENTS THE BEST CONNECTION We highly recommend you use Digital High Definition (digital HD) whenever possible. Make sure your external A/V devices are set to receive an HDMI signal, when trying to use this connection. @@@@Make sure your external A/V devices are set to output an HDMI signal. @@@@LCD TV B. Stand C. Screwdriver D. Screws (4) If you prefer to mount your TV, do not attach the stand. @@PLEASE READ CAREFULLY. IMPORTANT: Attach the stand to your TV with the bottom foam packaging material still attached. 3 Remove top packaging material and lift TV out of box Packaging Material Unit Packaging Material Packaging Material 4 Place on stable surface and remove protective bag Protective Bag 5 Use all 4 screws to attach stand to TV 4 Screws Unit Stand Packaging Material Packaging Material 6 Place TV upright and remove packaging material Unit 7 Find your Quick Start Guide for simple steps to connect your TV to A/V devices. If you need assistance... Polaroid can help! Use the provided Worldwide Support Contact sheet to call our helpful technical support center for your area or visit Packaging Material Lift from the bottom. "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA. .*



[You're reading an excerpt. Click here to read official POLAROID TLX-04011C user guide](#)
<http://yourpdfguides.com/dref/1312974>