



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID XSA-10169S. You'll find the answers to all your questions on the POLAROID XSA-10169S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual POLAROID XSA-10169S
User guide POLAROID XSA-10169S
Operating instructions POLAROID XSA-10169S
Instructions for use POLAROID XSA-10169S
Instruction manual POLAROID XSA-10169S



Digital Photo Frame User's Manual



[You're reading an excerpt. Click here to read official POLAROID XSA-10169S user guide](http://yourpdfguides.com/dref/1313061)
<http://yourpdfguides.com/dref/1313061>

Manual abstract:

If you still have questions, call our help line found on the insert with this icon: or visit www.polaroid.com/support. 20080527 Important Safety Instructions
CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Note: Do not touch the color TFT LCD screen.

@@@@@@@Avoid exposing the Digital Photo Picture Frame to direct sunlight or high temperatures, which can damage or shorten its life. Do not place the unit near heat sources such as radiators, heat registers, or other appliances that generate heat. Orient the Digital Photo Picture Frame away from direct sunlight to reduce glare. Avoid exposing the Digital Photo Picture Frame to rain, water, moisture or high humidity.

Do not place it in a bathroom or kitchen near a sink or where it may come in contact with water. Never place heavy or sharp objects on the LCD panel, frame, or power cord. Overloading Outlets Do not overload electrical power sources when using the Digital Photo Picture Frame. Overloading wall outlets, circuits, or extension cords can result in overheating, fire, or electric shock. Use only grounded or polarized outlets.

Power Cord Protection To minimize wear on the power supply cord, the power supply cord should be routed away from foot traffic and contact with other objects. Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged.

Ventilation Slots and openings on the Digital Photo Picture Frame are provided for ventilation purposes. To ensure proper ventilation and reliable operation of the product do not place Digital Photo Picture Frame on a bed, sofa, rug or similar surface. @@@@2. Press POWER button to power on the device. The unit will enter the Main Menu page. Internal memory SD / MMC Card Setup 3. Insert a memory card into the slot. @@The unit will play the memory card type automatically. 5. Press the II button to enter photo mode.

@@, , or button to select a picture. Press the II button 6. In Photo Mode, press the to view it in full screen. Press the Menu button to return to thumbnail display. Press the button to go back to the previous picture. button to go to the next picture or press the 7. @@@@Press the MENU button to exit zoom function. or button to rotate the current picture. 8. @@Press the button to rotate clockwise.

Press Press the Menu button to return to thumbnail display. 9. @@10. @@@@11. @@12.

@@@Press the and press the II button to confirm your choice. @@@@These pictures can be viewed without inserting any memory cards. @@Power on the Digital Photo Picture Frame and insert a memory card, no matter what state the unit is, wait for a while, the slide show will run automatically. Setting a Favorite Slide Show In Photo Mode, press the the , , or button to select a favorite picture and press the OK button to mark it as a favorite. Press the OK button again to cancel your choice.

When you have selected all your favorite images for your custom slideshow, wait for a while, your favorite slide show will start automatically. 6 Frequently Asked Questions Frequently Asked Questions(FAQ) Q : What other media formats can the Digital Photo Picture Frame support? Why will it not play all images? A : The Digital Photo Picture Frame will support JPEGs taken from a digital camera. The Digital Photo Picture Frame may not read all images. Q : I have a memory card in the Digital Photo Picture Frame, but it's not reading the card. What should I do? A : First, make sure that you are using a memory card that is supported by the Digital Photo Picture Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, press the EXIT button until you reach the "Select Card" page. If the memory card is properly inserted into the slot, that memory card icon will be highlighted. Note: Some digital cameras save images into non-standard formats. Please refer to your camera's operating manual for specifics.

Q : Why do some pictures load faster than others? A : Higher resolution pictures load slower. Using a lower resolution when taking pictures speeds loading time. 7 Technical Specifications and Recycling Technical Specifications Product: Resolution: Input Formats: 10.2" LCD Screen Digital Photo Picture Frame 1024 x 600 pixels Secure DigitalTM, Multi Media CardTM, Memory StickTM, Memory Stick DuoTM, Memory Stick ProTM Contrast Ratio: 400:1 Horizontal viewing angle: 120 degrees Vertical viewing angle: 110 degrees This manual should help you understand your new product. If you have questions, please call our toll-free number found on the insert with this icon: Questions? Need some help? Or visit www.polaroid.com. © 2008 by WEEE: All rights reserved This product contains electrical or electronic materials. @@@@@polaroid.com and click on "Company" or call the customer service number for your country listed in the instruction manual.

RoHS "Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation. For service, support and warranty information, visit www.polaroid.com. 8 Part No.

:OM6114US001 Printed in China 9 10 11 12 .



[You're reading an excerpt. Click here to read official POLAROID](#)

[XSA-10169S user guide](#)

<http://yourpdfguides.com/dref/1313061>