



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID XSU-00350B. You'll find the answers to all your questions on the POLAROID XSU-00350B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID XSU-00350B**  
**User guide POLAROID XSU-00350B**  
**Operating instructions POLAROID XSU-00350B**  
**Instructions for use POLAROID XSU-00350B**  
**Instruction manual POLAROID XSU-00350B**



Digital Photo Frame  
User's Manual



**Questions?  
Need some help?**  
This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



Or visit [www.polaroid.com/support](http://www.polaroid.com/support).

20081014



[You're reading an excerpt. Click here to read official POLAROID XSU-00350B user guide](http://yourpdfguides.com/dref/1313083)  
<http://yourpdfguides.com/dref/1313083>

**Manual abstract:**

Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage the device. @@@@For example (Photo/Music/SETUP) 4 3 2 1 1. @@@@Right - Press and release to move to the right 4. Left - Press and release to move to the left 5. Strap holder 6. USB port 7. SD/MMC slot 8. Stand 9. Reset button 10.

Earphone port Installing a Flash Media Card 6 7 1. Find the slot that fits your flash media card. 2. Insert the card in the correct slot. 3.

To remove the card, simply push it in slightly until it springs back out. Remove. Note: Do not remove any memory card from its slot while pictures are playing. Doing so could damage the frame or memory card. Always turn the power off before removing the memory card.

Controls and Basic Instructions Powering up 1. Make sure the frame is connected to your PC using the supplied USB cord. 2. Press and hold the ESC button until the Polaroid logo appears on the frame's screen. We recommend you charge the battery for six hours upon initial use. Subsequent charging should take only four hours. When powering up, you will be presented with two choices. Navigate to your choice by pressing the Right or Left button, then Enter to confirm. Your choices are: 1. Charging mode: Charges the internal rechargeable battery and allows you to view photos, listen to music, etc.

You will not be able to transfer pictures to and from the frame in charging mode. 2. PC mode: Use the frame as a card reader (SD/MMC) to transfer files to and from the memory card and your PC. @@Select SD/MMC flash memory 2. @@@@Right - Press and release to move to the right 4.

@@@@Enter - Press to select play or pause 3. @@@@@@Right - Press and release to move to the right 4. @@@@@@Use these control keys to navigate 1. @@Enter - Press to select play or pause 3. @@Left - Press and release to select the previous song; press and hold to turn the volume down

System Settings Use these control keys to navigate 1.

ESC - Press to exit to the last menu 2. Enter - Press to enter next menu or select 3. Right - Press and release select the next option 4. Left - Press and release to select the previous option Selecting your Language 1. 2.

3. 4. 5. Once you have powered up, select charging mode. Use the right/left buttons to navigate to the internal memory selection.

Press enter to confirm. Use the right/left buttons to navigate to the settings icon (the wrench). Press enter to confirm. Navigate to the language of your choice.

Press enter to confirm. Press the ESC button to return to the main menu. Functions and Specifications Functions Language Brightness English, French,

German, Italian, Spanish, Portuguese, Greek, Dutch, Turkish Adjust brightness Adjust contrast Adjust tint Slideshow Intervals Transition Effects Reset

Settings Select between 3, 5, 10, 30 or 60 seconds Off, fade, shutter, cross, brick, dissolve, bar, expansion, silk, random Version: The current firmware version

Software update: If available, this will let you upgrade firmware Reset settings: Reset all settings to factory defaults Specifications Unit Unit Size Weight

Resolution Brightness Contrast Ratio Card Type Internal Memory Input Music Format 3.5" Digital Photo Frame 14mm H x 84mm W x 103mm L 0.45 kg. 320 x 240 200cd/m2 max.

350:1 SD, MMC 0.7MB USB 2.0 Hi-Speed Device MP3 Set Up and Navigation Recycling Questions? Need some help? Call our help line found on the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). WEEE: This product contains electrical or electronic materials. The presence of these materials may, if not

disposed of properly, have potential adverse effects on the environment and human health. @@@@@@"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation. For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com).

com. .



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313083)

[XSU-00350B user guide](http://yourpdfguides.com/dref/1313083)

<http://yourpdfguides.com/dref/1313083>