



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID XSU-01035B. You'll find the answers to all your questions on the POLAROID XSU-01035B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID XSU-01035B**  
**User guide POLAROID XSU-01035B**  
**Operating instructions POLAROID XSU-01035B**  
**Instructions for use POLAROID XSU-01035B**  
**Instruction manual POLAROID XSU-01035B**

Digital Photo Picture Frame



User's Manual



20070704



[You're reading an excerpt. Click here to read official POLAROID XSU-01035B user guide](http://yourpdfguides.com/dref/1313067)  
<http://yourpdfguides.com/dref/1313067>

**Manual abstract:**

*Important: Save the original box and all packing material for future shipping needs. Controls AUTO: Press & Hold (under normal mode): Automatically adjusts the position of the display area of the LCD screen. Press (under "Display Screen Adjustment Menu"): Exit. AUTO MENU MENU: Press (under normal mode): Enter into "Display Screen Adjustment Menu". Press (under "Display Screen Adjustment Menu"): Select items in the menu. UP ARROW Press (under normal mode): Increase music volume Press (under "Display Screen Adjustment Menu"): Move up or go to previous DOWN ARROW Press (under normal mode): Decreases music volume Press (under "Display Screen Adjustment Menu"): Move down or go to next POWER: Turns power on/off V Installing a Flash Media Card Power Power SM Card AVAV Out Out USB Port USB MS/SD/MMC CardCard MS/SD/MMC V SM Card 1. Find the slot that fits your flash media card. 2. Insert the card in the correct slot. 3.*

*To remove the card, simply push it in slightly until it springs back out. Remove. CF/MD Card CF/MD Card Controls and Basic Instructions Replacing the Remote Control Battery 1. Remove the battery compartment by pulling the cover in the direction of the arrow. 2.*

*Remove old battery and dispose of correctly. 3. Insert new battery taking note of correct polarity (+/-). 4. Replace cover.*

*Caution: 1. Only use a 3V CR2025 battery. 2. Dispose of used batteries according to local ordinance regulations. 3. Remove the battery when not using the Flash Player for prolonged periods. Buttons on the Remote Control POWER button Press to turn player on or off. SETUP button Press to open menu for changing settings. CARD SELECTION button Press to choose a different memory card. MUSIC button Press to go to and display music files.*

*PHOTO button Press to go to and display photo files. @@ button Press to move left when selecting files on your screen. @@ button Press to move down when selecting files on your screen. @@@@2. @@@3. Turn the power switch to "ON". As a default the first file of the card will be displayed first. @@@@2. @@@Use the LEFT or RIGHT keys to make your selection. 3.*

*@@@Your photos will be displayed in a slideshow. 5. @@The Digital Picture Frame has a built-in mini-USB port. @@@@2. @@@3.*

*@@@Enter the PREFERENCES PAGE and switch FILE EDITING setting ON. 2. Return to MAIN MENU, and select the target disk (NAND FLASH). 3. Return to MAIN MENU Select FILE Navigate to DEVICE as root directory.*

*Use LEFT or RIGHT buttons on remote control to select and press. (For this operation, the file will be copied to the root directory of internal NAND FLASH. Users could select other directories under the root to copy). Set Up and Navigation 4. Return to MAIN MENU, and select a source disk. 5. Return to MAIN MENU. Select FOLDER. Enter and select a file. Select and press to copy.*

*Then, the copied file can be found in NAND FLASH. Deleting Files Enter SD card or NAND FLASH. Select a file you wish to delete. Use LEFT or RIGHT buttons to select and press select YES or NO in the dialog box. Formatting the internal NAND FLASH Enter MAIN MENU, select SETUP, and enter PREFERENCES, then select NAND FLASH to format it. Recycling WEEE: This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. @@@.*



[You're reading an excerpt. Click here to read official POLAROID](http://yourpdfguides.com/dref/1313067)

[XSU-01035B user guide](http://yourpdfguides.com/dref/1313067)

<http://yourpdfguides.com/dref/1313067>