



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID XSU-01040B. You'll find the answers to all your questions on the POLAROID XSU-01040B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID XSU-01040B**  
**User guide POLAROID XSU-01040B**  
**Operating instructions POLAROID XSU-01040B**  
**Instructions for use POLAROID XSU-01040B**  
**Instruction manual POLAROID XSU-01040B**



Digital Photo Frame  
User's Manual



**Questions?  
Need some help?**  
This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



Or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

20080229



[You're reading an excerpt. Click here to read official POLAROID XSU-01040B user guide](http://yourpdfguides.com/dref/1313068)  
<http://yourpdfguides.com/dref/1313068>

**Manual abstract:**

@@@Also, remember to keep this User's Manual in a convenient location for future reference. Important: Save the original box and all packing material for future shipping needs. Controls AUTO: Press & Hold (normal mode): Automatically adjusts the position of the display area of the LCD screen. Press (under "Display Screen Adjustment Menu"): Exit. AUTO MENU MENU: Press (normal mode): Enter into "Display Screen Adjustment Menu". Press ("Display Screen Adjustment Menu"): Select items in the menu. UP ARROW Press (normal mode): Increase music volume Press ("Display Screen Adjustment Menu"): Move up or go to previous DOWN ARROW Press (normal mode): Decreases volume Press ("Display Screen Adjustment Menu"): Move down or go to next POWER: Turns power on/off Installing a Flash Media Card Power Power AV Out USB Port USB MS/SD/MMC CardCard MS/SD/MMC V V SM Card

1. Find the slot that fits your flash media card. 2. Insert the card in the correct slot.

3. To remove the card, simply push it in slightly until it springs back out. Remove. Note: Do not remove any memory card from its slot while pictures are playing. Doing so could damage the frame or memory card.

Always turn the power off before removing the memory card. CF/MD Card CF/MD Card Controls and Basic Instructions Replacing the Remote Control Battery 1. Remove the battery compartment by pulling the cover in the direction of the arrow. 2. Remove old battery and dispose of correctly.

3. Insert new battery taking note of correct polarity (+/-). 4. Replace cover. Caution: 1. Only use a 3V CR2025 battery. 2. Dispose of used batteries according to local ordinance regulations. 3. Remove the battery when not using the Flash Player for prolonged periods.

Buttons on the Remote Control POWER button Press to turn player on or off. SETUP button Press to open menu for changing settings. CARD SELECTION button Press to choose a different memory card. MUSIC button Press to go to and display music files. PHOTO button Press to go to and display photo files. ROTATE button Press to rotate photos 90 degrees clockwise on screen ZOOM button Press to zoom up to 4x (on photos only) SLIDESHOW button Press to start/stop a photo slideshow + VOLUME button Press to increase volume - VOLUME button Press to decrease volume MUTE button Press to instantly mute volume button Press to move up when selecting files on your screen. button Press to move left when selecting files on your screen. PLAY/PAUSE button Press to play/pause or confirm selections on your screen. button Press to move right when selecting files on your screen. button Press to move down when selecting files on your screen.

STOP button Press to stop the selected file/action. ControlsUp and Navigation Set and Basic Instructions Setup Menu Separate window Slide show transition Sub-Menus On Off Off Fade Shutter Cross Combo Mask Brick Dissolve Bar Expansion Silk Random 5 ~ 300 seconds On Off Description Creates additional frames to view more than one picture at a time with a maximum of four pictures at once Each picture in a slide show will be shown one after another. Choose a transition to be used between those images Slide show speed Slide show shuffle Set favorite or select Music repeat Choose from different slide show speeds Lets you display photos in a random order A small check mark will appear on the thumbnail image. @@Allows you to repeat songs Reset settings Full screen Language Copy file Delete file Brightness/contrast Color/tint Set time and Alarm clock Clock style Time format Auto slide setting One All Off Yes No On Off Resets all your settings back to the factory default View images at full screen Select the language of your choice: English, Italian, German, French, Spanish Copy files to the media card Delete files Adjusts these settings Adjusts these settings Use these settings to set your clock time and your alarm time Calendar with photo Displays a digital clock Change clock format to either 12 or 24 hour time Automatically turns on a slide show when the frame or remote is untouched for this period of time Degree bar Degree bar Set current time Set alarm time Photo mode Digital clock 24-hour 12-hour Off Specifications and Set Up Specifications Unit Unit Size Weight Resolution Brightness Contrast Ratio Card Type Internal Memory Input Auto Start Mode Photo Playback Mode 10.4" Digital Photo Frame 305mm x 250mm x 43mm 1.

4 kg. 640 x 480 250cd/m2 max. 250:1 CF, SD, MMC, MS 512MB Mini USB Auto slide show (JPEG) 1. Rotate, zoom in 2. Auto slide show 3.

Slide show with music (MP3) 4. Interval time setup 5. Transition setup Music Playback Mode 1. Play/stop/pause 2. Volume adjust 3. @@800 x 400 250cd/m2 max. 250:1 CF, SD, MMC, MS 512MB Mini USB Auto slide show (JPEG) 1. Rotate, zoom in 2. Auto slide show 3. Slide show with music (MP3) 4.

Interval time setup 5. Transition setup 1. Play/stop/pause 2. Volume adjust 3. @@800 x 600 250cd/m2 max. 250:1 CF, SD, MMC, MS N/A Mini USB Auto slide show (JPEG) 1. Rotate, zoom in 2. Auto slide show 3. Slide show with music (MP3) 4. Interval time setup 5.

Transition setup 1. Play/stop/pause 2. Volume adjust 3. Repeat model setup 4. File type, total time, date, display 4.

File type, total time, date, display 4. File type, total time, date, display Setting up the Digital Picture Frame 1. @@2. @@3. Turn the power switch to "ON". As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type.

Connecting a USB Device to the Digital Picture Frame 1. The Digital Picture Frame has a built-in mini-USB port. @@2. @@3. This Digital Picture Frame cannot be connected to a computer. @@THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD. Navigating in the Digital Photo Frame Slide show Screen: Turning the Digital Picture Frame on will initiate a photo slideshow with music, provided the inserted memory card has music and photo files.

Select Card Screen: Press the Card button on the remote to return "Select card" menu Select Function Screen: Select a source disk, then press the Menu key, or press the play/pause button on the remote to enter "Select Function" menu as below: Photo Browse Screen : Select the Photo icon, then press the Menu key, or press the play/pause button on the remote to enter the Photo Browse Screen as below: Navigating in the Digital Photo Frame Music Browse Screen : Select the Music icon, then press the Menu key, or press the play/pause button on the remote to enter the Music Browse Screen as below: File Operation Screen : Select the File icon, then press the Menu key, or press the play/pause button on the remote to enter the File Operation Screen as below: Calendar Screen : Select the Calendar icon, then press the Menu key, or press the play/pause button on the remote to enter the Calendar Screen as below: Setting Language: Press the Setup button on the remote to access the setting language menu, select the language you wish to use.



[You're reading an excerpt. Click here to read official POLAROID XSU-01040B user guide](http://yourpdfguides.com/dref/1313068)  
<http://yourpdfguides.com/dref/1313068>

The menu language will be change in this order: English>Italian>German>French>Spanish Navigating in the Digital Photo Frame Setting Current Time: In the Calendar screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Set Time & Alarm CLock and Set Current Time. Use "" or ""key to select types. Use "" or ""key to set specific numerical value. When the correct time and date is set, press the PLAY/PAUSE button. Setting Alarm Time: In the Calendar screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Time & Alarm clock and Set Alarm Time. Use "" or ""key to select types. Use "" or ""key to set specific numerical value. When the correct time and date is set, press the PLAY/PAUSE button. Set Favorite Photo and Song: Using your remote control, select the photo or music view mode, depending on whether you want to set a photo or song as your favorite. Select the photo or song you want to set as a favorite. Press set favorite on the remote control. You may select photos or songs by repeating these steps.

To enter a slide show, either press the slide show key on the remote or hold down the auto key for 2 seconds. Navigating in the Digital Photo Frame How to Delete Files a) In Select Card Screen or Select Function Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Delete File will delete all the photo and music in the current card. b) In File Operation Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Delete File, it will delete the photo or music you select.

Select file: A. In File Operation Screen, press PLAY button/ Menu key once B. In the setting menu, select Set Favorite How to Copy Files a) In Select Card Screen or Select Function Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Copy File, it will copy all photo and music on the current card to the card. b) In the File Operation Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Copy File, it will copy the photo and music which you selected to the target card. Select file: C. D. In File Operation Screen, press PLAY button/ Menu key once In the setting menu, select Set Favorite Navigating in the Digital Photo Frame How to Format Memory In Select Card Screen select Memory, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Format Memory to format it.

*\*CAUTION: Formatting deletes all files in memory. \*NOTE: Features vary depending on model number. Your model may not have an internal memory. Playing music with your pictures NOTE: This digital frame will only play music files that are in MP3 format. @@A. First press "Music" key on the remote control to enter the music database. Use the arrow keys to select the desired music file. B. Press "Slideshow" key. This will play the selected MP3 while playing the slideshow.*

*Recycling Questions? Need some help? Call our help line found on the insert with this icon: Or visit [www.polaroid.com](http://www.polaroid.com). WEEE: This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health.*

*Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. @@@@For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com).*



[You're reading an excerpt. Click here to read official POLAROID](#)

[XSU-01040B user guide](#)

<http://yourpdfguides.com/dref/1313068>