



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID XSU-01050B. You'll find the answers to all your questions on the POLAROID XSU-01050B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID XSU-01050B**  
**User guide POLAROID XSU-01050B**  
**Operating instructions POLAROID XSU-01050B**  
**Instructions for use POLAROID XSU-01050B**  
**Instruction manual POLAROID XSU-01050B**



## Digital Photo Frame User's Manual



[You're reading an excerpt. Click here to read official POLAROID XSU-01050B user guide](http://yourpdfguides.com/dref/1313060)  
<http://yourpdfguides.com/dref/1313060>

**Manual abstract:**

If you still have questions, call our help line found on the insert with this icon: or visit [www.polaroid.com/support](http://www.polaroid.com/support). 20080418 Important Safety Instructions caution: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Note: Do not touch the color TFT LCD screen. Proper Handling of the Digital Photo Picture Frame Always handle the Digital Photo Picture Frame carefully. Avoid touching the LCD screen as natural skin oils are very difficult to remove. Always position the Digital Photo Picture Frame on a stable and level surface. Unstable surfaces can cause the Digital Photo Picture Frame to topple and fall, resulting in possible damage or injury.

Avoid exposing the Digital Photo Picture Frame to direct sunlight or high temperatures, which can damage or shorten its life. Do not place the unit near heat sources such as radiators, heat registers, or other appliances that generate heat. Orient the Digital Photo Picture Frame away from direct sunlight to reduce glare. Avoid exposing the Digital Photo Picture Frame to rain, water, moisture or high humidity. Use only grounded or polarized outlets. Power Cord Protection To minimize wear on the power supply cord, the power supply cord should be routed away from foot traffic and contact with other objects. Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged.

Ventilation Slots and openings on the Digital Photo Picture Frame are provided for ventilation purposes. To ensure proper ventilation and reliable operation of the product do not place Digital Photo Picture Frame on a bed, sofa, rug or similar surface. Do not place it in an enclosed space such as a bookcase, unless proper ventilation is provided. Controls and Basic Instructions CONGRATULATIONS on your purchase of your Polaroid Digital Photo Picture Frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Remember to keep this User's Manual in a convenient location for future reference. Important: Save the original box and all packing material for future shipping needs. Controls Secure Digital™, Multi Media Card™, Memory Stick™, Memory Stick Duo™ Mini USB Port USB Host Port for USB Flash Drives Audio Out Port AC Power Input Menu OK Play / Up Down Pause Forward Backward Power Lock Adjustable Base Remote Control Remote Control Card Select Exit Setup Rotate Slide Show SETUP EXIT Music Display Type 16:9 4:3 Mark Up Arrow Left Arrow Zoom / Enter ZOOM ENTER Right Arrow Down Arrow Volume Down VO L Volume Up Controls and Basic Instructions Press to enter the Setup mode Press to enter the Source mode SETUP EXIT EXIT SETUP 16:9 4:3 Press to exit a photo slide show or video / music file playing Press to enter Music mode ZOOM ENTER Press to start a photo slideshow Press to rotate photos 90 degrees clockwise on screen. Non-functional in slideshow mode.

VO L 16:9 4:3 Press to toggle from 4:3 to 16:9 aspect ratio. Nonfunctional in slideshow mode. Press to mark your favorite pictures for your favorite slide show Press to move up when selecting files on your screen Press to move down when selecting files on your screen Press to move left when selecting files on your screen Press to move right when selecting files on your screen ZOOM ENTER ZOOM: Press to increase zoom up to 4x ENTER: Press to confirm your selection and play still images Press to increase volume when playing music or video files. Press to decrease volume when playing music or video files. Quick Start Instructions Using the Control Buttons on Digital Picture Frame: 1. Plug the AC adapter into the Digital Photo Picture Frame and plug it into a wall outlet. 2. Insert a memory card into the slot or insert peripheral USB equipment into USB host: Memory Card Slot: Secure Digital™, MultiMedia Card™, Memory Stick™, Memory Stick Duo™ and Memory Stick Pro™ 3. Press POWER button to power on the device. 4.

Press the access it. Press the or button to select a mode. Press the Menu button to exit. 7.

Press the II button to view it in full screen. 8. Press the II button to play the selected video file. Press the II button to pause, and press it again to resume. 9.

Press the II button to play the selected music. Press the II button to pause and press it again to resume. 10. Press the II button to enter. 11. 12. Following the steps 1~4 on page 5 to access Source Mode. Press the to access it. 3. Press the or button to select a mode.

Press the or button to exit. button to select a picture. ZOOM 4. Follow Step 3 to enter the Video mode and press the file. Press the the volume. 6.

Follow Step 3 to enter the Music mode and press the file. Press the to stop. Press the volume. You can press the to stop.

Press the or button to access Music mode from the Main menu. or button to choose a or 7. Follow Step 3 to enter the Setup mode and press the selection such as "LANGUAGE". Press the You can press the SETUP ZOOM ENTER button to enter. Press the ZOOM ENTER button to select a language you prefer and press the button to confirm your choice.

button to access Setup mode directly. ZOOM ENTER 8. When viewing a picture, press the picture zoomed, press the full screen state, press the 9. In Photo mode, press the the 16:9 4:3 button again to enlarge the current picture. With the or button to move the picture around.

In the , , button to rotate the picture. button to start slide show and press the EXIT to stop. Press button to toggle from 4:3 to 16:9 aspect ratio. Note: When there is no memory card in the unit, pressing the slideshow button will play the demonstration images. For more details, please refer to "Demo Slide Show" on page 9. Controls and Basic Instructions Control Button Functions All function settings for your Digital Photo Picture Frame can be achieved in the setup menu by navigating with the buttons located on the top of the device. OSD Menus Full Screen Slide Show Effect Sub-Menus On Off Off Random Fade Shutter Cross Comb Mask Brick Dissolve Bar Fast Normal Slow On Off One All Off Are you sure? Yes No English Italian German French Spanish Portuguese Dutch Polish Russian Description Pictures display in full screen or not Select style of transition Slide Show Speed Speed of slide show Slide Show Shuffle Music Repeat Picture display order is random in slide show mode The times for the selected music repeat Reset Settings Language Reset to default settings Multiple languages Brightness Contrast Auto Slide Set Off 30 Seconds 60 Seconds 5 Minutes 15 Minutes Adjusting picture brightness Adjusting picture contrast The slide show will run automatically after the time is selected.



[You're reading an excerpt. Click here to read official POLAROID](#)

[XSU-01050B user guide](#)

<http://yourpdfguides.com/dref/1313060>

*Controls and Basic Instructions Control Button Functions - continued (OSD Functions) How to access to the Setup Mode Button Command Up Down II Enter or Confirm Viewing Pictures Individually Button Command Previous Picture II Zoom in the Select Picture I Next Picture Select Mode Page / Select Card Page Button Command Left II Select I Right Playing musics or videos Individually Button Command Previous Music or Video file II Play or pause Next Music or Video file I I Demo Slide Show Some demo pictures have been loaded into the Digital Photo Picture Frame. These pictures can be viewed without inserting any memory cards. Power on the Digital Photo Picture Frame, wait for a while, the demo slide show will run automatically.*

*Setting Your Favorite Slide Show In Photo Mode, press the or button to select a favorite picture and press the OK button to view it. Press the button to select it as a favorite. When you have selected all your favotie images for your custom slideshow, press the button to playback. Connecting a USB Device to the Digital Photo Frame Your Digital Photo Picture Frame has a built-in USB port. Using a USB cable and your digital camera or a USB flash drive, you have the ability to view images directly from the USB source. 1. Connect the AC adapter to the Digital Photo Picture Frame and press the power button to power on. 2. Connect one end of a USB cord to a PC or a USB device such as a digital camera or USB flash drive, and the other end to the Digital Photo Picture Frame. 3.*

*@@@@@@@@The frame's internal memory and any memory cards inserted in the frame will appear as external storage devices on the computer. Click on "Open folder to view files". You may add or delete any photos from the internal memory of the device or memory cards from here. Frequently Asked Questions Frequently Asked Questions(FAQ) Q : What other media formats can the Digital Photo Picture Frame support? Why will it not play all images? A : The Digital Photo Picture Frame will support JPEGs taken from a digital camera. The Digital Photo Picture Frame may not read all images. Q : I have a memory card in the Digital Photo Picture Frame, but it's not reading the card. What should I do? A : First, make sure that you are using a memory card that is supported by the Digital Photo Picture Frame. Second, ensure that the memory card is inserted.*



**[You're reading an excerpt. Click here to read official POLAROID](#)**

**[XSU-01050B user guide](#)**

**<http://yourpdfguides.com/dref/1313060>**