



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PRIMERA LX 810E. You'll find the answers to all your questions on the PRIMERA LX 810E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PRIMERA LX 810E**  
**User guide PRIMERA LX 810E**  
**Operating instructions PRIMERA LX 810E**  
**Instructions for use PRIMERA LX 810E**  
**Instruction manual PRIMERA LX 810E**

161110-510943-(04)



## **LX 810e** COLOR LABEL PRINTER

### User's Manual

An online version of this manual can be found at  
<http://primera.eu/europe/manuals.html>

© 2010 All rights reserved



\*after registering your product. See [www.primera.warranty.com](http://www.primera.warranty.com) for terms and conditions.



[You're reading an excerpt. Click here to read official PRIMERA LX 810E user guide](http://yourpdfguides.com/dref/3240748)

<http://yourpdfguides.com/dref/3240748>

**Manual abstract:**

All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without prior written consent.

Trademark Acknowledgments: IBM is a registered trademark of International Business Machines Corporation. Windows is a trademark of Microsoft Corporation. All other trademarks are the property of their respective owners. CandelaColor® Charged by Pictographics is a registered trademark of Pictographics International Corporation. Printing History Edition 4.0, #161110, © Copyright 2010, All rights reserved. FCC Compliance Statement: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Users in the United States: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Re-orient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Use of a shielded cable is required to comply with the Class B limits of Part 15 of the FCC Rules. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate and/or obtain warranty service for this equipment.

Within the U.S., this product is intended to be supplied by a UL Listed Direct Plug-in Power Unit marked Class 2 and rated 30 Vdc, 830 mA or 1.0A. For Users in Canada: This digital apparatus does not exceed the Class B limits for radio noise for digital apparatus set out on the Radio Interference Regulations of the Canadian Department of Communications. Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la class B prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.

**CAUTION! TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE EXTERIOR PANELS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

**OPERATE THE UNIT WITH ONLY THE PROPER ELECTRICAL SPECIFICATIONS AS LABELED ON THE PRINTER AND AC ADAPTER WARNING.** Hazardous moving parts. Keep fingers and other body parts away from the paper-feed gears. WARNING. Sharp Edges. Keep fingers and other body parts away from the tear-off bar. ii Table of Contents Section 1: Getting Started ....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

**.....1 A. Choosing a Good Location ....**

.....

.....

.....

.....

.....

.....

.....

.....

**1 B. Unpacking and Inspection.....**

.....

.....

.....

.....

.....

.....

.....

**.....2 C. Identifying the Parts ...**

.....

.....

.....

.....  
.....  
.....

*..3 D. Minimum PC Specifications.....*

.....  
.....  
.....

*.....4 E. Minimum MAC Specifications ....*

.....  
.....  
.....

*...4 F. Applying Power .....*

.....  
.....  
.....

*.5 G. Installing the Driver and Software...*

.....  
.....  
.....  
.....

*.....5 Section 2: Supplies and Driver Settings..*

.....  
.....  
.....  
.....  
.....

*..8 A. About Ink Cartridges and Label Material.....*

.....  
.....  
.....  
.....

*..8 B. Installing Label Stock ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....8 C. Installing Ink Cartridges ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...13 D. Printer Driver Settings .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...15 Section 3: Using the Printer..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....22 A. Using NiceLabel ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...22 B. Creating Barcodes in NiceLabel.*

.....  
.....  
.....  
.....  
.....

.....

.....  
...29 C. Printing on a MAC from Adobe Illustrator .

.....  
.....

.....  
.....  
...33 D. Creating Barcodes on a Mac.

.....

.....

.....

.....

.....

.....

.....

.....38 E.

Printing From Other Applications .....

.....

.....

.....

.....

.....38 Section 4: Troubleshooting and Maintenance .

.....

.....

.....

.....

.....

.....

.39 A. Cleaning the Printer.....

.....

.....

.....

.....

.....

.....

.....

.....

.....39 B. Basic Troubleshooting ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

..39 C. Technical Support ..

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....40 Section 5: Label Specifications .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....41 Section 6: Technical Specifications ..

.....  
.....

.....  
.....  
.....  
.....

.....43 Section 7: Auxiliary Port Specifications .

.....  
.....

.....  
.....  
.....  
.....

.....45 Index .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....46 iii iv Section 1: Getting Started THANK YOU.

...for choosing an LX810e Color Label Printer. This printer is the perfect way for you to create customized, full color labels quickly, easily, and with a touch of class. The LX810e Printer will print razor-sharp text and barcodes, vibrant colors, and even stunning photo-realistic photographs directly onto rolls of labels and card stocks. Operation is simple, quality is high, and printed images are durable and highly smudge-resistant. To begin using the printer, please refer to the remainder of this manual.

This User's Manual is your complete step-by-step guide to quickly and easily setting up and printing with your new Color Label Printer! A. CHOOSING A GOOD LOCATION . . . Place the printer on a flat surface in a location with adequate air circulation to prevent internal heat build up. Do not place the printer near heat sources such as radiators or air ducts, or in a place subject to direct sun light, excessive dust, mechanical vibration or shock. Allow for adequate clearance in front of the printer to accommodate the printed label stock as it is leaving the printer to avoid the possibility of binding or jamming of the label stock. Automated re-winders are recommended for larger production jobs.

Allow for adequate overhead clearance for opening the top cover to allow easy access to the label stock and ink cartridges. · Getting Started 1 B. UNPACKING AND INSPECTION While unpacking your printer, inspect the carton to ensure that no damage has occurred during shipping. Make sure that all supplied accessories are included with your unit. The following items should be included: . . . . . Printer Power Adapter Separate Power Cord Software

Installer CD Color Ink Cartridge Dye-Based Black Ink Cartridge Starter roll of label stock 6" x 4" High-Gloss Tear Bar Guard (This is a white plastic shield attached to the Tear Bar for shipping and can be simply pulled from the tear bar to reveal the serrated edge.

This guard is recommended for use when using pre-perforated label material.) The quickstart manual and other printed information · Save the carton and packing materials. They will come in handy when transporting the printer. 2 Getting Started C. IDENTIFYING THE PARTS This illustration shows the front of the printer with its control Top Cover Pause LED Pause Button Power LED Load/Feed Button Ink Low LED Unload Button Label Tear Bar buttons and LED indicator lights. The Pause Button pauses the printer AFTER the printing of the current label has finished to allow for loading of label stock and ink cartridges. The Pause LED is lit when the printer is paused.



[You're reading an excerpt. Click here to read official PRIMERA LX](http://yourpdfguides.com/dref/3240748)

[810E user guide](http://yourpdfguides.com/dref/3240748)

<http://yourpdfguides.com/dref/3240748>

Press the Pause Button to resume printing. The Power LED indicates that the printer is on and ready to receive print jobs. The Load/Feed Button is pressed in order to load label stock or form feed the label stock through the printer.

The Ink Low LED will illuminate when a cartridge has 10% or less of its ink remaining. The Unload Button will unload the installed label stock by reversing it through the printer. Make sure to tear off the printed labels before pressing the Unload Button. NOTE: Always use this procedure to unload label material. DO NOT ALLOW THE END OF THE ROLL TO FEED THROUGH THE MACHINE! The Label Tear Bar is a serrated edge for conveniently tearing your finished labels from the printer. WARNING. Sharp Edges. Keep fingers and other body parts away from the tear-off bar. Getting Started 3 This illustration shows the input ports and power switch found on the rear panel of the printer. USB Port Auxiliary Port Power Switch Power Input Port D.

MINIMUM PC SPECIFICATIONS For optimal printing speed you must have a PC with the following minimum specifications: · · · Pentium IV Processor 512 MB of RAM 5 GB of Free Hard Drive Space E. MINIMUM MAC SPECIFICATIONS Before getting started, it is important for you to verify that your computer meets the recommended system requirements. Here's what you need in order to successfully print: · G4 PowerPC 700MHz or higher running OS X version 10.2 or higher · 256MB RAM · Free hard drive space of at least 5 GB · Available USB Port · Do not connect the printer to any USB hubs or the USB port on your keyboard. It should be connected directly to an onboard USB port.

If your computer does not have at least these minimum system requirements, system performance may not be acceptable. 4 Getting Started F. APPLYING POWER 1. 2. Locate the power adapter supplied with your printer.

Place one end of the adapter cord into the power port on the rear panel of the printer. Plug the power cord of the adapter into an available wall outlet or surge protecting power strip. Once the power cord is connected, the printer can be switched on and off using the power switch. 3. G. INSTALLING THE DRIVER AND SOFTWARE The Color Label Printer is designed to be used with nearly any IBM-PC® or compatible running Windows 2000/XP or a Macintosh running OS 10.2 or higher. The printer is equipped with a USB 1.0/2.0 port.

This port is the means through which it receives data from your computer. To connect the printer to your computer, use the included shielded USB cable. The software installs as follows: PC Installation 1. Insert the Installation CD into your computer. In a few moments the installer program should launch automatically. If not, perform the following steps: Double click My Computer Icon, then double click the icon of the appropriate CD drive containing the software installer disc. b. Double click INSTALL.exe then click the Quick Start Install Button. Follow the on screen instructions to install the software.

These steps are illustrated below: a. Apply power a. 2. Getting Started 5 b. Plug in USB Cable i.

After a few moments Windows will detect the printer and attempt to install the printer driver. You will be prompted with a dialog box like the one shown here: Click "Continue Anyway". ii. Once installed the printer: Fixed Throat Guide Movable Throat Guide Roll Arm ! WARNING. Hazardous moving parts.

Keep fingers and other body parts away from the paper-feed gears. Roll Guide Sensor Position Adjustment Supplies and Driver Settings 9 Installing Label Stock The following steps will guide you through loading label stock in your printer: Make sure power is connected and printer is on. 1. 2. 3. Open the Top Cover. Lower the Roll Guide and pull it outward to make room for your label stock. Pull the Movable Throat Guide outward to make room for the label stock. 1. Open Cover.

3. Pull Throat Guide Out. 2. Lower the Roll Guide and Pull it Outward. 4. Remove any shipping tape from your label stock roll to ensure that it can unroll freely, making certain that no adhesive portion is exposed. It is important to note that any exposed adhesive surface can attach itself to the inner workings of the print mechanism and cause a media jam. Place your roll of label stock on the Roll Arm and push it inward until it touches the stop. Flip up the Roll Guide and slide it inward until it touches the label stock. (The Roll Guide will automatically pull back slightly to the correct position) 5.

6. 10 Supplies and Driver Settings 7. Place the leading edge of label stock under the Label Stock "label stock" symbols on the Throat Guides. The label stock should be placed far enough into the throat of the printer to correctly position the Movable Throat Guide but not yet into the printer itself. The label stock should be biased against the Fixed Throat Guide.

Slide the Movable Throat Guide inward until it almost touches the label stock. There must be slightly more space between the Throat Guides than the width of the label stock. If the label stock is pinched by the guides, poor print quality or even feeding problems could result. 8. 5.

Place label stock on Roll Arm. 8. Slide Throat Guide inward until it almost touches the label stock. 7. Place the leading edge of the label stock just past the Throat Guides, but not into the printer itself. 6 Slide Roll Guide assembly inward. 9. Feed the label stock further into the printer until it senses the label and automatically feeds it through the printer. 9. Feed the label stock further into the printer until it senses the label and automatically feeds it through the printer.

If the printer fails to feed the label stock, press the Feed button on the front panel while continuing to guide the label stock into the printer. The printer can sense through-hole stock as well. If you are using label stock that has a hole punch to identify a transition from backing to label, you can adjust the Sensor Position Adjust tab to position Supplies and Driver Settings 11 it over the identifying mark. The Sensor Position Adjust tab has a guide in inches and milimeters that will help you identify where to set the tab to align the sensor over any identifying mark. To do this, simply measure from the center of the hole or mark to the edge of the label stock. For instance, if you have a 1/2 inch hole, which starts 1/4 inch from the edge of the label stock set the guide to 1/2 inch to make sure the sensor is in the middle of the through hole. 1" 1/2" 1" 1/2" Black Stripe Through-hole 2.5 (63.5) 2.0 (50.8) 1.5 (38.1) 1.0 (25.4) 0.

5 (12.7) 0.0 in. (0.0) (mm) Sensor Position Adjustment NOTE: If you are using black stripe sensing label material you will need to identify this in the printer driver under the Sensor Type setting.

Please refer to section D later in this chapter for more information on changing driver settings. 12.



[You're reading an excerpt. Click here to read official PRIMERA LX](http://yourpdfguides.com/dref/3240748)

[810E user guide](http://yourpdfguides.com/dref/3240748)

<http://yourpdfguides.com/dref/3240748>



Now your stock is installed. Please read the following section to install your cartridges. 12 Supplies and Driver Settings C. INSTALLING INK CARTRIDGES  
Your printer has a built-in ink tracking system. This system is designed to warn you if your ink cartridges are low on ink. This ensures your labels will print properly and that the printer can create large batches of labels unattended and worry-free. In order to make this system work properly, the cartridges must be changed using the procedure listed below. Failure to follow this procedure could result in inaccurate ink level tracking and could cause your print quality to suffer.

Ink cartridges are changed as follows: If using a PC: 1. Click Start>Printers and Faxes 2. 3. 4. 5. Right-click on the Color Label Printer Icon Click on Printing Preferences from the drop-down menu Find the option labeled "Clean/Change Cartridges & Check Ink..." and click "Properties" Click "Change Cartridge(s)" If using a Mac: 1. Open the Applications - Utilities folder 2 Click on the Printer Setup Utility.

3. Select the Color Label Printer. 4. Click the Utility button on the menu bar. 5.

Click the Change Cartridge button. For Macintosh and PC: 6. Open the Top Cover of the printer 7. 8. 9.

The Cartridge Carrier will align itself to the center of the print area. Press the Cartridge Cover Release to open the Cartridge Holder Replace/install the cartridge 10. Push cartridge cover downward until it snaps in place. Supplies and Driver Settings 13 1 2 3 11. Click OK on your screen to indicate the new cartridge is now installed. Once you click OK you will be prompted to align the cartridge. The printer will automatically align the cartridge for you as follows: For Alignment you will need to have installed label stock that is equal to or larger than 4" x 4" (101.6 mm x 101.6 mm). If your stock meets this requirement, skip to step d.

b. If your installed stock is smaller than 4" x 4", unload your current stock by pressing the Unload button. The printer will reverse the label stock so that it can be removed from the printer. c. Load a sheet of paper, not to exceed 8.25 inches or 209 millimeters in width, by first pulling the Throat Guide all the way out, then placing it in the feed area, once the printer senses the page it will pull it into place. a. d. Click OK. 14 Supplies and Driver Settings e.

The printer will print the alignment test and scan it into memory. Once the alignment is complete you will see a confirmation dialog box on your monitor.

Click OK. You have successfully installed the ink cartridges. D.

PRINTER DRIVER SETTINGS Once the printer driver has been successfully installed, you will need to set the driver up with the appropriate print options. Refer to the following steps to change or verify your printer driver options: To find Driver Settings on a PC: 1. Click the Start button, then click Printers and Faxes. Right-click on the Color Label Printer Icon and select Printing Preferences from the drop-down menu. Supplies and Driver Settings 15 NOTE on PC Settings: Most applications allow you to change these same printer driver options from their "Print" and/or "Printer Setup" screens.

This means that you don't have to go back to the main printer setup window each time you want to change a setting or option in the printer driver. These applications will usually give you the same choices and options, but in a slightly altered format. Most applications do not save your printer driver option changes, but instead only use your changes for the current image. To find Driver Settings on a Mac: Click Print from within any printing application. The following screen will appear: Click the Copies and Pages drop down arrow. Choose Label Printer Settings. 16 Supplies and Driver Settings The following options are present in both the PC and Mac drivers: Label Size This option is set to Custom as a default. Even though you can click Properties and key in the dimensions of your label, this is best done from your labeling software. It is recommended that the Label Size setting is left to "Custom". Orientation There are two settings for orientation, Portrait and Landscape.

If your text and graphics print left to right or as shown on the screen, select portrait. If you wish your printing to rotate 90 degrees from what you see on the screen so it is printing horizontally, select landscape as your orientation. Portrait Print Quality Landscape There are 6 levels of print quality in the driver.

The lower the Quality, the faster the print. Quality 1 provides the fastest print available while Quality 6 provides the best photo quality. It is recommended that you experiment with the different levels when designing your label to find a good balance between print quality and print speed. Color Matching. Best for Graphics mode is best used for graphical images where accurate color reproduction is not as essential. @@@@Left Margin

Offset This will be factory calibrated. @@The unit of measure is 0.

1mm. On a Mac the following settings can be found by clicking the Config. Utility button. @@@@Click on Cartridge Alignment and you will see a Properties button. Press this button to start the Alignment procedure.

@@@@@In the example above  $300 \times 100 / 83 = 361$  labels from a full cartridge. Use the cost of the ink cartridge divided by the total labels from a full cartridge to receive cost per label. Clean/Purge If it has been more than 48 hours since your last print or if your print quality has deteriorated with bands or lines it is recommended that you clean the cartridges. This is done by clicking the Clean/Purge button. The Clean Purge is done as follows: a.

You will be prompted to load label stock of 4"x 4" (101.6 mm x 101.6mm) or larger, into the printer. If you have stock of this size or larger, simply click OK.

Supplies and Driver Settings 19 b. If not, press the Unload button found on the front of the printer simultaneously to reverse the stock out of the print feed mechanism. Load a sheet of paper, not to exceed 8.25 inches or 209 millimeters in width, into the feed mechanism by pulling the Throat Guide all the way out to make room for the paper then inserting a sheet into the print feed area. Once the sensor "sees" the paper it will automatically feed it into position and will begin to print. c.

The printer will print a purge pattern where swaths of each color are printed to clean the jets of the cartridge. A series of diagonal lines are printed in each color of both cartridges. By examining this pattern you can tell if the cartridge is firing all jets or if the cartridge is dirty and requires further cleaning. While the blocks of color may not print solidly, it is important that the diagonal lines be continuous. Repeat this process until all diagonal lines print without breaks.

Change Cartridge(s) Click the Change Cartridge(s) button to move the cartridges into position for easy access for replacement.



[You're reading an excerpt. Click here to read official PRIMERA LX 810E user guide](http://yourpdfguides.com/dref/3240748)  
<http://yourpdfguides.com/dref/3240748>

For more information on this see Section 2-C. When installing cartridges you will be prompted to align your cartridges as described earlier in this section. Details/Print Counter Clicking on the Details button will allow you to view information about printer settings stored on the printer. There is also a print counter in the details window to help you count the number of labels printed since the last time it was reset.

Click Reset Counter to set the counter to zero. The Restore Factory Defaults button will restore the printer settings displayed on the details window to factory calibrated defaults. 20 Supplies and Driver Settings Sensor Type Sensor Type refers to the method the printer will use to center the print image on your label material. If you are using standard die-cut labels or Through-hole label material where a hole is punched through each label for alignment purposes use the Through-hole/Die-Cut setting. Use Reflective for black stripe sensing label material where a pre-printed line indicates the break between labels.

If you have continuous stock with no die-cut or reflective mark, set the sensor type to Continuous. Rewinder Mode This defaults to No. When set to no, the printer will align your labels with the tear off bar for easy removal. This mode can be set to Yes when using the printer with an automatic rewinder. Enable Bi-di Printing This setting defaults to Yes for fastest printing.

When enabled you will be required to perform an alignment print after a new cartridge is installed. If you would like to bypass cartridge alignment set this setting to No and set the Cartridge Type setting to Color. You will now be able to skip the alignment print after changing cartridges. TOF Offset TOF stands for Top of Form and this setting allows you to fine tune the alignment of your printing on your label stock. This will be factory calibrated. If fine tuning is needed, increase this value to move the image down on the label. Decrease this value to move the image up the label. The unit of measure is 0.1mm. Tear Off Offset If Rewinder Mode (described earlier in this section) is set to No, the printer will present your labels over the Tear Bar for easy removal.

This is set at the factory. If fine tuning is needed to align the break in your label stock over the Tear Bar, increase this setting to eject the label further; decrease this setting to eject the label stock less. The unit of measure is 0.1 mm. Supplies and Driver Settings 21 Section 3: Using the Printer A. USING NICELABEL Your printer ships with a basic version of NiceWare's NiceLabel software. This easy-to-use software is designed to allow you to create full color labels with text and barcodes quickly and simply. The following is a tutorial to guide you through creating and printing a sample label. Launch NiceLabel from your computer's Start Menu. Take a moment to familiarize yourself with the NiceLabel Main Application Window.

This will help you navigate the features of this program. Main Application Window Main Menu Bar Main Tool Bar Tool Box Bar Document Window Creating a label 1. 2. Click the New Label Icon from Main Tool Bar You will see the Label Setup Wizard. This will guide you through setting up your label 22 Using the Printer a.

Set the dimensions of your label and unit of measure and click Next. b. Select your printer. This should be the Color Label Printer. Click Finish. Using the Printer 23 3. Now you will see your label in the Document Window. You can start to design your label using Tools from the Tool Box. First, we will use the Text Tool. Text Tool Icon Text Cursor Click the Text Tool Icon in your Toolbox, then move the text cursor over the Document Window and click in the location where you want to enter text. There is no need to be exact, once you enter your text it can easily be resized and/or moved about the label. Upon clicking in the Document Window, you will see a prompt to start typing your text. b. When finished typing, click anywhere in the Document Window and you will see the text appear in a box with "edit handles". You can drag and resize the text anywhere in the document window.

If the text is dragged off of the printable area, NiceLabel will turn the text red as a warning. This will not change the color the text prints out as when sent to the printer but is only used as a warning to let you know you may not be printing the full text on your label. a. 24 Using the Printer 4. Now, insert a barcode. BarcodeTool Icon Barcode Cursor a. Click the Barcode Tool Icon from the Toolbox. You will now have a Barcode Cursor that can be positioned anywhere within the Document Window. Position your cursor in the general area where you wish your barcode to print and click to start entering your barcode information. There is no need to be exact, once you create your barcode it can easily be moved and/or resized.

Once clicked, you will see the Barcode Wizard. b. The first screen in the Barcode Wizard will allow you to select the type of Barcode you wish to print. You can also enter the data to be used in the barcode. For this we are doing a simple UPC-A barcode. For more information on other types of barcodes, please see Section 3-B. Creating Barcodes in NiceLabel. Using the Printer 25 c. Click Define to change the type of Barcode or to make changes to the options associated with your particular type of barcode. You will also want to set the Symbol Height and X Expansion Factor d.

Click the Human Readable tab to change the font that prints under your barcode 26 Using the Printer e. Click OK, then click Finish and your Barcode will be placed on your label with "Edit Handles" to allow you to move and resize your barcode. Graphics Tool Icon Graphics Cursor 5. Now insert a graphic. Click on the Graphics Tool Icon in the toolbox. You will now see a Graphics Cursor. Drag the cursor to the general area where you wish to place the graphic and click to get an Open dialog box. You will be prompted to browse for graphic files. NiceLabel will accept bitmap graphics formatted as BMP, JPG, TIF, WMF, PNG and many more. Using the Printer 27 a.

Click Open and the graphic will be imported with edit handles so you can easily move and resize your graphic. b. There are other tools at your disposal to align the object or add shapes. On the right side of the screen you will see alignment tools so you can align the objects on your label in relation to each other. Select objects by clicking on them or clicking and dragging a "lasso" around multiple objects or by holding down the SHIFT key and clicking on each object individually. You can also center these objects by right clicking on a selected object and choosing Align from the drop-down menu. If you wish to center your object on the label choose the appropriate centering options and check the Align to Label checkbox. 28 Using the Printer You are now ready to print your label. Click File then Print from the main menu.



[You're reading an excerpt. Click here to read official PRIMERA LX](http://yourpdfguides.com/dref/3240748)

[810E user guide](http://yourpdfguides.com/dref/3240748)

<http://yourpdfguides.com/dref/3240748>

Choose your number of copies and click OK.

Congratulations! You have successfully created and printed your first label. The rest of this section will explain in more detail how to use barcode labels. Also, you can find more tips and hints by simply clicking Help then Contents in the main menu. B. CREATING BARCODES IN NICELABEL Barcode Tool Icon Barcode Cursor c.

a. Click the Barcode Tool Icon from the Toolbox. b. You will now have a Barcode Cursor that can be positioned anywhere within the Document Window.

Position your cursor in the general area where you wish your barcode to print and click to start entering your barcode information.

Once clicked, you will see the Barcode Wizard. i. The first screen in the Barcode Wizard will allow you to select the type of Barcode you wish to print. You can also enter the data to be used in the barcode. Using the Printer 29 ii. Click Define to change the type of Barcode. iii. This contains four tabs, General, Check Digit, Human Readable and Details. iv. The General Tab (shown on page 27) allows you to choose the appropriate barcode type from the Available barcodes: menu.

You can choose one- or two-dimensional barcodes. Note that different barcode types have different requirements - some of them only allow numbers to be encoded, while others only allow upper case characters. For the further help on the barcode types contact your supplier 30 Using the Printer Available barcode types are listed here: EAN and UPC EAN-8, EAN-8 + 2-digit supplement, EAN-8 + 5-digit supplement, EAN-13, EAN-13 + 2-digit supplement, EAN-13 + 5-digit supplement, EAN-14, DUN-14, UPC Case Code, UPC-A, UPC-A + 2-digit supplement, UPC-A + 5-digit supplement, UPC-E, UPC-E + 2-digit supplement, UPC-E + 5-digit supplement, EAN.UCC 128, SSCC, Bookland, Addon 2, Addon 5 Linear Interleaved 2 of 5, ITF 14, ITF 16, Code 39, Code 39 Tri Optic, Code 39 Full ASCII, Code 32, Code 93, CODE 128 (A, B and C subsets), MSI, Codabar, Postnet-32, Postnet-37, Postnet-52, Postnet-62, Kix, Pharmacode RSS Linear RSS symbologies RSS14, RSS14 Truncated, RSS14 Stacked, RSS14 Stacked Omnidirectional, RSS Limited, RSS Expanded Composite RSS symbologies RSS14, RSS14 Truncated, RSS14 Stacked, RSS14 Stacked Omnidirectional, RSS Limited, RSS Expanded, UPC-A, UPC-E, EAN-8, EAN-13, EAN.UCC 128 & CC-A/B, EAN.UCC 128 & CC-C 2D-Pharmacode, PDF-417, DataMatrix, MaxiCode, Aztec, QR, Micro QR, Codablock F, MicroPDF 2D Barcodes Define the barcode dimensions in the Barcode Dimensions Field. The height is set in cm by entering the appropriate number in the Symbol Height Field. The width of the barcode is set as the X Expansion factor. Note that the width can be set only in pre-defined standard steps. When you change the barcode dimension directly from the screen by moving the drag handle, the changed dimension will also appear in this dialog box. Some of the barcode types also allow the definition of Narrow-to-wide bar ratio. It can only be set from the predefined steps in the pull-down menu - 1:2, 1:3 or 2:5. Base element width (mils) is calculated automatically from the X expansion factor. v. The Check Digit Tab will allow you to include a system automated check digits or enter your own.

Check digits can be disabled on some barcodes from this tab as well. Using the Printer 31 vi. The Human Readable Tab allows you to manipulate the human readable text printed with your barcode. Here you can disable Human Readable, select position (above or below the barcode), include a check digit, and choose your font type and scaling. vii.

The Details Tab allows you to set some further details of the barcode presentations on the printer. These settings are listed here: Include Quiet Zones will enable the software to automatically create the necessary amount of free space before and after the barcode symbol by drawing an unprintable buffer area around the barcode symbol on the screen. Descender Bars allows EAN 13, EAN 8, UPC A and UPC E to print longer first, middle and last bars when this option is selected. Mirror Horizontally will allow the barcode to be printed as a graphic and will so it can be mirrored over the horizontal axis. Mirror Vertically allows the barcode to be printed as a graphic so it can be mirrored over the vertical axis. Intercharacter Gap: Some barcodes allow you to change the gap between characters in the barcode (e. g. Code-39). The barcode prints as a graphic. Include EAN white space: A special character is inserted before and/or after the barcode.

It indicates the width of the barcode. If you place any other object in the extent of the barcode, it will reduce the readability of the barcode. This option is valid for EAN barcode types. 32 Using the Printer C. PRINTING ON A MAC FROM ADOBE ILLUSTRATOR 1. Create your document using the File - New command. Set your Width and Height to correspond with the label stock installed in the Printer. 2. Once your document is created and ready to print go to File - Print. The following screen will appear.

Before doing anything else, click the Printer button to change the print quality settings for this print. Click here for more information on Print Settings. Using the Printer 33 3. The printer settings screen defaults to Copies and Pages. Click the drop down arrow to change the screen to Label Printer Settings.

4. Change your printer settings to the desired quality. 34 Using the Printer 5. Click Print to return to the print preview screen. Now click Page Setup to change the label size set in the printer driver.

6. The paper/label size defaults to 4x6 or whatever was last used. Using the Printer 35 7. Click on the drop down arrow to select a predefined label size or create a custom size by clicking Manage Custom Sizes. For this example there is no 5.5 x 4 label predefined so the following step will explain how to create a custom size. 8. To create a custom size click the + below the list of custom sizes already created. Change the page size to correspond with the stock installed in the printer. Set the Printer Margins to Color Label Printer or modify them accordingly.

Click OK. 36 Using the Printer 9. If you have created a custom size you will need to choose it again here by clicking the drop down arrow and choosing the custom size. Click OK. 10. You are now ready to print your label. Make sure the number of copies is set. Also, check the orientation. The label shown on the preview screen is how your label will print. Make sure there is no white space around the label.

If there is white space you may have to change the orientation. Click Print to print your label. Using the Printer 37 NOTE: You must set the Printer and Page Setup by clicking on these buttons each time you print. You must perform these steps each time you print even if what you see on the preview screen appears correct. D.

CREATING BARCODES ON A MAC You can integrate barcode printing into any application that can print to the printer by using Mac Barcode Maker. Mac Barcode Maker can be purchased from their website at www.



[You're reading an excerpt. Click here to read official PRIMERA LX](#)

[810E user guide](#)

<http://yourpdfguides.com/dref/3240748>

barcodeformac.com This application was tested using Adobe Illustrator. Follow the instructions that are included with the application to use it with your program.

Their website does offer a fully functional trial version which integrates an "EVAL" stamp into all of the barcodes it produces. Buying the application will cause the "EVAL" stamp to be removed. Other barcode integration software is available but was not tested for compatibility with the printer. E. PRINTING FROM OTHER APPLICATIONS Because the printer installs as a standard Windows or Macintosh printer driver, it will print from virtually any Windows 2000/XP or Macintosh OS 10.x application. @@Then create your label and click File > Print. @@@@Refer to the cleaning procedure explained within the Clean/ Purge description of Section 2-D to clean the cartridge nozzles. If any ink has gotten on to the printer casing itself, the case of the printer can be cleaned with an ammonia based window cleaner and a lint-free cloth. Over time, ink overspray may gather at the base of the printer.

The printer is designed using a vacuum system to gather most of this ink on a series of saturation pads. Eventually, these pads may need to be replaced.

Contact tech support to determine if pad replacement is necessary. An ink pad replacement kit is available. (Part Number 074220) B. BASIC TROUBLESHOOTING Generally, when a malfunction or an abnormal condition occurs, the "PAUSE" LED will keep blinking repeatedly and printing and communication between the host PC and the printer will cease. After the problems have been solved, press PAUSE to clear the error and continue printing. Here is a general guide to some common error conditions: Possible Problems Missing gap Indicator Printer ejects media or can not find the start of the label, then times out with flashing "PAUSE" LED Label is not feeding straight, images look misaligned Solutions · Check Media Path · Check Position of sensor Remarks Refer to section 2-B for proper installation of label stock Image printing off center or off the edge of the label · Check media path · Check throat guide and roll guide Refer to section 2-B for proper installation of label stock Troubleshooting and Maintenance 39 Possible Problems Out of label stock Out of ink Indicator Fast flashing "PAUSE" LED Steady lit "LOW INK" and "PAUSE" LED and/or poor print quality Printer stalls, labels appear damaged, and "PAUSE" flashes quickly Solutions · Install new label · stock/media · Replace ink · cartridges · Perform alignment · Perform cleaning · Press UNLOAD to reverse media · Be sure to clear and labels from inside of printer especially in the print path · Load new media Remarks Refer to section 2-B for proper installation of label stock Refer to section 2-C for proper installation of ink cartridges Refer to section 2-B for proper installation of label stock Media/label stock jam C. TECHNICAL SUPPORT If you have difficulty operating your Color Label Printer, the procedures in this manual should, in most cases, solve the problem. If you still have difficulty, contact Primera's Technical Support Department.

You can reach tech support by phone, fax, email or mail at the following: Primera Technology Europe Technical Support Department Mainzer Str. 131 65187 Wiesbaden/Germany Téléphone : +49 (0)611 92777-0 Fax : +49 (0)611 92777-50 E-mail : support@primera.eu Web : http://primera.eu Phone support is available Monday through Thursday, 9 AM to 5. PM, Central Standard Time and Friday, 9 AM to 3 PM, Central Standard Time.

A Knowledge Base containing answers to many common problems is also available for free 24 hours a day at [www.primera.com/knowledgebase.html](http://www.primera.com/knowledgebase.html) 40 Troubleshooting and Maintenance Section 5 : Label Specifications Label Sensing Methods Label Width Media Width Method 1: Label Gap Sensing Gap Between Labels Distance from edge of Media Method 2: Thru-Hole Sensing Width of Opening Distance from edge of Media to edge of Label Method 3: Reflective/Black Mark Sensing (Black Mark must be printed on back side of label stock) Label Height Black Mark Width Note: See table below for Max and Min values in inches and mm.

Max Label width	Media width	Label height/length	Gap between labels	Width of thru-hole opening	Distance from edge of media to edge of thru-hole
8.25" (210mm)	8.5" (215mm)	24" (609.6mm)	10" (253mm)	0.5" (12.65mm)	2.25" (57mm)
Min 0.75" (19mm)	1.5" (38mm)	0.75" (19mm)	0		

10 (2.5mm)	0.25" (6.325mm)	0.20" (5.06mm)	Label Specifications 41	Max Reflective/Black Mark Width* Inner Core Diameter (ID)	Stock Thickness	Distance from edge of media to edge of label	N/A	Min 0.1" (2.54mm)	N/A	3.0" (76.2mm)	N/A	Max Outer Diameter (OD)	6
								0"(152.4mm)	3.0" (76.2mm)	.006" (152 micron)	Printer driver assumes 2 mm gap.		

However, this is adjustable via the left margin offset. \* The Reflective/Black Mark should be opaque to infrared light. The mark should be between the labels. The end of the mark should correspond with the beginning of the label. Roll Specifications Label Stock 6 inches 3 inches 42 Label Specifications Section 6 : Technical Specifications Print Method: Print Resolutions: Print Speeds: Inkjet 4800 x 1200 dpi, 1200 x 1200 dpi, 600 x 600 dpi Approximately 2" (51mm) per second for black Approximately 1.

5" (38mm) per second for color + black Approximately 10" per second feed rate #53376 Color (CMY) #53377 Black Dye-Based (Kd) #53020 Black Pigment-Based (Kp) 16.7 million Roll-fed pressure-sensitive labels, roll-fed tags Moveable see-through sensor for die-cut labels and reflective for tags with black stripe sensing 6" (152mm) maximum diameter on 3" (76mm) core Calculates actual number of prints remaining based upon ink usage of graphics being printed (patent-pending) Power, Pause, Ink Pause, Load/Feed, Unload Windows XP/2000 USB 1.1/2.0 Pentium® IV computer or better, 512MB RAM, 5GB free hard drive space, USB 1.1/2.0 port Technical Specifications 43 Ink Cartridges: Colors: Media Types: Media Sensing: Supply Roll: Ink Level Warning: Indicator Lights: Controls: Operating Systems: Data Interface: Minimum System: Label Design Software: NiceLabel™ ME Primera Edition included. Can also be used with most other popular Windows-based label design software programs 12VDC, 3.0A 100-240VAC, 50/60 Hz, 60 watts UL, UL-C, CE, FCC Class B 29 lbs. (13.2 Kg) 17"W x 9.

1'H x 15.5"D (432mmW x 231mmH x 394mmD) Two years after product registration at [www.primera.com/warranty](http://www.primera.com/warranty) (parts and labor) Electrical Rating: Power Requirements: Certifications: Weight: Dimensions: Warranty: 44 Technical Specifications Section 7: Auxiliary Port Specifications The 6-pin minicircular auxiliary interface is used for connecting the printer with auxiliary equipment such as a Auto Cutter.



[You're reading an excerpt. Click here to read official PRIMERA LX](http://yourpdfguides.com/dref/3240748)

[810E user guide](http://yourpdfguides.com/dref/3240748)

<http://yourpdfguides.com/dref/3240748>

Pin assignments are as follows: 6 4 2 5 3 1 Uses 5v logic @ 5mA - All signals are active low. Pin Number 2 3 4 Signal Description Cut signal - Output - Cut now. Printer Busy - Output - Printer is Printing or moving the paper. Cutter Position - Input - Cutter is in normal position (Ready). Low will keep printer from starting next print. Remote Pause - Input - Will keep printer from starting next print.

5 NOTE: Cut signal output is enabled when "Present between every label", mode is active. Rewinder is set to "NO" in printer driver preferences. Auxiliary Port Specifications 45 Index Alignment Tool...

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.28 Applying Power .....*

.....  
.....

.....  
.....  
.....

.....  
.....

*5 Auxiliary Port.....*

.....  
.....  
.....

.....  
.....  
.....

*..45 Available Barcode Types in NiceLabel...*

.....  
.....

.....  
.....

*31 Barcode Wizard .....*

.....  
.....  
.....

.....  
.....  
.....

*..25, 29 Cartridge Alignment .....*

.....  
.....  
.....

.....  
.....  
.....

*.18 Check Digit Tab...*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....31 Clean/Purge Ink Cartridges .*

.....  
.....  
.....

.....  
.....  
.....

*.....19 Details Tab...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...32 Dye-Based Monochrome Black.....*

.....  
.....  
.....

.....  
.....  
.....

*.8 Dye-Based Ink ....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....8 General Tab ..*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...30 Gloss/Semi-Gloss Label Stock .....*

.....  
.....  
.....

.....  
.....  
.....

*.....8 Human Readable Tab...*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....26, 32 Importing Graphics .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*27 Ink Low LED.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....3 Ink Saturation.....*

.....  
.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....  
.....  
*.....18 Installing Ink Cartridges ....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
*.....13 Installing Label Stock ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
*.8, 10 Installing the Driver and Software .....*

.....  
.....  
.....  
.....  
.....  
*..5 Label Size ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
*17 Label Stock Compatibility .....*

.....  
.....  
.....  
.....  
.....  
.....  
*.9 Label Tear Bar ....*

.....  
.....  
.....  
.....



.....  
.....  
.....  
.....

.....3 *Left Margin Offset* .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..18 *Load/Feed Button* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....3 *Movable Throat Guide* .

.....  
.....  
.....

.....  
.....  
.....  
.....

....10 *Orientation* .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

17 *Pause LED*.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*3 Pigment-Based Monochrome Black .....*

.....  
.....

.....  
.....  
.....

*.....8 Pigment-Based Ink .....*

.....  
.....  
.....

.....  
.....  
.....

*.....8 Power LED.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....3 Print Counter ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*21 46 Index Print Quality .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...17 Printer Driver Settings.....*



.....  
.....  
.....

.....  
.....  
.....  
.....

*...21 Rewinder Mode..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.21 Tear Off Offset.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.21 TOF Offset.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*...21 Troubleshooting ..*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....39 Unload Button .....*

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....3 Using NiceLabel...

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....22 Index 47 Printed in the United States of America P/N 510943 .



[You're reading an excerpt. Click here to read official PRIMERA LX  
810E user guide  
http://yourpdfguides.com/dref/3240748](http://yourpdfguides.com/dref/3240748)