



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for RANE SL 3. You'll find the answers to all your questions on the RANE SL 3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual RANE SL 3
User guide RANE SL 3
Operating instructions RANE SL 3
Instructions for use RANE SL 3
Instruction manual RANE SL 3

RANE SL 3 DATA SHEET

serato || SCRATCH LIVE

Rane SL 3 for Serato Scratch Live ADVANCED 24-BIT USB 2.0 INTERFACE FOR PROFESSIONAL DJs



Like the world standard Rane SL 1, the SL 3 connects one or two standard vinyl or CD turntables to your computer and the mixer of your choice. Using regular turntables or CD players, you can scratch and mix files from your Mac or Windows computer's CD or hard drive.

Enhanced by studio grade preamps and 24-bit audio processing, this compact new solution produces a warm punchy sound to heighten the senses. The Auxiliary Outputs allow DJs and electronic musicians to intensify the mix with the Scratch Live SP-6 Sample Player. The Auxiliary Inputs provide a live input feed for creative sampling or recording your set. Use any combination of audio sources: control CD, control vinyl, MIDI or regular CDs and vinyl for more flexibility than ever.

The included 12" vinyl records and control CDs each have Serato's exclusive and unique control signal which allows Scratch Live to track the motion of the record, simulating the same movement with digital audio. Due to Serato's proprietary control schema, the result is a feel and sound indistinguishable from playing vinyl.

SL 3 FEATURE AND PERFORMANCE ENHANCEMENTS

- New compact hardware design.
- USB 2.0 high speed audio interface.
- Improved dynamic range (104 dB).
- Improved audio performance (24-bit converters).
- Higher output improves ability to easily match levels of various source types.
- Galvanic isolation prevents computer noise from interfering with audio path.
- Aux Input for Live Mix Recording or LiveFeed.
- Aux Output allows use of the Sample Player as a Virtual Deck.
- Aux Output opens the door for future expansion and creative configurations for DJs and electronic musicians.
- High-grade phono preamps upgrade the performance of most mixers.
- Software switchable Direct Thru connections for simplicity.
- Independent Line / Phono-level selection for each input for greater flexibility.
- Includes international power supply to insure optimum performance and easy transfer between DJs.
- Soft carry case included.



[You're reading an excerpt. Click here to read official RANE SL 3 user guide](http://yourpdfguides.com/dref/3538773)

<http://yourpdfguides.com/dref/3538773>

Manual abstract:

Enhanced by studio grade preamps and 24-bit audio processing, this compact new solution produces a warm punchy sound to heighten the senses. The Auxiliary Outputs allow DJs and electronic musicians to intensify the mix with the Scratch Live SP-6 Sample Player. The Auxiliary Inputs provide a live input feed for creative sampling or recording your set. Use any combination of audio sources: control CD, control vinyl, MIDI or regular CDs and vinyl for more flexibility than ever. The included 12" vinyl records and control CDs each have Serato's exclusive and unique control signal which allows Scratch Live to track the motion of the record, simulating the same movement with digital audio. @@ · USB 2.0 high speed audio interface. · Improved dynamic range (104 dB). · Improved audio performance (24-bit converters). @@@@ · Aux Input for Live Mix Recording or LiveFeed.

@@@@@ · Software switchable Direct Thru connections for simplicity. @@@@ · Soft carry case included. SL 3 DATA SHEET MINIMUM SYSTEM REQUIREMENTS · A DJ mixer with at least 2 channels · At least one turntable or CD player · Computer with available USB 2.0 port · Screen resolution 1024 x 768 or higher · Hard drive space for storing music · 1 GB RAM PC · Windows XP with Service Pack 2 or higher, or Vista with Service Pack 1 or higher. We recommend XP over Vista.

· Pentium 4 / 1.5 GHz · Mac OSX 10.4 or higher · G4 / 1 GHz IN THE BOX 1 SL 3 interface 1 Soft carry case 1 Serato Scratch Live software install disc. 1 External universal power supply with country adaptors. 1 USB cable 4 Stereo RCA cables 2 Control CDs 2 Control vinyl records 4 Rubber feet for the SL 3 1 Quick Start Guide 1 Operators Manual 1 Warranty card USB USB MAC WIN OPEN POWER SUPPLY AUX OUT AUX IN IN 1 IN 2 © 2009 Rane Corporation.

All rights reserved. Scratch Live and the Scratch Live logo are the trademarks of Serato Audio Research. Trademarked in the U.S. and other countries. Licensed exclusively to Rane Corporation. All features & specifications subject to change without notice. 4/2009 © Rane Corporation 10802 47th Ave. W., Mukilteo WA 98275-5098 tel 425-355-6000 fax 425-347-7757 web www.

rane.com LOCK PUSH SCRATCHLIVE.NET New features are always being added and improved, and the latest version is a free download. .



[You're reading an excerpt. Click here to read official RANE SL 3 user guide](#)

<http://yourpdfguides.com/dref/3538773>