



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for RANE SL 4. You'll find the answers to all your questions on the RANE SL 4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual RANE SL 4
User guide RANE SL 4
Operating instructions RANE SL 4
Instructions for use RANE SL 4
Instruction manual RANE SL 4

The image shows a data sheet for the RANE SL 4 interface. It features the Serato Scratch Live logo at the top left and the RANE SL 4 logo at the top right. The main title is "RANE SL 4 FOR SERATO SCRATCH LIVE DATA SHEET". Below this, there is a section titled "SL 4 FEATURE AND PERFORMANCE ENHANCEMENTS" with a list of features:

- Supports four turntables or CD decks switchable in any combination.
- Two high-speed USB 2.0 ports for two DJs for uninterrupted performances.
- Aux Input for session recording or LiveFeed.
- Aux Output assignable to the SP-6 Sample Player.
- Four software-switchable analog Thru connections for regular vinyl/CD.
- 48 kHz and 96 kHz sample rate switch on the SL 4 rear.
- 10-in 10-out USB sound card with any software supporting ASIO or Core Audio.
- Bus power from either USB port or the included external power supply.
- Includes four control records, four CDs, two USB and six RCA cables.

Below the text, there is a photograph of the RANE SL 4 device and a detailed connection diagram showing two laptops connected to the device via USB, and two turntables connected via audio cables. The diagram also shows the connection of a power supply and various control records and cables.

The bottom of the page includes the text "RANE SL 4 FOR SERATO SCRATCH LIVE DATA SHEET" and a page number "1".



[You're reading an excerpt. Click here to read official RANE SL 4 user guide](#)

<http://yourpdfguides.com/dref/3624828>

Manual abstract:

@@With unparalleled performance, stability and audio quality, you'll know why thousands of DJs worldwide choose Rane with Serato Scratch Live. · Supports four turntables or CD decks switchable in any combination. @@· Aux Input for session recording or LiveFeed. · Aux Output assignable to the SP-6 Sample Player. @@· 48 kHz and 96 kHz sample rate switch on the SL 4 rear. @@· Bus power from either USB port or the included external power supply. · Includes four control records, four CDs, two USB and six RCA cables. USB USB 1 AUX 1 AUX 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 8 9 SIG / OL 2 PHONO / LINE AUX 1 AUX 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 8 9 SIG / OL 3 PHONO / LINE AUX 1 AUX 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 8 9 SIG / OL 4 PHONO / LINE AUX 1 AUX 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 8 9 SIG / OL 5 PHONO / LINE AUX 1 AUX 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 8 9 SIG / OL 6 MIC 1 AUX 1 AUX 2 ENGAGE MASTER MIC 2 3 2 1 10 5 4 6 7 8 9 BOOTH 8 9 SIG / OL 0 5 6 7 8 9 1 10 HOUSE SIG / OL TREBLE 4 3 2 AUX 3 AUX 4 AUX 5 4 3 2 1 10 INPUT GAIN 5 6 7 ENGAGE OFF 0 +6 MID CUE XP 2016S EFFECTS LOOP MONO OFF 0 +6 BASS MASTER STEREO MP 2016S OFF +6 ROTARY MIXER 5 4 3 2 1 6 7 8 9 10 3 2 CUE 1 1 4 5 6 7 8 9 10 3 2 CUE 2 1 4 5 6 7 8 9 10 3 2 CUE 3 1 4 5 6 7 8 9 10 3 2 CUE 4 1 4 5 6 7 8 9 10 3 2 CUE 5 1 4 5 6 7 8 9 10 6 8 CUE 6 CUE 4 2 2 4 6 8 PGM STEREO MONO 4 3 2 1 5 6 7 8 9 10 POWER MIX LEVEL MIX LEVEL MIX LEVEL MIX LEVEL MIX LEVEL MIX LEVEL MONITOR LEVEL PHONES TO MIXER LINE INPUTS FROM MIXER RECORD OUTPUT The SL 4 is the first standalone DJ interface with two USB ports for seamless DJ changeover and back-to-back performances. Superior sound is delivered with high quality 96 kHz, 24-bit audio. @@@@The SL 4 is masterfully crafted by Rane for the discerning DJ.

@@@@The Forum at serato. @@@@@@Serato approved uSB controllers (optional) Serato has certified a select range of new generation controllers with USB connectivity to Scratch Live. This means that Scratch Live can now send track information from the software to the supported hardware on-board displays. @@@@@@Scratch Live is licensed exclusively to Rane Corporation, 10802 47th Ave. W. , Mukilteo WA 98275 USA TEL 425-355-6000 WEB www.rane.com. .



[You're reading an excerpt. Click here to read official RANE SL 4 user guide](http://yourpdfguides.com/dref/3624828)
<http://yourpdfguides.com/dref/3624828>