



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for RANE TTM 57SL. You'll find the answers to all your questions on the RANE TTM 57SL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual RANE TTM 57SL
User guide RANE TTM 57SL
Operating instructions RANE TTM 57SL
Instructions for use RANE TTM 57SL
Instruction manual RANE TTM 57SL

TTM 57SL QUICK START




INSTALL SCRATCH LIVE

WELCOME

Before installing, visit scratchlive.net to be sure you have the latest Scratch Live software update. Check back regularly for updates, advice and tips. If you are new to computers and installing software, read this section first.

- At scratchlive.net, click **DOWNLOADS**.
- See if the version online is higher than the disc you have.
 - if it is the same, proceed to the Mac or Windows installation section.
 - if it is higher, click the download link for Mac or Win software.
- Enter your email before you can download. We recommend joining the Forum to learn more about using Scratch Live (optional).
- Do you want to open or save this file? Click **Save**, and navigate to an easy place to find it, such as your desktop. When using Vista's or 7's Windows Explorer, click **Browse Folders** in the lower left corner and select **Desktop**.

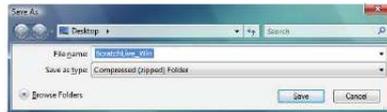

- When the download is complete, click **Open**.
 - For Mac, just double-click the **Scratch Live Installer** and it will install.
 - For Windows XP, opening this downloaded file (double-clicking should uncompress it. A dialog will ask where you want the files; choose **Desktop**. Note: if nothing happens when you double-click the downloaded file, you will need to install an unzip utility to uncompress the file. Type "unzip" into a search engine for several options.

MAC INSTALLATION

Insert the Software Installation CD and double-click the installer icon. Mac users need only connect the TTM 57SL mixer after installing the software. No extra hardware installation is required. Make sure you connect it directly to your computer and not through a hub or splitter.

WINDOWS XP, VISTA & 7 INSTALLATION

- Connect the TTM 57SL to your computer with the included USB cable. Make sure you connect it directly to your computer and not through a hub or splitter. Cancel the New Hardware Wizard if it pops up.
- Insert the Software Installation CD. If the CD doesn't start automatically, browse to the CD drive and run **setup.exe**.
 - if you downloaded the installer in Windows XP as described in the previous section, double-click **setup.exe** on your desktop.
 - if you downloaded the installer in Windows Vista or 7, double-click **setup.exe** in the compressed (zip) folder. If a message tells you the software you are installing has not passed Windows logo testing, choose **Allow** or **Continue Anyway**.
- Follow the on-screen instructions. To change the directory you wish to install Scratch Live into, select **Custom Install**, otherwise choose **Complete**. Once the installation is complete, Scratch Live appears in the Start Menu under **All Programs > Serato > Scratch Live**.

DRIVER UPDATE TOOL

If you forgot or were unable to connect the TTM 57SL during software installation, you can update or install your drivers later by using the Driver Update Tool. By default the Driver Updater will be located at C:\Program Files > Serato > driver_update02.exe or for Vista or 7 64-bit systems:

- C:\Program Files (x86) > Serato > driver_update04.exe.
- Connect the TTM 57SL mixer to your computer with the USB cable. If the Hardware Wizard shows up, click **Cancel**.
- Run the driver_update02.exe utility. If you are asked whether to install one of the drivers, choose **Continue Anyway** and the utility will confirm that the driver has been updated.
- On some Windows machines, each USB port is treated separately, requiring a separate driver install for each USB port. Follow this installation process for each USB port you will connect to a TTM 57SL.



You're reading an excerpt. [Click here to read official RANE TTM 57SL user guide](http://yourpdfguides.com/dref/2825557)
<http://yourpdfguides.com/dref/2825557>

Manual abstract:

Connect the TTM 57SL to your computer with the included USB cable. Make sure you connect it directly to your computer and not through a hub or splitter. Cancel the New Hardware Wizard if it pops up. 2. Insert the Software Installation CD. If the CD doesn't start automatically, browse to the CD drive and run setup.exe. a. @ @ b. @ @ @ @ 3.

Follow the on-screen instructions. @ @ Once the installation is complete, Scratch Live appears in the Start Menu under All Programs > Serato > Scratch Live. INSTALL SCRATCH LIVE Before installing, visit scratchlive.net to be sure you have the latest Scratch Live software update. Check back regularly for updates, advice and tips.

If you are new to computers and installing software, read this section first. 1. At scratchlive.net, click DOWNLOADS. 2.

See if the version online is higher than the disc you have. a. If it is the same, proceed to the Mac or Windows installation section. b. If it is higher, click the download link for Mac or Win software. 3. Enter your email before you can download. We recommend joining the Forum to learn more about using Scratch Live (optional). 4. do you want to open or save this file? Click Save, and navigate to an easy place to find it, such as your desktop.

When using Vista's or 7's Windows Explorer, click Browse Folders in the lower left corner and select desktop. dRIVER UPdATE TooL If you forgot or were unable to connect the TTM 57SL during software installation, you can update or install your drivers later by using the Driver Update Tool. By default the Driver Updater will be located at C: > Program Files > Serato > driver_updater32.exe or for Vista or 7 64-bit systems: C: > Program Files (x86) > Serato > driver_updater64.exe. 1. Connect the TTM 57SL mixer to your computer with the USB cable. If the Hardware Wizard shows up, click Cancel. 2. Run the driver_updater.

exe utility. If you are asked whether to install one of the drivers, choose Continue Anyway and the utility will confirm that the driver has been updated. 3. On some Windows machines, each USB port is treated separately, requiring a separate driver install for each USB port. Follow this installation process for each USB port you will connect to a TTM 57SL.

5. When the download is complete, click open. a. For Mac, just double click the Scratch Live Installer and it will install. b.

For Windows XP, opening this downloaded file (double-clicking) should uncompress it. A dialog will ask where you want the files: choose desktop.

@ @ @ @ @ No extra hardware installation is required. @ @ @ @ By default, A1 and A3 are selected as the control source inputs. Set any of the little switches with a CD player up to LINE. @ @ 2. @ @ @ @ @ By default, A1 and A3 are selected as the control source inputs. @ @ Set all other switches up to LINE.

@ @ 2. Connect the turntable ground wires to the ground post of your mixer.

3. @ @ @ @ Play music through the system from any source. 1. @ @ 2. With audio playing through your speakers: a. @ @ b. @ @ @ @ @ 4. @ @ Use the scope zoom slider (1x to 16x) to zoom in or out as necessary. @ @ If the image appears as a line, then one channel of the turntable is not working. See examples of SCOPE READING AND FIXES in the manual.

4. Check the percentage (%) in the bottom right corner of each calibration scope, indicating the percentage of readable signal -- this number should be 80% to 100% when your system is calibrated properly. These are the basics of calibrating. If you run into any problems or questions, we really recommend reading the CALIBRATING SCRATCH LIVE in the manual. If you aren't seeing good circles, refer to the SCOPE READING AND FIXES pages in the manual.

After your setup is calibrated properly you are ready to import music. See IMPORTING AND PLAYING MUSIC in the manual to get started. RANE TTM 57SL FOR SERATO SCRATCH LIVE · QUICK START 2.0 3 KEyBoARd SHoRTCUTS ACTIoNs ACCESSEd DIRECTLy FRoM THE CoMPUTER KEyBoARd KEy ctrl - L ctrl - R ctrl - F ctrl - A ctrl - C ctrl - E ctrl - V ctrl - X ctrl - Z shift - ctrl - shift - ctrl - ctrl - P ctrl - N ctrl - o - or + ctrl - or + tab ctrl - del and ctrl - backspace alt - del and alt - backspace ctrl - shift - del and ctrl - shift - backspace ctrl - shift - / esc SP-6 SAMPLE PLAYER Load to sample slot Play sample slot LEFT dECK ctrl - or shift - ctrl - shift - shift - alt - ctrl - , (comma) ctrl - 1, 2, 3, 4, 5 1, 2, 3, 4, 5 F1 F2 F3 F5 Q W E R T y U I o P [ctrl - [alt - Q alt - W alt - 1, 2, 3, 4, 5 ctrl - alt - 1, 2, 3, 4, 5 alt - E alt - R alt - o alt - L alt - space bar ctrl - I 4 PART 19351 ACTIoN Locate the current track. This will highlight the track you most recently loaded.

Pressing ctrl - L again will alternate between the tracks recently loaded on both decks. Reveal - the highlighted song is opened in a file browser. Find - moves the cursor to the search box. Select all. Copy text in edit mode. Edit text. Paste text in edit mode. Cut text in edit mode. Undo last track load. Move focus up / down through the library or crates.

Note that if you have a song highlighted in the song view, and use shift - ctrl - you will move up or down through the library or crates. When you release the shift or ctrl key, the focus will go back to the song view so that you can move up and down through songs using . Add tracks to the prepare window. Start a new mic recording. Open the track in your default MP3/WAV/OGG/AIF player. Zoom the main waveform display. Zoom the library text size. Alternate focus between crates or songs. Remove track from library., remove track from crate, delete crate (does not delete the file).

Remove track from crate and from library. Delete the file from your library and send to the recycle bin. @ @ @ @ @ Load the track currently on one deck onto the other deck as well (instant doubles). Unload the track from a deck. Place a cue point.

Place a cue point in a slot. Jump to cue points slots. (rel and int modes) Switch deck to absolute mode. Switch deck to relative mode. Switch deck to internal mode.

Key lock on / off. Play / pause reverse. Play / pause forward. Pitch down. Bend down. (rel and int modes) Bend up. (rel and int modes) Censor. (rel and int modes) (rel and int modes) Go to temporary cue point. Set / adjust loop in-point.

Set / adjust loop out-point. Loop on / off. Jump to selected loop. Load previous track. Load next track. Auto loop on / off. Loop roll. Rewind. (rel and int modes) Fast forward. (rel and int modes) Previous loop.

Next loop. Activate the tempo tapper. (rel and int modes) Set temporary cue point. RANE TTM 57SL FOR SERATO SCRATCH LIVE · QUICK START 2.0 .



[You're reading an excerpt. Click here to read official RANE TTM 57SL user guide](http://yourpdfguides.com/dref/2825557)

<http://yourpdfguides.com/dref/2825557>