



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for RICOH AFICIO SP 100. You'll find the answers to all your questions on the RICOH AFICIO SP 100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual RICOH AFICIO SP 100
User guide RICOH AFICIO SP 100
Operating instructions RICOH AFICIO SP 100
Instructions for use RICOH AFICIO SP 100
Instruction manual RICOH AFICIO SP 100



SP 100

Operating Instructions
User Guide

For safe and correct use, be sure to read "Safety Information" before using the machine.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 100 user guide](http://yourpdfguides.com/dref/4356544)
<http://yourpdfguides.com/dref/4356544>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....21 Checking the Status Information.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...21 Printing the Configuration Page..

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..22 Configuring the Machine Settings...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....23 Tab Settings...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...23 1 Updating the Firmware.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

24 5. Maintaining the Machine Replacing the Print Cartridge....

.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....

...25 Cautions When Cleaning..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....27 Cleaning the Inside of the Machine....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

...28 6. Troubleshooting Common Problems.

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....29 *Paper Feed Problems..*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...30 *Removing Printing Jams.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

31 *Print Quality Problems.....*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....
.....
....34 Checking the Condition of the Machine.

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....34 Printer Problems.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...35 Print Positions Do Not Match Display Positions..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..36 Error and Status Messages Appear on the Smart Organizing Monitor...

.....
.....

.....
.....
.....

.....
.....
..40 Where to Inquire...
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....40 Consumables.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...41 Print Cartridge.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....
....41 Specifications of the Machine....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....42 General Function Specifications...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....42 Printer Function Specifications.

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

43 Trademarks.....

.....

cancel an ongoing print job. 6. Alert Indicator This indicator lights up red when the machine runs out of paper or consumables, when the paper settings do not match the settings specified by the driver, or when other abnormalities occur. 7. Tray Extension Pull out and extend this tray extension to hold the output paper. 5 1. Guide to the Machine 8.

Front Cover Open this cover to pull out the output tray before printing. 9. USB Port Use this port to connect the machine to a computer using a USB cable. 10. Input Tray Cover Set this cover up and pull out the paper source tray to load paper. 11. Power Connector Connect the power cord to the machine here. Insert the other end of the cable into a nearby wall outlet. 12. Power Switch Use this switch to turn the power on or off.

Interior 1 CHZ004 1. Print Cartridge A replacement consumable that is required to make prints on paper. It needs to be replaced after approximately every 2000 pages printed. For details about replacing the cartridge, see p.25 "Replacing the Print Cartridge".

6 Installing the Driver and Software Installing the Driver and Software You can install the necessary driver for this machine using the included CD-ROM. The operating systems compatible with the drivers and software for this machine are: Windows XP/ Vista/7 and Windows Server 2003/2003 R2/2008/2008

R2. The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using. • Be sure to disconnect the USB cable from the machine and turn the machine off before beginning the installation.

Installing the Printer Driver 1. Close all applications except this manual. 2. Insert the CD-ROM especially likely when using paper printed on by other than a laser printer (e.g. monochrome and color copiers, ink-jet printers, etc.) • Special paper, such as thermal paper and carbon paper • Paper whose weight is heavier or lighter than the limitation • Paper with windows, holes, perforations, cutouts, or embossing • Adhesive label paper on which glue or base paper is exposed • Paper with clips or staples • When loading paper, take care not to touch the surface of the paper. • Even if paper is adequate for the machine, poorly stored paper can cause paper misfeeds, print quality degradation, or malfunctions. 12 Print Area Print Area The diagram below shows the area of the paper that the machine can print on. From the printer driver 4 3 4 1 3 2 CHZ904 1.

Print area 2. Feed direction 3. Approx. 4.2 mm (0.2 inches) 4. Approx. 4.2 mm (0.2 inches) • The print area may vary depending on the paper size and printer driver settings.

13 2. Loading Paper Loading Paper Load a stack of paper for printing in the input tray on the back of the machine. • When loading paper, be sure to configure the size and type of paper. When printing a document, specify the paper size and type in the printer driver so that the settings configured when paper is loaded can be used for printing. 1.

Open the input tray cover and pull out the tray. 1 2 CHZ005 2. After pulling out the tray, tilt it back and forth, and then attach the end of the input tray to the machine. 1 2 CHZ006 14 Loading Paper 3. Fan the paper before loading it in the tray.

CBK254 4. Slide the paper guide on both sides outward, and then load the paper print side up until it stops. 2 1 1 CHZ007 5. Adjust the paper guide on both sides to fit the paper width. CHZ008 15 2. Loading Paper 6. Open the front cover and tray extension. CHZ027 Specifying Paper Type and Paper Size Using Smart Organizing Monitor The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using. Specifying the paper type and paper size 1.

On the [Start] menu, click [All Programs].



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 100 user guide](http://yourpdfguides.com/dref/4356544)
<http://yourpdfguides.com/dref/4356544>

2. Click [Smart Organizing Monitor for SP 100 Series]. 3. Click [Smart Organizing Monitor for SP 100 Series Status]. 4. On the [Status] tab, click [Change...].

5. Select the paper type and paper size, and then click [OK]. 6. Click [Close]. Changing the custom paper size 1.

On the [Start] menu, click [All Programs]. 2. Click [Smart Organizing Monitor for SP 100 Series]. 3. Click [Smart Organizing Monitor for SP 100 Series Status].

4. On the [User Tool] tab, click [Printer Configuration]. 5. @@@. In the [Horizontal: (90 to 216 mm)] box, enter the width. 7. In the [Vertical: (148 to 297 mm)] box, enter the length. 8. Click [OK]. 9.

Click [Close]. 16 3. @@@. @@@ Change any print settings if necessary. @@@ Prin SP 100 Series Status]. 4. On the [User Tool] tab, click [Printer Configuration]. 5. Change the settings if necessary. 6.

Click [OK]. 7. @@@@ System tab • Register custom paper sizes. @@@@ Update the machine firmware. @@@@ Never disconnect the USB cable during a firmware update.

@@@@ Download the firmware from the manufacturer's Web site. @@@. 1. On the [Start] menu, click [All Programs]. 2. Click [Smart Organizing Monitor for SP 100 Series].

3. Click [Smart Organizing Monitor for SP 100 Series Status]. 4. On the [User Tool] tab, click [Printer Configuration]. 5. On the [System] tab, click [Printer Firmware Update...]. 6.

Click [OK]. 7. Specify the location of the DWN file, and then click [Open]. 8. @@@@ Store print cartridges in a cool dark place. @@ Toner quality degrades over time. @@@@. 1. Open the maintenance cover. 2. @@@@.

@@@@ Maintaining the Machine 5. @@@@ Dry wipe the exterior with a soft cloth. @@@@ Clean away any dust and grime from the plug and outlet before reconnecting. Accumulated dust and grime pose a fire hazard. • Do not allow paper clips, staples, or other small objects to fall inside the machine.

27 5. Maintaining the Machine Cleaning the Inside of the Machine 1. Open the maintenance cover. 2. @@ Using a cloth, wipe the inside of the machine.

CHZ028 4. Hold the grips of the print cartridge, and then insert it into the machine until it stops. CHZ017 5. Close the maintenance cover. 28 6.

Troubleshooting Common Problems This section describes how to troubleshoot common problems that may occur while operating the machine. Problem Possible cause Solution • Make sure that the power plug is firmly inserted into the wall outlet. • Make sure that the wall outlet is not defective by connecting another working device. • Reconnect the USB cable. • Open the front cover and tray extension.

Confirm that the consumable is properly installed. The machine does not turn on. The power cord is not connected properly. Pages are not printed. • The USB cable is not connected correctly. • Front cover is closed. Strange noise is heard. The consumable is not properly installed. • If any of these problems persist, turn off the power, pull out the power cord, and contact your sales or service representative. 29 6.

Troubleshooting Paper Feed Problems If the machine is operating but paper will not feed or paper jams occur frequently, check the condition of the machine and paper. Problem Solution • Use supported types of paper. See p.11 "Supported Paper". • Load paper correctly, making sure that the paper guides are properly adjusted.

See p.14 "Loading Paper". • If the paper is curled, straighten the paper. • Take out the paper from tray and fan it well. Then, reverse the top and bottom of the paper, and put it bottom in the tray.

• If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps. • Avoid printing on both sides of paper when printing images that contain large areas of solid color, which consume a lot of toner. • Use supported types of paper. See p.11 "Supported Paper". • Load paper only as high as the upper limit markings on the paper guide. • Fan the paper well before loading. Also make sure that the edges are even by tapping the stack on a flat surface such as a desk. • Make sure that the paper guides are in the right position. Multiple sheets of paper are fed at one time.

• Use supported types of paper. See p.11 "Supported Paper". • Load paper only as high as the upper limit markings on the paper guide. • Check that paper was not added while there was still some left in the tray. Only add paper when there is none left in the tray. Paper does not feed smoothly. Paper jams occur frequently. 30 Paper Feed Problems Problem Solution • Paper is damp. Use paper that has been stored properly.

See p.11 "Supported Paper". Paper gets wrinkles. • Paper is too thin. See p.

11 "Supported Paper". • If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps. • Load the paper upside down in the paper tray. The printed paper is curled. • Paper is damp.

Use paper that has been stored properly. See p.11 "Supported Paper". Images are printed diagonally to the pages. If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps. CER091 Removing Printing Jams • Jammed paper may be covered in toner. Be careful not to get toner on your hands or clothes. @@ Make test prints until smudges no longer appear. • Do not forcefully remove jammed paper, as it may tear. @@ Paper jams can cause pages to be lost.

@@ Troubleshooting 1. @@ 2. Open the maintenance cover. 3. @@ Pull out the misfed paper by holding both sides of paper. @@@@ Close the maintenance cover. 33 6. @@ Possible Cause There is a problem with the machine's location. Unsupported types of paper is used. Solution Make sure that the machine is on a level surface.

Place the machine where it will not be subject to vibration or shock. Make sure that the paper being used is supported by the machine. See p.11 "Supported Paper". @@ See p.

11 "Supported Paper". @@ Use genuine print cartridges only. See p. 41 "Consumables". Print cartridges should be opened before their expiration date and used within six months of being opened.

See p.25 "Maintaining the Machine", and clean the machine as required. The paper type setting is incorrect. A non-genuine print cartridges is being used. An old print cartridges is being used. The machine is dirty. 34 Printer Problems Printer Problems Problem Solution If an error occurs when printing, change the computer or printer driver settings. • Check the printer icon name does not exceed 32 alphanumeric characters. If it does, shorten it. An error occurs.

• Check whether other applications are operating. Close any other applications, as they may be interfering with printing. If the problem is not resolved, close unneeded processes too. • Check that the latest printer driver is being used. A print job is canceled. • Set I/O Timeout to a larger value than the current settings. • Processing time depends on data volume. High volume data, such as graphics-heavy documents, take longer to process.



[You're reading an excerpt. Click here to read official RICOH AFICIO
SP 100 user guide](http://yourpdfguides.com/dref/4356544)
<http://yourpdfguides.com/dref/4356544>

Wait for a while. • To speed up printing, reduce the printing resolution using the printer driver.

• Paper is damp. Use paper that has been stored properly. See p.11 "Supported Paper". The whole printout is blurred.

• If you enable [Toner Saving], printing is generally less dense. • Condensation may have collected. If rapid change in temperature or humidity occurs, use this machine only after it has acclimatized. Cannot print properly when using a certain application, or cannot print image data properly. Some characters are printed faintly or not printed.

There is considerable delay between the print start command and actual printing. • Change the print quality settings. 35 6. Troubleshooting Print Positions Do Not Match Display Positions If the position of items on the printed page differs from the position displayed on the computer screen, the cause may be one of the following. Possible Cause Page layout settings have not been configured. The paper size setting does not match the paper loaded. Solution Check that the page layout settings are properly configured in the application. Make sure the paper size selected in the printer properties dialog box matches the size of the paper loaded. 36 Error and Status Messages Appear on the Smart Organizing Monitor Error and Status Messages Appear on the Smart Organizing Monitor Message Causes • The power cable of the machine is not plugged in. • The power of the machine is not turned ON.

• The USB cable is not connected. Solutions • Check the printer power cord. • Check the printer power switch is on. • Check the USB cable is properly connected. If paper is not loaded, load paper in the input tray. For details about loading paper, see p.14 "Loading Paper". If paper is jammed inside the machine, remove the jammed paper. For details about removing jammed paper, see p.30 "Paper Feed Problems".

@@@ Select [600 x 600 dpi] in [Resolution:] to reduce the size of data. For details, see the printer driver Help. Open the front cover completely.

Printer Power Off (Communication Error) Out of Paper / Misfeed Paper is not loaded in the machine's input tray, or paper jam has occurred. Paper Size Mismatch The paper size specified on the machine and the size specified in the printer driver do not match.

The paper type specified on the machine and the type specified in the printer driver do not match. The data is too large or complex to print. Front cover is closed. Paper Type Mismatch Memory Overflow Front Cover Closed 37 6. Troubleshooting 38 7.

Appendix Notes About the Toner • Proper operation cannot be guaranteed if any third-party toner is used. @@ • 39 7. @ • • Be sure to disconnect all cables from the machine before transporting it. • The machine is a precision piece of machinery. Be sure to handle it carefully when moving it. • Make sure to move the machine horizontally. Take extra caution when carrying the machine up or down stairs. • Do not remove the print cartridge when moving the machine. • Be sure to hold the machine level while carrying it. To prevent toner from spilling, move the machine carefully.

1. Be sure to check the following points: • The power switch is turned off. • The power cord is unplugged from the wall outlet. • All other cables are unplugged from the machine. 2. Lift the machine using the inset grips on both sides of the machine, and then move it horizontally to the place where you want to use it. • If you intend to move the machine over a long distance, you must pack it well. Take care not to tip or tilt the machine during transit. • Toner might spill inside the machine if the machine is not kept level during transit. • For more information about moving the machine, contact your sales or service representative.

Disposal Ask your sales or service representative for information about correct disposal of this machine. Where to Inquire Contact your sales or service representative for further information about the topics included in this manual or to inquire other topics not included in this manual. 40 Consumables Consumables Print Cartridge Print cartridge Black Average printable number of pages per cartridge *1 2,000 pages *1 The printable number of pages is based on pages that are compliant with ISO/IEC 19752 with the image density set as the factory default. ISO/IEC 19752 is an international standard for measurement of printable pages, set by the International Organization for Standardization. • Unless a print cartridges is replaced before toner runs out, printing will become impossible.

To facilitate cartridge replacement, we recommend you purchase and store extra print cartridges. • The actual number of printable pages varies depending on the image volume and density, number of pages printed at a time, paper type and paper size used, and environmental conditions such as temperature and humidity. • Print cartridges may need to be changed sooner than indicated above due to deterioration over the period of use. • Print cartridges are not covered by warranty. However, if there is a problem, contact the store where you purchased them.

• The supplied print cartridge can print approximately 500 pages. • This machine periodically performs cleaning. During cleaning, toner will be used to maintain print quality. 41 7. Appendix Specifications of the Machine This section lists the machine's specifications. General Function Specifications

Configuration Desktop Print process Laser electrostatic transfer Maximum paper size for printing 216 mm × 297 mm (8.5 × 11.7 inches) Warm-up time Less than 25 seconds (23 °C, 71.6 °F) Paper sizes A4, 8 1/2 " × 11 " (Letter), B5, 5 1/2 " × 8 1/2 " (Half Letter), 7 1/4 " × 10 1/2 " (Executive), A5, A6, B6, 16K (197 × 273 mm), 16K (195 × 270 mm), 16K (184 × 260 mm), Custom Paper Size • The following paper sizes are supported as custom paper sizes: • Approximately 90-216 mm (3.6-8.

5 inches) in width • Approximately 148-297 mm (5.8-11.7 inches) in length Paper type Plain Paper (65-104 g/m2 (20-24 lb.)), Recycled Paper (65-104 g/m2 (20-24 lb.)), Thin Paper (60-64 g/m2 (16 lb.)), Thick Paper (105 g/m2 (28 lb.)) Paper output capacity 10 sheets (80 g/m2, 20 lb.) Paper input capacity 50 sheets (80 g/m2, 20 lb.) Memory 16 MB Power requirements (mainly Europe and Asia) 220-240 V, 4 A, 50/60 Hz (mainly North America) 42 Specifications of the Machine 120 V, 8 A, 60 Hz Power consumption • Maximum power consumption 70 W • Energy Saver mode 1 60 W or less • Energy Saver mode 2 5 W or less Machine dimensions (Width × Depth × Height) 402 × 368.5 × 119 mm (15.

8 × 14.5 × 4.7 inches) Weight (machine body with consumables) Approximately 6.2 kg (13.7 lb.

) or less Printer Function Specifications Printing speed 13 pages per minute (A4/Letter) Resolution 600 × 600 dpi (maximum: 1200 × 600 dpi) First print speed 13 seconds or less (From the start of data reception to the end of print delivery) Interface USB 2.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 100 user guide](http://yourpdfguides.com/dref/4356544)

<http://yourpdfguides.com/dref/4356544>

0 Printer language DDST 43 7. Appendix Trademarks Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows: •The product names of Windows XP are as follows: Microsoft® Windows® XP Professional Edition Microsoft® Windows® XP Home Edition Microsoft® Windows® XP Professional x64 Edition •The product names of Windows Vista are as follows: Microsoft® Windows Vista® Ultimate Microsoft® Windows Vista® Business Microsoft® Windows Vista® Home Premium Microsoft® Windows Vista® Home Basic Microsoft® Windows Vista® Enterprise •The product names of Windows 7 are as follows: Microsoft® Windows® 7 Starter Microsoft® Windows® 7 Home Premium Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Ultimate Microsoft® Windows® 7 Enterprise •The product names of Windows Server 2003 are as follows: Microsoft® Windows Server® 2003 Standard Edition Microsoft® Windows Server® 2003 Enterprise Edition Microsoft® Windows Server® 2003 Web Edition Microsoft® Windows Server® 2003 Datacenter Edition •The product names of Windows Server 2003 R2 are as follows: Microsoft® Windows Server® 2003 R2 Standard Edition Microsoft® Windows Server® 2003 R2 Enterprise Edition Microsoft® Windows Server® 2003 R2 Datacenter Edition •The product names of Windows Server 2008 are as follows: Microsoft® Windows Server® 2008 Foundation 44 Trademarks Microsoft® Windows Server® 2008 Standard Microsoft® Windows Server® 2008 Enterprise Microsoft® Windows Server® 2008 Datacenter Microsoft® Windows Server® 2008 for Itanium-based Systems Microsoft® Windows® Web Server 2008 Microsoft® Windows® HPC Server 2008 Microsoft® Windows Server® 2008 Standard without Hyper-V™ Microsoft® Windows Server® 2008 Enterprise without Hyper-V™ Microsoft® Windows Server® 2008 Datacenter without Hyper-V™ •The product names of Windows Server 2008 R2 are as follows: Microsoft® Windows Server® 2008 R2 Foundation Microsoft® Windows Server® 2008 R2 Standard Microsoft® Windows Server® 2008 R2 Enterprise Microsoft® Windows Server® 2008 R2 Datacenter Microsoft® Windows Server® 2008 R2 for Itanium-based Systems Microsoft® Windows® Web Server R2 2008 Microsoft® Windows® HPC Server R2 2008 45 7. Appendix 46 INDEX B Basic operation.....

.....
.....
.....
.....

17 C Changing the custom paper size.....

.....
.....
.....

16 Cleaning.....

.....
.....
.....
.....

.....27, 28 Common problems..

.....
.....
.....
.....

.....29 Condition of the machine....

.....
.....
.....

.....34 Configuration page.....

.....
.....
.....
.....

.22 Consumables.....

.....
.....

.....
.....
.....
.....
.....
...41 D Delete..
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....8 Disclaimer.

.....
.....
.....
.....
.....
.....
.....
.....

....3 Driver.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.7 Duplex...
.....

.....
.....
.....
.....

.....
.....
.....

...18 E Error messages.....

.....
.....
.....
.....

.....
.....
...37 Exterior..
.....

.....
.....
.....
.....

.....
.....
.....
.....5 F Firmware...

.....
.....
.....

.....
.....
.....

.24 I Install.....

.....
.....

.....
.....
.....

.....
.....7 Interior.

.....
.....

.....
.....
.....

.....
.....6, 28 Introduction..

.....
.....
.....
.....

.....
.....

3 J Job cancel.....

.....
.....
.....

.....
.....

..19 L Legal prohibition.....

.....
.....
.....
.....

.....
.3 Loading paper....

.....
.....
.....
.....
.....

.....
.14 M Machine settings....

.....
.....
.....
.....
.....

... 23 Models.....

.....
.....
.....
.....
.....
.....

.....
..4 Moving...

.....
.....
.....
.....
.....

.....
....40 N Non-recommended paper.

.....
.....
.....
.....

....12 Notes.....

.....
.....
.....
.....
.....
.....
.....

....39 P Paper feed problems.....

.....
.....
.....

.....
....30 Paper jam.

.....

.....

.....

.....

.....

.....

.....

.....

..31 Paper mismatch.....

.....

.....

.....

.....

.....

.....

20 Print area.....

.....

.....

.....

.....

.....

.....

.....

....13 Print cartridge.

.....

.....

.....

.....

.....

.....25, 41 Print quality problems.

.....

.....

.....

.....

.....

.....

...34 Printer function.....

.....

.....

.....

.....

.....

.....

...43 Printer problems..

.....

.....

.....

.....

.....

.....

.35 R Replace....

.....

.....

.....
.....
.....

.....
.....
..25 S Smart Organizing Monitor...

.....
.....
.....
8, 9 Software.....

.....
.....
.....
.....7 Specifications...

.....
.....
..42, 43 Specifying the paper type and paper size...
.....16 Status information...

.....
.....
.....
..21 Status messages...

.....
.....
37 Supported paper.....

.....
.....
.....
.11 System information.....

.....
.....

....21 T Toner.

.....

.....

.....

.....

.....

.....

.....

.....

.....

39 Trademarks.....

.....

.....

.....

.....

.....

.....

.....

44 Troubleshooting.....

.....

.....

.....29, 30, 34, 35, 36 U Upgrade...

.....

.....

.....

.....

.....

.....

.....

.....

....7 47 MEMO 48 EN GB EN US EN AU M101-8655 EN GB EN US EN AU M101-8655 © 2011 .



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 100 user guide](http://yourpdfguides.com/dref/4356544)

<http://yourpdfguides.com/dref/4356544>