



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for RICOH AFICIO SP 1200SF. You'll find the answers to all your questions on the RICOH AFICIO SP 1200SF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual RICOH AFICIO SP 1200SF**  
**User guide RICOH AFICIO SP 1200SF**  
**Operating instructions RICOH AFICIO SP 1200SF**  
**Instructions for use RICOH AFICIO SP 1200SF**  
**Instruction manual RICOH AFICIO SP 1200SF**



**SP 1200SF/SP 1200S**  
**Software User's Guide**



Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Important Information in "User's Guide" before using the machine.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)  
<http://yourpdfguides.com/dref/3973666>

**Manual abstract:**

or its affiliates in the United States and/or other countries. Presto! PageManager is a registered trademark of NewSoft Technology Corporation. Each company whose software title is mentioned in this manual has a Software Licence Agreement specific to its proprietary programs. All other brand and product names mentioned in this User's Guide, the Software User's Guide are registered trademarks of their respective companies.

i Table of Contents 1 Printing 1  
Using the printer driver .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

1 Printing a document.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.2 Duplex printing.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....  
.....

.....  
*3 Guidelines for printing on both sides of the paper .....*

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
*.....3 Manual duplex printing .*

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
*.....3 Simultaneous scanning, printing and faxing .*

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
*...3 Printer operation keys.....*

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....

*.3 Job Cancel...*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*3 Printer Emulation Support (SP 1200SF only) .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....4 Printing the Internal Font List (SP 1200SF only) ....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*..5 Printing the Print Configuration List (SP 1200SF only)...*

.....

.....  
.....  
.....

.....

.....  
.....  
.....5 Test Print (SP 1200SF only).

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.5 Restoring default printer settings (SP 1200SF only) .....

.....  
.....  
.....

.....  
.....  
.....

.....5 Status Monitor....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....6 Monitoring the machine's status ....

.....  
.....  
.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

*..6 Printer driver settings...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.7 Features in the Windows® printer driver.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.8 Basic tab.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....



.....  
.....  
*.13 Watermark .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*..14 Page Setting ..*

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..16 Device Options .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....



.....  
..17 Support tab ...

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....19 Tray Settings ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.20 Features in the BR-Script (PostScript® 3 TM language emulation) printer driver (SP 1200SF only)....

....21 Printing Preferences .

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....  
.....  
*.21 Advanced options .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....23 Ports tab ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.25 2 Scanning 26 Scanning a document using the TWAIN driver....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*....26 Scanning a document into the PC .*

.....  
.....  
.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....26 Pre-Scanning to crop a portion you want to scan.....

.....

.....

.....

.....

.....

.....

.....

.....

...28 Settings in the Scanner Setup dialog box..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...29 Scanning a document using the WIA driver (For Windows® XP/ 7/ Windows Vista®)..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...33 WIA compliant ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....33 Scanning a document into the PC .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

33 Pre-Scanning to crop a portion you want to scan using the scanner glass .....

.....  
.....

.....35 Scanning a document using the WIA driver (For Windows Photo Gallery and Windows Fax and Scan users) .

.....

.....  
.....  
.....  
.....

.....  
.....

39 Scanning a document into the PC .....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....39 Pre-Scanning to crop a portion you want to scan using the scanner glass .....

.....  
.....  
.....  
.....

.....41 ii Using the Scan key (For USB users).....

.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

...43 Scan to E-mail ..

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....43 Scan to Image .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
44 Scan to OCR .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

...44 Scan to File.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....45 Using ScanSoft™ PaperPort™ 11SE with OCR by NUANCETM.

.....  
.....  
.....

.....  
.....  
.....

.....  
46 Viewing items .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....  
.....  
..47 Organizing your items in folders .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....48 Quick links to other applications ....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

48 ScanSoft™ PaperPort™ 11SE with OCR lets you convert image text into text you can edit.....

..48 Importing items from other applications.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....49 Exporting items into other formats.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....





.....  
.....  
.....  
.....

.....52 SCAN.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....53 File type .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....54 Image (example: Microsoft® Paint)....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....



.....  
*58 CUSTOM SCAN* .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...59 File type* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...60 Customizing a user-defined button.*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...60 COPY* .....

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

...65 PC-FAX (SP 1200SF only) .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..67 Send .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

...68 Receive/View Received..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*68 Address Book .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.....69 Setup ...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*..69 DEVICE SETTING.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...70 Remote Setup (SP 1200SF only) .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*71 Quick-Dial (SP 1200SF only).....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...72 Status Monitor .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....



.....  
.....  
.....  
.....

.....75 Sending setup...

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

....76 Setting up a cover page.

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....nting.

Your computer sends the data to the machine. When the machine finishes printing all the data, the LCD shows the machine status. b c Note You can choose the paper size and orientation in your application software. If your application software does not support your custom paper size, choose the next largest paper size. Then adjust the print area by changing the right and left margins in your application software.

2 Printing Duplex printing The supplied printer driver supports manual duplex printing. 1 1 Guidelines for printing on both sides of the paper If the paper is thin, it may wrinkle. If paper is curled, turn over the stack, straighten it and then put it back in the paper tray or the Manual Feed Slot. If the paper is not feeding properly, it may be curled. Remove the paper, straighten it and turn over the stack. 1 When you use the manual duplex function, it is possible that there may be paper jams or poor print quality. If there is a paper jam, see Paper jams in the User's Guide. If you have a print quality problem, see Improving the print quality in the User's Guide. Manual duplex printing The machine prints all the even-numbered pages on one side of the paper first. Then, the Windows® driver instructs you (with a pop-up message) to reinsert the paper.

Before reinserting the paper, straighten it well, or you may get a paper jam. Very thin or thick paper is not recommended. 1 Simultaneous scanning, printing and faxing Your machine can print from your computer while sending or receiving a fax in memory, or while scanning a document into the computer. Fax sending will not be stopped during PC printing. However, when the machine is copying or receiving a fax on paper, it pauses the PC printing operation, and then continues printing when copying or fax receiving has finished. 1 Printer operation keys Job Cancel To cancel the current print job, press Job Cancel. You can clear the data that is left in the printer memory by pressing Job Cancel. To cancel multiple print jobs, hold down this key until the LCD shows Job Cancel (All). 1 1 3 Printing Printer Emulation Support (SP 1200SF only) Your machine will receive print commands in a printer job language or emulation. Different operating systems and applications will send the print commands in different languages.

Your machine can receive print commands in a variety of emulations and has an automatic emulation selection feature. When the machine receives data from the computer, it automatically chooses the emulation mode. The default setting is Auto. Your machine has the following emulation modes. You can change the setting by using the control panel.

HP LaserJet Mode The HP LaserJet mode (or HP mode) is the emulation mode in which this printer supports the PCL6 language of a Hewlett-Packard® LaserJet laser printer. Many applications support this type of laser printer. Using this mode will allow your printer to run at its best with those applications.

BR-Script 3 Mode BR-Script is an original page description language and a PostScript® language emulation interpreter. This printer supports PostScript®3TM.



*The BR-Script interpreter of this printer allows you to control text and graphics on the page. For technical information about PostScript® commands, see the following manuals: · Adobe Systems Incorporated. PostScript® Language Reference, 3rd edition. Addison-Wesley Professional, 1999. ISBN: 0-201-37922-8 · Adobe Systems Incorporated. PostScript® Language Program Design. Addison-Wesley Professional, 1988. ISBN: 0-201-14396-8 · Adobe Systems Incorporated. PostScript® Language Tutorial and Cookbook. Addison-Wesley Professional, 1985.*

*ISBN: 0-201-10179-3 1 1 Setting the Emulation mode 1 a b c Press Menu, 4, 1. Press a or b to choose Auto, HP LaserJet or BR-Script 3.*



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](#)

<http://yourpdfguides.com/dref/3973666>

Press OK. Press Stop/Exit. Note We recommend that you set the emulation setting with your application software. If the setting does not work properly, choose the required emulation mode manually using the control panel buttons of the machine. 4 Printing Printing the Internal Font List (SP 1200SF only) You can print a list of the machine's internal (or resident) fonts to see how each font looks before you choose it. 1 1 a b c Press Press Press Menu, 4, 2, 1. Start. The machine prints the list.

Stop/Exit. Printing the Print Configuration List (SP 1200SF only) You can print a list of current printer settings. 1 a b c Press Press Press Menu, 4, 2, 2. Start. The machine prints the settings.

Stop/Exit. Test Print (SP 1200SF only) If you are having problems with print quality, you can do a test print. 1 a b c Press Press Press Menu, 4, 2, 3. Start. Stop/Exit.

Note If the problem appears on the printout, see Improving the print quality in the User's Guide. Restoring default printer settings (SP 1200SF only) You can return the machine's printer settings to the factory settings. Fonts and macros loaded to the machine's memory will be cleared. 1 a b c Press Menu, 4, 3. To restore the default settings, press 1. To exit without making a change, press 2. Press Stop/Exit. 5 Printing Status Monitor The Status Monitor utility is a configurable software tool for monitoring the status of one or more devices, allowing you to get immediate notification of error messages such as paper empty or paper jam. 1 1 You can check the device status at anytime by double-clicking the icon in the tasktray or by choosing Status Monitor located in Start/All Programs/SP 1200 series/TYPE 1200SF (or TYPE 1200S) on your PC. Note For more information about using the Status Monitor software, right-click the Status Monitor icon and choose Help.

Monitoring the machine's status The Status Monitor icon will change colour depending on the machine status. A green icon indicates the normal stand-by condition. 1 A yellow icon indicates a warning. A red icon indicates a printing error has occurred. There are two locations where you can display the Status Monitor on your PC - in the tasktray or on the desktop. Note · You can check the device status at anytime by double-clicking the icon in the tasktray or selecting the Status Monitor located in the Start/All Programs/SP 1200 series/TYPE 1200SF (or TYPE 1200S) on your computer. · For more information about using the Status Monitor software, right click the Status Monitor icon and choose Help. 6 Printing Printer driver settings You can change the following printer settings when you print from your computer. Paper Size Multiple Page Orientation Copies Media Type Paper Source Resolution Toner Save Mode Print Setting Manual Duplex printing 1 Watermark 1 Scaling 1 Quick Print Setup 1 Macro Header-Footer Print 1 Density adjustment Improve Print Output 1 1 1 These settings are not available with the BR-script printer driver for Windows®. 7 Printing Features in the Windows® printer driver For more information, see the Help text in the printer driver.

Note · The screens in this section are from Windows® XP. The screens on your PC will vary depending on your operating system. · You can access the Printing Preferences dialog box by clicking Printing Preferences... in the General tab of the Printer Properties dialog box. 1 1 Basic tab You can also change settings by clicking the illustration on the left side of the Basic tab. 1 1 2 a b c Choose the Paper Size, Multiple Page, Orientation, Copies and Media Type (1). Choose the Paper Source (2). Click OK to apply your chosen settings.

To return to the default settings, click Default, then OK. 1 Paper Size From the drop-down box choose the Paper Size you are using. 8 Printing Multiple Page The Multiple Page selection can reduce the image size of a page allowing multiple pages to be printed on one sheet of paper or enlarge the image size for printing one page on multiple sheets of paper. 1 1 4 in 1 1 in 2x2 pages Page Order When N in 1 option is selected, the page order can be selected from the drop-down list. 1 Border Line When printing multiple pages on one sheet with the Multiple Page feature you can choose to have a solid border, dash border or no border around each page on the sheet. 1 Orientation Orientation selects the position of how your document will be printed (Portrait or Landscape). 1 Portrait Landscape Copies The copies selection sets the number of copies that will be printed. 1 9 Printing Collate With the Collate check box selected, one complete copy of your document will be printed and then repeated for the number of copies you selected. If the Collate check box is not selected, then each page will be printed for all the copies selected before the next page of the document is printed. 1 1 Collate box checked Collate box not checked Media Type You can use the following types of media in your machine.

For the best print quality, select the type of media that you wish to use. Plain Paper Envelopes Thin Paper Env. Thick Thick Paper Env. Thin Thicker Paper Recycled Paper Bond Paper Transparencies 1 Note · When using ordinary plain paper choose Plain Paper. When using heavier weight paper, envelopes or rough paper choose Thick Paper or Thicker Paper. For bond paper, choose Bond Paper. · When you use envelopes, choose Envelopes. If the toner is not fixed to the envelope correctly when Envelopes has been selected, choose Env. Thick. If the envelope is crumpled when Envelopes has been selected, choose Env. Thin. Paper Source You can choose Auto Select, Tray1 or Manual and specify separate trays for printing the first page and for printing from the second page onwards. 1 10 Printing Advanced tab 1 1 Change the tab settings by clicking one of the appropriate icons: Print Quality (1) Duplex (2) Watermark (3) Page Setting (4) Device Options (5) 11 Printing Print Quality Resolution You can change the resolution as follows: · HQ 1200 · 600 dpi · 300 dpi Toner Save Mode You can save running costs by turning on the Toner Save Mode, which reduces the print density (print appears lighter). Note · We do not recommend Toner Save Mode for printing Photo or Grey Scale images. · Toner Save Mode is not available for HQ 1200 resolution.

Print Setting You can manually change the print setting. · General This is a printing mode for general printing of documents. · Graphics This is the best mode for printing documents that contain graphics. · Office Document This is the best mode for printing office documents. · Manual You can change the settings manually by choosing Manual and clicking the Setting.



[You're reading an excerpt. Click here to read official RICOH AFICIO](http://yourpdfguides.com/dref/3973666)

[SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)

<http://yourpdfguides.com/dref/3973666>

.. button. You can set brightness, contrast and other settings. 11 12 Printing Duplex Printing 11 Manual Duplex Check Manual Duplex. In this mode, the machine prints all the even numbered pages first. Then the printer driver stops and shows the instructions required to re-install the paper. When you click OK the odd numbered pages are printed. There are six types of manual duplex binding directions available for each orientation. Booklet Printing When you want to print a booklet, use this function.

To make the booklet, fold the printed pages down the middle. Binding Offset If you check the Binding Offset option, you can also specify the offset for binding in inches or millimeters. 13 Printing Watermark 11 You can put a logo or text into your document as a watermark. You can choose one of the preset Watermarks, or you can use a bitmap file that you have created. Check Use Watermark, and then choose the watermark you want to use. Transparent Check Transparent to print the watermarked image in the background of your document. If this feature is not checked then the watermark will be printed on top of your document. 1 In Outline Text Check In Outline Text if you only want to print an outline of the watermark. 1 Print Watermark You can print the watermark in any of the following ways. On all pages On first page only From second page Custom 1 14 Printing Watermark Setting 11 You can change the watermark's size and position on the page by selecting the watermark, and clicking the Edit button.

If you want to add a new watermark, click the New button, and then choose Text or Bitmap in the Watermark Style. Title You can choose CONFIDENTIAL, COPY or DRAFT as the standard title or enter a title you like in the field. Watermark Text Enter your Watermark Text into the Text box, and then choose the Font, Size and Style. Watermark Bitmap Enter the file name and location of your bitmap image in the File box, or Browse for the file location. You can also set the scaling size of the image.

Position Use this setting if you want to control the position of the watermark on the page. 15 Printing Page Setting 11 Scaling You can change the print size of your document with the Scaling feature. Check Off if you want to print the document as it appears on your screen. Check Fit to Paper Size if you want to enlarge or reduce the document to fit the paper size. Check Free if you want to change the size.

You can also use the Mirror Print or Reverse Print feature for your page setting. 16 Printing Device Options 11 You can change the following printer functions: Quick Print Setup Macro (SP 1200SF only) Header-Footer Print Density adjustment Improve Print Output Quick Print Setup The feature allows you to quickly choose driver settings by clicking a tasktray icon. You can turn the quick print setting on or off. By placing a check in the selection boxes for the following functions you can choose which will be available in the quick print setting. · Multiple Page · Manual Duplex · Toner Save Mode · Paper Source · Media Type Macro You can save a page of a document as a macro to printer memory. You can also execute the saved macro (you can use the saved macro as an overlay on any document). This will save time and increase printing speed for often used information such as forms, company logos, letterhead formats or invoices. 17 Printing Header-Footer Print When this feature is enabled, it will print the date and time on your document from your computer's system clock and the PC login user name or the text you entered. By clicking Setting, you can customize the information. · ID Print If you select Login User Name, your PC login user name will print.

If you select Custom and enter the text in the Custom edit box, the text you entered will print. Density adjustment Increase or decrease the print density. Note The Density adjustment is not available when you set the resolution to HQ 1200. Improve Print Output This feature allows you to improve a print quality problem. · Reduce Paper Curl If you choose this setting, the paper curl may be reduced. If you print only a few pages, you do not need to choose this setting.

Change the printer driver setting in Media Type to a thin setting. · Improve Toner Fixing If you choose this setting, the toner fixing on paper may be improved. If this selection does not improve the situation enough, select Thicker paper in Media type settings. 1 18 Printing Support tab 1 1 1 2 3 Print Settings (1) This will print the pages that show how the internal settings of the printer have been configured.

Print Fonts (2) (SP 1200SF only) This will print the pages that show all the internal fonts of the printer. Check Setting... (3) You can check the current driver settings.

19 Printing Tray Settings To access the Tray Settings tab, click the Start button and Printers and Faxes. Right-click your printer icon and click Properties. 1 1 2 Paper Source Setting (1) This feature identifies the paper size defined for each paper tray. · Paper Size This setting allows you to define which paper size is used for the tray and manual feed slot. Highlight the paper source you want to define and then choose the paper size from the pull-down menu.

Click Update to apply the setting to the paper source. · Default Source To save your settings, click OK or Apply. The Auto Select setting will automatically pull paper from any paper source (tray or manual feed slot) that has a defined paper size that matches your document. If paper is in the Manual feed slot, the machine will automatically pull from this slot no matter the size of paper. Serial No. (2) By clicking Auto Detect, the printer driver will probe the printer and display its serial number. If it fails to receive the information, the screen will display "-----". Note The Auto Detect function is not available under the following printer conditions: · The printer power switch is off. · The printer is in an error state. · The printer is in a network shared environment.

· The cable is not connected to the printer correctly. 20 Printing Features in the BR-Script (PostScript® 3 TM language emulation) printer driver (SP 1200SF only) For more information, see the Help text in the printer driver. Note The screens in this section are from Windows® XP. The screens on your PC may vary depending on your operating system. 1 1 Printing Preferences Note You can access the Printing Preferences dialog box by clicking Printing Preferences... in the General tab of the SP 1200SF BR-Script3 Properties dialog box. Layout tab You can change the layout setting by choosing the settings for Orientation, Page Order and Page Per Sheet. 1 21 Printing 1 · Orientation Orientation selects the position of how your document will be printed.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)  
<http://yourpdfguides.com/dref/3973666>

(Portrait, Landscape or Rotated Landscape) · Page Order Specifies the order in which the pages of your document will be printed. Front to Back prints the document so that page 1 is on top of the stack. Back to Front prints the document so that page 1 is on the bottom of the stack. Paper/Quality tab Choose the Paper Source. · Paper Source You can choose Automatically Select, Tray1 or Manual Feed.

22 Printing Advanced options You can access the Advanced options by clicking the Advanced... button on the Layout tab or Paper/Quality tab. 1 1 a Choose the Paper Size and Copy Count (1).

Paper Size From the drop-down box choose the Paper Size you are using. Copy Count The copy selection sets the number of copies that will be printed. b Set the Print Quality, Scaling and TrueType Font settings (2). Print Quality Specifies the print resolution. Scaling Specifies whether to reduce or enlarge documents, and by what percentage. TrueType Font Specifies the TrueType font options. Click Substitute with Device Font (the default) to use equivalent printer fonts for printing documents that contain TrueType fonts. This will permit faster printing; however, you might lose special characters not supported by the printer font. Click Download as Softfont to download TrueType fonts for printing instead of using printer fonts. 23 Printing c You can change settings by choosing the setting in the Printer Features list (3): 1 Media Type You can use the following types of media in your machine.

For the best print quality, select the type of media that you wish to use. Plain Paper Transparencies Thin Paper Envelopes Thick Paper Env. Thick Thicker Paper Env. Thin Bond Paper Recycled Paper Job Name Choose the Job name from the drop-down list for your secured document that you sent to the machine. Toner Save You can conserve toner using this feature. When you set Toner Save Mode to On, print appears lighter. The default setting is Off. Note We do not recommend Toner Save to On for printing Photo or Grey Scale images. Halftone Screen Lock Stops other applications from modifying the Halftone settings. The default setting is on.

High Quality Image Printing You can increase the quality of image printing. If you set High Quality Image Printing to ON, the printing speed will be slower. Reduce Paper Curl If you choose this setting, the paper curl may be reduced. If you print only a few pages, you do not need to choose this setting. Change the printer driver setting in Media Type to a thin setting.

24 Printing Improve Toner Fixing If you choose this setting, the toner fixing on paper may be improved. If this selection does not improve the situation enough, select Thicker paper in Media type settings. Density adjustment Increase or decrease the print density. Note The Density adjustment is not available when you set the resolution to HQ 1200. BR-Script Level You can change the BR-script emulation language level.

Choose the level from the drop-down list. Note If Level 3 is not selected, the PostScript data may not be printed correctly. 1 Ports tab If you want to change the port where your printer is connected, choose or add the port you want to use. 1 25 2 Scanning 2 The scanning operations and drivers will be different depending on your operating system. The machine uses a TWAIN compliant driver for scanning documents from your applications. For Windows XP/7/Windows Vista ® 2 Two scanner drivers are installed. A TWAIN compliant scanner driver (See Scanning a document using the TWAIN driver on page 26) and a Windows® Imaging Acquisition (WIA) driver (See Scanning a document using the WIA driver (For Windows® XP/7/Windows Vista®) on page 33). Note For ScanSoft™ PaperPort™ 11SE, see Using ScanSoft™ PaperPort™ 11SE with OCR by NUANCETM on page 46. Scanning a document using the TWAIN driver The Multi-Function Suite software includes a TWAIN compliant scanner driver. TWAIN drivers meet the standard universal protocol for communicating between scanners and applications.

This means that you can not only scan images directly into the PaperPort™ 11SE viewer that is included with your machine, but you can also scan images directly into hundreds of other software applications that support TWAIN scanning. These applications include popular programs like Adobe® Photoshop®, Adobe® PageMaker®, CorelDraw ® and many more. 2 Scanning a document into the PC There are two ways in which you can scan a whole page. You can either use the ADF (automatic document feeder) or the scanner glass. 2 a b Load your document. Start the ScanSoft™ PaperPort™ 11SE software to scan a document. Note The instructions for scanning in this Guide are for when you use ScanSoft™ PaperPort™ 11SE. The scanning steps may vary when using other software applications. c d e Click File, then Scan or Get Photo. You can also click the Scan or Get Photo button.

The Scan or Get Photo panel appears on the left side of the screen. Click Select button. Choose the scanner you are using from the Available Scanners list. 26 Scanning Note · For Windows® XP/7/Windows Vista®: Choose TW-TYPE 1200SF (TW-TYPE 1200S). · For other operating systems: Choose TYPE 1200SF (TYPE 1200S).

2 f g h Check the Display scanner dialog box on the Scan or Get Photo panel. Click Scan. The Scanner Setup dialog box appears. Adjust the following settings, if needed, in the Scanner Setup dialog box: Scan (Image Type) (1) Resolution (2) Scan Type (3) Brightness (4) Contrast (5) Document Size (6) i Click Start. When scanning is finished, click Cancel to return to the PaperPort™ 11SE window.

27 Scanning Note After you select a document size, you can adjust the scanning area further by clicking the left mouse button and dragging it. This is required when you want to crop an image when scanning. (See Pre-Scanning to crop a portion you want to scan on page 28) 2 Pre-Scanning to crop a portion you want to scan You can preview your image and crop unwanted portions before scanning by using the PreScan button. When you are satisfied with the preview, click the Start button in the Scanner Setup dialog box to scan the image. 2 a b c Follow the steps from a to g of Scanning a document into the PC on page 26.

Choose the settings for Scan (Image Type), Resolution, Scan Type, Brightness, Contrast and Document Size, as needed. Click PreScan. The whole image is scanned into the PC and appears in the Scanning Area (1) of the Scanner Setup dialog box. 1 28 Scanning d Press and hold down the left mouse button and drag it over the portion you want to scan. 2 1 1 Scanning area Note You can enlarge the image using the original size.

icon, and then use the icon to restore the image to its e Load your document again. Note Skip this step if you loaded the document on the scanner glass in a. f g Click Start.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)  
<http://yourpdfguides.com/dref/3973666>

This time only the chosen area of the document appears in the PaperPort™ 11SE window (or your application window). In the PaperPort™ 11SE window, use the options available to refine the image. Settings in the Scanner Setup dialog box Image Type Choose the output image type from Photo, Web or Text.

Resolution and Scan Type will be altered for each default setting. The default settings are listed in the table below: Image Type Photo Web Text Use for scanning photo images. Use for scanning text documents. Resolution 300 × 300 dpi 200 × 200 dpi Use for attaching the scanned image to web pages.

100 × 100 dpi Scan Type 24-bit colour 24-bit colour Black & White 2 2 29 Scanning Resolution You can choose a scanning resolution from the Resolution drop-down list. Higher resolutions take more memory and transfer time, but produce a finer scanned image. The following table shows the resolutions you can choose and the available colours. Resolution 100 × 100 dpi 150 × 150 dpi 200 × 200 dpi 300 × 300 dpi 400 × 400 dpi 600 × 600 dpi 1200 × 1200 dpi 2400 × 2400 dpi 4800 × 4800 dpi 9600 × 9600 dpi 19200 × 19200 dpi Black & White/ Grey (Error Diffusion) Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes 256 colour Yes Yes Yes Yes Yes No No No No No True Grey/24 bit colour Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes 2 2 Scan Type Black & White Use for text or line art. Grey (Error Diffusion) Use for photographic images or graphics.

(Error Diffusion is a method for creating simulated grey images without using true grey dots. Black dots are put in a specific pattern to give the appearance of grey.) True Grey Use for photographic images or graphics. This mode is more exact because it uses up to 256 shades of grey. 256 Colour Uses up to 256 colours to scan the image.

24 bit Colour Uses up to 16.8 million colours to scan the image. Although using 24 bit Colour creates an image with the most accurate colour, the image file will be about three times larger than a file created with 256 Colour. It requires the most memory and has the longest transfer time. 2 30 Scanning Brightness Adjust the setting (-50 to 50) to get the best image. The default value is 0, representing an average. You can set the Brightness level by dragging the slide bar to the right or left to lighten or darken the image. You can also enter a value in the box to set the level. If the scanned image is too light, set a lower Brightness level and scan the document again. If the image is too dark, set a higher Brightness level and scan the document again.

Note The Brightness setting is only available when Black & White, Grey or True Grey is chosen. 2 2 Contrast You can increase or decrease the Contrast level by moving the slide bar to the left or right. An increase emphasizes dark and light areas of the image, while a decrease reveals more detail in grey areas. You can also enter a value in the box to set the Contrast. Note The Contrast setting is only available when Grey or True Grey is chosen. When scanning photographs or other images for use in a word processor or other graphics application, try different settings for the contrast and resolution to see which setting best suits your needs. 2 Document Size Choose one of the following sizes: A4 210 × 297 mm JIS B5 182 × 257 mm Letter 215.9 × 279.4 mm Legal 215.9 × 355.

6 mm (Available on ADF models) A5 148 × 210 mm Executive 184.1 × 266.7 mm Business Card 60 × 90 mm To scan business cards, choose the Business Card size, and then place the business card face down in the center of the left hand side of the scanner glass, as indicated by the document guidelines. Photo 10 × 15 cm Index Card 127 × 203.2 mm Photo L 89 × 127 mm Photo 2L 13 × 18 cm Postcard 1 100 × 148 mm Postcard 2 (Double) 148 × 200 mm 2 31 Scanning Custom If you choose Custom as the size, the Custom Document Size dialog box appears.

2 Enter the Name, Width and Height for the document. You can choose 'mm' or 'inch' as the unit for Width and Height. Note · You can see the actual paper size you chose on the screen. · Width: shows the width of scanning area · Height: shows the height of scanning area · Data Size: shows the rough data size in Bitmap format. The size will be different for other file formats such as JPEG.

· User adjustable from 8.9 × 8.9 mm to 215.9 × 355.6 mm 32 Scanning Scanning a document using the WIA driver (For Windows® XP/ 7/ Windows Vista®) WIA compliant For Windows® XP/ 7/ Windows Vista® you can choose Windows® Image Acquisition (WIA) for scanning images from the machine. You can scan images directly into the PaperPort™ 11SE viewer that is included with your machine or you can scan images directly into any other application that supports WIA or TWAIN scanning. 2 2 2 Scanning a document into the PC There are two ways in which you can scan a whole page. You can either use the ADF (automatic document feeder) or the scanner glass. If you want to scan and then crop a portion of a page after pre-scanning the document, you need to use the scanner glass. (See Pre-Scanning to crop a portion you want to scan using the scanner glass on page 35.

) 2 a b Load your document. Start the ScanSoft™ PaperPort™ 11SE software that was installed during the Multi-Function Suite installation to scan a document. Note The instructions for scanning in this Guide are for when you use ScanSoft™ PaperPort™ 11SE. The scanning steps may vary when using other software applications. c d e Click File, then Scan or Get Photo. You can also click the Scan or Get Photo button. The Scan or Get Photo panel appears on the left side of the screen. Click Select button. Choose the scanner you are using from the Available Scanners list. Note Choose WIA-TYPE 1200SF (WIA-TYPE 1200S).

f g Check the Display scanner dialog box on the Scan or Get Photo panel. Click Scan. The Scanner Setup dialog box appears. 33 Scanning h Adjust the following settings, if needed, in the Scanner Setup dialog box: 2 1 2 3 4 1 Paper source 2 Picture type 3 Adjust the quality of the scanned picture 4 Paper size i j k l Choose Document Feeder from the Paper source drop-down list (1). Choose the picture type (2).

Choose the Paper size from the drop-down list (4). If you need advanced settings, click Adjust the quality of the scanned picture (3). You can choose Brightness, Contrast, Resolution and Picture type from Advanced Properties. Click OK after you choose a setting. 34 Scanning Note The scanner resolution can be set as high as 1200 dpi.

For resolutions greater than 1200 dpi, use the Scanner Utility. (See Scanner Utility on page 37.) m 2 Click the Scan button in the Scan dialog box. The machine starts scanning the document. Pre-Scanning to crop a portion you want to scan using the scanner glass The Preview button is used to preview an image for cropping any unwanted portions from the image.



[You're reading an excerpt. Click here to read official RICOH AFICIO](http://yourpdfguides.com/dref/3973666)

[SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)

<http://yourpdfguides.com/dref/3973666>

When you are satisfied with the preview, click the Scan button in the Scan dialog box to scan the image. 2 a b Follow the steps from a to g of Scanning a document into the PC on page 33. Choose Flatbed in the Paper source drop-down list (1). 1 4 2 3 1 Paper source 2 Picture type 3 Adjust the quality of the scanned picture 4 Scanning area c d Choose the picture type (2). Click Preview.

The whole image is scanned into the PC and appears in the scanning area (4). 35 Scanning e Press and hold down the left mouse button and drag it over the portion you want to scan. 2 f If you need advanced settings, click Adjust the quality of the scanned picture (3). You can choose Brightness, Contrast, Resolution and Picture type from Advanced Properties. Click OK after you choose a setting. g Click the Scan button in the Scan dialog box. The machine starts scanning the document. This time only the chosen area of the document appears in the PaperPort™ 11SE window (or your application window). 36 Scanning Scanner Utility The Scanner Utility is used for configuring the WIA scanner driver for resolutions greater than 1200 dpi and for changing the paper size. If you want to set Legal size as the default size, use this utility to change the setting.

You must restart your PC for the new settings to take effect. Running the utility You can run the utility by choosing the Scanner Utility located in the Start/All Programs/SP1200 Series/TYPE 1200SF (or TYPE 1200S)/Scanner Settings/Scanner Utility. 2 2 Note If you scan the document at a resolution greater than 1200 dpi, the file size may be very large. Make sure that you have enough memory and hard disk space for the size of the file you are trying to scan. If you do not have enough memory or hard disk space then your PC may freeze and you could lose your file.

37 Scanning Note For Windows Vista® the User Account Control screen appears, do the following. · For users who have administrator rights: Click Allow. 2 · For users who do not have administrator rights: Enter the administrator password and click OK. 38 Scanning Scanning a document using the WIA driver (For Windows Photo Gallery and Windows Fax and Scan users) Scanning a document into the PC There are two ways in which you can scan a whole page. You can either use the ADF (automatic document feeder) or the scanner glass.

If you want to scan and then crop a portion of a page after pre-scanning the document, you need to use the scanner glass. (See Pre-Scanning to crop a portion you want to scan using the scanner glass on page 41.) 2 2 2 a b c Load your document. Open your software application to scan the document. Do one of the following: For Windows Photo Gallery Click File, then Import from Camera or Scanner. For Windows Fax and Scan Click File, New, then Scan. d e Choose the scanner you want to use. Click Import. The Scan dialog box appears. 39 Scanning f Adjust the following settings, if needed, in the Scanner dialog box.

1 2 3 4 5 6 7 8 2 1 Profile 2 Source 3 Paper size 4 Color format 5 File type 6 Resolution 7 Brightness 8 Contrast Note The scanner resolution can be set as high as 1200 dpi. For resolutions greater than 1200 dpi, use the Scanner Utility. g Click the Scan button in the Scan dialog box. The machine starts scanning the document. 40 Scanning Pre-Scanning to crop a portion you want to scan using the scanner glass The Preview button is used to preview an image for cropping any unwanted portions from the image. When you are satisfied with the preview, click the Scan button in the Scan dialog box to scan the image. 2 a b c Follow the step from a to e of Scanning a document into the PC on page 39. Put the document face down on the scanner glass. Choose Flatbed in the Source drop-down list. Adjust the following settings, if needed, in the Scanner dialog box.

2 1 2 3 4 5 6 7 8 1 Profile 2 Source 3 Color format 4 File type 5 Resolution 6 Brightness 7 Contrast 8 Scanning area d Click Preview. The whole image is scanned into the PC and appears in the scanning area (8). 41 Scanning e Press and hold down the left mouse button and drag it over the portion you want to scan. 2 f Click the Scan button in the Scan dialog box. The machine starts scanning the document.

This time only the chosen area of the document appears in your application window. 42 Scanning Using the Scan key (For USB users) You can use Scan on the control panel to scan documents into your word processing, graphics or E-mail applications or a folder on your PC. Before you can use Scan on the control panel, you have to install the Multi-Function suite and connect the machine to your PC. If you installed the Multi-Function Suite from the included CD-ROM then the correct drivers and ControlCenter3 are installed. Scanning by Scan follows the configuration on Device Button tab of ControlCenter3.

(See SCAN on page 53.) For details about how to configure the scan settings of the ControlCenter3 buttons and to launch the application of your choice using Scan, see Using ControlCenter3 on page 50. 2 2 Scan to E-mail You can scan either a black and white or colour document into your E-mail application as a file attachment. You can change the scan configuration. (See E-mail on page 57.) 2 a b c d Put the document face up in the ADF, or face down on the scanner glass. Press Scan. Press a or b to choose Scan to E-mail. Press OK. Press Start.

The machine starts scanning the document, creates a file attachment, and launches your E-mail application, displaying the new message waiting to be addressed. Note If you want the scanned data in colour, choose colour in scan type on the Device Button tab of the ControlCenter3 configuration. @@@@ You can change the scan configuration. @@ Press Scan. Press a or b to choose Scan to Image. Press OK. Press Start. @@@@ You can change the Scan configuration. @@ Press Scan. Press a or b to choose Scan to OCR.

Press OK. Press Start. @@@@ Press Scan. Press a or b to choose Scan to File. Press OK.

Press Start. @@@@ ScanSoft™ PaperPort™ 11SE is a document management application. You can use PaperPort™ 11SE to view scanned documents. @@@@ For more details, see the ScanSoft™ Getting Started Guide. @@@@ All graphical files (PaperPort™ 11SE's \*.max and other files) will be displayed and include an icon that indicates the application that the specific file type is associated or created with. Non-graphical files are indicated by a small rectangular thumbnail and are not displayed as actual images. 2 2 Page Thumbnails displays a close-up of a single page. You can open a PaperPort™ 11SE item by doubleclicking its icon or the thumbnail in Desktop View. As long as you have the appropriate application on your PC to display it, you can also open a nonPaperPort™ SE item by double-clicking it. 47 Scanning Organizing your items in folders PaperPort™ 11SE has an easy-to-use filing system for organizing your items.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)

<http://yourpdfguides.com/dref/3973666>

The filing system consists of folders and items that you choose to view in Desktop View. An item can be a PaperPort™ 11SE item or a non-PaperPort™ 11SE item. Folders are arranged in a 'tree' structure in the Folder View. You use this section to choose folders and view their items in Desktop View. You can simply drag and drop an item onto a folder.

When the folder is highlighted, release the mouse button and the item is stored in that folder. Folders can be 'nested'--that is, stored in other folders. When you double-click a folder, its contents (both PaperPort™ 11SE MAX files and non PaperPort™ 11SE files) appear on the Desktop. You can also use Windows® Explorer to manage the folders and items shown in Desktop View. 2.2 Quick links to other applications ScanSoft™ PaperPort™ 11SE automatically recognizes many other applications on your PC and creates a 'working link' to them. The bar at the bottom of the PaperPort™ 11SE desktop shows which programs you can use with PaperPort™ 11SE. 2 To send an item from PaperPort™ 11SE to another program, simply drag and drop the item from the PaperPort™ 11SE desktop to the program icon on the Send To bar. PaperPort™ 11SE automatically converts the item to the preferred format. If PaperPort™ 11SE does not automatically recognize one of the applications on your PC, you can manually create a link using the New Program Link command. ScanSoft™ PaperPort™ 11SE with OCR lets you convert image text into text you can edit ScanSoft™ PaperPort™ 11SE can quickly convert a text document image into text that you can edit with a word processing application.

PaperPort™ 11SE uses the optical character recognition software (OCR), which comes with PaperPort™ 11SE. PaperPort™ 11SE can use your preferred OCR application if it is already on your PC. You can convert the entire item, or by using the Copy Text command, you can choose only a portion of the text to convert. Dragging an item onto a word-processing link icon starts PaperPort™ 11SE's built-in OCR application, or you can use your own OCR application. 2.48 Scanning Importing items from other applications As well as scanning items, you can bring items into PaperPort™ 11SE in a variety of ways and convert them to PaperPort™ 11SE (MAX) files in several different ways: Print to the Desktop View from another application, such as Microsoft® Excel.

Import files saved in other file formats, such as Windows® Bitmap (BMP) or Tagged Image File Format (TIFF). 2.2 Exporting items into other formats You can export or save PaperPort™ 11SE items in several popular file formats, such as BMP, JPEG, TIFF or PDF. 2 Exporting an image file 2 a b c d Click File, then Save As in the PaperPort™ 11SE window. The Save 'XXXXX' as dialog box is displayed. Choose the drive and folder where you want to store the file.

Enter the new file name and choose the file type. Click Save to save your file, or Cancel to return to PaperPort™ 11SE without saving it. Uninstalling ScanSoft™ PaperPort™ 11SE with OCR For Windows® 2000 Professional 2 2 a b a b a b Click the Start button, Settings, Control Panel, then Add/Remove Programs. Choose ScanSoft PaperPort 11 from the list and click Change or Remove. 2 For Windows® XP Click the Start button, Control Panel, Add or Remove Programs, and click the Change or Remove Programs icon. Choose ScanSoft PaperPort 11 from the list and click Change or Remove. For Windows Vista® Click the Start button, Control Panel, Programs and Features. Choose ScanSoft PaperPort 11 from the list and click Uninstall. 2 49 3 ControlCenter3 3 Note The features available to you in ControlCenter3 may vary depending on the model number of your machine. 3 Using ControlCenter3 ControlCenter3 is a software utility that lets you quickly and easily access your often used applications.

Using ControlCenter3 eliminates the need to manually launch specific applications. ControlCenter3 has the following operations: 3 a b c d e f g Scan directly to a file, E-mail, word processor or graphics application of your choice. (1) Access to the Custom Scan settings. Custom Scan buttons let you configure a button to meet your own application needs. (2) Access the Copy features available via your PC. (3) Access the 'PC-FAX' applications available for your device. (4) Access the settings available to configure your device. (5) You can choose which machine ControlCenter3 will connect with from the Model drop-down list. (6) You can also open the configuration window for each function by clicking the Configuration button. (7) 50 ControlCenter3 Modern 3 3 Classic 3 Note · To be able to choose another connected model from the Model drop-down list, you must have the Multi-Function Suite Software installed on your PC for that model.

· For the Modern user interface, you need to install Adobe® Flash® Player 8 or greater. If you do not have Flash Player 8 or greater, you will be prompted so you can download the latest Flash Player. 51 ControlCenter3 Switching the user interface You can choose the Modern or Classic user interface for ControlCenter3. 3 a b To switch the user interface, click Configuration button and select SETUP then SKIN SELECT. From the SKIN SELECT dialog, you can choose your preferred user interface.

3 Turning the Auto Load feature off Once you start ControlCenter3 from the Start menu, the icon will appear on the task tray. You can open the ControlCenter3 window by double-clicking the icon. If you do not want ControlCenter3 to run automatically each time you start your PC: 3 a b c Right-click the ControlCenter3 icon in the task tray The ControlCenter3 preference window appears. Uncheck Start ControlCenter on computer startup. Click OK to close the window.

, and choose Preferences. 52 ControlCenter3 SCAN There are four scan options: Scan to Image, Scan to OCR, Scan to E-mail and Scan to File. Image (Default: Microsoft® Paint) Lets you scan a page directly into any graphic viewer/editor application. You can choose the destination application, such as Microsoft® Paint, Corel® Paint Shop Pro®, Adobe® Photoshop®, or any kind of image editing application on your PC. OCR (Default: Microsoft® Notepad) Lets you scan a page or document, automatically run the OCR application and put text (not a graphic image) into a word processing application. You can choose the target word processing application, such as Microsoft® Notepad, Microsoft® Word, Corel® WordPerfect® or any word processing application on your PC. E-mail (Default: your default E-mail software) Lets you scan a page or document directly into an E-mail application as a standard attachment. You can choose the file type and resolution for the attachment. File Lets you scan directly to a disk file. You can change the file type and destination folder, as needed.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)  
<http://yourpdfguides.com/dref/3973666>

ControlCenter3 gives you the ability to configure the hardware Scan key on your machine and the ControlCenter3 Software button for each scan feature. To configure the hardware Scan key on your machine choose the Device Button tab (right-click each Control Center button and click ControlCenter Configuration) in the configuration menu for each of the SCAN buttons. To configure the Software button in ControlCenter3 choose the Software Button tab (right-click each Control Center button and click ControlCenter Configuration) in the configuration menu for each of the SCAN buttons. 3 3 53 ControlCenter3 File type You can choose from the following list of file types when saving to a folder. Windows Bitmap (\*.bmp) JPEG (\*.jpg) TIFF - Uncompressed (\*.tif) TIFF - Compressed (\*.tif) TIFF Multi-Page - Uncompressed (\*.tif) TIFF Multi-Page - Compressed (\*.tif) Portable Network Graphics (\*.png) PDF (\*.pdf) 3 3 Image (example: Microsoft® Paint) The Scan to Image feature lets you scan an image directly into your graphics application for image editing. To change the default settings, right-click the Image button, click ControlCenter Configuration and click the Software Button tab. 3 54 ControlCenter3 If you want to scan and then crop a portion of a page after pre-scanning the document, check the Show Scanner Interface box. Change the other settings, if needed. To change the destination application, choose the correct application from the Target Application dropdown list. You can add an application to the list by clicking the Add button. 3 Enter the Application Name (up to 30 characters) and the Application Location. You can also find the application location by clicking the icon. Choose File Type from the drop-down list. You can delete an application that you have added by clicking the Delete button in the Software Button tab. Note This function is also available for Scan to E-mail and Scan to OCR. The window may vary depending on the function. 55 ControlCenter3 OCR (Word Processing program) Scan to OCR scans a document and converts it into text. This text can be edited using your favorite word processing software. To configure Scan to OCR, right-click the OCR button, click ControlCenter Configuration and click the Software Button tab. 3 3 To change the word processing application, choose the destination word processing application from the Target Application drop-down list. You can add an application to the list by clicking the Add button. To delete an application, click the Delete button in the Software Button tab. If you want to scan and then crop a portion of a page after pre-scanning the document, check the Show Scanner Interface box. You can also configure the other settings for Scan to OCR. 56 ControlCenter3 E-mail Scan to E-mail lets you scan a document to your default E-mail application, so you can send the scanned job as an attachment. To change the default E-mail application or attachment file type, right-click the E-mail button, click ControlCenter Configuration and click the Software Button tab. 3 3 To change the E-mail application, choose your preferred E-mail application from the E-mail Application drop-down list. You can add an application to the list by clicking the Add button. 1. To delete an application, click the Delete button. 1 When you first start ControlCenter3 a default list of compatible E-mail applications will appear in the drop-down list. If you are having trouble using a custom application with ControlCenter3 you should choose an application from the list. You can also change the other settings used to create the file attachments. If you want to scan and then crop a portion of a page after pre-scanning the document, check the Show Scanner Interface box. 57 ControlCenter3 File The Scan to File button lets you scan an image to a folder on your hard disk in one of the file types shown in the file attachment list. To configure the file type, folder and file name, right-click the File button, click ControlCenter Configuration and click the Software Button tab. 3 3 You can change the File Name. Enter the file name you want to use for the document (up to 100 characters) in the File Name box. File name will be the file name you registered, current date and sequential number. Choose the file type for the saved image from the File Type drop-down list. You can save the file to the default folder shown in the Destination Folder, or choose your preferred folder by clicking the icon. To display where the scanned image is saved when scanning is finished, check the Show Folder box. To let you specify the destination of the scanned image every time you scan, check the Show Save as Window box. If you want to scan and then crop a portion of a page after pre-scanning the document, check the Show Scanner Interface box. 58 ControlCenter3 CUSTOM SCAN The Custom Scan option lets you create your own scan options. For Modern interface users, place the mouse pointer over the d and click Custom. To customize a button, right-click the appropriate button and click ControlCenter Configuration. There are four options: Scan to Image, Scan to OCR, Scan to E-mail and Scan to File. Scan to Image Lets you scan a page directly into any image viewer/editor software. You can choose any image editor application on your PC. Scan to OCR Converts scanned documents into editable text files. You can choose the destination application for the editable text. Scan to E-mail Attaches the scanned images to an E-mail message. You can also choose the file attachment type and create a quick send list of E-mail addresses chosen from your E-mail address book. Scan to File Lets you save a scanned image to any folder on a local or network hard disk. You can also choose the file type to be used. Modern 3 3 3 Classic 3 59 ControlCenter3 File type You can choose from the following list of file types when saving to a folder. Windows Bitmap (\*.bmp) JPEG (\*.jpg) TIFF - Uncompressed (\*.tif) TIFF - Compressed (\*.tif) TIFF Multi-Page - Uncompressed (\*.tif) TIFF Multi-Page - Compressed (\*.tif) Portable Network Graphics (\*.png) PDF (\*.pdf) 3 3 Customizing a user-defined button To customize a button, right-click the button, then click the ControlCenter Configuration button to see the configuration window. 3 Scan to Image General tab To create the button name, enter a name in the Please enter a name for the Custom Button text field (up to 30 characters). Choose the type of scan from the Scan Action field. 3 60 ControlCenter3 Settings tab Choose the Target Application, File Type, Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings. 3 Scan to OCR General tab To create the button name, enter a name in the Please enter a name for the Custom Button text field (up to 30 characters). Choose the type of scan from the Scan Action field. 3 61 ControlCenter3 Settings tab Choose the Target Application, File Type, OCR Software, OCR Language, Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings.



[You're reading an excerpt. Click here to read official RICOH AFICIO](http://yourpdfguides.com/dref/3973666)

[SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)

<http://yourpdfguides.com/dref/3973666>



3 Scan to E-mail General tab To create the button name, enter a name in the Please enter a name for the Custom Button text field (up to 30 characters). Choose the type of scan from the Scan Action field. 3 62 ControlCenter3 Settings tab Choose the E-mail Application, File Type, Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings. 3 Scan to File General tab To create the button name, enter a name in the Please enter a name for the Custom Button text field (up to 30 characters). Choose the type of scan from the Scan Action field. 3 63 ControlCenter3 Settings tab Choose the file format from the File Type drop-down list. Save the file to the default folder which is shown in the Destination Folder box or choose your preferred folder by clicking the icon. Check Show Folder to show where the scanned image is saved after scanning. Check Show Save As Window to specify the destination of the scanned image after every scan. Choose the Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings and enter the file name if you want to change. 3 64 ControlCenter3 COPY Lets you use the PC and any printer driver for enhanced copy operations.

You can scan a page on the machine and print copies using any of the features of the machine's printer driver, or you can direct the copy output to any standard printer driver installed on the PC including network printers. You can configure your preferred settings on up to four buttons. The Copy1 to Copy4 buttons can be customized to let you use advanced copy functions such as N in 1 printing. 3 3 To use the Copy buttons, configure the printer driver by right-clicking the button and choosing the ControlCenter Configuration. 65 ControlCenter3 Enter a name in Please enter a name for the Copy Button text field (up to 30 characters) and choose Copy Ratio. Choose the Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings to be used. Before finishing the Copy button configuration, choose the Printer Name. To display the printer driver settings, click the Print Options... button and then Properties... button. In the printer driver settings dialog box, you can choose advanced settings for printing.

3 Note You must configure each of the copy buttons before they can be used. 66 ControlCenter3 PC-FAX (SP 1200SF only) The PC-FAX option lets you send and receive faxes. You can also configure the address book and change some general machine settings. These buttons are for sending or receiving faxes using the PC-FAX application. Send Lets you scan a page or document and automatically send the image as a fax from the PC using the PC-FAX software. (See PC-FAX sending on page 75.) Receive By clicking this button, the PC-FAX receive software is activated and your PC starts receiving fax data from your machine. After activating the PC-FAX option, the icon name changes to View Received which when clicked will open an application and display the received faxes. Before using the PC-FAX Receive option, you must select the PC-FAX Receive option from the control panel menu of the machine. (See PC-FAX receiving on page 88.) Address Book Lets you open the PC-FAX address book. (See Address Book on page 82.) Setup Lets you configure the PC-FAX sending settings. (See Sending setup on page 76.) Note PC-FAX supports Black and white faxing only.

3 3 67 ControlCenter3 Send The Send button lets you scan a document and automatically send the image as a fax from the PC using the PC-FAX software. (See PC-FAX sending on page 75.) To change the Send settings, right-click the Send button and click ControlCenter Configuration. You can change the Resolution, Scan Type, Document Size, Show Scanner Interface, Brightness and Contrast settings. 3 3 Receive/View Received The PC-FAX Receiving software option lets you view and store your faxes on your PC. It is automatically installed when you install the Multi-Function Suite. By clicking the Receive button, the PC-FAX Receive function is activated and starts to receive fax data from your machine. Before you use the PC-FAX Receive function, you must select the PC-FAX Receive option from the control panel menu of the machine. (See Enabling PC-FAX Receiving software on your machine on page 89.) To configure the PC-FAX Receive software, see Setting up your PC on page 90.

3 68 ControlCenter3 When the PC-FAX receiving software is running, you can open the viewer application with the View Received button. (PaperPort™ I1SE) 3 Note You can also activate the PC-FAX receiving software from the start menu. (See Running the PC-FAX Receiving software on your PC on page 89.) Address Book The Address Book button lets you add, amend or delete contacts from your address book. To edit this address book, click the Address Book button to open the dialog box.

(See Address Book on page 82.) 3 Setup By clicking the Setup button, you can configure the user settings of the PC-FAX application. (See Setting up user information on page 75.) 3 69 ControlCenter3 DEVICE SETTING You can configure or check the machine settings. Remote Setup (SP 1200SF only) Lets you open the Remote Setup Program.

(See Remote Setup on page 74.) Quick-Dial (SP 1200SF only) Lets you open the Set Quick-Dial window of Remote Setup. (See Remote Setup on page 74.) Status Monitor Allows you to open the Status Monitor Utility. (See Status Monitor on page 6) 3 3 70 ControlCenter3 Remote Setup (SP 1200SF only) The Remote Setup button lets you open the Remote Setup Program window to configure the machine setting menus. Note For details, see Remote Setup on page 74. 3 3 71 ControlCenter3 Quick-Dial (SP 1200SF only) The Quick-Dial button lets you open the Set Quick-Dial window in the Remote Setup Program. You can then easily register or change the Quick-Dial numbers from your PC. 3 3 72 ControlCenter3 Status Monitor The Status Monitor button allows you to monitor the status of one or more devices, allowing you to get immediate notification of errors such as paper empty or paper jam. (See Status Monitor on page 6) 3 3 73 4 Remote Setup (SP 1200SF only) 4 Remote Setup The Remote Setup program lets you configure many machine settings from a Windows® application.

When you start this application, the settings on your machine will be downloaded automatically to your PC and displayed on your PC screen. If you change the settings, you can upload them directly to the machine. Click the Start button, All Programs, SP 1200 series, TYPE 1200SF, and Remote Setup. 4 4 OK Lets you start uploading data to the machine and exit the Remote Setup application. If an error message is displayed, enter the correct data again and then click OK. Cancel Lets you exit the Remote Setup application without uploading data to the machine. Apply Lets you upload data to the machine without exiting the Remote Setup application.



[You're reading an excerpt. Click here to read official RICOH AFICIO SP 1200SF user guide](http://yourpdfguides.com/dref/3973666)

<http://yourpdfguides.com/dref/3973666>