



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ROLAND G-1000. You'll find the answers to all your questions on the ROLAND G-1000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual ROLAND G-1000 User guide ROLAND G-1000 Operating instructions ROLAND G-1000 Instructions for use ROLAND G-1000 Instruction manual ROLAND G-1000

 <b>ROLAND G-1000</b> ARRANGER WORKSTATION	 <b>TURBOSTART</b>
<p>--- ROLAND G-1000 TURBO FACTS ---</p> <p>The Roland G-1000 Arranger Workstation is the flagship of the G-Series Intelligent Arranger keyboards. It offers new features combined with new music styles and Standard MIDI Files developed by professional musicians worldwide. Features include:</p> <ul style="list-style-type: none"> <li>• 76-note semi-weighted, velocity sensitive keyboard with aftertouch</li> <li>• New sound palette with 1,152 sounds and 43 drum sets</li> <li>• 64-voice polyphony and 32-part multitimbral operation</li> <li>• 128 internal music styles</li> <li>• Zip™ disk included containing 306 Standard MIDI Files and 441 additional music styles</li> <li>• Innovative functions like Style Database, Disk Style Link, User Style Composer and SMF-to-Style Converter</li> <li>• 89 onboard digital effects</li> <li>• Built-in Zip drive and external SCSI port allow you to quickly load and store large amounts of songs, styles, and Standard MIDI Files</li> <li>• Smart user interface with two programmable function pads</li> </ul> <p>• <b>Mounting the Zip Disk</b></p> <p>To automatically mount a Zip disk in the G-1000:</p> <ol style="list-style-type: none"> <li>1) Turn the G-1000 off.</li> <li>2) Insert the Zip disk in the Zip drive.</li> <li>3) Turn the G-1000 on.</li> </ol> <p>• <b>Playing Demo Songs</b></p> <p>Use the following procedure to play the G-1000 demo songs:</p> <ol style="list-style-type: none"> <li>1) Simultaneously press (▼) DOWN and (▲) UP (under Performance Memory) so that "00 Free Prnt" is displayed.</li> <li>2) Insert the G-1000 demo disk into the disk drive.</li> <li>3) Press PLAY/STOP (under Recorder) to start playback and adjust the VOLUME slider as desired.</li> </ol> <p><i>NOTE: To play a specific song, press SONG SELECT so it is lit and use the PREVIOUS and NEXT buttons to select the desired song after step #2 above.</i></p> <p>Use the following procedure to mute parts of the demo song:</p> <ol style="list-style-type: none"> <li>1) Press F5 [Exit] to access the "MASTER" page (if necessary).</li> <li>2) Press the F1 [Mixer] button.</li> <li>3) Press F3 [Song].</li> <li>4) Use the DRUMS / PART knob to select the desired Part.</li> <li>5) Use the UPPER VARIATION knob to change the "Status" of the Part from "On" to "Mute."</li> <li>6) Repeat steps 3 and 4 to mute other Parts as desired.</li> <li>7) Press F5 [Exit] to return to the "MASTER" page.</li> </ol> <p>• <b>Selecting Tones</b></p> <p>Use the following procedure to select tones:</p> <ol style="list-style-type: none"> <li>1) Press CMGCS MODE so it is lit.</li> <li>2) Press UPPER 1 (under the display) so it is lit.</li> <li>3) Press UPPER 1 (under KEYBOARD MODE) so it is lit.</li> <li>4) Use the GROUP buttons (under TONE / PERFORMANCE) to select the desired group of instruments.</li> <li>5) Use the TONE / PERFORMANCE 1-8 buttons to select the desired Bank.</li> <li>6) Use the TONE / PERFORMANCE 1-8 buttons to select the desired Tone.</li> <li>7) Use the VARIATION button (under TONE / PERFORMANCE) to select a Variation Tone.</li> </ol>	<p>• <b>Layering Tones</b></p> <p>Use the following procedure to layer two tones across the whole keyboard:</p> <ol style="list-style-type: none"> <li>1) Press UPPER 1 and select A11 "Piano 1" (as described previously).</li> <li>2) Press UPPER 2 and select A72 "Legato Str." (as described previously).</li> <li>3) Press RIGHT UPPER 1 (under Keyboard Mode) so it is lit.</li> <li>4) Press RIGHT UPPER 2 (under Keyboard Mode) so it is lit.</li> <li>5) Press WHOLE RIGHT.</li> <li>6) Play the keyboard to hear piano and strings.</li> </ol> <p>• <b>Selecting Music Styles</b></p> <p>The G-1000 features 128 internal music styles and 441 music styles on the included Zip disk. Use the following procedure to select music styles:</p> <ol style="list-style-type: none"> <li>1) Press SELECT (under MUSIC STYLE / MIDI SET) to select "STYLE."</li> <li>2) Use the GROUP buttons (under MUSIC STYLE / MIDI SET) to select the desired group.</li> <li>3) Use the MUSIC STYLE / MIDI SET 1-8 buttons to select the desired bank.</li> <li>4) Use the MUSIC STYLE / MIDI SET 1-8 buttons to select a style from within that bank.</li> <li>5) Press SYNCHRO so that "START" is lit.</li> <li>6) Play a chord on the keyboard below middle C to start the arranger.</li> <li>7) Press START / STOP to stop the arranger.</li> </ol> <p>• <b>Recording with the 16-Track Sequencer</b></p> <p>The G-1000 features an extensive 16-track sequencer. Use the following procedure to record with the sequencer:</p> <ol style="list-style-type: none"> <li>1) Press SONG TOOLS.</li> <li>2) Press M DRUMS to select "16 TRACKS SEQUENCER."</li> <li>3) Use the DRUMS / PART knob to select the track you wish to record.</li> <li>4) Press PAGE DOWN (▼) twice.</li> <li>5) Use the BASS/BANK knob to select the desired tone.</li> <li>6) Press REC in the "RECORDER" section of the keyboard.</li> <li>7) Press PLAY/STOP in the "RECORDER" section of the keyboard to begin recording and play the keyboard.</li> <li>8) Press PLAY/STOP in the "RECORDER" section of the keyboard to stop recording when you are finished.</li> <li>9) Press RESET to return to the beginning of the recording.</li> <li>10) Press PLAY/STOP in the "RECORDER" section of the keyboard to hear the results.</li> <li>11) Press PAGE UP (▲) twice and repeat steps 3-10 to record any additional tracks.</li> </ol> <p>--- Options ---</p> <p>PK-5 Dynamic MIDI Pads, FC-7 Foot Controller, EV-5 Expression Pedal, FV-300L Foot Volume/Expression Pedal, MSA/MSD Series Style Disks, DP-2/6 Pedal Switch, LVC-1N Lyrics Converter, KC-100/300/500 Keyboard Amplifiers, RH-20/60/120 Headphones</p> <p><small>*All trademarks are property of their respective owners.</small></p>
<p>TBS79 © 1998 Roland Corporation U.S., 7200 Dominion Circle, Los Angeles, CA 90040 Faxback # 20077 7/98</p>	



[You're reading an excerpt. Click here to read official ROLAND G-1000 user guide](http://yourpdfguides.com/dref/2703908)  
<http://yourpdfguides.com/dref/2703908>

**Manual abstract:**

@@2) Press UPPER 2 and select A72 "Legato Str." (as described previously). 3) Press RIGHT UPPER 1 (under Keyboard Mode) so it is lit. 4) Press RIGHT UPPER 2 (under Keyboard Mode) so it is lit. 5) Press WHOLE RIGHT. 6) Play the keyboard to hear piano and strings. · **Selecting Music Styles** The G-1000 features 128 internal music styles and 441 music styles on the included Zip disk. @@@@4) Use the MUSIC STYLE / MIDI SET 1-8 buttons to select a style from within that bank. 5) Press SYNCHRO so that "START" is lit. 6) Play a chord on the keyboard below middle C to start the arranger. 7) Press START / STOP to stop the arranger. @@@@w 4) Press PAGE DOWN (w) twice. 5) Use the BASS/BANK knob to select the desired tone. 6) Press REC in the "RECORDER" section of the keyboard. @@@@9) Press RESET to return to the beginning of the recording. @@@@2) Insert the Zip disk in the Zip drive. 3) Turn the G-1000 on. · **Playing Demo Songs** Use the following procedure to play the G-1000 demo songs: 1) Simultaneously press ( ) DOWN and ( ) UP (under Performance Memory) so that "00 Free Pnl" is displayed. 2) Insert the G-1000 demo disk into the disk drive. @@2) Press the F1 [Mixer] button. 3) Press F3 [Song]. 4) Use the DRUMS / PART knob to select the desired Part. @@7) Press F5 [Exit] to return to the "MASTER" page. · **Selecting Tones** Use the following procedure to select tones: 1) Press GM/GS MODE so it is off. 2) Press UPPER 1 (under the display) so it is lit. 3) Press UPPER 1 (under KEYBOARD MODE) so it is lit. @@5) Use the TONE / PERFORMANCE 1-8 buttons to select the desired Bank. 6) Use the TONE / PERFORMANCE 1-8 buttons to select the desired Tone. 7) Use the VARIATION button (under TONE / PERFORMANCE) to select a Variation Tone. .



[You're reading an excerpt. Click here to read official ROLAND G-1000 user guide](http://yourpdfguides.com/dref/2703908)  
<http://yourpdfguides.com/dref/2703908>