



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM D10T. You'll find the answers to all your questions on the SAGEM D10T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM D10T User guide SAGEM D10T Operating instructions SAGEM D10T Instructions for use SAGEM D10T Instruction manual SAGEM D10T

1.2 Handset
Covering the battery

The handset will not work until the battery is fully charged. To charge the handset, insert it into the charging cradle. The charging cradle is located in the base station. The handset will be fully charged when the battery indicator shows a full battery icon.

Charging the battery

The handset will not work until the battery is fully charged. To charge the handset, insert it into the charging cradle. The charging cradle is located in the base station. The handset will be fully charged when the battery indicator shows a full battery icon.

2. Menu structure

3. Calls

3.1 Receiving a Call

When you receive a call, the handset will ring. You can answer the call by lifting the handset or by pressing the call answer key on the handset. You can also answer the call by pressing the call answer key on the base station.

3.2 Making a Call

To make a call, lift the handset and dial the number you want to call. Press the call key to initiate the call. The handset will ring at the other end of the line.

3.3 Call Transfer

You can transfer a call to another number. To do this, press the call transfer key during the call. The handset will ring at the other end of the line, and you will be able to dial the number you want to transfer the call to.

1.2 Handset
Covering the battery

The handset will not work until the battery is fully charged. To charge the handset, insert it into the charging cradle. The charging cradle is located in the base station. The handset will be fully charged when the battery indicator shows a full battery icon.

Charging the battery

The handset will not work until the battery is fully charged. To charge the handset, insert it into the charging cradle. The charging cradle is located in the base station. The handset will be fully charged when the battery indicator shows a full battery icon.

2. Menu structure

3. Calls

3.1 Receiving a Call

When you receive a call, the handset will ring. You can answer the call by lifting the handset or by pressing the call answer key on the handset. You can also answer the call by pressing the call answer key on the base station.

3.2 Making a Call

To make a call, lift the handset and dial the number you want to call. Press the call key to initiate the call. The handset will ring at the other end of the line.

3.3 Call Transfer

You can transfer a call to another number. To do this, press the call transfer key during the call. The handset will ring at the other end of the line, and you will be able to dial the number you want to transfer the call to.

1. Preparing your Phone for Use

1.1. Base Station

1.2. Handset

Quick Guide to Handset Keys

Quick Guide to Handset Display Symbols

Base Station

Base Station and Handset Overview

1. Preparing your Phone for Use

1.1. Base Station

1.2. Handset

Quick Guide to Handset Keys

Quick Guide to Handset Display Symbols

Base Station

Base Station and Handset Overview



You're reading an excerpt. [Click here to read official SAGEM D10T user guide](http://yourpdfguides.com/dref/1202263)

Manual abstract:

fm Page 1 Mercredi, 12. novembre 2003 12:26 12 Dear customer: Thank you for purchasing a DECT SAGEM telephone we appreciate your trust in us. This product was manufactured with the utmost care, should you encounter difficulties during its use. For your comfort and safety, we ask that you read the following paragraph carefully: Quick Guide to Handset Keys Base Station and Handset Overview MENU key DIRECTORY key Access to directory Memorization of the number REDIAL / CALLER ID LIST key Access to last five dialled numbers Access to Caller ID list Insert a dialling pause R key OK Quick Guide to Handset Display Symbols CHARGING STATUS symbol (: full, 1. Preparing your Phone for Use Only a few simple operations are needed to prepare your handset for use. However, we suggest you first read the general information below. · The base station / charging unit and the handset are ready for use after the battery pack has been installed and charged. The D10T handset has already been registered on the base station. With the basic settings, you can start using it immediately. · Your base station and handset will not work in the case of a power failure or if the AC adapter is not connected. However, the settings, directory entries and redialling memory in the handset will be retained in the event of a power failure. · Use only the included AC adapter. · Users of hearing aids should be aware that the radio signals between base station and handset can cause an unpleasant buzzing noise in their hearing aids. · Use only the included battery pack. For your security, do NOT use non-rechargeable batteries. · Make sure that the charging contacts at the bottom of the handset do not come into contact with metallic or greasy objects. · You must set the time and date if they are to be shown on the display and to be stored with the calls in the Caller ID list (see § 1.2). : discharged, blinks when charging) REDIAL / CALLER ID LIST active (symbol blinks when a new call is in the Caller ID list) DIRECTORY active MENU SETTING active KEYGUARD active (blinks when key pressed while keyboard is locked or call is not allowed) MICROPHONE MUTE indicator CALL active (blinks during incoming ring) Recommendations and safety instructions Your DECT telephone must not be installed in a humid room (wash-up room, bathroom, laundry room, kitchen, etc.) unless it is 1. 50 m away from a water point or outside. @@@@ In case of a problem you must first contact your reseller. Only use the supplied telephone cord. @@ For your personal security, never place your handset on the base without the batteries, or without the battery cover to avoid electric shocks. At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet. Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts, (of a television for example), of any electric appliance may result in range reduction. Some sensitive medical equipment and safety equipment may be affected by the radiofrequency transmissions of your telephone, in all cases, we ask that you respect the safety recommendations. In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device. This equipment does not function in the case of an electric network shutdown: for (2) emergency calls, it is recommended to use another unit during power outages .

The CE marking certifies that the product meets the essential requirements of Directive 1999/ 5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference, and furthermore it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interferences. (1) : With the exception of IT scheme installations defined in the EN60950 standard. (2) : In this case, use the self supplied telephone line. Earpiece - Receiver - Ring sound NAVIGATION key - Scroll options - Volume control - Access to emergency number REDIAL / CALLER ID LIST key - Access to last five dialled numbers (first push) - Access to Caller ID list (second push) - Insert a Pause DIRECTORY key - Access to directory TALK / OK key - Accept call - Dial number - Select a menu entry R key - Call hold retrieve (PABX only) MENU key - Access to settings END CALL C key - End a call - Cancel a menu entry - Switch handset OFF/ON - Erase an entry TALK / OK key Accept call Dial number Select a menu entry END / CLEAR key End a call Cancel a menu entry Erase numbers Switch handset off/on NAVIGATION key Scroll options Receiver volume control Emergency dialling 1.1. Base Station Connection Insert the connectors in the order shown below: C SIGNAL STRENGTH symbol (blinks when no signal is being received from the base station or the signal is weak) Base Station LED Flashes during an external call . key - Activate/deactivate keyguard Microphone 1 2 3 4 5 6 7 8 9 0 DIALLING keys # Keyguard on/off Mute on/off during on-line state LED - Flashes during a call # key - Switch off (mute) microphone during call Plug the power cord from the AC adapter into the corresponding base station socket and push the cord into the cord guide. Connect the AC adapter to the mains socket. The green LED of the base station lights. Plug the phone line cord into the corresponding base station socket and push the cord into the cord guide.

Connect the cord to the telephone wall socket. -1- -2- -3- -4- 1.2. Handset Connecting the battery 2. Menu structure 1 - HANDSET 1.

1 - ACOUSTIC 1.11 - RING 1.14 - KEY BEEP Red wire Black wire Volume Beep ON/OFF 3. Press . The number is dialled.

The five numbers stored in the redial memory are the last five numbers that you have dialled directly from the keypad. Any dialling pauses you may have entered are also stored. OK To resume the call, press and hold # until the symbol disappears. 4. Directory You can store up to 15 phone numbers in the directory. The entries can be created manually or taken from the Caller ID list or redialling memory. The handset comes with a rechargeable NiMH battery (3.6 V, 300 mAh). 1. Open the battery compartment and connect the battery.

The battery connector is shaped to prevent reverse polarity, so do not use force but check first whether the connector needs to be turned round and to respect the position of the wire. 2. Slide the cover onto the battery compartment until it shuts. After inserting the battery the fully charged, the handset is switched on automatically and goes into standby mode with the following display (with the time): To set the date and time: + 2 +2. Press The display shows 2-2 DD MM YY. Use the keypad to enter the date (DD-MM-YY). Press to confirm.



[You're reading an excerpt. Click here to read official SAGEM D10T user guide](http://yourpdfguides.com/dref/1202263)
<http://yourpdfguides.com/dref/1202263>

The display now shows 2-2 HH:MM. Use the keypad to enter the time (HH-MM). OK OK 3.
Press and hold . The symbol is displayed. to clear one digit. Press delete all the number. Press and hold 4.
Enter the new number. 5. Press to confirm. C C OK 6.2.

To modify Emergency Number · Press + 1 + 3. Clearing a Phone Number from the Redialling Memory 1. Press . The last dialled number and displayed. C 1.2
- AUTO PICKUP 1.3 - EMERGENCY 1.6 - DELETE LIST 00 - SET DEFAULT to edit other entries. Press 6. Use are finished.

C when you are 2. Use to select the desired phone number. 3. Press and hold to clear the selected number. To clear the entire redialling memory, hold down
for more than 5 seconds. C 4.1. Creating a New Entry Manually 1. Enter a phone number. Correct with if necessary.

You can insert dialling pauses (2 seconds) between digits by using the key (shown as P on the display). 2. Press and hold . The symbol displayed. 3.
Select a memory slot (free slot numbers blink) key if necessary. with the 4. Press or C OK 5. Call List Using the Caller ID List This function is available only
if subscribed to the Caller ID service. you have · Press to clear one digit.

delete all the number. · Press and hold · Enter the new emergency number (10 digits maximum). · Press to confirm. C C OK 6.3. To disable Emergency
Number · Press + 1 + 3. 2 - BASE 2.2 - DATE TIME 2.3 - DIALLING DATE 2.31 - DIAL TYPE 2.

32 - FLASH TIME 1-Tone/2-Pulse 1-85ms/2-100ms 3-250ms/4-600ms 3.2.4. Dialling from the Caller ID List 1. Press OK twice. The latest entry is displayed.
to select the desired entry. 2. Use 3. Press .

The phone number is dialled. Clearing a Phone Number from the Caller ID List __ Dial length Prefix ON/OFF 2.33 - PBX Prefix Prefix number __ 4. Press
twice. The last number and displayed.

C are 1. Press and . and are displayed. or enter the slot · Press to confirm. 2.

4 - CALL BARRING ____ (PIN code) 1 ____ - (N° restricted) Barring ON/OFF 5. Use to select the desired phone number. 6. Press and hold to clear the
selected number. for To clear the entire caller ID list, hold down more than 5 seconds. C 2. Select a memory slot with number manually. 3. Enter the phone
number. 4.

Press to confirm. OK Charging the battery As supplied, the battery is not charged. Place the handset on the base station to charge the battery. The charging
state segments on the handset display keep blinking during the charging process. Three bars are displayed when charging is complete (see below).

@@@@ Dialling from the Directory 1. Briefly press . The first number in the directory and are displayed. Use to select the desired phone
number. or Press and hold .

One dashes blink on the left of the display. @@. The phone number is dialled. 2. Press OK OK 4.

2. @@@@2. Use to select the phone number you want to store in the directory. . The directory is opened and 3.

Press and hold the symbol blinks. 4. Select a memory slot with the (only free slots are displayed). 5. @@@@The oldest entry is cleared when the
memory is full. @@ · Press to confirm. C OK 6.4. Calling an Emergency Number · Press . The preset emergency number is displayed.

· Press to dial. @@ Calls 3.1. Receiving a Call When you receive a call. --- and are shown on the handset display. @@@@If the auto-pickup function is
enabled you can now answer the call (emergency maximum). to confirm. @@to confirm. @@ novembre 2003 12:26 12 · Short beep: when you press a key.

@@@@ Contact your switchboard operator for the available functions and the exact procedures to be used.

Briefly press the R key to use the function (F is shown on the display). If the R key does not function correctly, you may have to modify the "Flash" (R key
signalling) access time. Contact your switchboard operator for details. You can set the Flash access time as follows: · Press + 2 + 3 + 2. 9.

Troubleshooting There is no dial tone Make sure that the telephone cord is correctly connected to the base station and to the wall telephone socket. Make sure
that the base station is connected to the mains supply by means of the AC adapter. 7.1.3.

Activating/Deactivating the AutoPickup Mode When this function is activated, you can pick up the handset to accept a call without having to press a key
(default setting). · Press + 1 + 2. · Enter the base station PIN (0000 by default). Enter the leading digit(s) No1 of a restricted number group (max. 8 digits). ·

Press to confirm. · You can enter up to 5 restricted number groups · Repeat for barred number: 2 · If no barred number, press . to · All number must be
enabled then press confirm (1) or cancel (0) all restriction. · Press to confirm. OK OK OK 7.

2.6. Restoring the Base Station Default Settings To restore the base station factory settings: · Press + 2 + 0 + 0. You cannot make or receive calls Is the
handset battery sufficiently charged? If the battery symbol indicates that the battery is empty, charge the batteries for several hours. · Press OK to confirm. ·
Use to activate (1) or deactivate (0) the auto-pickup mode. · Press to confirm. OK Warning : The base station PIN return to 0000 (by default). 10. Technical
Data Standard Number of channels Channel spacing Bit rate Duplex procedure Voice coding Modulation System clock Average transmission power Power
supply Base station Handset Operation time with fully charged battery Ambient temperature limits Storage temperature limits Handset dimensions (depth x
width x height) Handset weight Dialling method Recall key function Line cord AC adapter DECT 120 duplex channels 1.

728 MHz 1152 kb/s TDMA (Time Division Multiple Access) ADPCM (32 kb/s) (Adaptative Differential Pulse Code Modulator) GFSK (Gaussian Frequency
Shift Keying) 10.368 MHz Approx. 200mW per channel 230V / 50 Hz (AC adapter) 3.6V battery Ni-MH 300 mAh 100 hrs standby, 10 hrs talk 5°C ~ 45°C
-20°C ~ 60°C 29.4 x 52.

0 x 145.0 mm 110 g DTMF / Pulse dialling Flash Approx. 3 m long With Euro mains plug, connection cable approx. 3m long 7.1.

4. Deleting All Redial and Directory Entries To delete all redial and directory entries: · Press + 1 + 6. 7.2.3. To modify barred numbers · Press + 2 + 4. 8.
Operation with a Switchboard (PABX) 8.1. Entering a Prefix If your handset is connected to a PABX, you can enter a dialling prefix (for outgoing calls).

· Press + 2 + 3 + 3. · Use to select a setting (1: 85ms, 2: 100ms, 3: 250ms, 4: 600ms). to confirm. · Press OK · Press OK to confirm. · Enter the base station
PIN (0000 by default). · Press to clear one digit. · Press and hold delete all the number. C C 7.1.5.

Restoring the Handset Default Settings To restore the factory settings for your handset: · Press + 1 + 0 + 0. 7.2.4. To disable barred numbers · Press + 2 + 4.



[You're reading an excerpt. Click here to read official SAGEM D10T
user guide](http://yourpdfguides.com/dref/1202263)

<http://yourpdfguides.com/dref/1202263>

· Enter the prefix number (up to 8 digits), to confirm. · Press · Enter the dial length (a digit between 1 and 9). The prefix will be added automatically whenever the length of a dialled number is greater than this setting, to confirm.

· Press · Press to activate (1) or deactivate (0) the dialling prefix. To change or disable the additional prefix, repeat the same procedure. OK OK · Press OK to confirm. 7.2. Base Station Settings 7.2.1. Setting Date and Time To set the date and time: · Press + 2 + 2. . . . Enter the base station PIN (0000 by default). Press five times, to change 1 to 0. Press Press to confirm. OK OK 7.2.5. Base Station PIN To protect your important base station settings (Call barring) from unintentional access, you should change your base station PIN (personal identification number). Note: The default PIN is 0000. · Press + 2 + 6. 8.

2. Setting the Dialling Mode For information on the dialling mode of your telephone line (tone dialling or pulse dialling), contact your operator. · Press + 2 + 3 + 1. . . . The display shows 2-2 DD MM YY. Use the keypad to enter the date (DD-MM-YY). Press to confirm. The display now shows 2-2 HH:MM. Use the keypad to enter the time (HH-MM), to confirm. Press OK OK 7.

2.2. @@to confirm. · Press · Enter the new PIN again, to confirm. · Press OK OK · Use to select a dialling mode. (1: Tone, 2: Pulse). · Press to confirm. OK -9- - 10 - - 11 - 11. @@In case of a malfunction, your reseller will advise you.

@@@The manufacturing numbers, product brands or labels have been altered or made illegible. Interventions on the product have been made by an unauthorized person. The product has been subjected to abnormal or improper use. The product has been damaged from external causes such as lightning, overvoltage, moisture, accidental deteriorations, improper care as well as all Acts of God. Quick Guide Operation Taking a call Setting the receiver volume Creating a directory entry Dialling from the directory Clearing directory entries Editing memory entries Scrolling the Caller ID list Dialling from the Caller ID list Clearing Caller ID entries Lift handset from base station, or press any key when the handset rings Press press Press Press Press Press Press Press than 1s Press and hold Redialling Emergency Dialling Press Press C List of directory Memory slot: ____ Name: _____ Phone number: _____, then press , press , press OK OK Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Memory slot: ____ Name: _____ Phone number: _____ Emergency number: 251 251 682A key during the call , select memory slot with and to confirm , and select phone number with , select memory slot with C Enter phone number, press and hold OK C for more than 1s Memory slot: ____ Name: _____ Phone number: _____ Press and hold for more than 5s to clear all directory entries for more than 1s to enter . , then press , press C OK , select memory slot with edit mode, edit digits, then press twice and scroll Caller ID numbers with twice and select Caller ID number with twice and select Caller ID number with Memory slot: ____ for more Name: _____ Phone number: _____ Memory slot: ____ Name: _____ This guarantee does not affect the consumer rights that you may have under the laws in effect in your country. Important: Should you return your product to the customer service outlet, please be sure to return all items and accessories delivered with the product. for more than 5s to clear all Caller ID list entries , then press OK and select redial number with , then press OK Handset Settings Ringer volume Key beep Auto-pickup Emergency number Clearing all memory entries Default handset settings , 1, 1, 1, , 1, 1, 4, , 1, 2, , 1, 6, level (1-3), 0 (Off) or 1 (On), OK Phone number: _____ OK OK 0 (Off) or 1 (On), Memory slot: ____ Name: _____ Phone number: _____ , 1, 3, Emergency number, OK OK , 1, 0, 0, OK Base station settings Date and time Dialling mode R key ("Flash" access time) Prefix Enter barred numbers , 2 , 2 , Day-Month-Year, , 2, 3, 1, , 2, 3, 2, OK , Hours-Minutes, OK Memory slot: ____ OK 1 (Tone) or 2 (Pulse), Name: _____ OK OK 1 (85ms) or 2 (100ms) or 3 (250ms) or 4 (600ms), OK , 2 , 3 , 3 , Prefix number, 0 (Off) or 1 (On), Barred number 2, Barred number 3, Barred number 4, Barred number 5, , , , OK OK , Dial length, , , Phone number: _____ Memory slot: ____ , 2 , 4 , Base PIN, Barred number 1, OK OK Name: _____ Phone number: _____ Memory slot: ____ OK OK OK OK 0 (Off) or 1 (On), Base station PIN Base station default settings New Base PIN again, , 2, 0, 0, OK , 2 , 6 , Base PIN, New Base PIN, OK , Name: _____ Phone number: _____ - 14 - _____ - 12 - - 13 - .



[You're reading an excerpt. Click here to read official SAGEM D10T user guide](http://yourpdfguides.com/dref/1202263)
<http://yourpdfguides.com/dref/1202263>