

Manual abstract:

Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a precaution, in case of danger, the mains adapters act as a disconnecting mechanism for the 230V power supply. They should be placed near the device and should be easily accessible. This telephone was designed for use on the public switched telephone network (PSTN). In case of a problem you must first contact your reseller. Only use the supplied telephone cord. For your personal safety, never place your handset on the base without the batteries, or without the battery cover, you could get an electric shock. To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 400 mAh, never use non rechargeable batteries. Insert the batteries in the handset battery compartment respecting polarity.

At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet. Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts, (of a television for example), of any electric appliance may result in range reduction. Some sensitive medical equipment and safety equipment may be affected by the radiofrequency transmissions of your telephone. In all cases, we ask that you respect the safety recommendations.

In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device. This equipment does not function in the case of an electric network shutdown: for emergency calls, it is recommended to use another unit during power cuts. The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference. Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference. The declaration of compliance may be looked up on the www.sagemcom.com site "support" section or can be obtained from the following address: Sagemcom Broadband SAS 250, route de l'Empereur - 92848 Rueil-Malmaison Cedex - France Installing the phone New entry List Edit entry delete all Directe mem. Clock&alarm date / time Set format Alarm Alarm tone Change pin registration Unregister contry reset AUTO PREFIX Recall time Dial mode First ring Advanced set Change standby screen (Press and hold) Red key: Talk off / Switch handset on/off Access to phonebook / Navigation key down Rechargeable batteries Paging button - Pressed briefly: telephone set paging. - Hold down pressed (4 seconds minimum): telephone set registration. Menu key R key: Second call / conference Personal set Handset name Handset tone LANGUAGE Auto hang-up + 1. 2. 3. 4. 5. Insert the batteries, taking care to respect the polarity as indicated in the compartment.

Put the compartment door back on. «SEARCHING...» appears on the screen. Connect the end of the mains power unit lead to the bottom of the base and the mains power unit to the mains socket. Plug the power supply cord into AC outlet and the other end into the power jack on the base bottom. A welcome message in all the languages supported by the telephone is displayed on the screen, press OK *. You will hear a confirmation tone. Place the handset in the base station to charge for 15 hours prior to first use.

6. After charging, press key. You can hear dial tone. *: depending on country 1 D142 Answering a call When the phone rings, press the key to answer the call. Dialled call log The dialled call log presents the calls you made (max. 5 last calls). To consult the list: 1. 2. Press briefly. The last dialled number is displayed.

Press the or key to consult the list of the last 5 numbers dialled. You can adjust the volume of what you hear through the handset at any time by pressing or key. Ending a call To end a call press . Calling back a caller 1. 2. 3. Press the or key. Press the or key to select a call record. Press the key to dial the number. Microphone mute function Enable MUTE function: press the Disable MUTE function: press the key.

The display shows "mute on". key. Your correspondent can hear you again. Making an entry in the directory from the list of calls received. 1. 2. 3. 4. Press the Use or or key. Voice Mail (According to operator) With this function you can receive calls in your absence on a voice message recorder in the switched and the telephone network.

To indicate that a new message has been received the envelope icon new event message "voicemail" are displayed on the Handset screen. Your voicemail number is not set in the factory. Dial the number of your operator's voice message recorder. The envelope icon disappears when there are no more new messages. to select the desired caller number.

Press MENU key, then select "save number". Enter the name of the entry. Press OK. Deleting caller list record 1. 2.

3. Press the or key. Press or key to select a call record. Press MENU. Select "delete" to delete the current record. Select "delete all" to delete the entire Caller list. A confirmation screen appears. Using the telephone touch keys: If you do not wish to delete the current record, press To confirm the deletion of the entry, press OK. . CALL LOG Calling line identification presentation (CLIP) This CLIP phone stores and displays CLIP information provided by your local telephone company.

You must subscribe to CLIP service in order to use this unit. If you have not subscribed to CLIP service or if the caller number is suppressed, the display shows "unknown". Display of numbers not available: - Unavailable: you are not in same area as your contact. - Hide id: your contact does not want their number to be displayed. 4. 5. PHONEBOOK You can store 50 phonebook entries (24 digits and 12 characters) in your phonebook. Dialling a memory number 1. 2. 3.

1. 2. 3. 1. 2.

Press key to consult the list of contacts. Press the or key to consult directory entries. When you have selected the desire number, press . Received call log The received call log presents the calls you received. (max.

10 last calls). 6. 7. 8. 9. Press , the icon is displayed. The most recent name or call number is displayed according to whether your contact's number is included in your phonebook or not. Press OK to display the date and the time of the call. Press the or key to go through the list. If the number is too long (more than 12 digits), the screen will not show the number in full.

Press OK key to go to last number page for CID length. Creating / Storing a memory Go to the menu "phonebook" / "new entry" Enter the name of the entry.



[You're reading an excerpt. Click here to read official SAGEM D142 user guide](http://yourpdfguides.com/dref/3989399)

<http://yourpdfguides.com/dref/3989399>

Press OK. Enter the number of your entry using the keypad keys. Press OK. Go to the menu "phonebook" / "edit entry". Select the entry you want to edit using or Editing a memory. Press OK. 5 + - Activate, deactivate keypad lock (Press and hold) Mute: Activate / Deactivate the microphone - Access to outgoing call list Deactivate / Activate handset ringer (Press and hold) Navigation To navigate among the menus, use the keys: MENU, or , OK and .

Example: To change the ring tone, go to the menu Personal set / Handset tone / ring tones.

To do this: 1. Press MENU. Select "Personal set" using the or key. 2. Press OK.

Select "Handset tone" using the or key. 3. Press OK. Select "ring tones" using the or key. 4.

Press OK. 10 melodies are available: "melody 1" ... "melody 10". Select the desired melody using the or key. 5. Press OK key to confirm your selection. ! Telephone socket Power socket Microphone Intercom key Quick guide to handset display icons Signal strength icon (blinking when no signal or the signal strength is weak). Call (blinks when you receive a call) Voicemail icon: indicates that new messages are present in your voicemail box.

Handset ringer muted. Received call list (appears when a new call is in the caller list). Memory. Charging status icon (during charging). : Full ; + flashing (charger not connected) : Flat; blinking CALLS Make a call Ensure that the handset is switched on. 1. 2. Press the Talk key. . Changing the batteries Make sure the telephone is OFF before you replace batteries.

1. Remove the batteries compartment door. 2. Remove old batteries. 3.

Insert the batteries in the handset battery compartment respecting polarity. 4. Put the batteries compartment door back on. 5. Place handset in the base to charge.

You will hear the dialling tone and the display will show you the phone icon Enter the phone number. - OREnter the phone number first and then press key. 1. 2 3 4 D142 D142 3. You will then enter the name input screen and the cursor will be at the end of the name: The information is accurate. Press OK key. To correct the name, press key to delete characters. Enter the new name and press OK key. You will then enter the number screen and the cursor will be at the end of the number : The information is accurate. Press OK.

1. 2. To correct the number, press to delete the numbers. Enter the new number and press OK. D142 Answering an internal call 1. 2. 3. The ring melody from an internal call is different from an external call. "handset" and the calling handset number appear on the screen. The " " is blinking.

Press the key to answer. The " " stop blinking. @@2. 3. During a call, press .

The external user is put on hold. Enter the internal call number. When the user answers, you can announce the call. Press the key to transfer the call.

@@@@Select the entry you want to delete using or .

@@@@1. Go to the menu "phonebook" / "direct mem. ". 2. Select the key you want to assign a number (1 or 2). 3. Press OK, "no number" is displayed on the screen. 4. Press MENU. 5.

"edit number" appears on the screen. 6. Press OK. 7. Enter the name of the entry and press OK to confirm. 8. Enter the number of the entry. Press OK to confirm. You will hear a confirmation tone. To call the number you have assigned to one of the shortcut keys, 1.

@@To set up a telephonerent state. @@A screen displays the current format, use or to change it. Press OK. @@A screen displays the current format, use or to change it. Press OK.

Go to the menu "clock & alarm" / "alarm". To activate the alarm once, select "on once". @@To deactivate the alarm, select "off". Select your choice then press OK. @@@@Select the desired melody, press OK key to confirm your selection.

You will hear a confirmation tone. Disassociation of a handset 1. 2. 3. Go to the menu "advanced set" / "unregister". Enter the 4 digit base master PIN code (default 0000). Press OK. @@Go to the menu "advanced set" / "unregister". Enter the 4 digit base master PIN code (default 0000). Press OK.

Select the country where you are using the telephone. Press OK. A confirmation screen appears, press OK. Go to the menu "advanced set" / "reset". @@2. 3. 4. 1. 2. @@Use or to choose the desired language.

@@@@@@1. Go to the menu "advanced set" / "auto prefix". @@@@Press OK. Auto talk When active, the auto talk off feature enables you to automatically hang up as soon as you put the handset on its base. 1.

2. Go to the menu "personal set" / "auto hang-up". An information screen shows you the current state. Use Press OK key to confirm your selection. or to modify it.

3. 1. 2. Modifying alarm tone Key lock 1. 2. Press and hold key for 1 second. An information screen shows you that the keys are locked. key 1 sec. 2. To recover to normal, press and hold ADVANCED SETTINGS Base master PIN code Flash timing If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, conference call.

Contact your administrator, who will supply the appropriate time period, and proceed to the new settings. 1. 2. Go to the menu "advanced set" / "recall time". Select the appropriate time period, press OK. SETTING THE DATE AND TIME Time and date After a power cut the time has to be reset. 1. Go to the menu "clock & alarm" / "date/time". Current date is displayed. To keep the date, press OK.

To change it, enter the new date in 20YY/MM/JJ format. To go back to change the entry. Your base station code (default setting 0000) is required to access certain security functions. This code can include 8 digits. 1.

2. 3. Go to the menu "advanced set" / "change pin". Enter your old code first, press OK. Enter your new PIN code.

Each time a digit is entered the «_» is replaced by a «*». Press OK key to confirm your new PIN code. You will hear a confirmation tone. Modifying the dialling mode Most telephone systems use the tone dialling mode. You can, however, use the pulse dialling mode: 1. 2. 3. Go to the menu "advanced set" / "dial mode". Two modes are available: "tone" and "pulse". Press OK.

Carefully note your base station code. You will need it to change certain settings. 9 10 11 D142 First ring When this function is activated, the receiver rings as soon as a call is received, without waiting for the number to be displayed. If you have activated this function, it will be automatically deactivated when a call is received with the number displayed (if you have this service).



[You're reading an excerpt. Click here to read official SAGEM D142 user guide](http://yourpdfguides.com/dref/3989399)

<http://yourpdfguides.com/dref/3989399>

1. Go to the menu " advanced set " / " first ring ". 2. Use the or key to change the state. 3. Press OK.

D142 Auto-diagnostics Problem Solution Make sure the batteries are properly installed. Place the handset on the base and fully charge the batteries. To increase the life of your batteries, you can perform this operation about every two months. If these precautionary measures do not resolve this issue, replacement batteries are available through your reseller. As time goes by, you may notice a slight decrease in battery performance.

Use your handset until the battery is fully discharged, and then charge it for at least 15 hours. Make sure the RINGER setting on the handset is programmed to ON. You may have too many extension phones on your line. Try unplugging some phones. Is handset out of range? Move closer to the base.

Does the base need to be relocated? Charge batteries. Make sure base is not plugged into an outlet with another household appliance. **D142 The product** The crossed-out waste bin stuck on the product or its accessories means that the product belongs to the family of electrical and electronic equipments. In this respect, the European regulations ask you to dispose of it selectively: At sales points in the event of the purchase of similar equipment. At the collection points made available to you locally (drop-off centre, selective collection, etc.). In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health. **D142 Malfunctions** not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment Communication problems related to an unsuitable environment including: - Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent - Transmission faults (for example poor geographical coverage by radio and TV transmitters, interference or poor line quality) - Local network faults (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network - Modification of the parameters of the cellular or broadcast network carried out after the sale of the Product Normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer. Malfunctions resulting from the usage of products, consumables or accessories not compatible with the equipment.

C) Out of Guarantee Repairs In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorised SAGEMCOM Repair Centre for a cost estimation prior to work being carried out. In such cases, the repair and delivery costs will be invoiced to the customer. The foregoing shall apply unless otherwise agreed in writing with the customer and only for the United Kingdom and Ireland. www.sagemcom.com No display. **BATTERIES SAFETY PRECAUTIONS** To avoid any risk of explosion: Make sure you have inserted the batteries correctly. Use only with 1,2V 400mAh type or equivalent rechargeable batteries pack. Do not dispose of the batteries in a fire. The cell may explode.

Check with local code for possible special disposal instructions. Do not burn, disassemble, mutilate or puncture. Like other batteries of this type, toxic materials could be released which can cause injury. To reduce the risk of fire or personal injury, use only the battery listed in the user's guide. Keep batteries out of the reach of children.

Remove batteries if storing over 30 days. Handset does not ring. **TERMS AND CONDITIONS FOR UNITED KINGDOM & IRELAND ONLY** In order to apply the guarantee, you should contact the SAGEMCOM Helpdesk or the retailer where you purchased the equipment. Proof of purchase will be required in either case. Please make sure that you use your equipment only for the purpose for which it was designed and under normal usage conditions.

SAGEMCOM do not accept any liability for the equipment if used outside the frame of its original designed purpose or any consequence that may arise from this usage. @@@@In the case that a product needs to be sent in for a repair, it must always be accompanied by a proof of purchase (which is not altered, written on or in any way made illegible) showing that the product is still under guarantee. In the case that no proof of purchase is enclosed, the SAGEMCOM repair centre will use the production date as its reference for establishing the guarantee status of the product. Apart from all legal obligatory rules, SAGEMCOM, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and can not be held responsible for any direct or indirect, material or immaterial damage, either in or out of the frame of the present guarantee. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee. This guarantee does not affect the Customer statutory rights. You experience static, noise or fading in and out. **GENERAL PRODUCT CARE** To keep your telephone working and looking good, follow these guidelines: Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps). DO NOT expose to direct sunlight or moisture. Avoid dropping and other rough treatment to the phone.

Clean with a soft cloth. Retain the original packaging in case you need to ship the phone at a later date. Unit beeps - Place handset in base for 20 seconds to reset the security code. If that doesn't work, charge batteries for 15 hours. - Clean charging contacts on handset and base with a soft cloth - Replace batteries. **TERMS AND CONDITIONS FOR OTHER COUNTRIES** If, despite our best efforts, your product presents any defects, you should refer to your retailer and present the proof of purchase that they gave you on the day of purchase. Should any malfunctioning arise, the retailer will advise you what to do. For the warranty to apply, you should ensure that the product was used in accordance with the instructions for use and the purpose for use, and that you have at your disposal the sales invoice or receipt stating the date of purchase, the name of the retailer, the reference and the serial number of the product. No coverage shall be given under this warranty if the following conditions are applicable: The required documents have been modified or altered in order to take advantage of the warranty. The manufacturing numbers, product brands or labels have been altered or made illegible.

Interventions on the product have been made by an unauthorized person.



[You're reading an excerpt. Click here to read official SAGEM D142 user guide](http://yourpdfguides.com/dref/3989399)

<http://yourpdfguides.com/dref/3989399>

The product has been subjected to abnormal or improper use. The product has been damaged by external factors such as lightning, over-voltage, moisture, accidental damage, improper care as well as all Acts of God. This present warranty does not affect the consumer rights that you may have under the laws in effect in your country Memory dialling Did you program the memory location keys correctly? Did you follow proper dialling sequence? Make sure the tone/pulse setting is correct. Did you reprogram numbers into memory after power outage or batteries replacement? TROUBLESHOOTING Causes of poor reception: Aluminium siding.

Foil backing on insulation. Heating ducts and other metal construction can shield radio signals. You are too close to appliances such as microwaves, stoves, computers, etc). Atmospheric conditions, such as strong storms. Base installed in the basement or lower floor of the house.

Base is plugged into an AC outlet with other electronic devices. Baby monitor is using the same frequency. Handset batteries is low. You are out of range of the base. ENVIRONMENT Preservation of the environment is an essential concern of SAGEMCOM. The desire of SAGEMCOM is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of its products, from manufacturing to commissioning, use and elimination. Important: Should you return the product to the after-sales department, please ensure that you return as well all the elements and accessories originally supplied with the product. accidental damage, improper care as well as all Acts of God. This present warranty does not affect the consumer rights that you may have under the laws in effect in your country Packaging The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve packaging recovery and recycling infrastructures. To facilitate recycling, please respect the sorting rules set up locally for this kind of waste.

Batteries If your product contains batteries, they must be disposed of at appropriate collection points. B) Exclusions From Guarantee SAGEMCOM shall have no liability under the guarantee in respect of: Damage, defects, breakdown or malfunction due to one or more of the following: - Failure to properly follow the installation process and instructions for use - An external cause to the equipment (including but not limited to: lightning, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature) - Modifications made without the written approval of SAGEMCOM - Unsuitable operating conditions, particularly of temperature and humidity - Repair or maintenance of the equipment by persons not authorised by SAGEMCOM Wear and tear from normal daily use of the equipment and its accessories Damage due to insufficient or bad packaging of equipment when returned to SAGEMCOM Usage of new versions of software without the previous approval of SAGEMCOM Work on any equipment or software modified or added without the prior written consent of SAGEMCOM 12 13 14 15 253437152A .



[You're reading an excerpt. Click here to read official SAGEM D142 user guide](http://yourpdfguides.com/dref/3989399)
<http://yourpdfguides.com/dref/3989399>