



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM D15H. You'll find the answers to all your questions on the SAGEM D15H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM D15H User guide SAGEM D15H Operating instructions SAGEM D15H Instructions for use SAGEM D15H Instruction manual SAGEM D15H

The image shows a multi-page spread of the SAGEM D15H user manual. The pages are numbered 1 through 8. The content includes:

- Page 1:** Introduction, Recommendations and safety instructions, and a CE mark.
- Page 2:** Before you begin, including a diagram of the handset and base station, and instructions for installing the phone.
- Page 3:** Quick guide to handset display icons, a menu structure flowchart, and a call flowchart.
- Page 4:** Calls, including instructions for making calls, answering calls, and handling calls.
- Page 5:** Call functions, including instructions for making a memory number, dialing a memory number, and transferring a memory number.
- Page 6:** Using the Multi-Handset capabilities, including instructions for making a conference call, answering an internal call, and transferring an internal call.
- Page 7:** Making a memory number, dialing a memory number, and transferring a memory number.
- Page 8:** Making a memory number, dialing a memory number, and transferring a memory number.



You're reading an excerpt. [Click here to read official SAGEM D15H user guide](http://yourpdfguides.com/dref/3872432)
<http://yourpdfguides.com/dref/3872432>

Manual abstract:

fm Page 1 Mardi, 4. septembre 2007 5:41 17 D15T/H 1. @@@@ Base unit, 2. Handset, 3. One battery compartment cover, 4. Handset battery, 5. Telephone line cord, 6. AC power supply. In the case of purchasing a " Duo or Trio pack ", you will find in addition for each additional handset: 1. A handset charger, 2.

An additional battery flap. In the case of purchasing a Single Pack, you will find : 1. one handset, 2. a desk charger fitted with its power supply unit, 3. one battery compartment cover, 4.

a rechargeable battery unit, 5. this user guide. D15T/H 7. After charging, press key you can hear dial tone. D15T/H 2.

5. Quick guide to handset display icons Signal strength icon (blinking when no signal or the signal strength is weak). INT D15T/H 4. Calls 4.1. Cordless phone basics 4.1.1. Make a call Ensure that the handset is switched on. 1.

2. Press the Talk key , you will hear the dialling tone and the display will show you the Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 240V current in case of danger. They must be located near to the device, and must be easily accessible. Internal Call icon. Do not disturb (handset ringer muted). Caller list active (icon is blinking when a new call is in the caller list). Memory active. Recommendations and safety instructions Your DECT telephone must not be installed in a humid room (bathroom, laundry room, etc.) unless it is 1.

50 m away from a water point or outside. Your telephone must be operated at temperatures ranging from 5°C and 45°C. Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a precaution, in case of danger, the mains adapters act as a disconnecting mechanism for the 240V power supply. They should be placed near the device and should be easily accessible.

This telephone was designed for use on the public switched telephone network (PSTN). In case of a problem you must first contact your reseller. Only use the supplied telephone cord. To avoid damaging your handset, only use certified rechargeable batteries, never use non rechargeable batteries, respect polarity when inserting the batteries in the handset battery compartment. For your personal security, never place your handset on the base without the batteries, or without the battery cover to avoid electric shocks.

@@@@@ This equipment does not function in the case of an electric network shutdown: for emergency calls, it is recommended to use another unit during power cuts. The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the

Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference. Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference. This equipment will be inoperable when mains power fails. The declaration of compliance may be looked up on the www.sagem.com site, section "support" or can be obtained from the following address: SAGEM AUSTRALASIA PTY LTD ABN: 43 003 099 812 Unit 1, 7-9 Orion Road Lane Cove NSW 2066 P.O. Box 4072 Lane Cove 1595 Australia 2.3.

Handset keys Display Shows in second row time, handset number, date Earpiece . phone icon Enter the phone number. The number is dialled. Redial list active. - OR Keypad lock active. Charging status icon (: Full; : Flat; blinking during charging). 1. 2. Enter the phone number first and then press the Talk key press C key , that means your battery is low and your handset If you see the icon change into keyboard is not available to use, please put the handset in cradle of base to recharge your battery. C Menu/Mute key Access to settings Mute the microphone Talk Off key End call End a call/Reject a call, Cancel a menu entry, Switch handset on/off MENU .

If you make a mistake, to remove the last digit. or place the handset in the base station. Phonebook key access to Phonebook Talk key Accept call, Dial number Select a menu entry Validation INT key Key Lock key activate / deactivate, keypad lock. Ending a call press the Talk/Off key 3. Menu structure C key Correction 4.

1.2. Answering a call (Refer to § 4.6 "Auto talk") 09 - area code 2.1.

Digital security system Your cordless phone uses a security system to provide protection against false ringing, unauthorised access and charges to your phone line. When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code. 01 - Phonebook 01_0 - add 01_1 - edit 01_2 - delete 1. When the phone rings, press the Talk key to answer the call. OK INT C - OR 10 - CID mode DATE 10_0 - FSK 10_1 - DTMF R 2. 3. If AUTO TALK MODE is ON, pick up the handset from the base station to answer. Ending a call press the Talk/Off key or place the handset in the base station. 1 4 ghi 7pqrs 2 abc 3 def 5 jkl 6 mno 2.

2. Installing the phone 8 tuv 9wxyz 0 Navigation key Scroll option REDIAL / CALLER LIST / PAUSE key Access the last five dialled number, Access the caller list, Insert a pause. 03 - time / DATE time 04 - alarm clock R key Recall/Flash 04_0 - OFF 04_1 - ON 11 - call log 11_0 - all calls 11_1 - missed calls 4.1.3.

@@@ You will hear a beep with each key press. @@@@ 1. Remove the battery compartment door of handset. 2. @@ 3.

Put the compartment door back on. icon blinking. 4. @ 1 Beep sound emitted. icon stop blinking.

5. @@@@ Redialling a call 06 - hs naming 14 - registration 07 - auto talk 07_0 - OFF 07_1 - ON 16 - change PIN 08 - key tone 08_0 - OFF 08_1 - ON 17 - RE-INIT 17_0 - handset 17_1 - base 15 - de-register The last five numbers you have dialled can be quickly redialled. Redialling from Standby Mode: 1. 2. 3.

. The phone number that was last dialled appears on the display. Press REDIAL key Press the or key to review redial telephone list. (You can select to redial your last five numbers called). Press Talk key to dial out the number. 6. Plug one end of the telephone line cord into the modular wall phone jack and the other end into the jack on the base marked TEL LINE. -1 -2- -3- -4- -5- D15T/H 4.1.7.

Microphone mute function During a call you can switch OFF the microphone. The call is placed on hold. Enable MUTE function: Press the MENU key shows '0000'. Disable MUTE function: Press the MENU key MENU MENU D15T/H 4.2.3. Calling back a caller 1.



[You're reading an excerpt. Click here to read official SAGEM D15H user guide](http://yourpdfguides.com/dref/3872432)

<http://yourpdfguides.com/dref/3872432>

2. 3. Press the CID key to enter the caller list menu.

Press the or key to select a call record. Press the Talk key to dial the number. D15T/H 5.3. Editing a memory 1.

2. 3. 4. Make sure your handset is on standby mode. Press PHONEBOOK key.

The list of phonebook entries organised in alphabetical order appears. Select the entry you want to edit using or . Press and hold PHONEBOOK key . You will then enter the name input screen and the cursor will be at the end of the name; The information is accurate. Press OK key To correct the name, press C key C OK D15T/H 6. Using the Multi-Handset capabilities These functions are used for handset management when two or more handsets are registered on the same base. D15T/H 7.2. Alarm clock To set the date and time : 1. Make sure your handset is on standby mode.

2. Press MENU during a call. The display 6.1. Intercom Call/Intercom Make sure your handset is on standby mode. Press the INT key INT on the handset. The display shows the INT icon and the number of all registered handsets. 3. Enter the desired handset number. Press the 9 key if you want to call all handsets. All registered handsets are ringing. The called handset number is blinking on the display. When the called handset answers, blinking stops and the «INT» icon is ON. 1. 2.

+0 + 4ghi + OK . to continue the call. 4.1.8.

Recall / Flash Press the R key R telephone Company. to access line transfer offered by PABX or call waiting provided by 4.2.4. Deleting caller list record 1.

2. 3. Press the CID key to enter the caller list menu. Press the or key to select a call record. Press the C key C for 1 second to delete the current record.

If you press and hold longer than 5 seconds, the entire Caller list will be deleted. Make sure your handset is on standby mode. Press the CID key . The caller list appears on the screen. Use or to select the desired caller number. . Press and hold the phonebook key Enter the name of the entry. Press OK key The number is shown on the screen. OK . 3.

- Use the keypad : Press 0 Press 1 5. to delete characters. to deactivate Alarm clock. + OK 4.1.

9. Temporary tone In pulse dialling, you can use temporary tone dialling to temporarily access touch-tone service offered by banks. 1. Press the «*» key after call is answered. 2.

Press the number key and follow the voice instructions. 3. After you hang up, the phone automatically returns to dial pulse (rotary) service. Enter the new name and press OK key OK . You will then enter the number screen and the cursor will be at the end of the number: The information is accurate. Press OK key To correct the number, press C key C OK 6.2. Answering an internal call 1. 2. 3.

The ring melody from an internal call is different from an external call. The «INT» icon and the calling handset number are blinking. Press the Talk key or INT handset number stop blinking. INT to activate Alarm clock. Use the touch tone pad to enter the current alarm time. Enter minutes first (format is

HH:MM). 4. Press OK key OK 4.2.5.

Storing memory from the caller list 1. 2. 3. 4. 5.

6. 6. . to delete the numbers. OK key to answer.

@@@Accessing the caller list menu 1. 2. 3. Press the CID key to enter the Caller List menu. The display shows the recent caller phone number (up to 12 digits). Press the or key through the caller List. @@. to select the melody 0. to select the melody 1. .

@@@Press OK key OK to confirm the name. @@Press OK key OK to confirm the number. The entry is stored in the phonebook. @@@@3. Use the touch tone pad to enter the current time and date. 4. Press OK key OK 5. Press 2abc , to select the melodoubleshooting tips 11.2.1.

Caller id Problem No display D15T/H 11.3. @@If that doesn't work, charge battery for 15 hours. Clean charging contacts on handset and base with a soft cloth. See solutions for «No dial tone».

@@@Proof of date of purchase cannot be provided; B. The goods are not branded Sagem; C. The goods have been rented to another person; D. @@The product has been damaged by lightning or a mains power surge. Do you really need service? @@@@ Try replacing the battery.

Make sure the battery is properly installed and connected. @@Disconnect the unit from the plug and plug it in again. @@You will hear a long beep confirmation tone. 11.4. Memory dialling Did you program the memory location keys correctly? Did you follow proper dialling sequence? Make sure the tone/pulse setting is correct. Did you reprogram numbers into memory after power outage or battery replacement. 8.8. Base master PIN code This function allows you to change the base PIN code.

1. Make sure your handset is on standby mode. 2. Press MENU 11.2.2. Telephone + 1 + 6mno + OK . 9.1. Battery safety precautions Do not burn, disassemble, mutilate or puncture.

Like other batteries of this type, toxic materials could be released which can cause injury. To reduce the risk of fire or personal injury, use only the battery listed in the user's guide. Keep batteries out of the reach of children. Remove batteries if storing over 30 days. No dial tone Problem Solution Check installation: - Is the base power cord connected to a working outlet? - Is the telephone line cord connected to the base unit and the wall jack? @@@@Is the handset out of range of the base? Make sure the battery is properly charged (12 hours).

Is the battery pack installed correctly? Did the IN USE indicator come on? The battery may need to be charged. 12. @@Enter the 4 digits base master PIN code (default 0000). @@4. Press OK key OK 10.

General product care To keep your telephone working and looking good, follow these guidelines: Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps). DO NOT expose to direct sunlight or moisture. Avoid dropping and other rough treatment to the phone. Clean with a soft cloth. Never use a strong cleaning agent or abrasive powder because this will damage the finish. Retain the original packaging in case you need to ship the phone at a later date. Dial tone is OK, but can't dial out © COPYRIGHT 2007 Sagem Corporation Limited Sagem Guarantees your product for 12 months from date of purchase against any defect in materials or workmanship under conditions of normal use and service and subject to proof of the date of purchase being provided and subject to the conditions specified below. The benefits covered by this warranty are in addition to all other rights and remedies in respect of the product that the consumer has under the Trade Practices Act and similar State and Territory laws.

@@@The cost of having the goods repaired; B. The cost of replacing the goods; or C.

The cost of obtaining equivalent goods. @@Whilst in transit the goods are at the owner's risk. @@This work is copyright. All rights reserved. Other than for purposes and subject to conditions prescribed under the Copyright Act, no part of it may in any form or by any means, mechanical, photocopying, scanning, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without prior permission from Sagem Corporation Limited.

[You're reading an excerpt. Click here to read official SAGEM D15H](#)



[user guide](#)

<http://yourpdfguides.com/dref/3872432>

ABN 43 003 099 812 SAGEM is a registered trademark of Sagem Communication (SAFRAN Group). Copyright © Sagem Communication (SAFRAN Group)

All rights reserved to confirm your new PIN code. In the opposite case: 3. Enter your old code first. @@4.

5. Press OK key OK to confirm. Enter your new PIN code. @@ Press OK key OK to confirm your new PIN code. Make sure the tone/pulse setting is correct. Make sure the RINGER setting on the handset is programmed to ON. You may have too many extension phones on your line. Try unplugging some phones.

See solutions for «NO dial tone». Change channels.

Is handset out of range? Move closer to the base. Does the base need to be relocated? Charge battery. Make sure base is not plugged into an outlet with another household appliance. 8.9. Restoring the Handset / Base Default Settings To restore the factory settings for your Handset or your Base: 1. Make sure your handset is on standby mode. 2. Press MENU 11. Troubleshooting 11.

1. Causes of poor reception Aluminium siding. Foil backing on insulation. Heating ducts and other metal construction can shield radio signals. You are too close to appliances such as microwaves, stoves, computers, etc. Atmospheric conditions, such as strong storms. Base installed in the basement or lower floor of the house. Base is plugged into an AC outlet with other electronic devices. Baby monitor is using the same frequency. Handset battery is low.

You are out of range of the base. Handset does not ring + 1 + 7pqrs + OK . You experience static, noise or fading in and out 3. 4. Use the keypad: Press 0

Press 1 to reset your Handset.

to reset your Base. OK Press OK key to confirm your selection. - 15 - - 16 - - 17 - - 18 - 253004424A - 19 - .



[You're reading an excerpt. Click here to read official SAGEM D15H user guide](http://yourpdfguides.com/dref/3872432)

<http://yourpdfguides.com/dref/3872432>