



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM D15T. You'll find the answers to all your questions on the SAGEM D15T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM D15T User guide SAGEM D15T Operating instructions SAGEM D15T Instructions for use SAGEM D15T Instruction manual SAGEM D15T

The image displays a grid of 20 thumbnail pages from the SAGEM D15T user manual. The thumbnails are arranged in a 4x5 grid. Each thumbnail shows a different page with various content including text, diagrams, and icons. The pages are numbered 1 through 20. The thumbnails are slightly faded and have a grid overlay.



You're reading an excerpt. Click here to read official SAGEM D15T user guide
<http://yourpdfguides.com/dref/1202264>

Manual abstract:

fm Page 1 Vendredi, 30. juin 2006 3:00 15 D15T 1. @@@@We recommend that you refer to this user guide. @@@@Base unit, 2. Handset, 3. Handset battery, 4. Telephone line cord, 5. AC power supply. In the case of purchasing a pack duo or trio, you will find in addition for each additional handset: 1. A handset charger, 2.

An additional battery flap, 3. Three additional rechargeable batteries. D15T Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 230V current in case of danger. They must be located near to the device, and must be easily accessible.

D15T 2.5. Quick guide to handset display icons Signal strength icon (blinking when no signal or the signal strength is weak). INT D15T 4. Calls 4.

1. Cordless phone basics 4.1.1. Make a call Ensure that the handset is switched on. 1. 2. Press the Talk key, you will hear the dialling tone and the display will show you the Internal Call icon. Do not disturb (handset ringer muted). Caller list active (icon is blinking when a new call is in the caller list).

2.3. Handset keys Display Shows in second row time, handset number, date Earpiece Memory active. Redial list active. . phone icon Enter the phone number. The number is dialled. Recommendations and safety instructions Your DECT telephone must not be installed in a humid room (wash-up room, bathroom, laundry room, kitchen, etc.) unless it is 1.50 m away from a water point or outside.

Your telephone must be operated at temperatures ranging from 5°C and 45°C. Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a precaution, in case of danger, the mains adapters act as a disconnecting mechanism for the 230V power supply. They should be placed near the device and should be easily accessible. This telephone was designed for use on the public switched telephone network (PSTN).

In case of a problem you must first contact your reseller. Only use the supplied telephone cord. To avoid damaging your handset, only use certified rechargeable batteries, never use non rechargeable batteries, respect polarity when inserting the batteries in the handset battery compartment. For your personal security, never place your handset on the base without the batteries, or without the battery cover to avoid electric shocks. At the end of the battery life, batteries must be disposed of according to the recycling instructions presented in this booklet.

Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts, (of a television for example), of any electric appliance may result in range reduction. In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device. This equipment does not function in the case of an electric network shutdown: for emergency calls, it is recommended to use another unit during power cuts. The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference. Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference. The declaration of compliance may be looked up on the www.sagem.com site, section "support" or can be obtained from the following address: Sagem Communication - Customer relations department 4, rue du Petit Albi - 95800 Cergy Saint-Christophe - France Menu/Mute key Access to settings Mute the microphone Talk Off key End call End a call/Reject a call, Cancel a menu entry, Switch handset on/off MENU - OR Keypad lock active. Charging status icon (: Full; : Flat; blinking during charging).

1. 2. Enter the phone number first and then press the Talk key press C key, that means your battery is low and your handset If you see the icon change into keyboard is not available to use, please put the handset in cradle of base to recharge your battery. C 2.1. Digital security system Your cordless phone uses a security system to provide protection against false ringing, unauthorised access and charges to your phone line. When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code. Phonebook key access to Phonebook Talk key Accept call, Dial number Select a menu entry Validation INT key Key Lock key activate / deactivate, keypad lock. .

If you make a mistake, to remove the last digit. or place the handset in the base station. Ending a call press the Talk/Off key 2.2. Installing the phone OK INT C C key Correction 3.

Menu structure 01 - Phonebook 01_0 - add 01_1 - edit 09 - area code 4.1.2. Answering a call (Refer to § 4.6 "Auto talk") 1.

When the phone rings, press the Talk key to answer the call. R - OR 10 - CID mode DATE 10_0 - FSK 10_1 - DTMF 1 4 ghi 7pqrs 2 abc 3 def 5 jkl 6 mno 8 tuv 9wxyz 0 Navigation key Scroll option REDIAL / CALLER LIST / PAUSE key Access the last five dialled number, Access the caller list, Insert a pause.

01_2 - delete 03 - time / DATE time 2. 3. If AUTO TALK MODE is ON, pick up the handset from the base station to answer. Ending a call press the Talk/Off key or place the handset in the base station. R key Recall/Flash 04 - alarm clock 04_0 - OFF 04_1 - ON 11 - call log 11_0 - all calls 11_1 - missed calls 4.1.3. Handset volume You can adjust the volume of what you hear through the handset at any time by pressing or key.

You will hear a beep with each key press. You will hear a double beep when you reach the highest or lowest setting. Next key Microphone 05 - hs ringer 05_0 - VOLUME 05_0_0 - OFF 05_0_1 - LOW 12 - FLASH timING 12_0 - 100 12_1 - 250 05_0_2 - MEDIUM 4.1.4. Caller timer After you press Talk key on the handset, the built-in call timer shows in the display (after 20 seconds) and counts the length of time of the call on minutes and seconds. Battery Wire 2.4. Base Station Power socket TEL LINE Handset location 12_2 - 600 05_0_3 - HIGH 05_1 - MELODy Base button Pressed briefly: - telephone set paging. Held down (4 seconds minimum): - telephone set registration.

NOTE: for desktop charging only, the handset is only able to charge facing up. 1. Remove the battery compartment door of handset. 2. Insert battery pack and connect the cord from left direction into the jack inside the handset.



[You're reading an excerpt. Click here to read official SAGEM D15T user guide](http://yourpdfguides.com/dref/1202264)
<http://yourpdfguides.com/dref/1202264>

icon blinking. 3. Put the compartment door back on. 4. Plug the power supply cord into AC outlet and the other end into the power jack on the base bottom. 1 Beep sound emitted. Wire the cord around the ribs and then insert the cord into groove as shown in figure. icon stop blinking. 5. Wait until Place the handset in the base station to charge for 15 hours prior to first use. if you don't properly charge the phone, battery performance will be compromised. 6. Plug one end of the telephone line cord into the modular wall phone jack and the other end into the jack on the base marked TEL LINE. Then, insert the line cord into the groove. 7.

After charging, press key you can hear dial tone. 05_1_0 - MELODY 1 13 - tone / pulse 05_1_1 - MELODY 2 13_1 - mbr 66/33 05_1_2 - MELODY 3 13_2 - pbr 60/40 13_0 - tone 4.1.5. Auto talk off Placing the handset in the case cradle while the handset is off the hook (during a call) automatically hangs up the handset. D15 T 4.1.6. Redialling a call 06 - hs naming 14 - registration 07 - auto talk 07_0 - OFF 07_1 - ON 16 - change PIN 08 - key tone 08_0 - OFF 08_1 - ON 17 - RE-INIT 17_0 - handset 17_1 - base 15 - de-register The last five numbers you have dialled can be quickly redialled. Redialling from Standby Mode: 1.

2. 3. . The phone number that was last dialled appears on the display. Press REDIAL key Press the or key to review redial telephone list. (You can select to redial your last five numbers called). Press Talk key to dial out the number. -1- -2- -3- -4- -5- D15T 4.1.7.

Microphone mute function During a call you can switch OFF the microphone. The call is placed on hold. Enable MUTE function: Press the MENU key shows '0000'. - Disable MUTE function: Press the MENU key MENU MENU D15T 4.2.3. Calling back a caller 1. 2. 3. to continue the call.

Press the CID key to enter the caller list menu. Press the or key to select a call record. Press the Talk key to dial the number. D15T 5.3. Editing a memory 1. 2. 3. 4. Make sure your handset is on standby mode.

Press PHONEBOOK key . The list of phonebook entries organised in alphabetical order appears. Select the entry you want to edit using or . Press and hold PHONEBOOK key . You will then enter the name input screen and the cursor will be at the end of the name: The information is accurate.

Press OK key To correct the name, press C key C D15T 6. Using the Multi-Handset capabilities These functions are used for handset management when two or more handsets are registered on the same base. D15T 7.2. Alarm clock To set the date and time : 1.

Make sure your handset is on standby mode. 2. Press MENU during a call. The display 6.1. Intercom Call/Intercom Make sure your handset is on standby mode. Press the INT key INT on the handset. The display shows the INT icon and the number of all registered handsets. 3. Enter the desired handset number.

Press the 9 key if you want to call all handsets. All registered handsets are ringing. The called handset number is blinking on the display. When the called handset answers, blinking stops and the «INT» icon is ON. 1. 2. +0 + 4ghi + OK . 4.1.8.

Recall / Flash Press the R key R telephone Company. to access line transfer offered by PABX or call waiting provided by 4.2.4. Deleting caller list record 1. 2. 3. Press the CID key to enter the caller list menu. Press the or key to select a call record. for 1 second to delete the current record.

If you press and hold Press the C key longer than 5 seconds, the entire Caller list will be deleted. Make sure your handset is on standby mode. Press the CID key . The caller list appears on the screen. Use or to select the desired caller number. Press and hold the phonebook key . Enter the name of the entry. Press OK key The number is shown on the screen. OK OK . to delete characters.

3. - Use the keypad : Press 0 Press 1 5. Enter the new name and press OK key OK . You will then enter the number screen and the cursor will be at the end of the number: The information is accurate. Press OK key To correct the number, press C key C OK to deactivate Alarm clock. + OK C TIP: Don't use the Talk to activate custom calling services such as call waiting or you'll hang up the phone. . 6.2. Answering an internal call 1.

2. 3. The ring melody from an internal call is different from an external call. The «INT» icon and the calling handset number are blinking. @@Enter minutes first (format is HH:MM).

4. Press OK key OK 4.2.5. @@@@1.

Press the «*» key after call is answered. 2. Press the number key and follow the voice instructions. 3. @@@@The «INT» icon and the calling or The pause time is fixed to 3 seconds. R +0 + 3def + OK . 3. 4. - Press 1 + OK to access HS ringer melody. Use the keypad : Press 0 Press 1 to erase the incorrect digit.

. Press and hold R key during edit mode to inset the pause. @@to select the melody 1. 4.2.2. Accessing the caller list menu 1. 2. 3. Press the CID key to enter the Caller List menu.

The display shows the recent caller phone number (up to 12 digits). Press the or key through the caller List. @@Press OK key OK to confirm the name. @@to confirm the number. Press OK key The entry is stored in the phonebook.

@@3. Use the touch tone pad to enter the current time and date. 4. Press OK key OK 5. Press 2abc , to select the melody 2.

@@juin 2006 3:00 15 D15T 7.5. @@1. Make sure your handset is on standby mode. 2. Press MENU D15T 7.8. @@Call log for 1 second, when the keypad lock is switched ON, the . @@1. Make sure your handset is on standby mode.

2. Press MENU D15T 8.5. @@@@2. Make sure your handset is on standby mode. @@4. Use the keypad to enter the new name (up to 10 characters). Use C key C Advanced settings 8.1. @@Instead, you will see the local phone number.

@@@@1. Make sure your handset is on standby mode. 2. Press MENU 1. 2.

Make sure your handset is on standby mode. Press MENU +0 + 9wxyz + OK Press OK key to confirm your selection. to select Tone mode. to select Pulse 66/33 mode. .

8.4. Flash timing If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, conference call. 3. Key in 1 to 4 digits area local code, use C key Press OK key OK C 4. Press 2abc to select Pulse 60/40 mode. Press OK key OK +0 + 7pqrs + OK . to confirm your selection. to delete wrong input if necessary. 3.

4. Use the keypad : Press 0 Press 1 4. to confirm your code. to deactivate Auto Talk. to activate Auto Talk. OK Contact your administrator, who will supply the appropriate time period, and proceed to the new settings. 1. Make sure your handset is on standby mode. 2. Press MENU 8.

6. Association handset & base This function allows you to register a new handset on your base. 1. Make sure your handset is on standby mode.



[You're reading an excerpt. Click here to read official SAGEM D15T user guide](#)

Press and hold Page key for 5 seconds (after 1 minute if no Handset has started association process the base goes back to standby). 3. Make sure your handset is on standby mode. 4. Press MENU 8.

2. CID Mode If you subscribe to the "Number display" service, this function allows you to display the caller's number on your handset. 1. Make sure your handset is on standby mode. 2. Press MENU + 1 + 2abc + OK . Press OK key to confirm your selection. + 1 + 4ghi + OK . 7.7.

Key tone On/Off This function allows you to activate or deactivate tones being heard when pressing the keypad. 1. Make sure your handset is on standby mode. 2. Press MENU + 1 + 0 + OK . 3. Use the keypad to select Flash value: Press 0 Press 1 + 0 + 8tuv + OK . to select 100ms. to select 250ms. 5.

6. 7. Enter the 4 digit base master PIN code (default 0000). Each time a digit is entered the «_» is replaced by a «*». Press OK key OK to confirm. The display shall show «-- -- -- --» to indicate the waiting state. The handset number (1, 2, 3 or 4) will be assigned by base automatically then one long confirmation beep and return to main menu. 3. 4. 3.

Use the keypad : Press 0 Press 1 Use the keypad to select CID Mode: Press 0 Press 1 Press 2abc to select 600ms. Press OK key OK to select FSK Mode. to select DTMF Mode. OK to deactivate key tone. to activate key tone. OK 4. to confirm your selection. 4. Press OK key to confirm your selection. Press OK key to confirm your selection.

- 11 - - 12 - - 13 - - 14 - D15T 8.7. Disassociation handset This function allows you to de-register a handset from your base. 1. Make sure your handset is on standby mode. 2. Press MENU D15T 9. Changing the battery Make sure the telephone is OFF before you replace battery. 1. Remove the battery compartment door.

2. Disconnect the cord attached to the battery pack and remove the battery pack from the handset. 3. Insert the new battery pack and connect the cord into the jack inside the handset. 4.

Put the battery compartment door back on. 5. Place handset in the base to charge. Allow the handset battery to properly charge (for 12 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

Danger of explosion if battery is incorrectly replaced. Replace only with 3,6V 300mAh type or equivalent rechargeable battery pack. Do not dispose of the battery in a fire. The cell may explode. Check with local code for possible special disposal instructions. D15T 11.2. Troubleshooting tips 11.2.1.

Caller id Problem No display D15T 11.3. Unit beeps Place handset in base for 20 seconds to reset the security code. If that doesn't work, charge battery for 15 hours. Clean charging contacts on handset and base with a soft cloth. See solutions for «No dial tone». Replace battery. D15T 13. Environment Preservation of the environment is an essential concern of Sagem Communication. The desire of Sagem Communication is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of its products, from manufacturing to commissioning, use and elimination.

+ 1 + 5 jkl + OK . Solution Is battery fully charged? Try replacing the battery. Make sure the battery is properly installed and connected. If you are using AC power, make sure that the unit is connected to a nonswitched electrical outlet. Disconnect the unit from the plug and plug it in again.

Did you order Caller ID service from your local telephone company? - 13.1. Packaging The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve packaging recovery and recycling infrastructures. To facilitate recycling, please respect the sorting rules set up locally for this kind of waste. 3.

Enter the number of the handset you want to delete (at standby state, the handset number is displayed on the screen). You will hear a long beep confirmation tone. 11.4. Memory dialling Did you program the memory location keys correctly? Did you follow proper dialling sequence? Make sure the tone/pulse setting is correct. Did you reprogram numbers into memory after power outage or battery replacement. 8.8. Base master PIN code This function allows you to change the base PIN code. 1.

Make sure your handset is on standby mode. 2. Press MENU 11.2.2. Telephone + 1 + 6mno + OK . 9.1. Battery safety precautions Do not burn, disassemble, mutilate or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.

To reduce the risk of fire or personal injury, use only the battery listed in the user's guide. Keep batteries out of the reach of children. Remove batteries if storing over 30 days. No dial tone Problem Solution Check installation: - Is the base power cord connected to a working outlet? - Is the telephone line cord connected to the base unit and the wall jack? Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.

Is the handset out of range of the base? Make sure the battery is properly charged (12 hours). Is the battery pack installed correctly? Did the IN USE indicator come on? The battery may need to be charged. 13.2. Batteries If your product contains batteries, they must be disposed of at appropriate collection points.

12. Guarantee terms and conditions Dear Customer, You have just purchased a Sagem Dect phone and we thank you for your custom. This equipment was manufactured with the greatest care and we hope that it gives you complete satisfaction. @@@@It is strongly recommended to save all the details in your phone directory and other personal data. No coverage shall be given under this warranty if the following conditions are applicable : the required documents have been modified or altered in order to take advantage of the warranty. the manufacturing numbers, product brands or labels have been altered or made illegible. interventions on the product have been made by an unauthorised person. the product has been subjected to abnormal or improper use. the product has been damaged from external causes such as lightning, overvoltage, moisture, accidental deteriorations, improper care as well as all Acts of God.

252604978A 13.

3. The product The crossed-out waste bin stuck on the product or its accessories means that the product belongs to the family of electrical and electronic equipments. In this respect, the European regulations ask you to dispose of it selectively: At sales points in the event of the purchase of similar equipment. At the collection points made available to you locally (drop-off centre, selective collection, etc.). If the programmed code is the default one (0000): 3.



[You're reading an excerpt. Click here to read official SAGEM D15T user guide](http://yourpdfguides.com/dref/1202264)

<http://yourpdfguides.com/dref/1202264>

Enter the 4 digits base master PIN code (default 0000). Each time a digit is entered the «_» is replaced by a «*». 4. Press OK key OK 10.

General product care To keep your telephone working and looking good, follow these guidelines: Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps). DO NOT expose to direct sunlight or moisture. Avoid dropping and other rough treatment to the phone. Clean with a soft cloth. Never use a strong cleaning agent or abrasive powder because this will damage the finish.

Retain the original packaging in case you need to ship the phone at a later date. Dial tone is OK, but can't dial out to confirm your new PIN code. In the opposite case: 3. Enter your old code first. Each time a digit is entered the «_» is replaced by a «».*

4. 5. Press OK key OK to confirm. Enter your new PIN code. Each time a digit is entered the «_» is replaced by a «*». Press OK key OK to confirm your new PIN code. In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health. Make sure the tone/pulse setting is correct. Make sure the RINGER setting on the handset is programmed to ON. You may have too many extension phones on your line.

Try unplugging some phones. See solutions for «NO dial tone». Change channels. Is handset out of range? Move closer to the base. Does the base need to be relocated? Charge battery. Make sure base is not plugged into an outlet with another household appliance. 8.9. Restoring the Handset / Base Default Settings

To restore the factory settings for your Handset or your Base: 1. Make sure your handset is on standby mode.

2. Press MENU 11. Troubleshooting 11.1. Causes of poor reception Aluminium siding.

Foil backing on insulation. Heating ducts and other metal construction can shield radio signals. You are too close to appliances such as microwaves, stoves, computers, etc. Atmospheric conditions, such as strong storms. Base installed in the basement or lower floor of the house.

Base is plugged into an AC outlet with other electronic devices. Baby monitor is using the same frequency. Handset battery is low. You are out of range of the base. Handset does not ring + 1 + 7pqrs + OK. You experience static, noise or fading in and out 3. 4. Use the keypad: Press 0 Press 1 to reset your Handset. to reset your Base. OK This present warranty does not affect the consumer rights that you may have under the laws in effect in your country.

Press OK key to confirm your selection. - 15 - - 16 - - 17 - - 18 - - 19 - .



[You're reading an excerpt. Click here to read official SAGEM D15T user guide](http://yourpdfguides.com/dref/1202264)

<http://yourpdfguides.com/dref/1202264>