




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SAGEM D30T. You'll find the answers to all your questions on the SAGEM D30T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAGEM D30T
User guide SAGEM D30T
Operating instructions SAGEM D30T
Instructions for use SAGEM D30T
Instruction manual SAGEM D30T

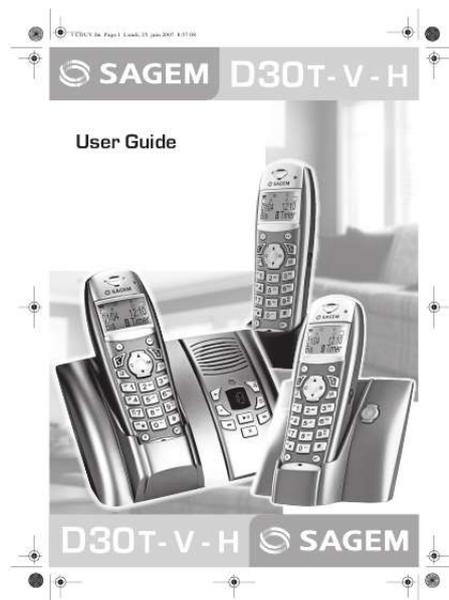

[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

Manual abstract:

fm Page 1 Lundi, 25. @@@@ Your telephone must be operated at temperatures ranging from 5°C to 45°C. Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 230V current in case of danger. They must be located near to the device, and must be easily accessible. This telephone was designed for use on the public switched telephone network (PSTN). In case of a problem you must first contact your reseller. Only use the supplied telephone cord. For your personal safety, never place your handset on the base without the batteries, or without the battery cover, you could get an electric shock. To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.

2 V 550 mA, never use non rechargeable batteries. Insert the batteries in the handset battery compartment respecting polarity. At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet. Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts (of a television for example), or of any electric appliance may result in range reduction.

Some sensitive medical equipment and safety equipment may be affected by the radio-frequency transmissions of your telephone. In all cases, we ask that you respect the safety recommendations. In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device. This equipment does not function in the case of an electric network shutdown: For the emergency calls, use a self-contained cord telephone. The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference.

Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference. The declaration of compliance may be looked up on the www.sagem.com site, section "support" or can be obtained from the following address: SAGEM AUSTRALASIA PTY LTD ABN: 43 003 099 812 Unit 1, 7-9 Orion Road Lane cove NSW 2066 P.O. Box 4072 Lane Cove 1595 Australia LU 252973993 D30 T V H Australie.book

Page 3 Mercredi, 20. juin 2007 9:47 09 CONTENTS Your telephone Unpacking Your base Your handset Connecting the base Handset set-up Handset turning on and off Replacing the batteries Making a call Receiving a call During a call Handsfree Call transfer During a call Accessing the phonebook or call log Secret mode Ending a call Communication between two handsets 5 5 5 7 8 9 10 10 Call log Viewing the received and dialled call log Calling the last number dialled (Redial) Calling a number listed in the dialled and received call log Viewing the events log Alarm clock Setting the alarm clock Activating or deactivating the alarm clock Modifying the alarm clock time Changing the alarm clock ring tone Timer Changing the programmed time of the timer Changing the timer ring tone Displaying or hiding the programmed time of the timer Birthday alarms Adding a new birthday alarm Viewing a birthday alarm Modifying or deleting a birthday alarm Monitoring a room Changing the ring tones Activating or deactivating the beeps Activating/deactivating the silent mode Programming a key Modifying the date and time Using the auto hang up and pick up features Modifying the Voice box number (model D30T) Modifying the language Locking/unlocking the keypad Programming an emergency number Defining the call time limit Defining forbidden prefixes - Call barring Modifying the base code Authorising listening in Registering a new handset to a base Modifying the base preference Resetting the handset Personal registering Using a handset to put the base in registration mode Resetting the base De-registering a handset 30 30 30 31 31 32 32 32 32 33 33 33 34 34 34 34 35

Accessories 32 Getting started 11 11 11 11 11 12 12 13 13 14 14 Menu structure Your phonebook 15 17 17 17 18 18 18 19 19 19 20 SMS service Viewing the phonebook Creating an entry Using a phonebook entry to place a call Searching for a contact Performing a quick search Performing a refined search Editing an entry Deleting an entry Sending a SMS from phonebook Sending a text message Writing a text message Sending an SMS Reading a message Managing read messages Modify the SMS mode Viewing the memory status Emptying an SMS folder Modifying the SMS centre numbers Choose the SMS transmission centre Modifying the terminal number SMS boxes Sub-Addressing Creating a personal box Viewing a message from a personal box Modifying or removing a personal box Ring tones 36 Settings 38 36 36 37 38 38 38 39 39 40 40 41 42 42 43 43 44 44 45 46 46 47 21 21 22 23 24 24 25 25 26 26 27 27 28 28 29 SMS settings 26 3 LU 252973993 D30 T V H Australie.book Page 4 Mercredi, 20. juin 2007 9:47 09 CONTENTS Renaming the base Modifying the network type Modifying the flash duration (R key) Setting a PABX prefix 47 48 48 49 Answering machine (Model D30V) 50 50 51 51 51 51 52 52 53 53 55 55 55 56 56 57 58 58 TAM setting (Model D30V) Enabling/disabling the answering machine Modifying the OGM Recording a personal outgoing message Using a pre-recorded anonymous OGM Deleting all your personal OGMs Playing messages Playing messages using the base Playing messages using the handset Remote access to answering machine Deleting all the old messages Recording a memo Activating and deactivating call screening Modifying the remote access code Setting the message duration Privileged access Record mode Number of rings Care and Maintenance Problems 55 Appendix 58 59 60 60 60 60 Features Environment Packaging Batteries The product Warranty 61 4 LU 252973993 D30 T V H Australie.

book Page 5 Mercredi, 20. juin 2007 9:47 09 YOUR TELEPHONE Unpacking Place the box in front of you, open it and make sure it contains the following items: · one base, · one handset, · one battery compartment cover, · one equipped power adapter, · one telephone line cord, · three rechargeable batteries, · this user guide. In the case of purchasing a duo or trio pack, you will find in addition for each additional handset: · a handset charger, · an additional battery flap, · three additional rechargeable batteries. In the case of purchasing a single pack, you will find : · · · · a desk charger fitted with its power supply unit, one handset, one battery compartment cover, three rechargeable batteries, this user guide.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

Your base It fits well into your family environment. Model without answering machine (D30T): Handset location Power indicator light Fixed green indicator: Powered Flashing green indicator: - handset on line, - handset paging, - handset registration. Base button Pressed briefly: - handset paging. Held down: - handset registration. 5 Votre téléphone.fm Page 6 Lundi, 25.

juin 2007 9:36 09 YOUR TELEPHONE Model with answering machine (D30V): 1 2 3 4 5 6 7 8 9 10 1. Increase the volume on the base loudspeaker 2. Mains light Fixed light - green: On - Answering machine off. - red: On - Answering machine activated, no message. Flashing light - slow red: Messages read. - quick red: Flashes at a rate corresponding to the number of unread messages. 3. Display Answering machine off: nothing is displayed Simple answering machine: "oo" displayed Answering machine recorder: - No new messages: the message read counter is displayed - New messages present: the unread message counter flashes 4. Paging / Pairing button: Press and hold: Pair handsets Short press: find handsets (Paging) 5. ON Simple recorder OFF: press and hold OFF ON Recorder: short press ON Recorder ON Simple: short press ON Recorder: short press ON Simple 6.

Next message 7. Play messages / Pause during playback 8. Erase a message Erase a message: Press and hold in playback mode Erase all messages: Press and hold outside playback mode 9. Last message 10. Reduce the base loudspeaker volume 6 LU 252973993 D30 T V H Australie.book Page 7 Mercredi, 20.

juin 2007 9:47 09 YOUR TELEPHONE Your handset With its user-friendly design, you will appreciate how easy it is to hold and its quality during conversations. Speaker Display LED Incoming message warning beeps Program keys Pick up Handsfree Redial (long press) Hang up Turn off the handset Navigator key Phonebook key Key 1: hold down for quick access to voice messaging service Direct SMS access Alphanumeric keypad Intercommunication key (handset intercom) Microphone R key The navigator key, a rapid selection tool. Navigating To confirm or to access a sub-menu To cancel, delete or go to the previous menu 7 LU 252973993 D30 T V H Australie.book Page 8 Mercredi, 20.

juin 2007 9:47 09 YOUR TELEPHONE The visual display of your handset Battery indicator Number of handset Date I Time 01/01 Sil. 12:00 TAM Name of programmed functions in and keys. When the battery charge icon is at minimum, your screen will not be lit and the volume level of the hands-free function will be decreased until the battery is recharged. Connecting the base Before making any connections, please refer to the safety instructions presented at the beginning of this user guide. Model without answering machine (D30T): On the bottom part of the base, click in the telephone jack in its socket (as shown on the drawing) and connect the other end of the lead to the wall telephone socket. Connect the end of the mains power unit lead to the bottom of the base and the mains power unit to the mains socket. The mains on indicator located on the base comes on green. Route the wires in the guides and put the base where it should be. Power socket Telephone socket 8 LU 252973993 D30 T V H Australie.book Page 9 Mercredi, 20.

juin 2007 9:47 09 YOUR TELEPHONE Model with answering machine (D30V): Place the base where it should be located, click in the telephone jack in its socket (as shown on the drawing) and connect the other end of the lead to the wall telephone socket. Connect the end of the mains power unit lead to the bottom of the base and the mains power unit to the mains socket. The mains on indicator located on the base comes on green. Route the wires in the guides and put the base where it should be. Power socket Telephone socket Handset set-up Insert the batteries one after the other in compliance with the battery polarity, as shown on the label in the handset.

Place the cover back on the handset by pushing upwards until it is completely closed. Remove the protective film on the screen, place the handset on the base to fully charge the batteries. The charging icon appears on the screen, it indicates the charging status. Once the icon is full, your batteries are charged. Only use certified rechargeable batteries.

For optimal battery charge, leave the handset on the base for at least 12 hours during initial use. During charging, the batteries may heat up, this is quite normal and without risk. 9 LU 252973993 D30 T V H Australie.book Page 10 Mercredi, 20. juin 2007 9:47 09 YOUR TELEPHONE Handset turning on and off To turn off the handset, hold down the red key. The "POWER OFF" message is displayed on the screen. Your handset is now switched off. To turn on your handset, hold down the green key screen. The name SAGEM is displayed on the Information is displayed on the screen, including the battery charging indicator icon, the handset number (for example 1), the date, the time and the function keys.

Replacing the batteries Hold down the red key comparhandset called, press Menu Select HANGING UP using Valid. . . or . Press The second call is then launched, with the first call still on hold. To alternate from one call to the other During a call During a call, you can receive a second incoming call or place a call to a second contact. You can then switch from one contact to the other, or have a conference (depending on your service provider and subscription).

Press Menu . or . Press Select SWITCH using Valid.

. The call in progress is put on hold, and you can then take the second call. 12 LU 252973993 D30 T V H Australie.book Page 13 Mercredi, 20. juin 2007 9:47 09 GETTING STARTED To end one of the calls and continue the other one Press Menu .

or . Press Accessing the phonebook or call log During a call, you can access your phonebook to look up a telephone number, a name contained in an entry or information on calls stored in your call log. During a call, press Menu . Select HANGING UP using Valid. .

The call in progress is definitely terminated, and you can then take the second call. To set up a 3 way-call (the two parties and yourself) Press Menu . or . Press Select PHONEBOOK or CALLS using or and press Valid. . . Return to the communication menu using Secret mode You can switch to secret mode at any time during your conversation. Your handset microphone will be switched off and the other person will not be able to hear you. To activate secret mode:

Select 3-PARTY CONF using Valid. .

You can then simultaneously. talk to both parties To end the 3 way-call, press the red key. During a call, press Menu Select SECRET using Activ. . . or . Press Dual incoming call management can also be . done via the R key - Accepting a second incoming call: + . - Making a second call during communication: +

recipient number. - Alternating from one call to the other: + .

- Ending a call and switching to the call on hold: + .



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)

<http://yourpdfguides.com/dref/846926>

+ . The SECRET MODE message will appear on the screen. To deactivate secret mode: Press Exit . - Setting up a 3 way-call: Your correspondent will be able to hear you again.

You can also choose to deactivate the secret mode by the C key on the navigator panel. 13 LU 252973993 D30 T V H Australie.book Page 14 Mercredi, 20. juin 2007 9:47 09 GETTING STARTED Ending a call At the end of the conversation, press the red key . Communication between two handsets To communicate between handsets, both handsets must be matched to a single base, and must be within range of the base.

To call another handset, press the key. Select with the desired handset with the or keys. Press Call . The handset rings. Pick up on the second handset using the green key . To end the call, press the red key . You can also easily call another handset if you know its number. From the idle screen, enter the number of the handset. Then press the green key . 14 Synoptique des Menus.

fm Page 15 Lundi, 25. juin 2007 9:52 09 MENU STRUCTURE You can navigate through the menus using the navigator key . PHONEBOOK VIEW CALL EDIT SEARCH SMS EDIT SMS READ SMS MEMORY EMPTY BOX SETTINGS SMS CENTRE SUB-ADDRESS PRIVATE BOX Option RING TONE SEND SMS ADD NUMBER NEW ENTRY DELETE CALLS INCOMING CALLS OUTGOING CALLS ACCESSORIES ALARM TIMER BIRTHDAY ROOM MONITOR. EVENTS RING TONE EXTERNAL CALL INTERNAL CALL BEEPS SILENT MODE 15 Synoptique des Menus.fm Page 16 Lundi, 25. juin 2007 9:52 09 MENU STRUCTURE SETTINGS PROGRAM KEYS DATE/TIME AUTO HANG UP AUTO PICKUP VOICE BOX No** LANGUAGE SECURITY ADVANCED SET. KEYPAD LOCK EMERGENCY TIME LIMIT RESTRICTION CHANGE CODE INTRUSION SET HANDSET SET BASE REGISTRATION BASE PRIORITY RESET HANDSET PERSON. REGISTR REGISTR. MODE RESET BASE DELETE HANDSET RENAME BASE SET LINE NETWORK TYPE FLASHING PABX PREFIX SET TAM* SET SMS ANS. MACH* MESSAGES ON/OFF OUTGOING MESS.

SETTINGS CALL SCREENING REMOTE CODE MESS.DURATION PRIV.ACCE RECORD MODE NO OF RINGS * Model D30V ** Model D30T 16 LU 252973993 D30 T V H Australie.book Page 17 Mercredi, 20. juin 2007 9:47 09 YOUR PHONEBOOK YOUR PHONEBOOK You can store 100 phonebook entries in your phonebook.

Each phonebook entry can contain the name of your contact which can be a maximum of 12 characters long (spaces included), your contact's telephone number up to 24 digits and an icon identifying the type of number (work, home, mobile...). You can associate a unique ring tone to each entry and thus create your own call groups.

(To use this service, the caller id service must be activate on your line.) Once the entry appears on the screen, press to display all of the available actions that can be executed via the phonebook entry: - CALL: to call the number associated to the entry. - EDIT: to edit the entry (name, number, icon). - SEARCH: to search for another entry. - RING TONE: to assign a unique ring tone to your handset that will be used each time this number calls you (caller display service mandatory). - SEND SMS: to send an SMS to a number associated to the entry. - ADD NUMBER: to enter a new number for the same name. - NEW ENTRY: to create a new entry in the phonebook. - DELETE: to delete the entry from your phonebook. - VIEW: to view the entry data.

Select the action you wish to perform using or The list of phonebook entries organised in alphabetical order appears. The first time you access your phonebook, only the New element appears in the list. . Press Valid. . Viewing the phonebook On the navigator key , press or until the PHONEBOOK screen is displayed, press OK to confirm (you can access the phonebook directly using the key). To exit the phonebook, press the red key . Creating an entry

Alphanumeric keypad key correspondence. Select the entry you want to view using or . Once you have selected it, press OK to confirm.

1 A, B, C, a, b, c, 2 D, E, F, d, e, f, 3 G, H, I, g, h, i, 4 You can call the number that is associated to the entry directly by pressing the green key . J, K, L, j, k, l, 5 M, N, O, m, n, o, 6 P, Q, R, S, p, q, r, s, 7 T, U, V, t, u, v, 8 17 LU 252973993 D30 T V H Australie.book Page 18 Mercredi, 20. juin 2007 9:47 09 YOUR PHONEBOOK W, X, Y, Z, w, x, y, z, 9 special characters space, +, @, -, \$, &, %, 0, /#, ".,:;!?'()_ To enter text press successively on the desired key until the letter is displayed on the screen.

On the navigator key , press or A new entry is created. It appears in the phonebook list. The name of this entry corresponds to the beginning of your contact's name which is preceded by a type icon. Using a phonebook entry to place a call On the navigator key , press or until the PHONEBOOK screen is displayed, press OK to confirm. Select New.

Press Valid. . until the PHONEBOOK screen is displayed, press OK to confirm. The list of alphabetical phonebook entries appears. Select your contact using Press the green key or . The name input screen appears. Using the keypad keys, enter the name of your contact by pressing successively on the corresponding keys. In case of a mistake, press C to erase one character at a time. Once you are done making your changes, press Valid. .

to make the call. Your handset displays the number of your contact and dials this number automatically. The number input screen appears. Now, enter the name of your contact using the keypad keys. In case of a mistake, press C to delete one character at a time. Once you are done making your changes, press Valid. . or Searching for a contact When referring to your phonebook, you can search for a contact by: · navigating through the list using , , · using quick search, · using refined search. Select an icon for this number, using to specify the type of number: : HOME : WORK : MOBILE : FAX Performing a quick search Access your phonebook list, press successively on the keypad key which corresponds to the first letter of the name you are searching for so as to make it appear at the top of the screen. .

Once the first letter of the name is displayed, wait a moment. Once the icon is selected, press Valid. 18 LU 252973993 D30 T V H Australie.book Page 19 Mercredi, 20. juin 2007 9:47 09 YOUR PHONEBOOK The phonebook selects the first name in the list that starts with the selected letter.

Press or to select the specific entry that you wish to view or call, press OK to confirm. · To correct the name, press C on the navigator key to delete characters. Make your corrections using the keypad keys by pressing successively on the corresponding keys. Once you are finished, press Valid. . Performing a refined search In the phonebook menu, press Option Select SEARCH using Valid. . or . . Press You enter the number input screen. The cursor is at the end of the number. · The information is accurate. Press · Valid. . To correct the number, press C on the navigator key press Valid.

. to delete the Using the keypad, enter the first three letters of the contact you are searching for.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

The phonebook positions itself to the entry which comes closest to those two characters. Press or to select the specific entry that you wish to view or call, press OK to confirm. numbers. Enter the new number and Select the icon according to the type of number entered using or . Press Valid. . Editing an entry To edit a phonebook entry (change the name, the number and/or the number type icon), enter the phonebook, select the entry you want to edit and confirm using OK to display it on the screen. Once the entry is displayed on the screen, press Option . or . Press Valid. . To exit the menu, press the red key . Deleting an entry To delete an entry, enter the phonebook, select the entry, press Option Select DELETE using Valid.

. or . . Press Select EDIT using A confirmation screen asks you if you wish to delete the entry. . If you do not wish to delete the entry, press No . . To delete the entry, press Yes . The entry is deleted from the phonebook. . You enter the name input screen. The cursor is at the end of the name. . The information is accurate. Press Valid. . To exit the menu, press the red key 19 LU 252973993 D30 T V H Australie.book Page 20 Mercredi, 20.

juin 2007 9:47 09 YOUR PHONEBOOK Sending a SMS from phonebook On the navigator key , press or until the PHONEBOOK screen is displayed, press OK to confirm. Select the contact using , keys or keypad, enter the first three letters of the contact. Press or to select the specific entry then press Option Select SEND SMS using Valid. . . or . Press A text input screen appears. refer to paragraph Sending a text message, page 21. 20 LU 252973993 D30 T V H Australie.book Page 21 Mercredi, 20.

juin 2007 9:47 09 SMS SERVICE SMS SERVICE You can use your DECT telephone to send, receive and track SMS messages. You can send SMS messages either another fixed SMS-capable telephone or a mobile telephone. The SMS sending and receiving functions of your telephone are only functional if your service provider offers the corresponding service to its subscribers. To send and receive SMS text messages, you need the telephone numbers of your Network's SMS Centre. If no personal box has been created, only the shared box is displayed on the screen.

To create a personal box, select PERSO BOX MENU and press Valid. . Follow the instructions displayed on the screen. For further details, refer to the paragraph Creating a personal box, page 28. Enter the code of the box, if you have selected a personal box.

Press Valid. A text input screen appears. Using the keypad keys, enter the text message by pressing successively on the corresponding keys. The capital letters are accessible by long press on . . Sending a text message On the navigator key , press or Alphanumeric keypad key correspondence depending on the activated mode (capital letters or small letters). ' , 1, #, ,, , , ; , ? , _ * a, b, c, 2 d, e, f, 3 g, h, i, 4 or until . j, k, l, 5 m, n, o, 6 p, q, r, s, 7 t, u, v, 8 w, x, y, z, 9 special characters espace, 0, /, +, @, -, \$, &, % # until the SMS screen is displayed, press OK to confirm (can also be used to directly access the SMS menu). Writing a text message Once in the SMS menu, press the EDIT SMS appears.

Press Valid. Use the , keys to select either Common box or a personal box if one has been created. Press Valid. . The SMS will be sent to the box selected. 21 LU 252973993 D30 T V H Australie.book Page 22 Mercredi, 20. juin 2007 9:47 09 SMS SERVICE To enter text press successively on the desired key until the letter is displayed on the screen. List of special characters: Making a correction If you enter the wrong letter, press C on the navigator key a time. You can also move through the text to delete characters or insert new ones.

Use or to move through the text. Once you have reached the location where you want to insert or delete a character. Press Select . to delete one character at Sending an SMS Once you are done writing your text message, press Select of delivery. to select the type Select INSERT CHAR.

or DELETE CHAR. using or , depending on the operation you want to carry out. Press Valid. . You can choose between the following options: - SEND: to send a message.

- STORE: to save your text as a draft. It can be sent at a later time. The draft message is archived in the "Draft" box. - CANCEL: to permanently delete the text message that you just entered. Capital letters/Small letters When writing your message, you can enter capital letters or small letters. During the SMS input, press Select . Select CAPITAL LETTER or SMALL LETTER. Press Valid. . To transmit message Select SEND using or .

Press Valid. . Enter or search for the receiver's number. . Enter the number using the keypad. Press Valid. . or . If the receiver is listed in the phonebook as one of your contacts, press (refer to paragraph Searching for a contact, page 18). Press Valid. . Your contact's number appears.

Press Valid. . Special characters During the writing process, certain special characters are accessible by doing the following. Press the button, using keypad numbers, select character, use to confirm. or the and the desired A confirmation screen appears.

It indicates the type of transmission and the number to which your message will be sent. 22 LU 252973993 D30 T V H Australie.book Page 23 Mercredi, 20. juin 2007 9:47 09 SMS SERVICE . If the information is accurate. Press Confirm .

A message appears on the screen indicating that the transmission of your SMS is in progress. To change the phone number, edit or modify your text message, press Modify . Press Edit . Reading a message Your telephone has 4 different folders in which your SMS messages are stored. - NEW: contains the unread messages. - INBOX: contains the read messages that you have chosen to keep. - SENT: contains the copies of sent messages that you saved. - DRAFT: contains the messages that you wrote and that have not been sent out. On the navigator key , press or . At the end of the transmission, you can save a copy of your message. It will be stored in the Sent SMS folder.

. . To save the message, press Yes . If you do not want to save the message, press No . In the event of a delivery failure An information screen appears indicating that your service provider was unable to deliver your message. Press CONT. . until the SMS menu is displayed, press OK to confirm. Select READ SMS using Valid. . . or .

Press Select a send box, press Valid. Different options come up on the screen: - SAVE: to save your text in draft form. Once it is saved, you will be able to resolve the potential problems and send your message at a later time without having to enter it again. - TRY AGAIN: to attempt a new delivery. - DELETE SMS: to permanently delete your SMS.

- SEE RECEIVER: to check the phone number or send the SMS again. - EDIT: to change the delivery type and number or your text. Choose an action using Valid.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

. or .

Press If no personal box has been created, only the shared box is displayed on the screen. To create a personal box, select PersoBox Menu and press Valid. . Follow the instructions displayed on the screen. For further details, refer to the paragraph Creating a personal box, page 28. Enter the code of the box, if you have selected a personal box. Press Valid. . A list of the different folders appears. The number of messages contained in each folder is displayed in brackets.

23 LU 252973993 D30 T V H Australie.book Page 24 Mercredi, 20. juin 2007 9:47 09 SMS SERVICE Using or , select the folder containing the message you would like to view. Press Valid. . - ARCHIVE: to keep this message. It will be stored in the "Inbox" message folder. - TRANSMIT: to forward this message to a new recipient. You will be able to modify the original message. - DELETE: to permanently delete this SMS.

- CALL: to call the SMS sender number. - STORE NUMBER: to save the SMS sender number in your phonebook. - SMS MODE: Allows to display the message on one or two lines manually or automatic. Select the desired option using Press Valid. .

or . The list of messages contained in the folder is then displayed, starting with the most recent message to the oldest one. The first 4 numbers indicate: . the arrival time (in 12:00 format) for the messages received during the current day, . the arrival date (in 30/01format) for messages received previously or prior to the current day. The following characters indicate the sender of the message if he/she is known. Select the message you would like to view using or , press OK to confirm.

The written message is displayed on the screen. According to the SMS mode selected, using and or the screen. and to scroll the text on Modify the SMS mode You can also read your message with different read modes. Three modes are available : - AUTO SCROLL: automatic scrolling, - MANUAL SCROLL: manual scrolling, - 2 LINES: the text is displayed in 2 lines. To activate one SMS mode, press Select Select SMS MODE using Valid. . or . Press or . To return to the beginning of the message press . .

Press To return to the list of messages, move to the beginning of the message and press . Select the SMS mode using Valid. . Managing read messages Once the message has been read, press Select and select: - REPLY: to write an SMS in response to the message received (the receiver number of the new SMS will automatically be entered). 24 LU 252973993 D30 T V H Australie.book Page 25 Mercredi, 20. juin 2007 9:47 09 SMS SERVICE Viewing the memory status You can store 30 different SMS messages. These can be indiscriminately distributed between the various folders. Once the number of stored SMS has reached 30, an information message will indicate that no new messages can be stored. Once the maximum storage capacity is reached, you cannot receive new SMS.

To receive new message, please delete some of the stored messages. On the navigator key , press or until the SMS screen is displayed, confirm using OK.

Select EMPTY BOX using Valid. . or .

Press Select the folder you want to empty by pressing or . Press Valid. to delete all messages in the selected folder. A delete confirmation screen appears. . Press No the folder.

Press Yes if you do not want to empty to empty the folder. . On the navigator key , press or . until the SMS screen is displayed, confirm using OK. Select MEMORY using Valid. . or . Press To exit the menu, press the red key A screen informs you as to the number of messages contained in each folder (new, inbox, sent and draft). It also indicates the total number of messages stored and the amount of space available. To exit the memory information screen, press Return . Emptying an SMS folder This function is used to delete all the messages contained in a folder.

To delete the messages one by one refer to paragraph Managing read messages, page 24. When you empty an SMS folder, all messages linked to a personal box will not be erased. 25 LU 252973993 D30 T V H Australie.book Page 26 Mercredi, 20. juin 2007 9:47 09 SMS SETTINGS SMS SETTINGS You can access the SETTINGS menu via the SMS menu or the ADVANCED SET. submenu in the SETTINGS menu. Carry out this operation again for all other SMS centres. Then define the SMS centre to be used for sending. Modifying the SMS centre numbers This function is used to modify the SMS centre numbers (depending on the operator). You can enter up to 4 SMS centre numbers to receive and one to send.

By default, the send number is programmed in SMS 2 centre and the reception number in SMS 1 centre. Choose the SMS transmission centre Select SEND CENTRE using keys or . Press Valid. . . To change the send SMS centre, press Edit . .

Select the required centre using and and press Valid. . keys To keep the current SMS centre, press Confirm . To exit the menu, press the red key On the navigator key , press or . until the SMS screen is displayed, press OK to confirm.

Select SETTINGS using Valid. . or . Press or . Press Modifying the terminal number If you have several SMS-type devices connected to the same telephone line, you must assign a different number ranging from 0 to 9 to each device. Remember to give your contacts the terminal number on which you would like to receive your messages. Telephone line 0123456789 Terminal number 1 MOTHER Select SMS CENTRES using Valid. . Select the SMS centre you want to enter or modify the number using keys or . Press Valid.

. An information screen gives the number of the SMS centre. . To change the number, press Edit . Enter the new number in the input screen and press Valid. . . To keep the number, press Confirm 2 FATHER 3 SISTER 4 COLLECTIVE 26 LU 252973993 D30 T V H Australie.book Page 27 Mercredi, 20. juin 2007 9:47 09 SMS SETTINGS For example, in the case of an SMS message addressed to the device FATHER your contact will send his SMS to: 0123456789 2 (Telephone number followed by the terminal number) If your contact forgets to include the terminal number, the SMS message will be sent to terminal 0 by default. If no device is parameterised with the terminal number 0, the message will be sent to you in the form of a voice message.

SMS boxes "Personal boxes" allow you to receive personal SMS. These SMS will arrive in the New folder, the box owner will be able to view them by entering the user code that he will have defined when creating his SMS box. You can create up to 9 "personal boxes" which allow the different users to manage their private SMS (transmission, reception, archive). Each box is protected by a code and identified by a number representing the corresponding sub-address. If you do not assign a different number to each SMS-type device connected on the same line, you will not be able to receive SMS. Sub-Addressing You have 10 sub-addresses (9 personal and 1 collective) assigned to your telephone line (telephone number).



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)

<http://yourpdfguides.com/dref/846926>

You can assign each one of these sub-addresses: · to a terminal (the SMS for this subaddress arrive in the DECT base collective box) · or to a personal box (the SMS received for this sub-address arrive in the private pass-word protected SMS box) The sub-address is a number that must be added at the end of your telephone number (11th digit) by those who wish to send you SMS. If you use the same sub-address twice for the same telephone line, your units may not receive the SMS for this sub-address. If you do not give a terminal number to each SMS capable device that is connected to the same telephone line , you cannot receive SMS. On the navigator key , press or until the SMS screen is displayed, press OK to confirm. Select SETTINGS using Valid. . or . Press or . Press Select SUB-ADDRESS using Valid. . An information screen shows the current number of the telephone SMS terminal. · To change the number, press Edit . Then select the number using or keys. Press Valid.

. To keep the terminal number, press Confirm . . . To exit the menu, press the red key 27 LU 252973993 D30 T V H Australie.book Page 28 Mercredi, 20. juin 2007 9:47 09 SMS SETTINGS Example: The user code must contain 4 digits. MOTHER: Box 6 SMS sent to 0123456789 6 Bertrand : Box 5 SMS sent to 0123456789 5 Enter the code associated to the box again. Press Valid. . PAPA : Box 7 SMS sent to 0123456789 7 The telephone provides you with a terminal number associated to the box.

Press Confirm to keep this terminal number. Telephone line 0123456789 Sub-Address 0 Common box 0123456789 0 1 Common box 0123456789 1 Press Edit to change the terminal number. Select one of the terminal numbers available in the list. Press Valid. .

The name is added to the personal box list. Creating a personal box On the navigator key , press or Viewing a message from a personal box On the navigator key , press or until the SMS screen is displayed, press OK to confirm. Select SETTINGS using Valid. . or .

Press or . Press until the SMS screen is displayed, press OK to confirm. Select READ SMS. Press Valid. . Select PRIVATE BOX using Valid. . or Select the personal box. Press Valid. .

Press Valid. . Select the folder NEW or INBOX using or . Press Valid. . or . Press . Enter Valid. the . personal box code.

Press Select NEW using Enter the box name. Press Valid. If you enter a name that already exists, a message tells you that the name already exists. The box name can have no more than 6 characters. Enter the code associated to the box.

Press Valid. . Select the message using Valid. . 28 LU 252973993 D30 T V H Australie.

book Page 29 Mercredi, 20. juin 2007 9:47 09 SMS SETTINGS The message is displayed on the screen. For details regarding the operations you can perform, refer to paragraph Reading a message, page 23. Modifying or removing a personal box On the navigator key , press or until the SMS screen is displayed, press OK to confirm. Select SETTINGS using Valid. . or . Press or . Press Select PRIVATE BOX using Valid. .

Select CANCEL or EDIT using Press Valid. . or keys. Select the name of the personal box you want to modify or delete using or . Press Cancel or Edit depending on the choice made previously. If an SMS is sent to a personal box not listed on your telephone (or if this box was removed), the SMS will not be delivered. If you delete a personal box, you must confirm it at the end of the procedure by entering the basic code. All the messages it contains are erased. 29 LU 252973993 D30 T V H Australie.book Page 30 Mercredi, 20.

juin 2007 9:47 09 CALL LOG CALL LOG This menu enables you to view the call or event lists of your telephone. The dialled call log presents the calls you made. The received call log presents the calls you received. The event log groups together all the new events that took place in your absence: · reception of an SMS, · new messages on the answering machine (model D30V), · calls received during your absence, · operator message service (model D30T). By pressing Option , a list of various executable actions appears: - VIEW: To view the selected call again.

- CALL: To call the number. - DELETE: To delete the call currently viewed. - STORE NUMBER: To store the name and number in the phonebook. - SEND SMS: To send an SMS to your contact. - DELETE ALL: To delete all calls.

To return to the call view screen, press Return . Viewing the received and dialled call log On the navigator key , press or To exit the menu, press the red key . until the CALLS screen is displayed, press OK to confirm. Choose INCOMING CALLS or OUTGOING CALLS, using or . Press Valid. . Calling the last number dialled (Redial) Your telephone has a shortcut key that can be used to automatically redial the last number dialled. From the idle screen, press and hold the green key until the Call log screen , the last dialled The presentation screen for the last call received or dialled appears. This screen presents the following information (depending on the service provider and subscription): · the full name of your contact, · the telephone number, date, time and duration of the call. To view the previous calls, use or .

The calls are organised in chronological order, from the most recent call to the oldest call. appears. Release number appears. Press the green key again. The number is dialled automatically. You can view the other dialled calls by pressing or on the navigator key . 30 LU 252973993 D30 T V H Australie.book Page 31 Mercredi, 20. juin 2007 9:47 09 CALL LOG Calling a number listed in the dialled and received call log On the navigator key , press or A summary screen appears. It informs you as to the various events that took place during your absence: · the new SMS received, · new messages on the answering machine (model D30V), · the calls received during your absence, · operator message service (model D30T).

Choose the event using Valid. . or . Press until the CALLS screen is displayed, press OK to confirm. Select OUTGOING CALLS or INCOMING CALLS, using or .

Press Valid. . The presentation screen for the last call received or dialled appears. Use or to locate the contact you wish to call. The calls are organised in chronological order, from the most recent call to the oldest call.

Once the call is displayed on the screen, press the green key . The event appears on the screen. The number is dialled automatically. Viewing the events log If one or more new events occurred during your absence, the information screen "NEW EVENTS !" appears. · If you do not wish to view the event log at this time, press the red key · To view the event log, press . . Once the event log has been viewed, the information screen disappears. You can however view it again via the "CALLS" menu. 31 LU 252973993 D30 T V H Australie.book Page 32 Mercredi, 20.

juin 2007 9:47 09 ACCESSORIES ACCESSORIES This menu offers you numerous additional functionalities: · Alarm clock: to use your handset as an alarm clock.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

· **Timer:** to remind you of an event (programmed to sound at the end of a few minutes or a few hours). · **Birthday:** the handset will ring at the set date and time to remind you of the name of the person to whom you would like to wish happy birthday. · **Monitoring a room:** use a handset to monitor a room. If the alarm timeout expires (wake up, timer, anniversary and agenda) during a call, the handset will ring at the end of the call. An information screen shows the alarm clock status. - the time at which the handset will ring, - if the alarm is on or off. · To keep these settings, press Valid. · To change the alarm time or status (on or off), press Edit.

A list showing the different settings appears. Activating or deactivating the alarm clock To activate or deactivate the alarm clock without changing the time. Select **ACTIVATE** or **DEACTIVATE** in the list using or . Press Valid. .

Alarm clock The alarm function enables you to activate the handset ringer every day at a set time. When the alarm is triggered the selected ring tone sounds for 60 seconds through the handset speaker and an alert screen is displayed. To turn off the alarm press any key on the handset. The alarm settings information screen appears showing the new status. Press Valid.

· **Modifying the alarm clock time** Select **SET TIME** in the list using Press Valid. . or . Enter the time at which you would like the alarm clock to sound. Press Valid. . **Setting the alarm clock** On the navigator key , press or is The activation screen appears. Press Yes to activate the alarm. until the **ACCESSORIES** screen displayed, press **OK** to confirm.

Select **ALARM** using Valid. . or **Changing the alarm clock ring tone** To modify the alarm clock ring tone, select **RING TONE** in the alarm clock menu using or . Press Valid. . . Press The list of ring tones appears. 32 LU 252973993 D30 T V H Australie.book Page 33 Mercredi, 20. juin 2007 9:47 09 **ACCESSORIES** Select the desired ring tone using Press Volume setting screen.

Press or volume. or . · To launch the timer without changing the displayed delay, press Start . To change the programmed time, press Edit to increase or decrease the . to access the volume A list showing the different settings appears.

Once the volume is set, press Valid. Press Return . . **Changing the programmed time of the timer** Select **SET DURATION** in the list. Press Valid.

· An information screen shows the alarm clock settings, press Valid. . Enter the desired time. Press Valid. Press Return activation screen. to display the timer To exit the menu, press the red key . The timer activation screen appears with the modification. Press Start timer.

to launch the **Timer** The timer function activates the handset ringer at a programmed time. You can view the programmed time on the screen. Incoming calls are displayed directly without interrupting the timer. For access to timer adjustment you must stop it once it is started. Once the specified time has elapsed, the handset rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing Stop . The handset stops ringing. , press or is **Changing the timer ring tone** To modify the timer ring tone, select **RING TONE** using keys or . Press Valid. .

The list of ring tones appears, the handset plays the ring tone. Select the ring tone using keys Press Volume setting screen. or . to access the volume On the navigator key Press or to increase or decrease the volume. Once the volume is set, press Valid.

· , the timer activation screen until the **ACCESSORIES** screen displayed, press **OK** to confirm. Select **TIMER** using Valid. . or .

@@@@Press Valid. . Enter the birth date using the keypad keys. Press Valid. . Enter the alarm activation time. Press Valid. @@@@The birthday alarm entry appears on the screen. @@@@Select **BIRTHDAY** using Valid. .

or . Press Valid. or . @@- **EDIT:** to change the alarm name or date. - **DELETE:** to remove a birthday or organiser alarm. @@@@To delete a character, press the C key. Press Valid. @@@@You can use your handset to monitor a room. This allows you, for example, to monitor a baby's room. To do so, place one of the handsets in the room to be monitored.

This unit will be in "sender" mode. @@On the receiver handset: · Keep the receiver handset with you. When in monitor mode, the receiver handset can be used to make calls. To make a call: press Call dial the number. To answer a call: press green key .

@@@@The receiver set will automatically return to the standby screen. @@Select **ROOM MONITOR.** using Press Valid. . @@Press Yes .

Both handsets are now in monitor mode. · Place the sender handset in the room to be monitored. @@@@Select **BEEPS** using Valid. . or . Press or . Press Select the beep type using Valid. . **Changing the ring tones** This menu enables you to associate a unique ring tone to incoming calls or internal calls (intercom). **KEYTONE:** the handset beeps when a key is pressed.

BATTERY LOW: the handset beeps when the battery is too low. **CHARGER:** the handset beeps when you hang up the handset. An information screen displays the beep status for the selected item (Active or Inactive). · To change the status, press Edit . The status is modified on the screen. Press Valid. . . . To keep the status, press Valid.

On the navigator key , press or until the **RING TONE** screen is displayed, press **OK** to confirm. Select **EXTERNAL CALL** or **INTERNAL CALL** using or . Press Valid. . Select the ring tone of your choice using the or keys then press Volume or .

To exit the menu, press the red key Adjust the ringer volume using Valid. . , press To exit the menu, press the red key . 36 LU 252973993 D30 T V H Australie.book Page 37 Mercredi, 20.

juin 2007 9:47 09 **RING TONES** Activating/deactivating the silent mode When in silent mode, the telephone ringer and keypad beeps are inhibited. On the navigator key , press or until the **RING TONE** screen is displayed, press **OK** to confirm. Select **SILENT MODE** using Valid. . When you activate the silent mode, your handset is muted for all timer, organiser-type functions... Press Yes to activate the silent mode. or . Press To exit the menu, press the red key .

37 LU 252973993 D30 T V H Australie.book Page 38 Mercredi, 20. juin 2007 9:47 09 **SETTINGS SETTINGS** This menu enables you to change or customise the handset and base parameters. Once the · · key is programmed, a screen invites you to programme the key To modify the function, press Edit To keep the function, press Valid. Programming a key This function enables you to programme the and keys on your handset giving you direct access to certain functions right from the idle screen. To exit the menu, press the red key Modifying the date and time On the navigator key , press or On the navigator key , press or until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **DATE/TIME** using Valid. . or . Press until the **SETTINGS** screen is displayed, press **OK** to confirm.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>

Select PROGRAM KEYS using Press Valid.

. or . A screen displays the current date. Enter the date in DD/MM/YY format and press Valid. .

A screen presents the function currently assigned the . key. . . To keep the function, press Valid. To modify the function, press Edit A screen displays the current time. Enter the time in HH/MM format and press Valid. . Choose from the function list the function you want to assign to the key. Press or to select one of the following functions: . SILENCE . TIMER . NUMBER . ANSW. MACH.

Press Valid. . . ALARM . KEY LOCK . REDIAL To exit the menu, press the red key . Using the auto hang up and pick up features The auto hang up feature enables you to automatically hang up by simply putting the handset back on its base. If the auto hang up feature is on, communication ends when the handset is put back on its base. When active, the auto pick up feature enables you to automatically pick up as soon as you remove the handset from its base. With the number function, you associate a telephone number to a program key. You can thus quickly call your contact. 38 LU 252973993 D30 T V H Australie.book Page 39 Mercredi, 20.

juin 2007 9:47 09 SETTINGS On the navigator key , press or The programmed number is displayed on the screen, . . The number is correct, press Valid. To modify the number, press Edit . . until the SETTINGS screen is displayed, press OK to confirm. Select AUTO HANG UP (or AUTO PICKUP) using or . Press Valid. . Delete the numbers using the navigator C key. Enter the number. Press Valid.

. A screen displays the current status (on or off). . . To change the status, press Edit To keep the status, press Valid. . . . To exit the menu, press the red key . Modifying the language This function enables you to change the screen display language. To exit the menu, press the red key Modifying the Voice box number (model D30T) This function enables you to receive calls when absent on a voice messaging service of the switched network. To indicate that a new message has been received the reception indicator on the handset is lit in red and the new event message is displayed on the screen.

To check your voice messaging service, hold down key . On the navigator key , press or until the SETTINGS screen is displayed, press OK to confirm. Select LANGUAGE using Valid. . or . Press An information screen presents the current language used. . . To keep the setting, press Valid. To change the setting, press Edit . . Choose the desired language from the language list.

Press or to select the language. Press Valid. . The number of your voice messaging service is set in the factory. To change this number, proceed as follows:
The screen shows the new language used.

Press Valid. . On the navigator key , press or To exit the menu, press the red key . until the SETTINGS screen is displayed, press OK to confirm. Select VOICE BOX No using Valid.

. or . Press 39 LU 252973993 D30 T V H Australie.book Page 40 Mercredi, 20. juin 2007 9:47 09 SETTINGS SECURITY This menu enables you to change or customise the security parameters of your telephone. You can: . lock the keypad, . programme an emergency number, . modify the base code, . define the call time limit, . define forbidden prefixes, . authorise or deny communication to a number of handsets. Programming an emergency number This function allows you to define an emergency number which can be enabled or disabled. Once it is activated, the emergency number will be automatically dialled when the green key . is pressed from the idle screen. Once activated, you can however call a different number with pre-dialling by dialling a number and pressing . Locking/unlocking the keypad To lock/unlock the keypad, press and hold the keypad key some time.

for The following types of numbers should not be programmed: Fire, emergency and police rescue services... You can also lock your keypad via the SECURITY menu. On the navigator key , press or On the navigator key , press or until the SETTINGS screen is displayed, press OK to confirm. Select SECURITY using Valid. . or . Press or . Press until the SETTINGS screen is displayed, press OK to confirm.

Select SECURITY using Valid. . or . Press or . Press Select EMERGENCY using Valid.

. Select KEYPAD LOCK using Valid. . To lock the keypad, press Yes . An information screen displays the current stored emergency number and indicates whether it is enabled or disabled.

. To keep the setting, press Valid. To modify the setting, press Edit . . A screen indicates that the keypad is locked. A list of various executable actions appears: - ACTIVATE: to activate the emergency number. 40 Réglages des fonctions.fm Page 41 Lundi, 25. juin 2007 9:38 09 SETTINGS - DEACTIVATE: to deactivate the emergency number. - CHANGE NO: to modify the emergency number. To modify the emergency number, select CHANGE NO.

Press Valid. . If the time limit ends during a telephone conversation, communication will not be cut off. Once you have hung up, it will not be possible to make a new call. Calls between handsets (internal calls) are not affected by the call time limit. On the navigator key , press or Enter the new number using the keypad. You can pick a number from the phonebook. Press Valid. . , make your selection and until the SETTINGS screen is displayed, press OK to confirm.

Select SECURITY using Valid. . or . Press or . Press The active mode is set automatically.

An information screen presents the new emergency number. To activate/deactivate the emergency number, select the corresponding option. Press Valid. . . Select TIME LIMIT using Valid. . An information screen displays the remaining time limit and its status. . . To keep the setting, press Confirm To modify the setting, press Edit . . To exit the menu, press the red key Enter the base code (default is 0000). Press Valid. . The emergency number is automatically activated. The name of the handset displayed on the idle screen becomes EMERGENCY.

Defining the call time limit You can set your telephone's operating time. Once the call time limit is used up, it is no longer possible to make calls. To be able to call again, you will have to deactivate the call time limit or set a new limit. A list of various executable actions appears: - ACTIVATE: To activate the emergency number. - DEACTIVATE: To deactivate the emergency number. - EDIT TIME: To modify the emergency number. Select EDIT TIME using Valid. .

or . Press Enter the new time limit using the keypad (maximum 999 minutes).

Press Valid. the active mode is set automatically. . , 41 LU 252973993 D30 T V H Australie.book Page 42 Mercredi, 20. juin 2007 9:47 09 SETTINGS Once the modifications have been made, the information screen shows the new call time limit.

To exit the menu, press the red key .



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)

<http://yourpdfguides.com/dref/846926>

To eliminate a prefix, select it using keys or and press Valid. . When all prefixes are programmed, press Return . Defining forbidden prefixes - Call barring
 You can prohibit the use of certain prefixes on your telephone.

When a prefix is forbidden, it becomes impossible to call numbers that begin by this prefix. Depending on the programmed prefixes, certain numbers will no longer be accessible. For example, if you programmed 06 as a forbidden prefix, it will not be possible to call a number that begins by 06. A restriction activation screen appears, press Yes to activate restriction. . To exit the menu, press the red key You can programme up to 5 forbidden prefixes. Modifying the base code The base code (0000 being the default setting) is required to access certain security functions. It must be composed of 4 digits. On the navigator key , press or On the navigator key , press or until the SETTINGS screen is displayed, press OK to confirm. Select SECURITY using Valid.

. or . Press or . Press until the SETTINGS screen is displayed, press OK to confirm. Select SECURITY using Valid. . or . Press or . Press Select RESTRICTION using Valid. .
 Select CHANGE CODE using Valid. . Enter the base code. Press Valid.

Enter the old base code using the keypad The prefix screen appears. Select an empty location (dashes) or a prefix to modify using or . Press Valid. . (default is 0000).
 Press Valid. . Enter the new base code using the keypad. Press Valid. . Enter the prefix using the keypad. Press Valid. . Confirm by entering the new base code again. Press Valid.

. 42 LU 252973993 D30 T V H Australie.book Page 43 Mercredi, 20. juin 2007 9:47 09 SETTINGS To exit the menu, press the red key . HANDSET SETTINGS Registering a new handset to a base To register a new handset to a base you must: . put the handset in registration mode, . put the base in registration mode. Once this is done, the registration (mutual recognition of the base and the new handset) will be done automatically (registration can take a few seconds). If the code of the base has been modified (different from 0000), the registration will not be possible with this procedure, refer to paragraph Personal registering, page 45. Carefully note down the base code number. You will need this code to change certain settings. Authorising listening in The intrusion function authorises or prevents a second handset registered on the same base from joining in a current conversation.
 If the intrusion mode is active, it is then possible to join a conversation in progress using another handset. On the navigator key , press or until the SETTINGS screen is displayed, press OK to confirm. Select SECURITY using Valid. . or .
 Press Take the handset to be registered: Select INTRUSION using Valid. . or . Press On the navigator key , press or A screen displays the current status (on or off). . . To change the status, press Edit To keep the status, press Valid.
 . . . until the SETTINGS screen is displayed, press OK to confirm. Select ADVANCED SET. using Press Valid. . or . Press or . Select SET HANDSET using To exit the menu, press the red key Valid.

. Select REGISTRATION. Press Valid. Press Yes to put the handset registration mode. . in The handset enters the registration mode. 43 LU 252973993 D30 T V H Australie.book Page 44 Mercredi, 20. juin 2007 9:47 09 SETTINGS On the base: Put the base to which you want to register the handset in registration mode: . For the D30T, press on the on the base for a few seconds. . For the D30V, press on the button on the base for a few seconds.
 button An information screen presents the current base preference for your handset. . . To keep the preference, press Valid. To modify the preference, press Edit . . The new handset and the base are mutually searching for each other.

The registration may take several seconds. Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done. You can also set your base to the registration mode using a handset already registered by selecting the Registration function in the menu SETTINGS/ADVANCED SET/SET BASE. A list provides the bases among which you can choose the preferred base to which you want your handset to be registered. With the automatic mode you are not required to specify the preference.
 Select the base preference using Press Valid. . or . To exit the menu, press the red key . Resetting the handset When you reset your handset, all the parameters are reset to their initial value (factory settings) with the exception of the phonebook, alarms (birthdays and organiser) and SMS parameters. When resetting the handset, the security functions (forbidden prefixes and time limit duration) are not set back to their initial value. Modifying the base preference This function enables you to specify which base will be used by your handset to make calls (if your handset is registered to several bases). On the navigator key , press or un- On the navigator key , press or til the SETTINGS screen is displayed, press OK to confirm. Select ADVANCED SET..

Press Valid. Select SET HANDSET. Press Valid. Select BASE PRIORITY using Press Valid. . . or . . until the SETTINGS screen is displayed, press OK to confirm. Select ADVANCED SET.
 . Press Valid. Select SET HANDSET. Press Valid. Select RESET HANDSET using Press Valid.
 . . or . . 44 LU 252973993 D30 T V H Australie.
 book Page 45 Mercredi, 20. juin 2007 9:47 09 SETTINGS A confirmation screen will prompt you to confirm your request: . To re-initialise your handset, press . Yes . If you do not wish to re-initialise your handset, press No . . Put the base to which you want to register the handset in registration mode. Once the handset is registered, select the Enter the base code. Press Valid. . The handset enters the registration mode, "HANDSET IN REGISTR. MODE" is displayed on the screen.

To exit the menu, press the red key Personal registering To register a handset in the following cases: . the base's code is no longer 0000 (you have customised the code), . you own several bases, . you want to choose a name for your base (name displayed on the welcome screen), . you want to choose the handset registration number. On the navigator key , press or required handset number. Press Valid. . On the base: Put the base to which you want to register the handset in registration mode: . For the D30T, press on the on the base for a few seconds. . For the D30V, press on the button on the base for a few seconds.
 button The green light blinks rapidly, the base is in registration mode. The new handset and the base are mutually searching for each other. The registration may take several seconds. Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done.
 , You can also set your base to the registration mode using a handset already registered by selecting the Registration function in the menu SETTINGS/ADVANCED SET/SET BASE.



[You're reading an excerpt. Click here to read official SAGEM D30T user guide](http://yourpdfguides.com/dref/846926)
<http://yourpdfguides.com/dref/846926>